

HEAD OFFICE

6, Pangyo-ro 319beon-gil, Bundang-gu, Seongnam-si,
Gyeonggi-do, 13488 Rep. of KOREA
Tel: +82.70.7147.8753 Fax: +82.31.8018.3740
hanwha-security.com

Hanwha Techwin America

500 Frank W. Burr Blvd. Suite 43 Teaneck, NJ 07666
Toll Free: +1.877.213.1222
Direct: +1.201.325.6920
Fax: +1.201.373.0124
hanwhasecurity.com

Hanwha Techwin Europe

Heriot House, Heriot Road, Chertsey, Surrey, KT16 9DT, United Kingdom
Tel: +44.1932.578100
Fax: +44.1932.578101
hanwha-security.eu

Hanwha Techwin Tianjin

No.11 Weiliu Rd., Micro-electronic Industrial Park,
Jingang Road Tianjin 300385, China
Tel: +86-22-2388-7788 (8700)
hanwha-security.cn

Hanwha Techwin Middle East FZE

JAFZA View 18, 20th floor, office 2001, 2002, 2003,
Downtown Jebel Ali, Dubai, United Arab Emirates
hanwha-security.com

Hanwha Techwin Singapore Branch

4 Shenton Way, #15-06, SGX Centre 2, Singapore, 068807
Tel: +65.6221.7512
Fax: +65.6227.9337
hanwha-security.com

Hanwha Techwin Russia Office

40/4, Bolshaya Ordynka str., Moscow, Russia, 119017
Tel: +7.499.750.1730
hanwha-security.eu/ru/

Hanwha Techwin Vietnam Hanoi Office

28th Floor, Handico Building, Pham Hung Street, Me Tri ward,
Nam Tu Liem District, Hanoi City, Vietnam
Tel: +84.91.982.4088
hanwha-security.com

© 2019 Hanwha Techwin Co., Ltd. All rights reserved.

DESIGN AND SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE
Under no circumstances, this document shall be reproduced, distributed or changed,
partially or wholly, without formal authorization of Hanwha Techwin Co., Ltd.

M.H-1912

WISENET Transportation Monitoring System



TAW-4000H16

 
- Support video search/ location tracking & simultaneous playback
- Automated backup of video, events and GPS information in remote locations
- Reporting information on onboard system status or events
- Movement, tampering, audio, temperature change and shock detection
- Clustering for efficient management of a large fleet

FIRST EDITION 12-2019

hanwha-security.com


Wisenet Appliance installed Transportation Monitoring Software

TAW-4000H16 is equipped with TMS, an operating software (Server+Console), eliminating the need to purchase additional servers. It supports clustering of up to 28 servers for easy system expansion, enabling efficient operation and management of transportation solutions at large sites (Max 10,000 channels).

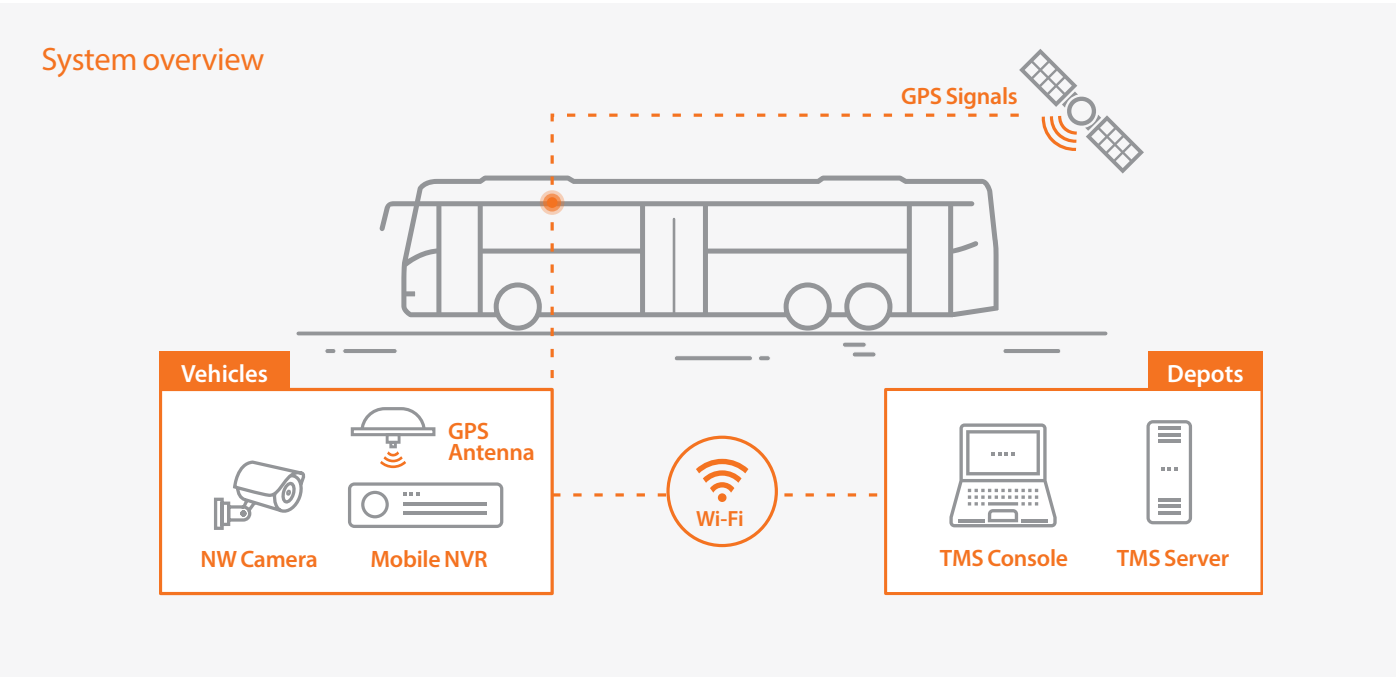

GPS vehicle tracking / video playback

 TAW-4000H16 supports vehicle route tracking. The search results provided are GPS vehicle tracking, device information and event lists, enabling users to playback each event recording to assess event situations. With this search using maps, users can designate an area on a map to access information on vehicle routes or events in the area.

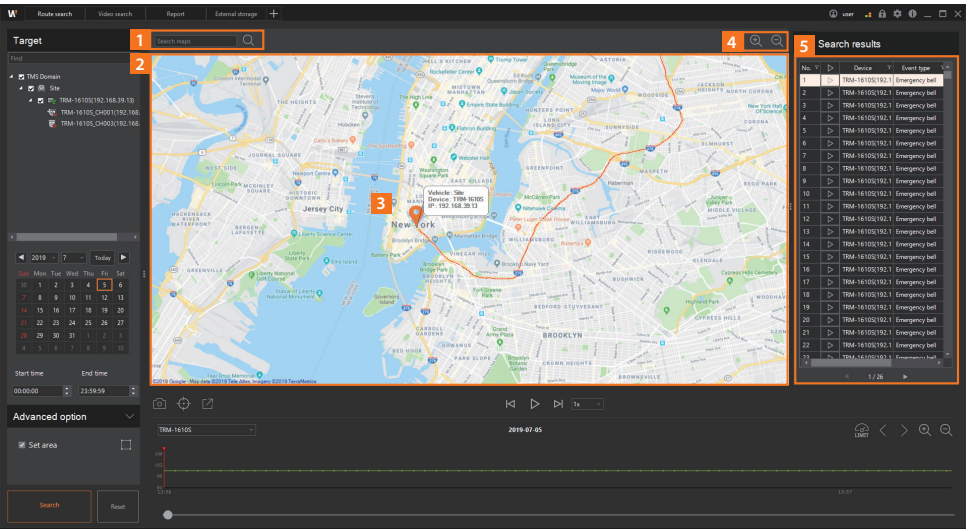


- 1 Search with area name
- 2 Display the route of vehicles
- 3 Click to see the vehicle information
- 4 Enlarge/reduce the map size
- 5 Events list while driving

(Users can search up to 5 vehicles)

Geofence

 Geofence(Geography and Fence) is a virtual perimeter using GPS information. Operators set up the geofence and triggers event alarms when the vehicles enter or exit the area. These event alarms are offered in reports. (Geofence allows up to 64 points.)

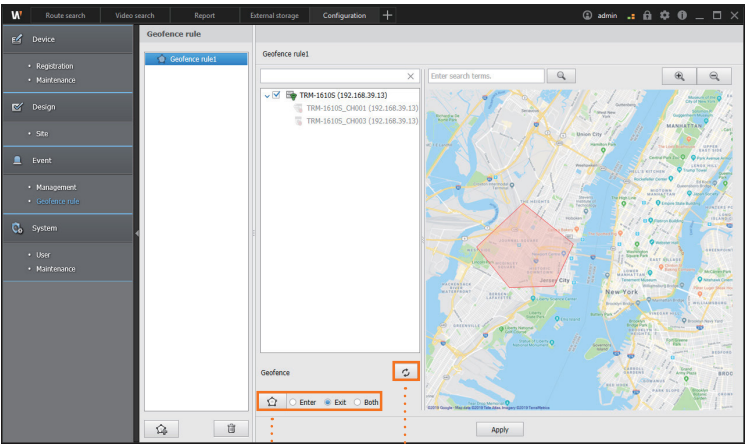


Setting the perimeter Reset

Setting the perimeter

- **Enter** Alarming if vehicles installed Wisenet mobile NVRs enter
- **Exit** Alarming if vehicles installed Wisenet mobile NVRs exit
- **All** Alarming in case of both (enter/exit)

Reporting

 TAW-4000H16 offers event reporting optimized for transportation. It reports event information while driving such as speeding, emergency bell, or shock. The report also provides health check of devices(installed cameras and recorders) including video loss, disc faults and the video backup data from recorders. User can easily check the events and status of installed devices in vehicles anytime.

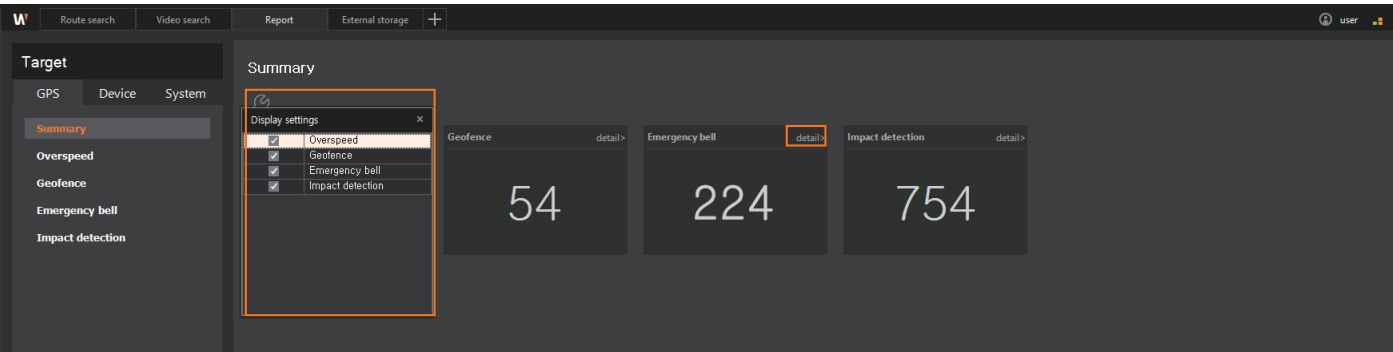

Automatic data backup

When a vehicle arrives at a place with Wi-Fi connection, TAW-4000H16 automatically starts the backup of the video and events to the central server. If Wi-Fi is disconnected during the backup, it will restart from the disconnected point.

