

SAMSUNG TECHWIN

**32 KANALA/
64 KANALA NVR**

Korisničko Uputstvo

SRN-6450/3250
SNR-6400/3200



SAMSUNG



32 KANALA/ 64 KANALA NVR Korisničko Uputstvo

Copyright

©2011 Samsung Techwin Co., Ltd. All rights reserved.

Trademark

 SAMSUNG TECHWIN is the registered logo of Samsung Techwin Co., Ltd.
The name of this product is the registered trademark of Samsung Techwin Co., Ltd.
Other trademarks mentioned in this manual are the registered trademark of their respective company.

Restriction

Samsung Techwin Co., Ltd shall reserve the copyright of this document. Under no circumstances, this document shall be reproduced, distributed or changed, partially or wholly, without formal authorization of Samsung Techwin.

Disclaimer

Samsung Techwin makes the best to verify the integrity and correctness of the contents in this document, but no formal guarantee shall be provided. Use of this document and the subsequent results shall be entirely on the user's own responsibility. Samsung Techwin reserves the right to change the contents of this document without prior notice.

Warranty

If the product does not operate properly in normal conditions, please let us know. Samsung Techwin will resolve the problem for free of charge. The warranty period is 3 years. However, the followings are excluded:

- Data loss due to a damaged hard disk
- If the system behaves abnormally because you run a program irrelevant to the system operation.
- Data loss due to virus infection
- Deteriorated performance or natural worn-out in process of time
- Sensory phenomenon that does not affect the performance or quality of the product (ex: working noise).

❖ **Design and specifications are subject to change without prior notice.**

❖ **The default password can be exposed to a hacking thread so it is recommended to change the password after installing the product.**

Note that the security and other related issues caused by the unchanged password shall be responsible for the user.

Predgovor

Hvala vam što ste odabrali Samsung mrežni video rekorder (Disk plejer).

Ovo uputstvo za korišćenje obezbeđuje detaljne informacije i instrukcije za NVR mrežne DVR proizvode. Molimo vas da u potpunosti pročitate ovo uputstvo i dodatni dokumenat(e) pre nego što pokušate da instalirate i/ili koristite proizvod.

Sadržaj ovog uputstva, kao i softver i hardver objašnjeni ovde, su zaštićeni zakonom o zaštiti autorskih prava. Sva kopiranja, ponovna štampanja i prevođenje na druge jezike dela ili celog sadržaja ovog uputstva za korišćenje, bez dozvole Samsung Techwin Co., Ltd. su strogo zabranjena osim za fer upotrebu u okviru zakona o zaštiti autorskih prava.

Specifikacija proizvoda se može promeniti bez prethodnog obaveštenja radi poboljšanja proizvoda.

Garancija za proizvod i ograničena odgovornost

Proizvođač ovog proizvoda nije odgovoran za prodaju proizvoda, niti proizvođač delagira takvu odgovornost trećoj strani. Garancija za proizvod ne važi za bilo koji nesrećni slučaj, nepažnju, modifikaciju ili nepravilno korišćenje proizvoda. Pored toga, garancija ne pokriva bilo kakve komponente ili delove koji nisu snabdeveni od strane proizvođača ovog proizvoda.

Garancija za proizvod važi tri godine od datuma kupovine. Međutim, garancija ne pokriva nijedan od sledećih problema, a nominalna cena usluge će biti naplaćena ukoliko:

- je proizvod nepravilno korišćen ili upotrebljavan od strane korisnika.
- je proizvod rastavljan i/ili modifikovan od strane korisnika.
- je proizvod oštećen povezivanjem napajanja sa neodgovarajućim specifikacijama.
- je proizvod oštećen usled "Više sile" (požara, poplave, cunamija, prirodne katastrofe, itd.)
- Za zamenu potrošnih komponenti: HDD-a, ventilatora, itd. (Garancija za HDD i ventilator važi godinu dana od datuma kupovine.)

Ova garancija pokriva samo proizvod koji ste dobili sa garancijom.

Nakon isteka garancije (tri godine), cena usluge će biti naplaćena za bilo kakav pregled i/ili popravku proizvoda. U toku perioda trajanja garancije, cena usluge će biti naplaćena za popravku i/ili pregled proizvoda za bilo kakve probleme koje garancija ne pokriva.

Ovaj proizvod nije protivprovalni ili protivpožarni uređaj; proizvođač nije odgovoran za bilo kakvu štetu načinjenu imovini ili osoblju do koje može doći prilikom korišćenja.

Ovaj proizvod treba da instalira obučeno i iskusno osoblje; samo-instaliranje od strane korisnika je zabranjeno. Samo-instaliranje od strane korisnika može da dovede do požara, smrtonosnog strujnog udara i/ili kvara proizvoda. Molimo vas da kontaktirate svog lokalnog prodavca za pomoć oko instaliranja proizvoda.

Sadržaj ovog uputstva se može promeniti radi saglasnosti sa ažuriranjem firmvera i/ili softveru. Takođe, specifikacije i/ili dizajn ovog proizvoda se mogu promeniti bez prethodnog obaveštenja radi poboljšanja proizvoda

Sadržaj

Predgovor	2
Garancija za proizvod i ograničena odgovornost	2
Sadržaj	4
1. Poglavlje - Pregled	7
1.1. Bezbedonosni preduslovi	7
1.2. Sadržaj proizvoda	10
2. Poglavlje - Nazivi delova	11
2.1. Prednji panel	11
2.2. Zadnji panel	13
2.3. Standardna podešavanja	14
2.3.1. Stranica za nadgledanje	14
2.3.2. Stranica za reprodukciju	14
2.3.3. Stranica za konfiguraciju	15
2.3.4. Sistemska stranica	18
3. Poglavlje - Instalacija	19
3.1. Instaliranje i povezivanje proizvoda	19
3.1.1. Napajanje i rad proizvoda	19
3.1.2. Konfiguracija mreže	19
3.1.3. Unutrašnji HDD	20
3.1.4. Spoljašnji HDD	24
3.1.5. Senzor	25
3.1.6. Releji	25
3.1.7. USB	26
3.2. Povezivanje na internet prezentaciju	27
3.2.1. Kabl za povezivanje	27
3.2.2. Dodavanje IP adrese	27
3.2.3. Povezivanje i promena podešavanja	29
4. Poglavlje. Rad	32
4.1. Sistemski zahtevi	32

4.2. Kompatibilni internet pretraživači	32
4.3. Prijavljivanje	33
4.4. Nadgledanje	34
4.4.1. Podela ekrana i menjanje kanala.....	34
4.4.2. Video kontrola	35
4.4.3. PTZ kontrola	35
4.4.4. Kontrola PRIKAZA NA EKRANU	37
4.5. Reprodukcijs	38
4.5.1. Pretraga vremena	38
4.5.2. Pretraga događaja	40
4.6. Konfiguracija	43
4.6.1. Status	44
4.6.2. Podešavanje snimanja.....	45
4.6.3. Podešavanje događaja	47
4.6.4. Podešavanje kamere	51
4.6.5. Podešavanje HDD-a	55
4.6.6. Podešavanje mreže	61
4.6.7. Podešavanje vremena	67
4.7. Sistem	69
4.7.1. Ažuriranje	70
4.7.2. Sistemski dnevnik	72
4.7.3. Podešavanja za korisnika	75
4.7.4. Rezervna kopija	76
Poglavlje 5. LCD podešavanjeBB.....	80
5.1. Sistem	81
5.1.1. Proveravanje firmver verzije	81
5.1.2. Uključivanje/isključivanje bipa.....	81
5.1.3. Isključivanje releja	82
5.1.4. Ažuriranje sistema.....	82
5.1.5. Inicijalizacija podešavanja.....	83
5.1.6. Provera HDD-a	84
5.1.7. Gašenje sistema	85
5.2. Podešavanje mreže	86
5.2.1. Podešavanje ethernet porta monitora.....	86

5.2.2. Podešavanje ethernet porta izvora	89
5.2.3. Podešavanje ethernet porta skladištenja	90
5.3. Podešavanje HDD režima.....	91
5.4. Uklanjanje HDD-a	94
5.5. Formatiranje HDD-a	95
5.5.1. Formatiranje jednog unutrašnjeg HDD-a	95
5.5.2. Formatiranje svih unutrašnjih HDD-a.....	96
5.5.3. Formatiranje pojedinačnog eksternog HDD-a	96
5.5.4. Formatiranje svih eksternih HDD-a.....	98
5.5.5. Formatiranje svih HDD-a	99
Rešavanje problema.....	100
Specifikacije proizvoda	101
Dimenzije proizvoda	104

1. Poglavlje - Pregled

Ovaj digitalni video plejer plus disk plejer poseduju HDD skladište i mogućnosti za reprodukciju 64/32 kanala digitalnog videa.

Podešavanje ovog rekordera je jednostavno; možete da koristite tastere na prednjem delu proizvoda, ili da se povežete za proizvod na daljinu preko mreže.

Sa proverenim performansama i pouzdanošću, NVR je samo-dovoljan video rekorder i idealan je za digitalno skladištenje video dotoka za nadgledanje sistema banaka, stambenih zgrada i javnih kancelarija koje zahtevaju visok sigurnosni nivo. Obzirom da je video uskladišten na hard disku, ne dolazi do gubitka kvaliteta slike zbog ponovljene reprodukcije iz skladišta medija. Osim toga, obzirom da su svi video podaci uskladišteni kao digitalni fajlovi, lako je i brzo je pretražiti ih.

Ovaj video rekorder visoke rezolucije poseduje veliki kapacitet za skladištenje i poseduje širok spektar jednostavnih opcija za korišćenje kao što su: Mogućnosti za simultano snimanje i reprodukciju, detekcija pokreta, PTZ (pan, nagib, zum) kontrola, lozinka, snimanje zvučnih podataka u realnom vremenu, zgodnu dozvolu za pristup podešavanju korišćenjem Zaključavanja tastera i održavanje do 10 000 spiskova događaja i dnevnika.

1.1. Bezbedonosni preduslovi



Upozorenje

Sledeće informacije ili uputstvo su vitalni za bezbednost korisnika; molimo vas da ga pročitate u potpunosti kako biste izbegli ozbiljnu povredu ili smrt.

❖ Instaliranje proizvoda

- ✓ Molimo vas da proverite električni priključak za napajanje (AC 100V~240V) pre nego što povežete napajanje sa priključkom.
- ✓ Proverite da je proizvod isključen pre nego što ga instalirate.
- ✓ Da biste izbegli rizik od električnog šoka i/ili požara nemojte da instalirate proizvod u vlažnom području.
- ✓ Proizvod mora biti uzemljen da bi se smanjio rizik od električnog šoka.

❖ Upotreba proizvoda

- ✓ Otvaranje ili ukljanjanje kućišta proizvoda će vas izložiti riziku od električnog šoka; ne otvarajte i ne skidajte kućište osim ukoliko niste kvalifikovani tehničar.
- ✓ Da biste sprečili električni požar, ne povezujte višestruke kablove za napajanje za jedan priključak.
- ✓ Ne stavljajte teške predmete ili posuđe sa vodom na uređaj jer to može da dovede do ozbiljnih kvarova.
- ✓ Ne koristite ovu jedinicu na lokaciji koja sadrži propan gas, gasolin ili druge zapaljive supstance kako biste izbegli rizik od eksplozije ili požara.
- ✓ Da biste izbegli rizik od električnog šoka, ne dirajte priključak za napajanje vlažnim rukama.
- ✓ Proverite da nikakav materijal koji je električni provodnik ne dospe u ventilacioni otvor.
- ✓ Ne povlačite priključak za napajanje koristeći bilo kakvu silu; oštećen priključak može da dovede do električnog šoka ili požara.

❖ Rasklapanje i čišćenje proizvoda

- ✓ Postoji rizik od kvara, šoka ili drugih opasnosti. Nemojte da sami rasklapate, pokušavate da popravite ili modifikujete proizvod.
- ✓ Ne čistite proizvod vodom, razređivačem za boje ili drugim organskim rastvaračima jer to može da dovede do kvara proizvoda i/ili električnog šoka. Kada čistite proizvod, koristite suhu krpu da obrišete spoljašnjost uređaja.



Oprez

Nepravilno korišćenje ili pogrešna operacija uređaja mogu da dovedu do povrede ili da oštete uređaj. Ukazuje da treba biti oprezan prilikom rada.

❖ Instaliranje proizvoda

- ✓ Kada instalirate proizvod, molimo vas ostavite najmanje 15 cm prostora između ventilacionog otvora i zida radi odgovarajućeg rasipanja toplote.
- ✓ Da biste sprečili povređivanje korisnika i oštećenje proizvoda, molimo vas da instalirate proizvod na ravnoj površini gde neće biti rizika da proizvod padne.

- ✓ Izbegavajte instaliranje u području gde će proizvod biti izložen vrućini ili direktno suncu; to može da dovede do deformacije i/ili oštećenja proizvoda.
- ✓ Prilikom instalacije kućišta vodite računa o radnoj temperaturi i vlažnosti vazduha u okolini instalacije, u skladu sa specifikacijama proizvoda (pogledajte Dodatak).

❖ Korišćenje proizvoda

- ✓ Izbegavajte šok ili vibracije kada koristite ili pomerate uređaj.
- ✓ Ne pomerajte proizvod dok radi; ne izlažite proizvod jakim udarcima i ne bacajte proizvod.
- ✓ Ukoliko proizvodu želite da dodate hard disk, molimo vas da kontaktirate svog prodavca; dodavanje nepreporučenog hard diska može da dovede do nepravilnog funkcionisanja proizvoda.
- ✓ Svojevoljno dodavanje hard diska proizvodu će vašu garanciju za proizvod učiniti nevažećom.
- ✓ Ovaj proizvod nije protivprovalni ili protivpožarni uređaj; proizvođač nije odgovoran za bilo kakvu štetu načinjenu imovini ili osoblju do koje može doći.



Oprez

Samsung Techwin preporučuje da instalirate UPS (Neprekidni dovod energije) sa svim proizvodima za snimanje ove kompanije.





 



Samsung Techwin brine o prirodnoj okolini tokom svih koraka proizvodnje i preduzima određene korake da bi kupcima obezbedili proizvode koji manje štete prirodnoj okolini.

Eco oznaka predstavlja želju kompanije Samsung Techwin da proizvodi proizvode koji ne štete prirodnoj okolini i ukazuje da proizvod zadovoljava direktivu EU RoHS.


1.2. Sadržaj proizvoda

Sadržaji ovog proizvoda su kao što je prikazano ispod.

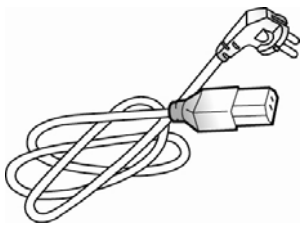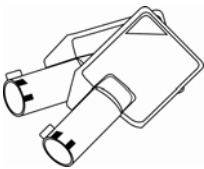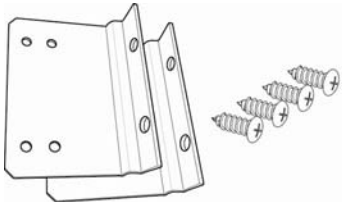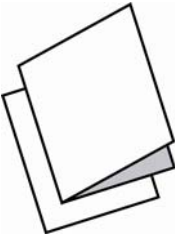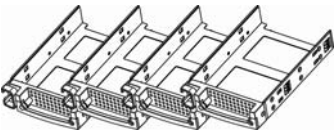 Kabl za struju	 Ključ	 Polica za montiranje i zavrtnji za montiranje
 Zavrtnji za HDD sklop	 Uputstvo za korišćenje	 Vodič za brzo korišćenje
 NET-I Viewer/Uputstvo za korišćenje CD	 Ukršteni kabl	 HDD jezičak (4EA)

2. Poglavlje - Nazivi delova


2.1. Prednji panel

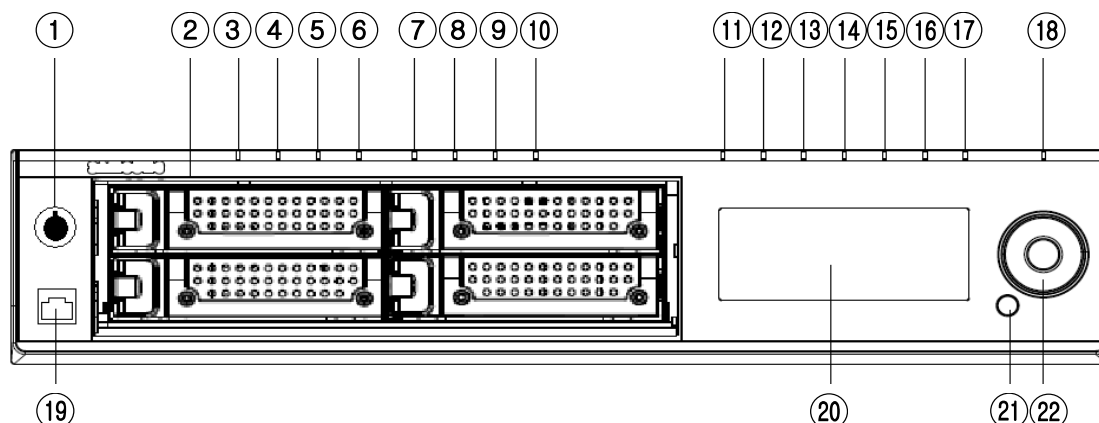

Br.	Naziv	Funkcija
1	Key Lock	Potpuno okretanje ključa aktivira bravu, tako da se tasterima na prednjem panelu ne može pristupiti i vrata police za HDD se ne mogu otvoriti.
2	SATA-Bracket	Prima hard diskove za skladištenje snimljenog video zapisa. Do četiri hard diska se mogu namontirati. Montirani HDD-ovi su poznati kao unutrašnji HDD1 (gornji levi), unutrašnji HDD2 (gornji desni), unutrašnji HDD3 (donji levi) i unutrašnji HDD4 (donji desni).
3	Internal HDD1	Plavi indikator znači da je unutrašnji HDD1 instaliran i da funkcioniše normalno. Crveni indikator znači da unutrašnji HDD1 ne funkcioniše pravilno.
4	Internal HDD2	Plavi indikator znači da je unutrašnji HDD2 instaliran i da funkcioniše normalno. Crveni indikator znači da unutrašnji HDD2 ne funkcioniše pravilno.
5	Internal HDD3	Plavi indikator znači da je unutrašnji HDD3 instaliran i da funkcioniše normalno. Crveni indikator znači da unutrašnji HDD3 ne funkcioniše pravilno.
6	Internal HDD4	Plavi indikator znači da je unutrašnji HDD4 instaliran i da funkcioniše normalno. Crveni indikator znači da unutrašnji HDD4 ne funkcioniše pravilno.
7	EXTERNAL HDD1	Plavi indikator znači da je spoljašnji HDD povezan za poledinu eSATA Porta1 i da funkcioniše normalno. Crveni indikator znači da spoljašnji HDD1 ne funkcioniše pravilno.
8	EXTERNAL HDD2	Plavi indikator znači da je spoljašnji HDD povezan za poledinu eSATA Porta2 i da funkcioniše normalno. Crveni indikator znači da spoljašnji HDD2 ne funkcioniše pravilno.

Br.	Naziv	Funkcija
9	EXTERNAL HDD3	Plavi indikator znači da je spoljašnji HDD povezan za poledinu eSATA Porta3 i da funkcioniše normalno. Crveni indikator znači da spoljašnji HDD3 ne funkcioniše pravilno.
10	EXTERNAL HDD4	Plavi indikator znači da je spoljašnji HDD povezan za poledinu eSATA Porta4 i da funkcioniše normalno. Crveni indikator znači da spoljašnji HDD4 ne funkcioniše pravilno.
11	REC	Crveni indikator znači da je proizvod u režimu za snimanje.
12	ALARM	Plavi indikator znači da se pojavio događaj u Ulaznoj grupi.
13	ERROR	Crveni indikator znači da proizvod ne funkcioniše pravilno.
14	RAID	Plavi indikator znači da proizvod radi u RAID režimu.
15	LINK/ACT1	Treperući plavi indikator znači da je mrežni kabl pravilno povezan za Ethernet Port monitora i komunikacija podataka se pravilno odigrava.
16	LINK/ACT2	Treperući plavi indikator znači da je mrežni kabl pravilno povezan za Ethernet Port izvora i komunikacija podataka se pravilno odigrava.
17	LINK/ACT3	Treperući plavi indikator znači da je mrežni kabl pravilno povezan za Ethernet Port skladišta i komunikacija podataka se pravilno odigrava.
18	POWER	Crveni indikator znači da je proizvod uključen.
19	Config Ethernet Port	Koristi se za povezivanje proizvoda za kompjuter za konfiguraciju sistema.
20	LCD Panel	Panel prikazuje trenutni status proizvoda; takođe može da se upotrebi za promenu konfiguracije sistema okolnim tasterima.
21	ESC Button	Ovaj taster se koristi da promeni konfiguraciju sistema. 'Chapter 5 LCD Setup' (Poglavlje 5 LCD podešavanje) pokriva detaljno njegovu upotrebu.
22	Direction Button Enter Button	Ovaj taster se koristi da promeni konfiguraciju sistema. 'Chapter 5 LCD Setup' (Poglavlje 5 LCD podešavanje) pokriva detaljno njegovu upotrebu.

2.2. Zadnji panel

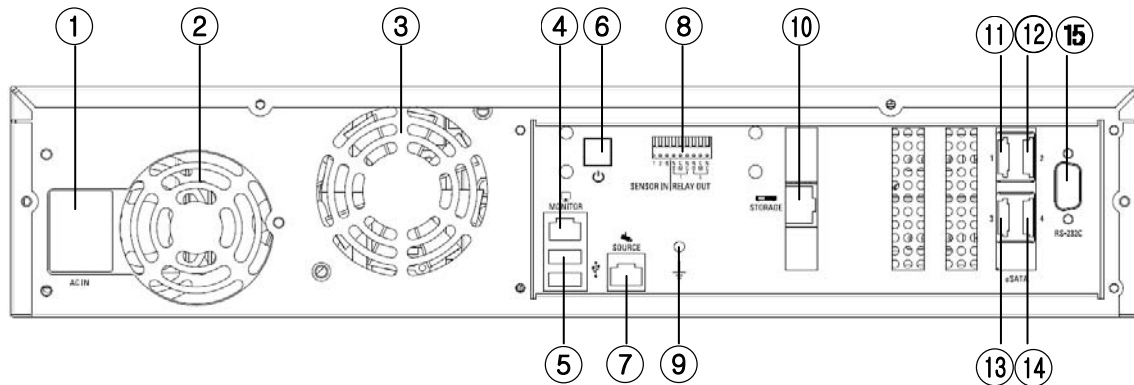

Br.	Naziv	Funkcija
1	AC IN	Služi da poveže kabl za napajanje proizvoda.
2	SMPS FAN	Ovaj ventilator hladi napajanje.
3	DC FAN	Ovaj ventilator hladi unutrašnjost proizvoda.
4	Monitor Ethernet Port	Mrežni port koji dozvoljava proizvodu da se poveže za kompjuter kako bi koristio Internet pregledač.
5	USB Port	Služi za ažuriranje firmver verzije proizvoda.
6	Power Button	Uključuje ili isključuje proizvod.
7	Source Ethernet Port	Mrežni port koji povezuje proizvod sa video kamerom.
8	SENSOR IN / RELAY OUT	Služi za povezivanje senzora ili alarma.
9	GROUND	Terminal koji se koristi da uzemlji okvir za spoljašnji uređaj.
10	Storage Ethernet Port	Služi da poveže NAS (mrežno priloženo skladište) u okviru iste mreže.
11	eSATA Port1	Služi da poveže spoljašnji HDD.
12	eSATA Port2	Služi da poveže spoljašnji HDD.
13	eSATA Port3	Služi da poveže spoljašnji HDD.
14	eSATA Port4	Služi da poveže spoljašnji HDD.
15	RS232C Port	Nekorišćen terminal.

2.3. Standardna podešavanja

Slede fabrička standardna podešavanja za proizvod.

2.3.1. Stranica za nadgledanje

Glavni meni	Pod meni	Standardno podešavanje
Auto sekvenca (Auto Sequence)		Isključeno
Režim za prikaz		Prikaz 16 kanala
Grupa		1
Kanal (Channel)		1
Info		Uključeno
DIT		Isključeno
PT, ZF		PT aktiviran
Prikaz preko ekrana (OSD)		Isključeno
Brzina PTZ-a		3

2.3.2. Stranica za reprodukciju

Glavni meni	Pod-meni	Standardno podešavanje
Vreme	Kanal (Channel)	-
	Kalendar	-
	Vreme	-
Događaj	Tip događaja	-
	Kanal (Channel)	-
	Datum/vreme	-

2.3.3. Stranica za konfiguraciju

❖ Podešavanje snimanja

Glavni meni	Pod meni	Standardno podešavanje
Konfiguracija za normalno snimanje		Svi frejmovi
Konfiguracija snimanja događaja	Ulazna grupa Aktivno Neaktivno Vreme pre snimanja Vreme posle snimanja	sopstveni događaj Svi frejmovi I frejmovi 5 sek 5 sek
Snimanje (Record)	Taster Tabela sa vremenom	Normalno snimanje odabrano Uvek normalno snimanje

❖ Podešavanje događaja

Glavni meni	Pod meni	Standardno podešavanje
Lokalni tip senzora	Senzor1 Senzor2	Normalno otvoreno Normalno otvoreno
Grupa događaja	Ulazna grupa Izlazna grupa Akciona grupa	- - -

❖ **Podešavanje kamere**

Glavni meni	Pod meni	Standardno podešavanje
Spisak kanala	Otvorite spisak kanala Odaberite kanal	Ch1 ~ Ch16 Ch01
Podešavanje kanala	Onemogući/omogući Naziv kanala Model Tip konekcije IP Konekcioni port ID Lozinka Tip slike ATC režim Kvalitet video zapisa Rezolucija video zapisa Broj frejmova video zapisa	Onemogući Ch01, Ch02, Ch03, ... - Statički IP 0.0.0.0 4000 - - MPEG Isključeno Visoko D1 10

❖ **Podešavanje HDD-a**

Glavni meni	Pod meni	Standardno podešavanje
HDD	Ponovi snimanje	Uključeno
Automatsko brisanje	Mod	Isključeno
	Trajanje	180
RAID režim		Normalno
Konfiguracija NAS-a	Nas Port Upotreba Naziv Standardni folder IP ID Lozinka	Nas1 Onemogući - - 0.0.0.0 - -

❖ **Podešavanje mreže**

Glavni meni	Pod meni	Standardno podešavanje
Ethernet Port monitora	Tip konekcije IP adresa Subnet maska Mrežni prolaz (Gateway) Konekcionni port Http Port ATC režim	Statički IP 0.0.0.0 0.0.0.0 0.0.0.0 4000 80 Onemogući
DDNS	Upotreba Domen servera ID Lozinka	Onemogući www.samsungipolis.com - -
Ethernet Port izvora	Tip konekcije IP adresa Subnet maska Mrežni prolaz (Gateway)	Statički IP 0.0.0.0 0.0.0.0 0.0.0.0
Izvor DHCP servera	Upotreba IP opseg	Onemogući 0.0.0.0 ~ 0.0.0.0
Ethernet Port za skladištenje	Tip konekcije IP adresa Subnet maska Mrežni čvor (Gateway)	Statički IP 0.0.0.0 0.0.0.0 0.0.0.0
DNS	DNS1 DNS2	168.126.63.1 168.126.63.2
RTP/RTSP	Upotreba RTSP-a RTSP port RTP port Multicast (višestruko slanje) Multicast Address (Adresa višestrukog slanja)	Onemogući 554 4000 Onemogući 224.0.1.1
Email	Naziv SMTP servera Upotrebi autentizaciju ID Lozinka Pošalji email na	- Da - - -

❖ Podešavanje vremena

Glavni meni	Pod meni	Standardno podešavanje
Konfiguracija vremena	Format datuma Format vremena Vremenska zona Upotrebi DST	mm.dd.yy (mm.dd.gg) 24h (GMT 00:00) Srednje vreme po Griniču Onemogući
NTP	Upotrebi klijenta Upotrebi server Adresa javnog servera1 Adresa javnog servera2 Adresa javnog servera3 Adresa javnog servera4 Adresa javnog servera5	Onemogući Onemogući pool.ntp.org asia.pool.ntp.org europe.pool.ntp.org north-america.pool.ntp.org time.nist.gov

2.3.4. Sistemska stranica

❖ Korisnik


Glavni meni	Pod meni	Standardno podešavanje
Administrator	Lozinka	11111111
Korisnik	ID Lozinka Ovlašćenje	user 22222222 Dozvoljeno je samo nadgledanje.

3. Poglavlje - Instalacija


3.1. Instaliranje i povezivanje proizvoda

3.1.1. Napajanje i rad proizvoda

Povežite kabl za napajanje za proizvod kako je prikazano na slici ispod.

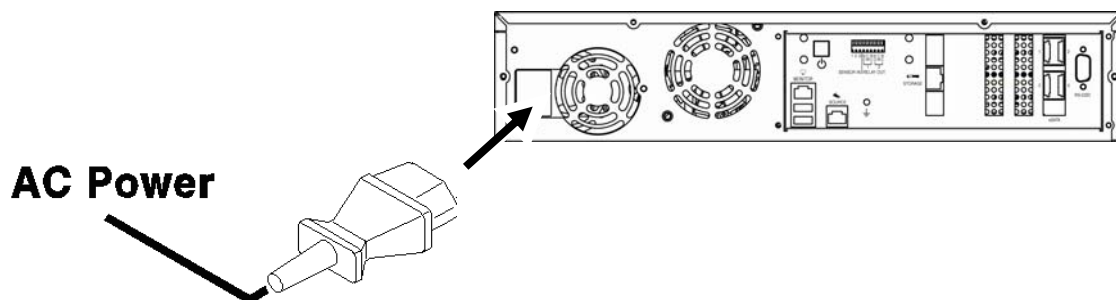


- Kada je kabl za napajanje bezbedno povezan, pritisnite prekidač za napajanje na zadnjem panelu da biste startovali sistem.
- Kada je proizvod uključen, možete da pritisnete prekidač za napajanje na kratko da isključite proizvod.
- Kada se sistem susretne sa greškom i kada ne možete da ga isključite normalno, možete da pritisnete i da držite pritisnut prekidač za napajanje u trajanju od 5 sekundi kako bi primorali system da se isključi.

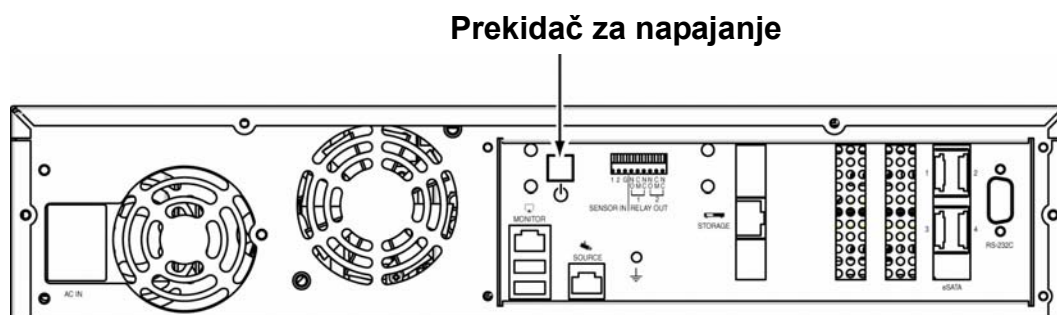

3.1.2. Konfiguracija mreže

Sledeća slika predstavlja primer mreže korišćenjem NVR. 3 mrežna porta na zadnjem panelu proizvoda su za kompjuter, kameru i NAS (mrežno priključeno skladištenje). Molimo pogledajte "2.2. Zadnji panel".

Mrežni portovi na zadnjem panelu mogu se koristiti za uređaje u okviru iste mreže, ili u različitim mrežama, kako je prikazano na dijagramu radi davanja primera.

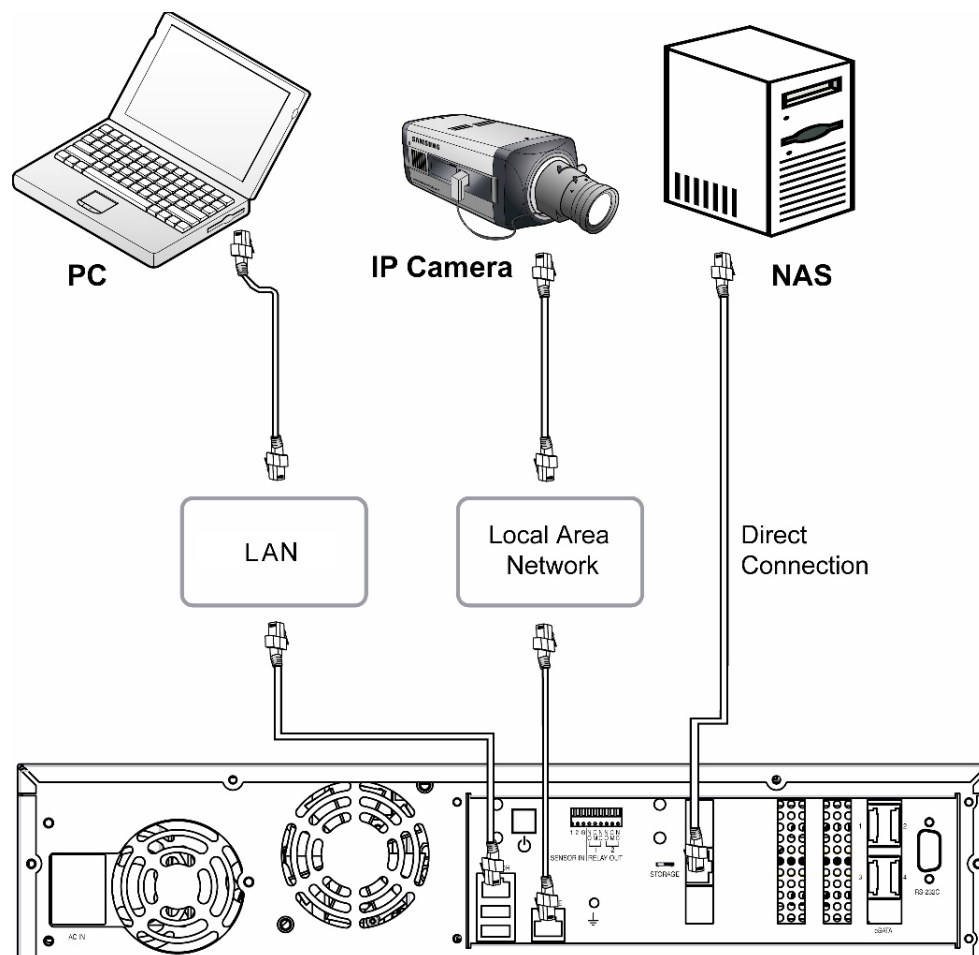


3.1.3. Unutrašnji HDD


Otvorite HDD policu, kako je prikazano ispod da biste dodali, uklonili ili zamenili unutrašnji HDD.

- ① Pritisnite PUSH (GURNI) ■■ da otvorite Vrata za zaključavanje.


- ② Okrenite bravicu za ključ u smeru suprotnom od smera kretanja kazaljke na satu da otključate.

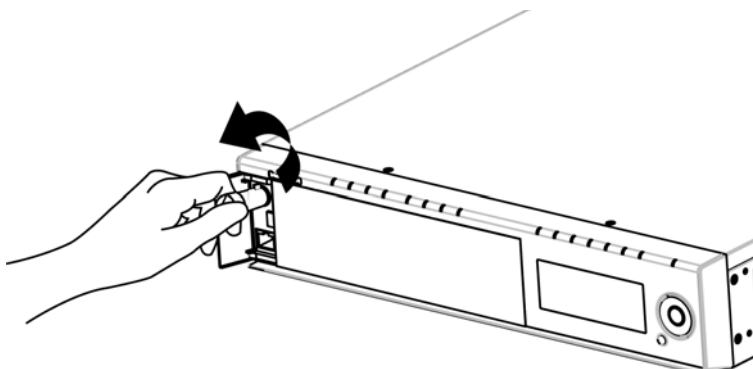


- ③ Otvorite vrata za HDD.

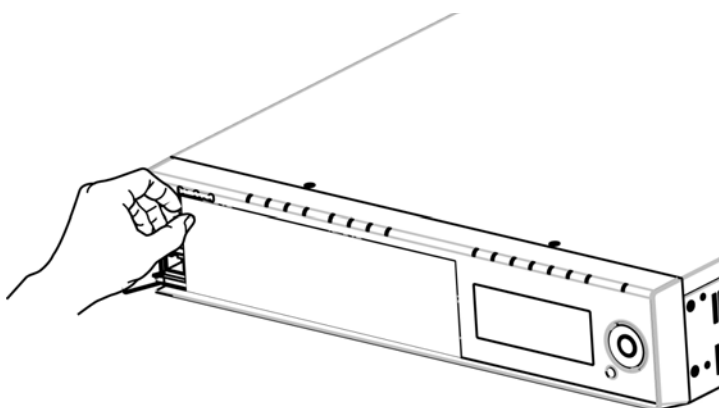


- ④ Dok pritiskate kukicu za HDD naniže, povucite ručicu da izvučete SATA konzolu.

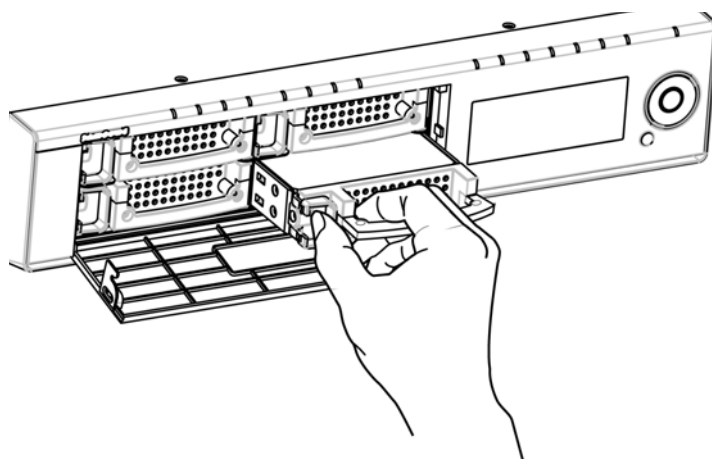


- ⑤ Odvrtite zavrtnje montaže na SATA konzoli pre uklanjanja HDD-a; pričvrstite zavrtnje bezbedno nakon što ubacite HDD u SATA konzolu.

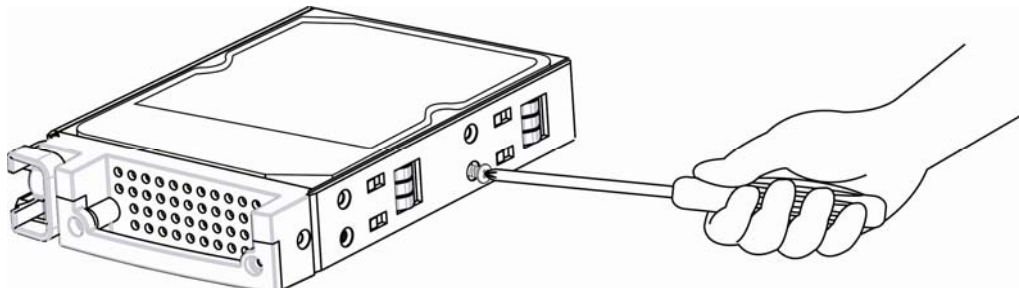


- ⑥ Proverite da je SATA konzola gurnuta unazad do kraja na HDD policu i zatvorite vrata za HDD.

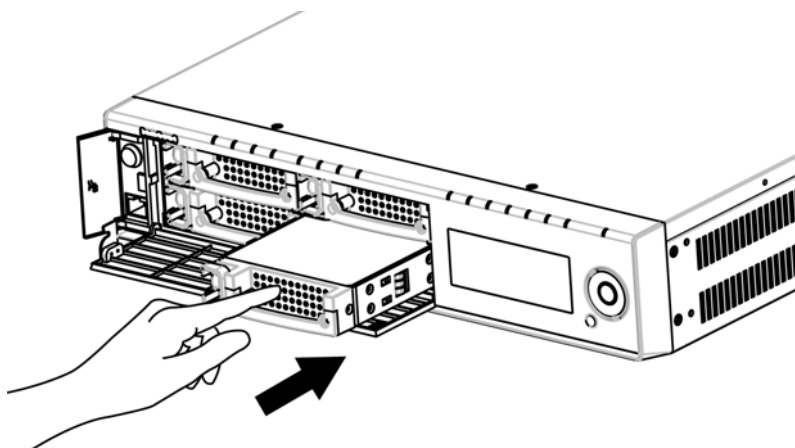

- ⑦ Okrenite bravicu za ključ u smeru kazaljke na satu da zaključate.

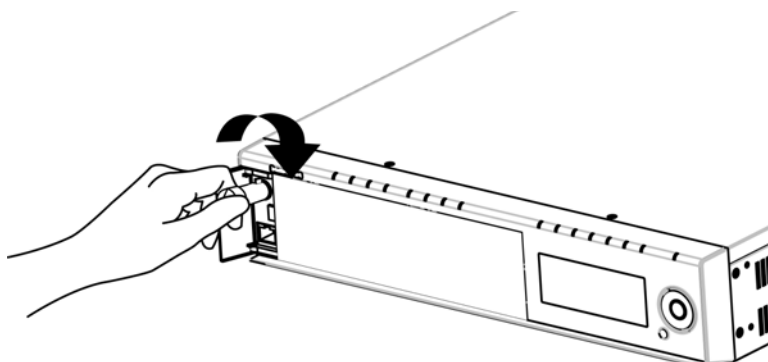

- ⑧ Zatvorite vrata za zaključavanje.

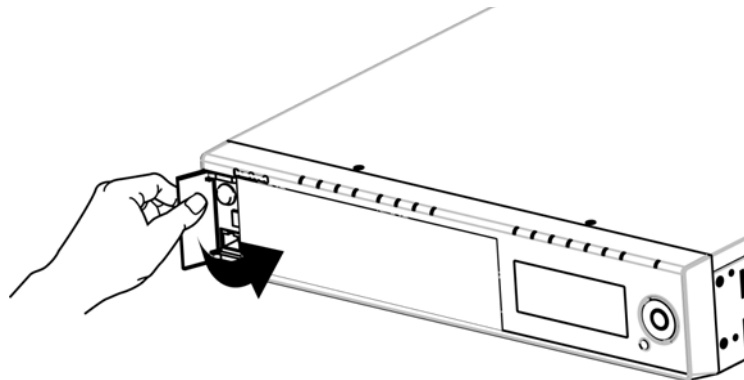

- ⑨ Kada dodajete novi, neformatirani HDD, proizvod automatski formatira HDD.

Formatiranje HDD-a
Je u toku...

prikazivanje procesa formatiranja na prednjem LCD-ju.

Unutrašnji HDD [2]
Uspešno dodat!

Nakon završetka procesa formatiranja, poruka iznad pojaviće se na LCD-u zajedno sa plavim indikatorom u svetlećoj diodi HDD-a, ukazujući da je novi HDD spreman za upotrebu.



Napomena

Za spisak kompatibilnih HDD-a, molimo pogledajte “오류! 참조 원본을 찾을 수 없습니다.”.



Oprez

Ne uklanjajte HDD dok proizvod radi. Da biste bezbedno uklonili HDD-e, molimo vas pogledajte "5.4. Uklanjanje HDD-a".




Oprez

Da zaključate vrata HDD-a, molimo vas proverite da je bravica za ključ u potpunosti okrenuta suprotno od smera kretanja kazaljke na satu.

3.1.4. Spoljašnji HDD

NVR podržava eSATA interfejs za povezivanje eksternih uređaja za skladištenje; četiri eSATA porta se nalaze na zadnjem panelu. Proizvod može da ima do 20 TB kapaciteta za skladištenje korišćenjem unutrašnjih HDD-ova i eSATA portova. (Na osnovu kapaciteta od 1TB podataka po HDD-u.)

Eksterni eSATA HDD može da se poveže za eSATA port na zadnjem panelu, kako je prikazano na sledećoj stranici. Imajte u vidu da eSATA port ne dostavlja napajanje uređaju povezanom za njega; eksterni uređaj mora da ima sopstveno napajanje.

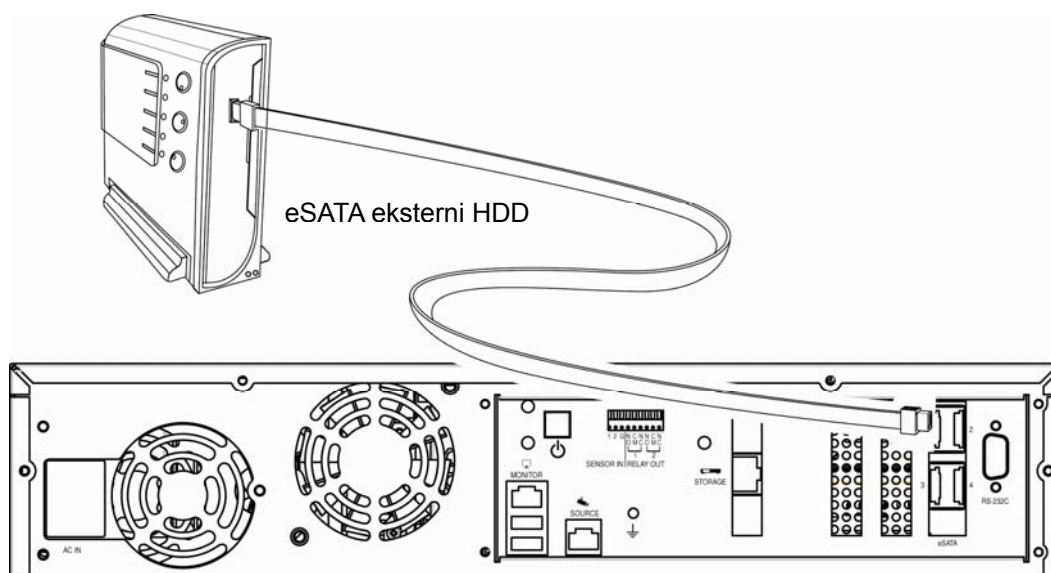

Napomena

- Možete da povežete eksterni HDD dok proizvod radi. Međutim, ovo može da dovede do toga da određeni modeli HDD-a ne budu detektovani. Zbog toga, preporučuje se da povežete eksterni HDD prateći korake navedene ispod.
 1. Isključite proizvod.
 2. Povežite eksterni HDD (takođe isključen) za proizvod uz pomoć eSATA interfejs kablova.
 3. Uključite eksterni HDD.
 4. Uključite proizvod.
- eSATA kabl nije uključen sa proizvodom.
- Za spisak kompatibilnih HDD-a, molimo pogledajte "오류! 참조 원본을 찾을 수 없습니다."


3.1.5. Senzor

Slede specifikacije i radni uslovi za ulaz senzora.

Spec	Broj ulaznih kola	2
	Tipovi ulaza	N.C , N.O
	Podržani tipovi senzora	Senzori sa suvim kontaktom.
	Tip konekcije	Priključite konekcije ogoljene žice za terminalni blok.
Napajanje	DC	150V
	Izlazna struja	Tipično DC 12mA

Molimo vas pogledajte dijagram na sledećoj stranici da biste povezali ulaze za sensor.

Dijagram prikazuje primer senzora sa suvim kontaktom koji je povezan za proizvod.

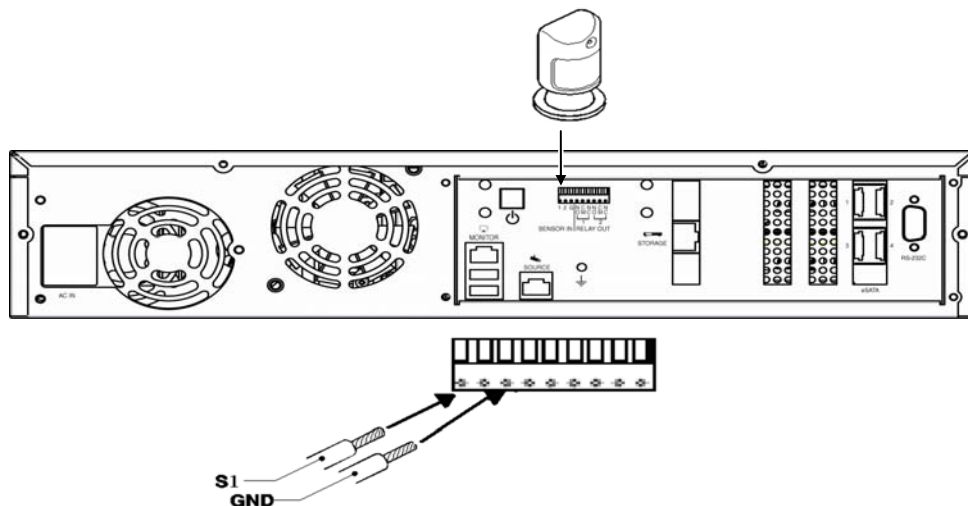


Za detaljna uputstva o povezivanju senzora, molimo pogledajte "4.6.3. Podešavanje događaja".

3.1.6. Releji

Slede specifikacije i radni uslovi za izlaz alarma.

Spec.	Broj ulaznih kola	2 releja
	Tipovi izlaza	Suvi kontakt.
	Tip konekcije	Priključite konekcije ogoljene žice za terminalni blok.
Napajanje	DC	30V 1A
	AC	125V 0.5A

Kada povezujete izlaze releja, najpre odredite attribute uređaja koji (Normalno otvoreno, ili Normalno zatvoreno), a potom povežite uređaj na osnovu dijagrama ispod.

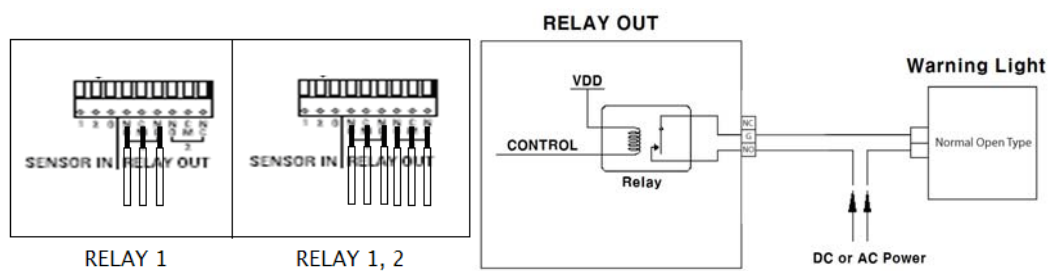

IZLAZ RELEJA 1	NC (NZ)	CM (UO)	NO
Normalno zatvoreno	O	O	-
Uobičajeno	-	O	-
Normalno otvoreno	-	O	O

IZLAZ RELEJA 2	NC (NZ)	CM (UO)	NO
Normalno zatvoreno	O	O	-
Uobičajeno	-	O	-
Normalno otvoreno	-	O	O

Za detaljna uputstva o povezivanju izlaza releja, molimo pogledajte "4.6.3. Podešavanje događaja".


3.1.7. USB

USB portovi na zadnjem panelu se koriste da ažuriraju firmver proizvoda uz pomoć tastera sa prednjeg panela. Molimo pogledajte "5.1.4. Ažuriranje sistema".

3.2. Povezivanje na internet prezentaciju


3.2.1. Kabl za povezivanje

Pritisnite PUSH(gurni) na prednjem panelu da otvorite vrata za zaključavanje, a potom povežite PC za mrežni port na prednjem panelu uz pomoć priloženog ukrštenog kabla, kako je prikazano na ilustraciji ispod (Kada koristite glavčinu da povežete proizvod za kompjuter, možete da koristite normalni LAN kabl umesto ukrštenog kabla).

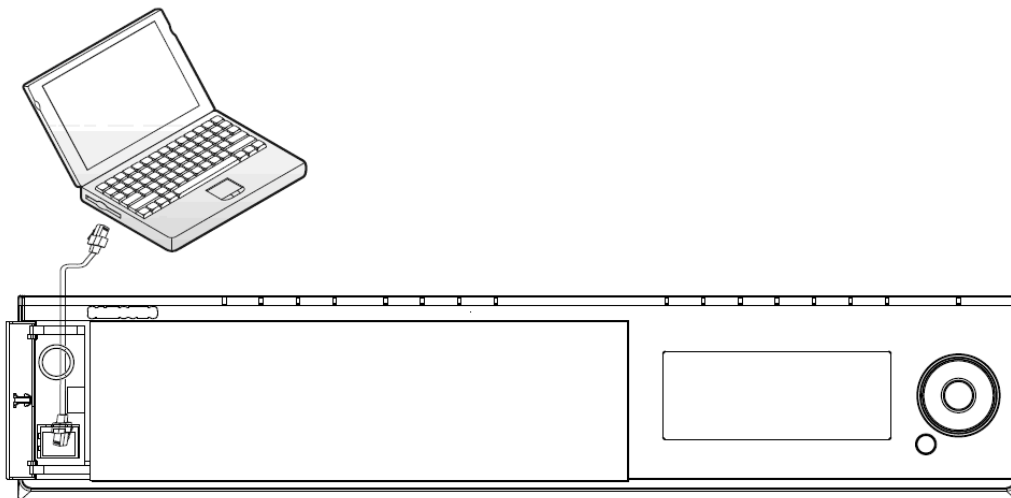


3.2.2. Dodavanje IP adrese

Na vašem kompjuteru, kliknite na Start > Control Panel > Network Connections > Local Area Connection > Properties.

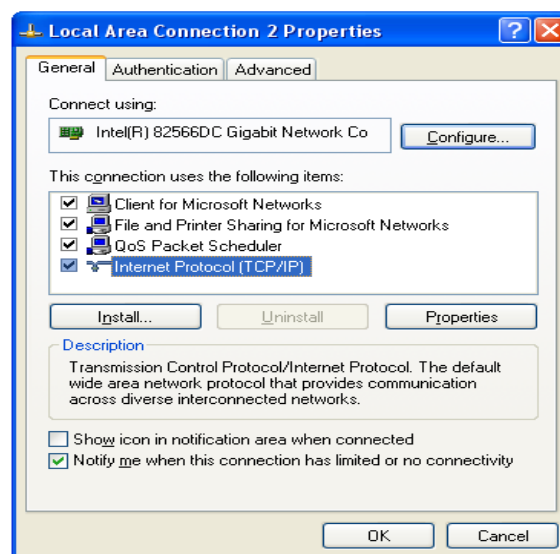


Odaberite Internet Protocol (TCP/IP.) Kliknite na taster Properties u dijalogu Internet Protocol (TCP/IP) Settings, kliknite na taster Advanced da otvorite dijalog Advanced TCP/IP Settings. (Ukoliko je opcija "Obtain an IP address automatically" odabrana u prozoru Internet Protocol (TCP/IP) Properties, molimo kliknite na "Use the following IP address" radio taster opciju pre nego što nastavite.)

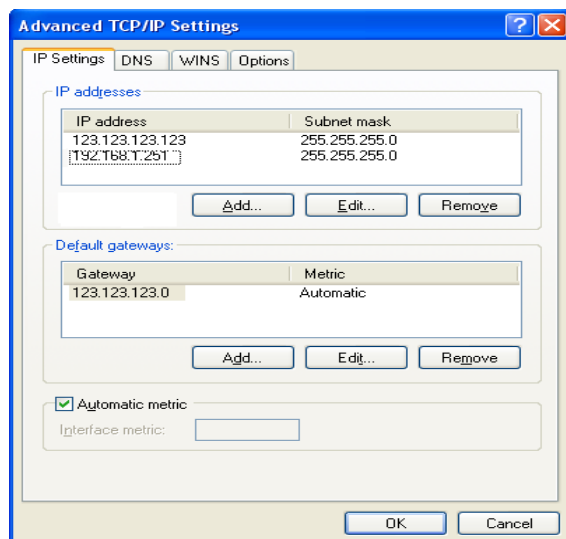


Kliknite na Add pod opcijom IP addresses a potom unesite 192.168.1.xxx. NVR koristi 192.168.1.100 kao IP adresu; ne možete da koristite adresu kao unutrašnju IP adresu za kompjuter.

3.2.3. Povezivanje i promena podešavanja

Ukucajte 192.168.1.100 u traku za adresu svog Internet pretraživača a potom pritisnite Enter.

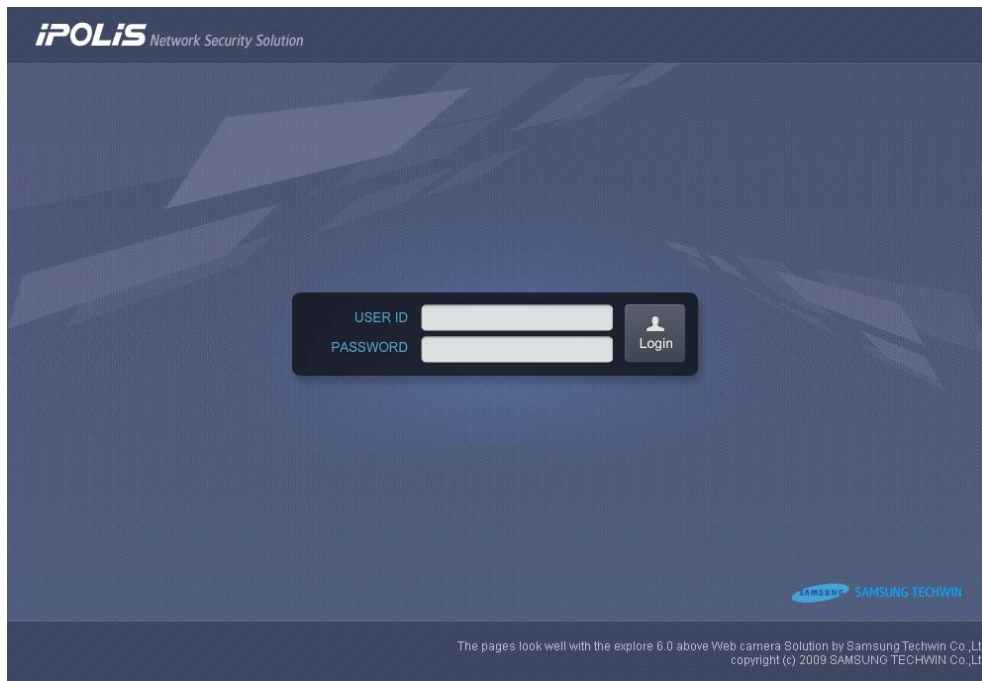



U prozoru za prijavljivanje, unesite admin kao User ID i 11111111 za Password (lozinku).
Kliknite na Login (prijavi se) da povežete proizvod.

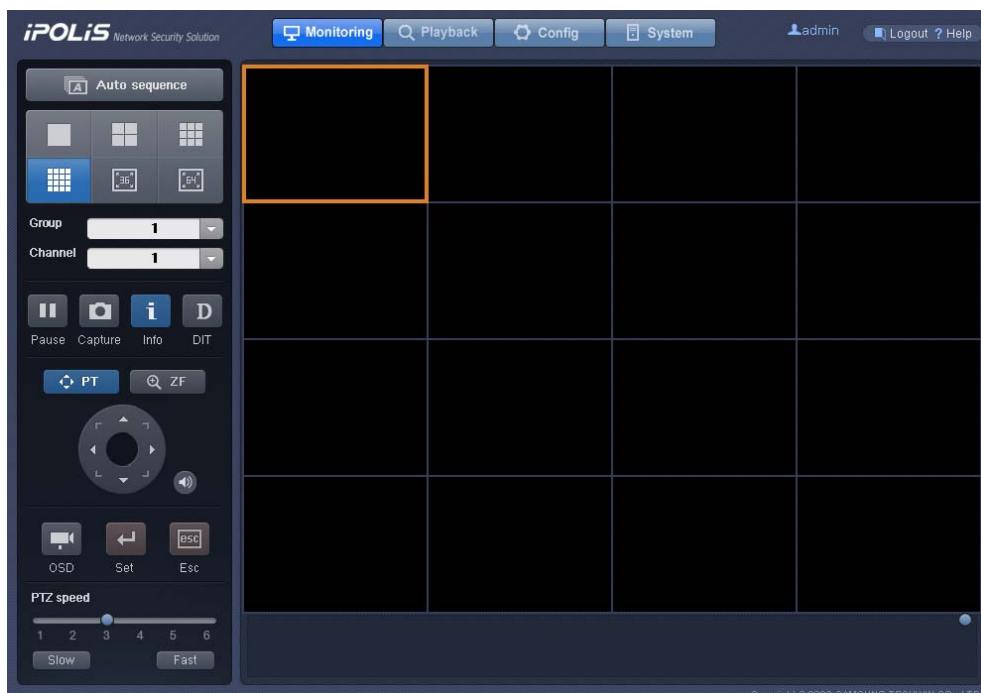


Kada se povezujete za proizvod po prvi put, video neće biti prikazan jer mreža ili kamera nisu podešene.

 Klik na  na vrhu ekrana usmerava vas na novu stranicu, kako je prikazano na snimku ekrana ispod.

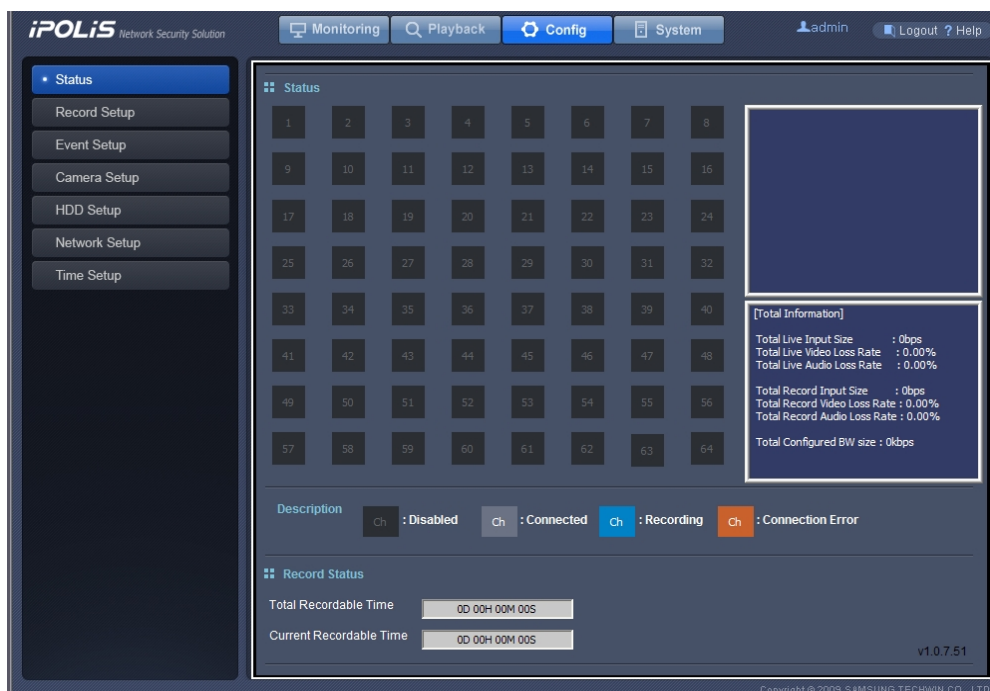

Klik na  usmerava vas na novu stranicu, kako je prikazano na snimku ekrana

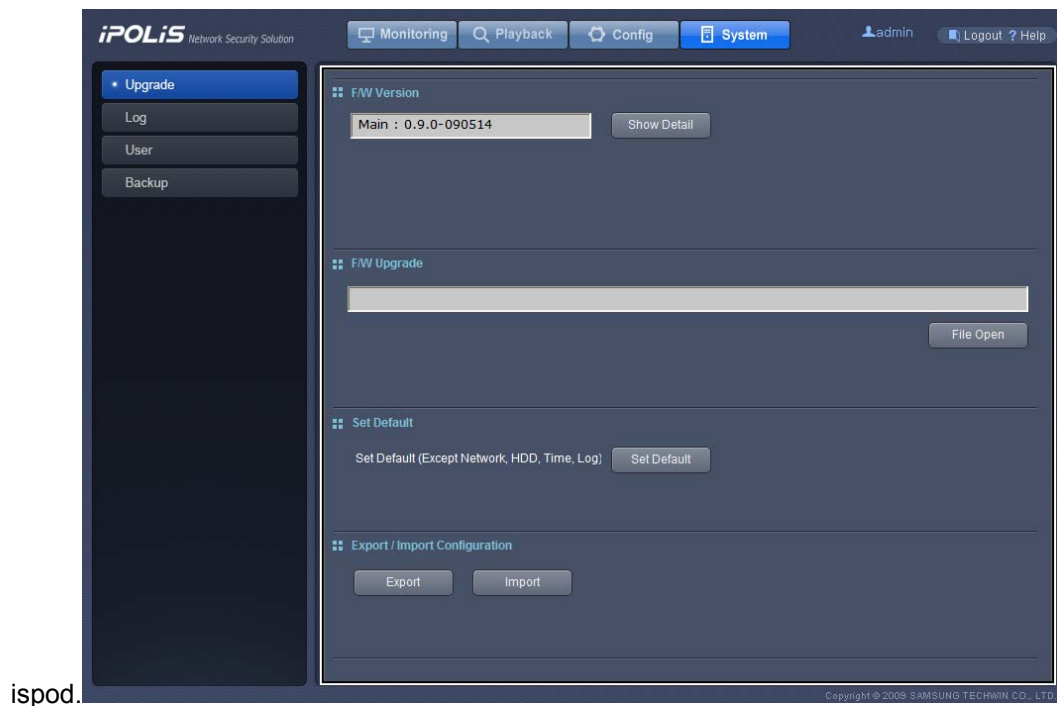

ispod.

Upotrebite levi meni da podesite proizvod. Za detaljna uputstva o svakoj stavci menija, molimo pogledajte "4.6. Konfiguracija" i "4.7. Sistem" Kada je mreža podešena,

Možete da koristite Ethernet Port monitora na zadnjem panelu proizvoda da se povežete za proizvod.

**Napomena**

- IP adresa za prednji port je fiksirana kao 192.168.1.100; ova vrednost ne može se promeniti.
- Izrazito preporučujemo da promenite podrazumevanu lozinku za administratora (Admin PW) što je pre moguće. Za uputstva o tome kako da promenite lozinku, molimo vas pogledajte "4.7.3. Podešavanja za korisnika".

4. Poglavlje. Rad

4.1. Sistemski zahtevi


Kategorija	Minimum	Preporučeno
Procesor	Intel Core 2 Quad 2,5GHz ili brži	Intel i7 ili brži
Glavna memorija	3GB	4GB ili više
Video memorija	512MB	1GB ili više
Rezolucija prikaza	1,280 x 1,024	
Hard disk	1GB ili više	
Radni sistem	Windows XP Professional / Windows Vista Business/ Windows 7	
Mreža	Gigabit Ethernet	
Razno	DirectX 9.0 ili noviji	

4.2. Kompatibilni internet pretraživači

Internet pregledač je optimizovan za korišćenje sa Microsoft Internet Explorerom 6.0 ili novijim. Potrebno je da imate Microsoft Internet Explorer 6.0 ili noviji instaliran na svom kompjuteru da biste osigurali rad Internet pregledača bez problema.

4.3. Prijavljivanje

Otvorite internet pretraživač, a potom unesite IP adresu proizvoda. Bićete usmereni na stranicu za prijavljivanje. Unesite svoju ID i lozinku, potom kliknite na taster za prijavljivanje da biste se povezali za sistem. Bićete usmereni na stranicu za nadgledanje. Ukoliko još uvek niste podesili svoju ID i lozinku, standardna ID je "admin", a standardna lozinka je "11111111" (bez znakova navoda). Za instrukcije o promeni ID-a i lozinke, molimo vas da pogledate "4.7.3. Podešavanja za korisnika")

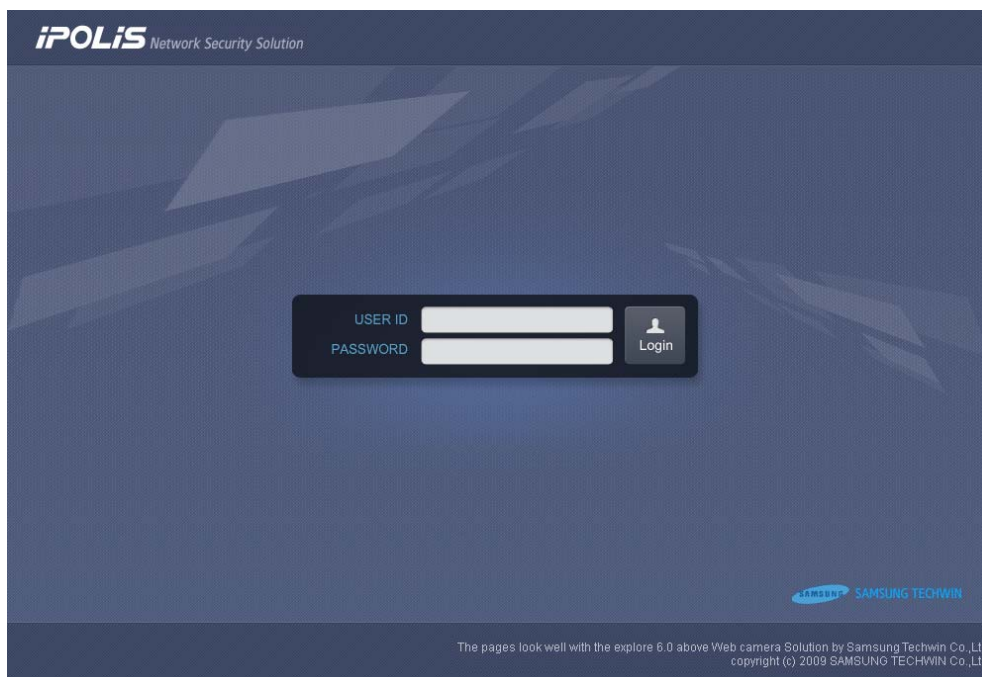


Napomena

- Da biste se povezali za proizvod koristeći prednji mrežni port, molimo vas da obratite pažnju da unesete 192.168.1.100. Da biste se povezali za proizvod koristeći poledinu Ethernet porta monitora, obratite pažnju da unesete IP adresu dodeljenu portu.
- Port za povezivanje i kompjuter moraju da budu u istoj mreži.
- Za HTTP broj porta sa bilo kojom vrednošću preko 80, adresa za pristup je `http://<IP address>:<HTTP broj porta>`.
Na primer, ukoliko je IP adresa 192.168.1.110, a broj HTTP porta je 8080, tada je adresa za internet pregledač <http://192.168.1.110:8080>.
- Za uputstva o promeni IP adrese Ethernet Porta monitora, molimo pogledajte "4.6.6. Podešavanje mreže".

4.4. Nadgledanje

Ukoliko se prijavljujete na svoj mrežni video rekorder po prvi put, ili ukoliko kliknete na taster  na vrhu svog internet pregledača, bićete usmereni na stranicu za nadgledanje gde ćete moći da pregledate dovode video zapisa sa kamera koje su povezane za vaš kompjuter.

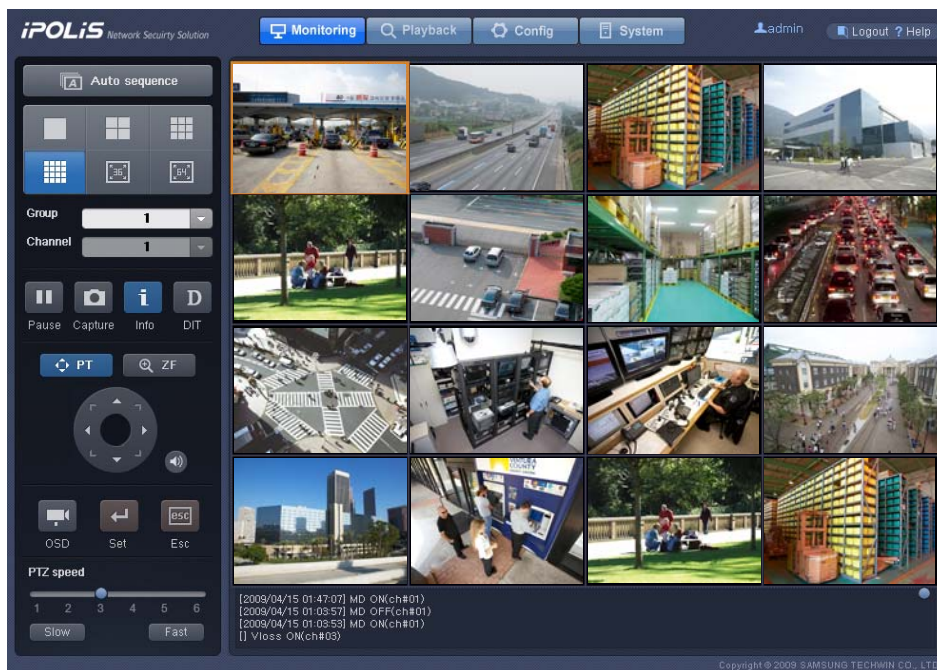

4.4.1. Podela ekrana i menjanje kanala

Možete da odaberete broj dovoda video zapisa koji će se simultano prikazivati na ekranu

klikom na taster  u gornjem levom delu ekrana. Možete da imate 1-, 4-, 9-, 16-, 36-, ili 64 dovoda video kanala prikazanih simultano na ekranu; odvojeni prozor za pretraživanje će se otvoriti da prikaže dovode video zapisa za 36- ili 64- kanala. Prilikom prikazivanja 1~36 kanala, kanali su prikazani u grupama da bi se upravljalo preglednošću.

Na primer, ako pregledavate 16 kanala simultano, onda će kanali 1~16 biti prikazani u grupi 1,

a kanali 17~32 će biti prikazani u grupi 2, i tako dalje.  se koristi da odaberete

koju grupu ili kanal želite da gledate; Za gledanje video zapisa na svim kanalima po redu, kliknite na taster  da biste aktivirali opciju za auto sekvencu koja kruži periodično kroz video zapise u različitim grupama u intervalima od po 7 sekundi. Dnevnicu za trenutni kanal su na dnu ekrana: događaj (MD, V-gubitak), senzor za glavni opseg i relej događaja. Da biste proverili dnevnik, pomerite taster  na desnoj strani prozora naviše ili

naniže. Nazivi događaja kao 'MD', 'V-gubitak' itd. Se prikazuju na video zapisu onih kanala gde dođe do događaja.

4.4.2. Video kontrola

Klikom na video kanal, odabrani ekran će se prikazati u narandžastoj boji. Kada odaberete kanal, možete da koristite tastere na levoj strani stranice da biste upravljali video dovodom u tom kanalu.

-  Taster: Pauzira ili depauzira video dovod u odabranom kanalu.
-  Taster: Hvata slike ekrana trenutnog ekrana koje možete da sačuvate kao JPG fajl slike.
-  Taster: prikazuje naziv i trenutno vreme kanala na video ekranu.
-  Taster: Aktivira ili onemogućuje Deinterlace opciju na video zapisu za kanal.

Postavite kursor iznad slike i desnim tasterom kliknite da biste prikazali kontekstni meni za zvuk.



- **Audio:** Ovo radi isto kao i kliktanje tastera  na levoj strani ekrana. Reprodukција audio zapisa je sa trenutno odabranog kanala. Ikona () se pojavljuje da bi ukazala sa kog kanala je audio dovod; takođe možete kliknuti na () da biste podesili jačinu tona.
- **Unapred podešeno:** Prikazuje  na video ekranu kanala. Klik na  vam dozvoljava da odaberete unapred podešeno. Unapred podešeno je unapred odabran rad ugla i zuma za PTZ (pan, nagib, zum) kamere. Odabirom unapred podešenog vraćate kameru na prethodna podešavanja ugla i zuma. NVR podržava samo postojeća unapredna podešavanja koja se učitavaju. Da biste kreirali nova unapredna podešavanja, morate da ih ručno podesite na svom PTZ-u (pan, nagib, zum) kamera.

4.4.3. PTZ kontrola

Kliknite na kanal prikazan na ekranu; prikazaće se narandžasta granica oko tog kanala da ukaže da je kanal odabran. Kada je kanal odabran, možete da koristite taster na levoj strani stranice da biste upravljali PTZ-om (pan, nagib, zum) kamere za odabrani kanal.

 menja smer ka kome je kamera okrenuta. Kliknite na taster da biste prikazali kružni taster, prizan na desnoj strani. Kliknite smer na kružnom tasteru da biste namestili pan kamere u tom smeru.




 ZF podešava zum i fokus odabrane kamere. Kliknite na taster da biste prikazali kružni taster, prizan na desnoj strani. Kliknite na  i  da biste uzumirali i odzumirali; kliknite na  i  da biste podesili fokus.



Kliknite na taster  pored kružnog tastera da biste reprodukovali audio dovod sa odabranog kanala. Efekat ovog tastera je identičan audio opciji u meniju za sadržaj koji se dobija desnim klikom.

Možete da podesite brzinu PTZ-a (pan, nagib, zum) klizećim dugmetom na dnu stranice. Ukupno 6 različitih nivoa brzine PTZ-a (pan, nagib, zum) je dostupno. Kliknite na  da biste smanjili brzinu PTZ-a (pan, nagib, zum) za jedan nivo i  da biste je povećali za jedan nivo. "1" je najsporija brzina PTZ-a (pan, nagib, zum), a "6" je najbrža.

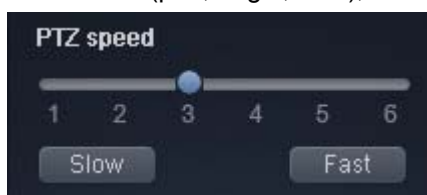


Napomena

Kontrola PTZ-a i opcije za podešavanja unapred su u saglasnosti samo sa PTZ omogućenim kamerama.

4.4.4. Kontrola PRIKAZA NA EKRANU

Klikom na video kanal, video ekran će se prikazati u narandžastoj boji da bi ukazalo kako je odabran. Za prikaz kamere na ekranu odabranog kanala, kliknite na  na levoj strani ekrana.

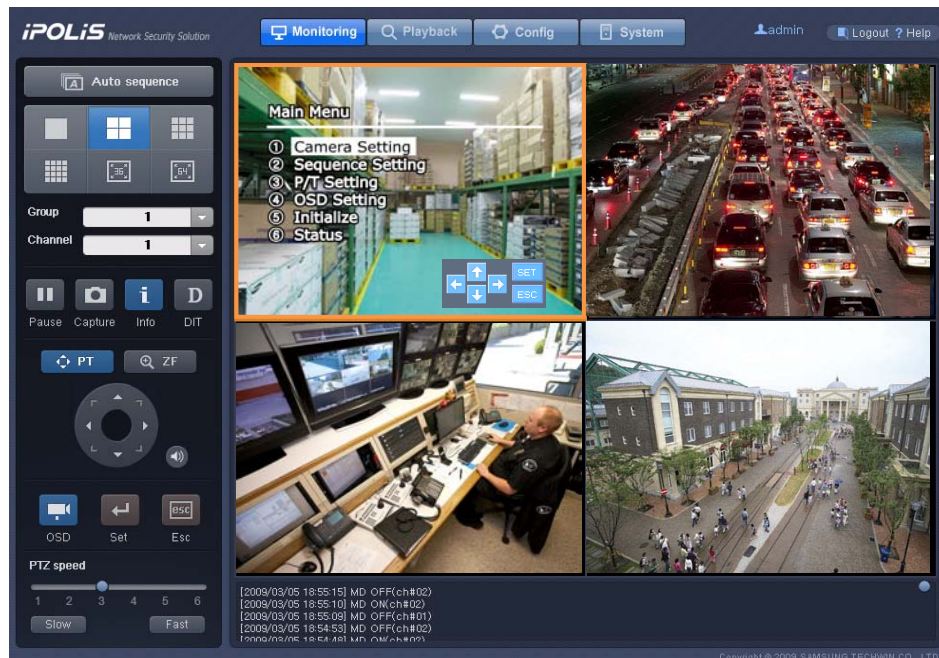

Za upravljanje menijem za prikaz na ekranu, kliknite na tastere  na dnu video ekrana.

Za pomeranje između menija za prikaz preko ekrana i menjanje podešavanja, koristiti tastere sa strelicom. Da biste se pomerili na pod meni ili primenili novo podešavanje, kliknite na taster SET (podesi). Da biste se vratili na prethodni meni, kliknite na taster ESC (izlaz). Umesto tastera SET (podesi) i ESC (izađi) na video ekranu, takođe možete da koristite tastere  i  pored tastera . Za detaljne instrukcije o podešavanju prikaza na ekranu, molimo vas da pogledate uputstvo za korišćenje za svoju kameru.




Napomena

Kontrola PTZ operacija, Unapred podešene vrednosti i OSD nisu dostupni kod AXIS kamere.

4.5. Reprodukcija


Kliknite na **Playback** na vrhu ekrana da biste prikazali ekran za reprodukciju. Ovaj ekran vam dozvoljava da gledate sačuvane video zapise. Postoje dva načina da koristite opciju za reprodukciju; **Time** vam omogućava da pretražite i gledate video zapise prema vremenu snimanja i datumu, dok vam **Event** dozvoljava da pregledavate video zapise prema događajima koji su se javili. Kada se po prvi put povezujete za ekran za reprodukciju, meni za pretragu vremena se pojavljuje kao standardni.

4.5.1. Pretraga vremena

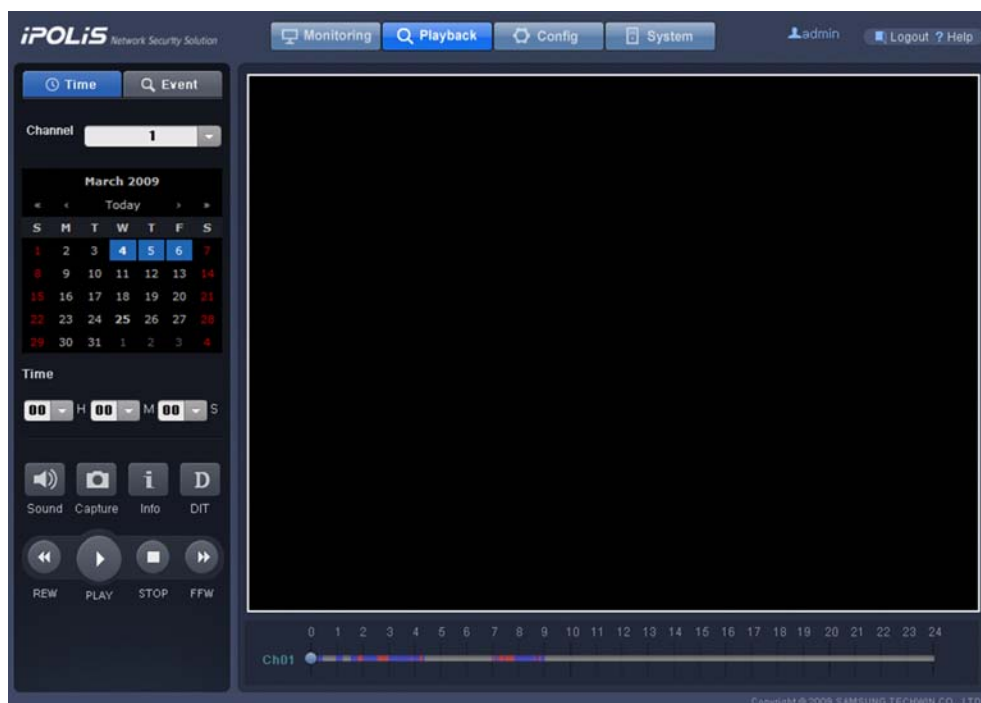


- **Kanal:** Omogućuje odabiranje kanala.
- Da biste udobno gledali video zapis, odaberite datum na kalendaru ispod tastera za kanal. Dostupni datumi sa video zapisima se prikazuju u plavoj boji, npr. **4** **5**
- **00:00:00** Vremensko područje: Dok je video ekran pauziran, odabiranje vremena i klik na taster za reprodukciju reprodukuje video u to vreme. Dok se video reprodukuje, vremensko područje prikazuje vreme snimanja video zapisa.
- **[Speaker Icon]** Taster za zvuk: Uključuje ili isključuje audio za trenutni video.
- **[Camera Icon]** Taster za pamćenje: Pamti slike trenutnog ekrana u JPG formatu.
- **[i]** Taster za informacije: Prikazuje naziv kanala i vreme snimanja trenutnog video zapisa.
- **[D]** DIT taster: Aktivira ili onemogućuje Deinterlace opciju za trenutni video.

 -  Tasteri za REW (premotavanje unazad) i  FFW (premotavanje unapred): Premotajte unazad, brzo premotajte unapred i podesite brzinu reprodukcije trenutnog video zapisa. Dok se video reprodukuje, tasteri se menjaju u , , , , , , , i  ukazujući na smer reprodukcije i brzinu. Podešene brzine za reprodukciju su 1x, 2x, 4x, i 8x unazad i unapred. Svaki put kada se pritisne taster za REW (premotavanje unazad) ili FFW (premotavanje unapred), brzina reprodukcije se menja za jedan nivo.
(Reprodukcija ili kretanje „korak po korak“ nisu podržani.)
-  Taster za REPRODUKCIJU: Reprodukuje video. Dok se video reprodukuje, menja se na taster  (PAUZA). Klikom na taster PAUSE (PAUZA) pauzirate trenutni video.
-  Taster za stopiranje: Stopira video.
- Pomerite  dugme na kliznoj liniji ispod ekrana za reprodukciju da biste potražili određeno vreme video zapisa. Vreme sa dostupnim video zapisom je označeno u plavoj boji na kliznoj liniji za vreme dok je vreme sa video događajem u crvenoj boji.




4.5.2. Pretraga događaja

Q Event prikazuje ekran pretrage vremena, kao što je prikazano na slici ispod. Za detaljne informacije o događajima, molimo vas da pogledate "4.6.3. Podešavanje događaja".

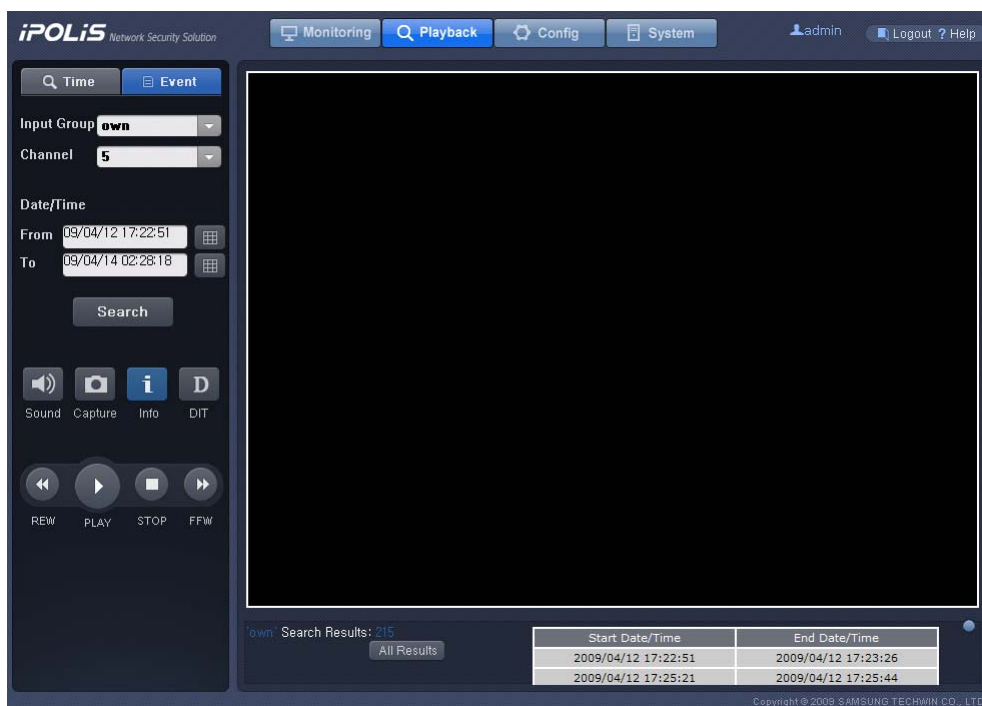

- **Input Group** **own** Područje: Omogućuje odabiranje grupe ulaza događaja.
- **Channel** **5** Područje: Omogućuje odabiranje kanala koji sadrži grupe ulaza događaja.
- **Date/Time**
From
To Područje: Omogućuje odabiranje početnih i završnih vremena za pretragu događaja.
- Taster: Prikazuje kalendar, kako je prikazano na sledećoj stranici, omogućujući vam da odaberete početne i završne datume i vremena za pretraživanje događaja. Odaberite datum i vreme, a potom kliknite na Apply (primeni).

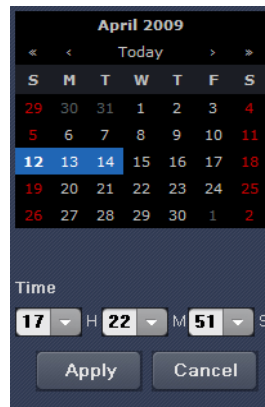

- Search Pretražuje video zapise koji odgovaraju odabranom tipu događaja, kanala, datuma i vremena, a potom prikazuje prvih 10 rezultata na dnu ekrana, kao što je prikazano na slici ekrana ispod. Da biste reprodukovali video, kliknite na rezultat. Da biste proverili svih 10 rezultata, pomerite na desnu stranu ekrana naviše ili naniže.

own Search Results: 215

All Results

Start Date/Time	End Date/Time
2009/04/12 17:22:51	2009/04/12 17:23:26
2009/04/12 17:25:21	2009/04/12 17:25:44

- All Results prikazuje sve rezultate pretrage na levom delu stranice. 10 rezultata pretrage se prikazuju odjednom. Klik na stavku automatski reprodukuje video sačuvan u odabranom vremenu. i pomeraju na prethodnu ili sledeću stranicu sa rezultatima. Close pomera na prethodni ekran.

iPOLiS Network Security Solution

Monitoring Playback Config System admin Logout ? Help

Time Event

own Search Results: 225

No	DateTime Range
1	2009/04/12 17:25:21 2009/04/12 17:25:44
2	2009/04/13 04:38:34 2009/04/13 04:38:53
3	2009/04/13 04:43:30 2009/04/13 04:44:08
4	2009/04/13 04:44:23 2009/04/13 04:44:41
5	2009/04/13 04:48:35 2009/04/13 04:48:55
6	2009/04/13 04:49:02 2009/04/13 04:49:18
7	2009/04/13 04:54:31 2009/04/13 04:54:48
8	2009/04/13 05:19:02 2009/04/13 05:19:20
9	2009/04/13 08:07:31 2009/04/13 08:07:46
10	2009/04/13 08:09:21 2009/04/13 08:09:45

Page 1 / 23

Close

own Search Results: 225

All Results

Start Date/Time	End Date/Time
2009/04/12 17:22:51	2009/04/12 17:23:26
2009/04/12 17:25:21	2009/04/12 17:25:44

Copyright © 2009 SAMSUNG TECHWIN CO., LTD.




Napomena

- Maksimalni period za pretraživanje je 7 dana.
 - Ako se više od 500 fajlova video događaja snimi u okviru odabranog perioda pretrage, podaci sačuvani tog dana, za koji je akumulirano 500 ili više snimljenih video fajlova, se pretražuju, ali podaci sačuvani sledećeg dana se ne pretražuju. (Na primer, ako se video fajlovi pretražuju od 10-og do 15-og i 800 akumuliranih video fajlova je sačuvano do 11-og, program neće pretraživati datume sačuvane nakon 11-og i prikazaće rezultate pretrage samo do 800-og fajla).
 - Događaji koji su se javili u toku režima za normalno snimanje se ne mogu pretražiti.
-
-  Taster za zvuk: Uključuje ili isključuje audio za trenutni video.
 -  Taster za pamćenje: Pamti slike trenutnog ekrana u JPG formatu.
 -  Taster za informacije: prikazuje naziv kanala i vreme snimanja trenutnog video zapisa.
 -  DIT taster: Aktivira ili onemogućuje Deinterlace opciju za trenutni video.
 -  Tasteri za REW (premotavanje unazad) i  FFW (premotavanje unapred): Premotajte unazad, brzo premotajte unapred i podesite brzinu reprodukcije trenutnog video zapisa. Dok se video reprodukuje, tasteri se menjaju u , , , , , , , i  ukazujući na smer reprodukcije i brzinu. Podešene brzine za reprodukciju su 1x, 2x, 4x, i 8x unazad i unapred. Svaki put kada se pritisne taster za REW (premotavanje unazad) ili FFW (premotavanje unapred), brzina reprodukcije se menja za jedan nivo.
 -  Taster za REPRODUKCIJU: Reprodukuj video. Dok se video reprodukuje, menja se na taster  (PAUZA). Klikom na taster PAUSE (PAUZA) pauzira se trenutni video.
 -  Taster za stopiranje: Stopira video.

4.6. Konfiguracija

Ekran koji sledi se pojavljuje kada se klikne na  na vrhu ekrana. Klik na taster na levom meniju vas upućuje na odgovarajuću stranicu.

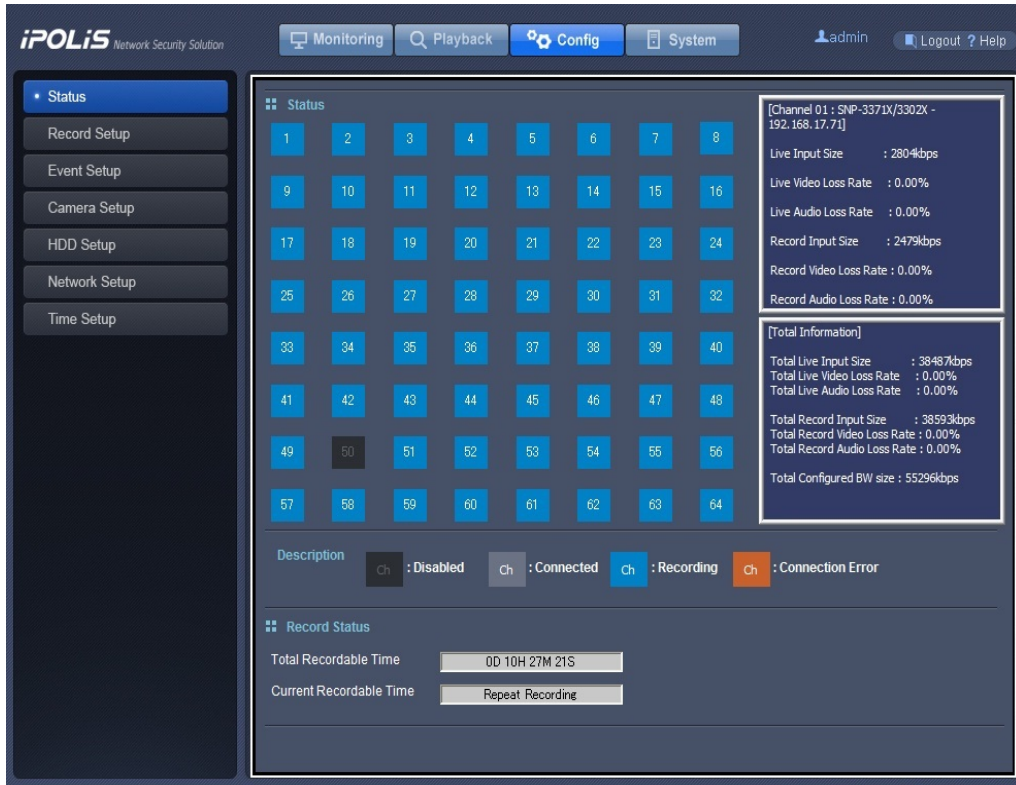

iPOLiS Network Security Solution

Monitoring Playback **Config** System admin Logout ? Help

Status

Record Setup

Event Setup

Camera Setup

HDD Setup

Network Setup

Time Setup

Status

1	2	3	4	5	6	7	8
9	10	11	12	13	14	15	16
17	18	19	20	21	22	23	24
25	26	27	28	29	30	31	32
33	34	35	36	37	38	39	40
41	42	43	44	45	46	47	48
49	50	51	52	53	54	55	56
57	58	59	60	61	62	63	64

[Channel 01 : SNP-3371X/3302X - 192.168.17.71]

Live Input Size : 2804kbps

Live Video Loss Rate : 0.00%

Live Audio Loss Rate : 0.00%

Record Input Size : 2479kbps

Record Video Loss Rate : 0.00%

Record Audio Loss Rate : 0.00%

[Total Information]

Total Live Input Size : 38487kbps

Total Live Video Loss Rate : 0.00%

Total Live Audio Loss Rate : 0.00%

Total Record Input Size : 38593kbps

Total Record Video Loss Rate : 0.00%

Total Record Audio Loss Rate : 0.00%

Total Configured BW size : 55296kbps

Description Ch : Disabled Ch : Connected Ch : Recording Ch : Connection Error

Record Status

Total Recordable Time 0D 10H 27M 21S

Current Recordable Time Repeat Recording

4.6.1. Status

Prikazuje trenutni status svakog kanala zajedno sa slobodnim prostorom za skladištenje na proizvodu na dnu.

The screenshot displays the 'Status' page of a security system interface. It features a grid of 64 channel status indicators (numbered 1 to 64) arranged in 8 rows and 8 columns. Channel 2 is highlighted in orange, indicating a connection error. Channel 50 is highlighted in black, indicating it is disabled. All other channels are blue, indicating they are in recording mode. To the right of the grid, there are two information panels. The top panel, titled '[Channel 02 : SNC-570 - 192.168.7.21]', displays the message 'Password Fail.'. The bottom panel, titled '[Total Information]', displays the following statistics: Total Live Input Size : 38487kbps, Total Live Video Loss Rate : 0.00%, Total Live Audio Loss Rate : 0.00%, Total Record Input Size : 38593kbps, Total Record Video Loss Rate : 0.00%, Total Record Audio Loss Rate : 0.00%, and Total Configured BW size : 55296kbps. Below the grid, a 'Description' section shows four status icons: 'Ch : Disabled' (black), 'Ch : Connected' (grey), 'Ch : Recording' (blue), and 'Ch : Connection Error' (orange). At the bottom, the 'Record Status' section shows 'Total Recordable Time' as '0D 10H 27M 21S' and 'Current Recordable Time' as 'Repeat Recording'.

Stranica za status vam daje da proverite status svih kanala na jednom ekranu. Tamno siva ukazuje na nekorišćen kanal. Svetlo siva ukazuje na kanal koji je povezan sa kamerom, ali nije u režimu za snimanje. Plava ukazuje na kanal koji je u režimu za snimanje. Narandžasta ukazuje na kanal koji ima problema da se poveže sa kamerom.

Detalji će biti prikazani na desnoj strani. Uobičajene prikazane stavke obuhvataju: trenutnu bitsku brzinu za svaku od funkcija Live and Record (Uživo i snimanje), Video Loss (Video gubici) i Audio Loss (Audio gubici). U donjem delu se dodaje zadata širina propusnog opsega kao referentna vrednost. U međuvremenu, informacije o kanalu će biti prikazane u gornjem delu, dok će statistika za sve kanale biti navedena u donjem delu. Kada odabirate kanal koji je povezan ili snima, brzina bita kao i gubitak video i audio zapisa za kanal se prikazuju. Za kanal u stanju greške prilikom konekcije, prikazuje se informacija o grešci.



Napomena



- "Uživo" ukazuje na video dovod uživo. "Snimanje" ukazuje na video dovod uživo koji se snima i čuva na HDD-u proizvoda.
- "Snimanje" koristi podatke u poslednjih 8 sekundi za izračunavanje statistike; može postojati blago neslaganje između brzine bita za "Uživo" i "Snimanje", čak i kada se svi frejmovi koji dolaze sa kamere skladište normalno.

Status snimanja prikazuje preostale sate za snimanje pod trenutnim podešavanjima za snimanje. Ukupno vreme za snimanje prikazuje vreme za snimanje svih povezanih jedinica za skladištenje podataka. Trenutno vreme za snimanje prikazuje preostale sate koji se mogu snimiti na osnovu trenutnog slobodnog prostora za skladištenje na proizvodu. Ukoliko se HDD potpuno napuni u toku režima za ponavljanje snimanja, meni za trenutno vreme za snimanje prikazuje ponavljanje snimanja. Molimo vas da pogledate "



Oprez


- Ako se prikaže poruka „Setup fail : bitrate exceeds“ (Neuspešno podešavanje : prekoračena bitska brzina) ili „Setup fail : framerate exceeds“ (Neuspešno podešavanje : prekoračena brzina kadra) (pogledajte donju sliku), više ne možete dodati kameru.

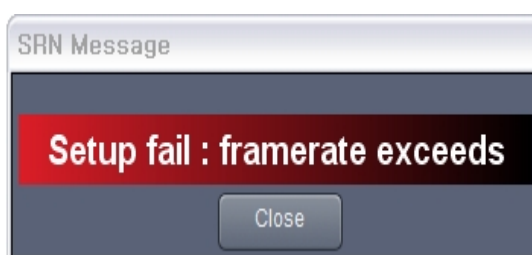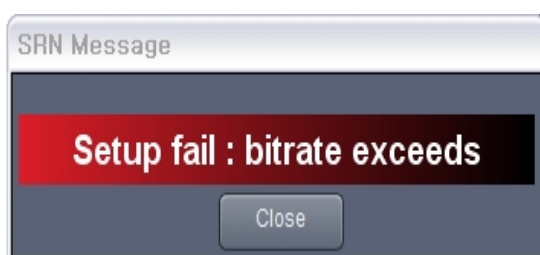

4.6.5. Podešavanje HDD-a".

4.6.2. Podešavanje snimanja

Odaberite kanal na levoj strani ekrana da biste odabrali njegov metod za snimanje video zapisa.

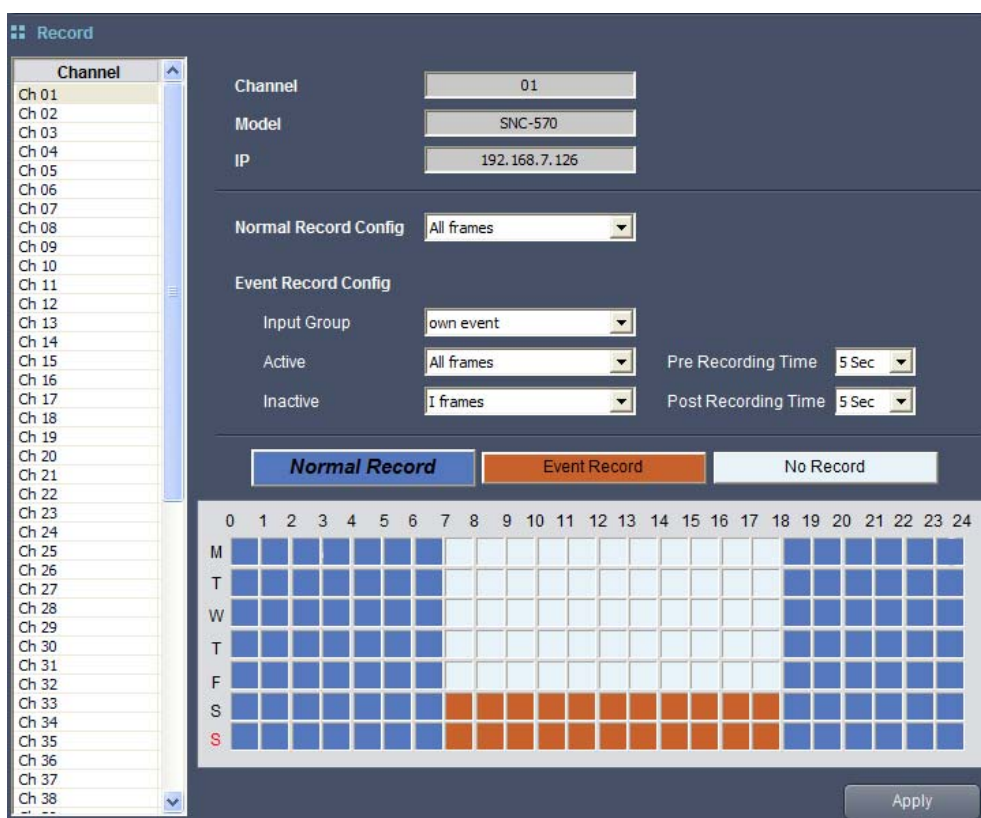

Odaberite kanal na levoj strani ekrana da biste odabrali njegov metod za snimanje video zapisa. Da biste odabrali vreme i metod čuvanja video zapisa svakog dana, odaberite jedno od **Normal Record**, **Event Record**, ili **No Record**, a zatim povucite kursor na dno tabele sa vremenom da biste izvršili odabir. Različito obojeni blokovi časova i dana ukazuju na različite režime za snimanje. Nakon odabira, nazivi tastera režima za snimanje su boldovani i iskošeni na **Normal Record**, **Event Record**, i **No Record**.

Režim za normalno snimanje uvek snima video prema podešenoj brzini frejma dok snimanje događaja menja svoju brzinu frejma za događaje. Možete da odaberete ulaznu grupu događaja ili sopstveni događaj da biste aktivirali režim za snimanje događaja. Kada odabirete ulaznu grupu, snimanje događaja se aktivira za događaje koji odgovaraju ulaznoj grupi. Kada odabirate sopstveni događaj, snimanje događaja se aktivira za sve događaje koji se javljaju na odabranom kanalu. Za snimanje događaja, "vreme pre snimanja" definiše trajanje vremena pre događaja, a "vreme posle snimanja" definiše trajanje vremena koje protekne nakon događaja, radi primene određene brzine frejma za skladištenje video zapisa. Možete da imate do 5 sekundi vremena pre snimanja, i do 60 sekundi vremena posle snimanja. Možete da pretražite snimljene video zapise prema snimljenim događajima u ekranu za reprodukciju. Za uputstva o podešavanju događaja i ulazne grupe, molimo pogledajte "4.6.3. Podešavanje događaja".

Možete da odaberete različite brzine frejmova za svaki režim za snimanje: Normalno snimanje, snimanje događaja – aktivno (kada se događaj javi), snimanje događaja – neaktivno (kada nijedan događaj nije detektovan). Za normalno snimanje i snimanje događaja – aktivno, svi frejmovi, 1 frejmovi i 2 I frejma je dostupno. Za snimanje događaja – neaktivno, svi frejmovi, 1 frejmovi, 2 I frejma i No Record (nema snimanja) je dostupno. Odaberite "Svi frejmovi" da biste uskladištili sve video dovode sa kamere dok "1 frejm" skladišti samo 1 frejm video dovoda po 1 sekundi. Odabirenje "2 I frejma" skladišti samo 1 frejm video dovoda svake 2 sekunde. No Record ne snima nikakav video.



Nova podešavanja se primenjuju samo ako pritisnete **Apply**.

Napomena

4.6.3. Podešavanje događaja

Sa ovog ekrana možete da konfigurišete podešavanja povezana sa događajem.

The screenshot shows the 'Event' configuration interface. At the top, there's a title bar 'Event' and a toolbar with 'Local Sensor Type', 'Sensor1' (Normal Open), 'Sensor2' (Normal Open), and an 'Apply' button. Below the toolbar are three main sections: '1 Input Group', '2 Output Group', and '3 Action Group'. Each section contains a list of items (input1, output1, action1) and buttons for 'Add', 'Modify', and 'Remove'.

❖ Tip lokalnog senzora

Tip lokalnog senzora vam omogućava da odaberete tip operacije za senzor 1 i 2 između normalno otvorenog i normalno zatvorenog. Normalno otvoreno aktivira ulaz za senzor kada je tip kontakta kratak ili kada je dinamičan tip na niskom nivou. Normalno zatvoreno aktivira ulaz za senzor kada je tip kontakta otvoren ili kada je aktivni tip visoka impedancija (otvoreni kolektor). Za više informacija o senzorima, molimo vas da pogledate korisničko uputstvo za svaki senzor.

❖ Ulazna/izlazna grupa događaja


Ulazna grupa događaja definiše grupu događaja koji se mogu javiti na kamerama i mrežnim video rekorderima, Izlazna grupa događaja definiše grupu odgovora koje kamere i rekorder mogu da preduzmu za poseban događaj. Kliknite na **Add** bilo ispod Ulazne grupe događaja ili Izlazne grupe događaja da biste videli naredni ekran. Ovaj ekran se takođe pojavljuje prilikom odabira

grupe a potom klikom na **Modify**, ili jednostavno duplim klikom na grupu.

The screenshot shows the 'Event' configuration window. At the top, there are dropdowns for 'Local Sensor Type', 'Sensor1' (set to 'Normal Open'), and 'Sensor2' (set to 'Normal Open'), with an 'Apply' button. Below this are three main sections: '① Input Group', '② Output Group', and '③ Action Group'. Each section has a table with columns for 'Name', 'Type', and 'Value'. Below each table are 'Add', 'Modify', and 'Remove' buttons. The 'Input Group' section is currently selected, and a list of 'Event Input Source' is shown below it. This list includes 'ch01 : SNP-1000 - 192.168.7.59', 'ch02 : SNP-1000 - 192.168.7.124', 'sensor1', 'sensor2', 'ch1.md' (which is checked), 'ch14 : SNP-1000 - 192.168.7.52', and 'SRN-6450'. At the bottom right of the window are 'Apply' and 'Close' buttons.

Unesite novi naziv grupe u panelu ulazne grupe ili izlazne grupe. Ovaj spisak ispod panela prikazuje nazive kanala kamere zajedno sa proizvodom. Za prikaz dostupnih izvora ulaznog događaja ili izlaznog događaja, kliknite na kameru ili proizvod. Za ulaznu grupu, dostupne

 opcije uključuju senzor i MD (detekciju pokreta) i relej, Email i bip za ulaznu grupu. (Za više informacija o ulaznim i izlaznim signalima za kamere, molimo vas da pogledate korisničko uputstvo svake kamere.) Proverite sve opcije da biste ih uključili u novu grupu i potom kliknite na  da biste kreirali grupu preko tastera Add (dodaj), ili primenili nova podešavanja preko tastera za modifikovanje.  zatvara prozor za podešavanje grupe bez kreiranja grupe ili čuvanja novih podešavanja.



Za izlaznu grupu, trajanje izlaznog izvora je dostupno da se doda i modifikuje. Trajanje akcija bipa i releja se može podesiti od '1sekunde' do 'uvek' (da bi akcije radile jednom kada dođe do događaja).

Da biste obrisali grupu, odaberite grupu na spisku grupa i potom kliknite na .



❖ Akciona grupa događaja

Akciona grupa događaja povezuje ulaznu grupu događaja i izlaznu grupu događaja u jednu funkcionalnu jedinicu, tako da kada se događaj iz ulazne grupe događaja javi, svi odgovori uključeni u izlaznu grupu događaja su uključeni. Kliknite na **Add** ispod spiska akcione grupe događaja i bićete usmereni na ekran prikazan ispod. Ovaj ekran se takođe pojavljuje kada odabirate grupu a potom kliknete na **Modify**, ili jednostavno duplim klikom na grupu.

Event

Local Sensor Type Sensor1 Normal Open Sensor2 Normal Open Apply

① Input Group

input1

Add Modify Remove

② Output Group

output1

Add Modify Remove

③ Action Group

action1

Input Group input1

Output Group output1

Ch	IP	Model	Event Type
Ch2	192.168.7.124	SNP-1000	ch1 md

Ch	IP	Model	Event Type
Ch2	192.168.7.124	SNP-1000	relay1
-	-	SRN-6450	relay1
-	-	SRN-6450	email
-	-	SRN-6450	beep

Apply Close

Prvo, unesite naziv nove grupe nazivu za grupu. Potom odaberite ulaznu i izlaznu grupu događaja na spisku ulaznih i izlaznih rupa. Događaji registrovani za odabrane ulazne i izlazne grupe su na dnu ekrana. Kliknite na **Apply** da biste kreirali grupu, **Close** zatvara prozor za podešavanja grupe bez da kreira grupu.


Da biste obrisali grupu, odaberite grupu na spisku grupa i potom kliknite na **Remove**..



Napomena

Brisanje ulazne ili izlazne grupe briše akcionu grupu koja odgovara ulaznoj ili izlaznoj grupi.

4.6.4. Podešavanje kamere

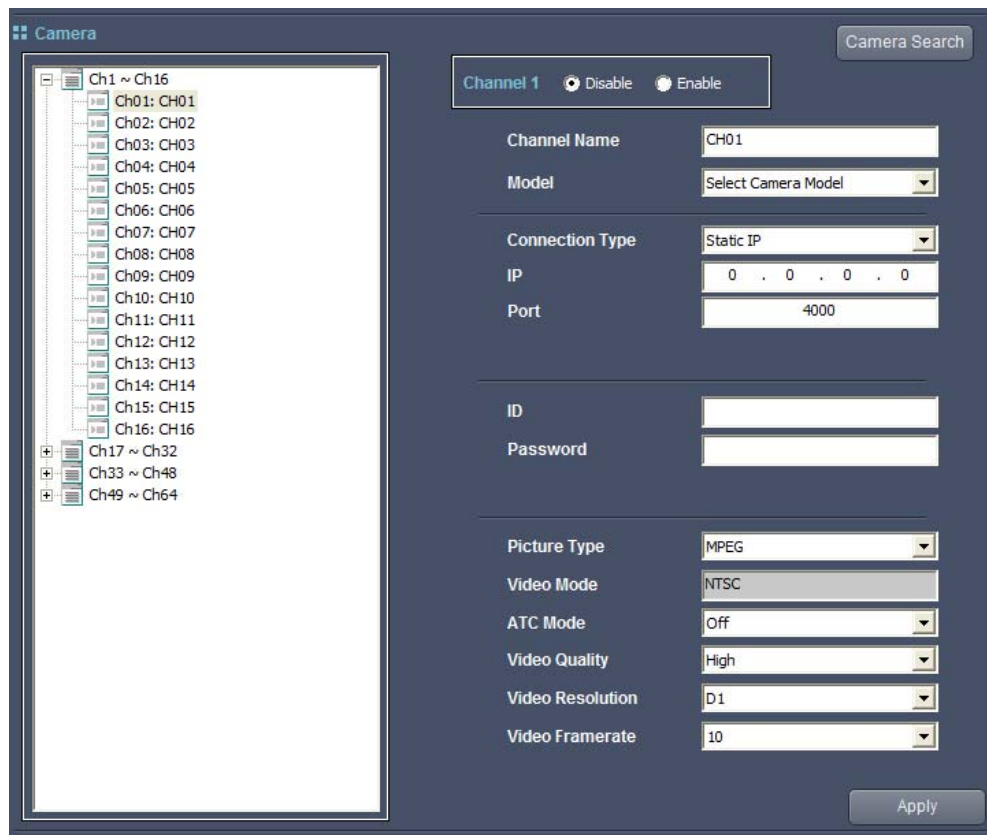

Odaberite kanal na levom spisku; možete da pregledate ili modifikujete podešavanja njegove kamere. Aktivni kanali su prikazani sa , a neaktivni sa .

-   : Odabiranje opcije Enable (Omogući) aktivira kanal.
- **Naziv kanala:** Dajte naziv kanalu. Naziv kanala je prikazan na vrhu ekrana za nadgledanje i reprodukciju.
- **Model:** Odaberite broj modela kamere. Pored mrežnih kamera, možete da odaberete mrežne video servere kao što su SNS-100, SNS-400, itd.
- **Tip konekcije:** Odaberite tip konekcije za kameru između statičnog IP i DDNS-a.
 - Da biste koristili statičnu IP, unesite IP adresu i konekcijski port za kameru.
 - Da biste koristili DDNS, unesite adresu DDNS servera i korisnički ID.
- **ID, Lozinka:** Unesite ID za prijavljivanje i lozinku za kameru.
- **Tip slike:** Odaberite metod za čuvanje slika između MPEG i JPEG formata.
- **Kavlitet video zapisa, rezolucija video zapisa, brzina frejma video zapisa:** Odaberite kvalitet video zapisa, rezoluciju i brzinu frejma video zapisa. Odabiranje viših podešavanja za ovo će vam pružiti viši kvalitet video zapisa, po cenu mrežnog protoka i kapaciteta za skladištenje na disku.



Napomena

- Maksimalna brzina frejma proizvoda je ograničena i varira u zavisnosti od rezolucije i RAID podešavanja. (Pogledajte stranicu za specifikacije proizvoda)
- Brzina frejma kanala sa tipom slike podešenom na JPEG je dupla u odnosu na kanal sa tipom slike podešenom na MPEG, kada se izračuna ukupni opseg frejmova.
- Sistem predstavlja uređaj sa jednim tokom bitova koji vrši snimanje i reprodukciju uživo u režimu kamere koji je definisan na strani za podešavanje kamere.



Napomena

- Režim za video prikazuje sistem kodiranja odabrane boje kamere, NTSC ili PAL i ne može se modifikovati.
- Dostupne rezolucije se razlikuju u zavisnosti od mrežne kamere. Za rezolucije veće od 720p ne postoji odvajanje između NTSC i PAL, a maksimalna brzina kadrova se menja u skladu sa tim..

	NTSC	PAL
QCI	176 x120	176 x144
CIF	352 x240	35 x288
2CIF	704 x240	704 x288
4CIF	704 x480	704 x576
D1	720x480	720 x576
720p	1280x720	
960p	1280x960	
FullH	1920x1080	
QVGA	320x240	
VGA	640x480	
SVGA	800x600	
XGA	1024 x768	
SXGA	1280 x1024	
UXGA	1600 x1200	
QXGA	2048 x1536	

**Oprez**

- Ako postavke kamere menjate kada je ona u modu snimanja, slika koja se snimi u trenutku promene možda neće biti pravilno reprodukovana.


**Napomena**

NVR se može koristiti zajedno sa Samsung Techwin mrežnim proizvodima kao i sa AXIS proizvodima. AXIS kamere imaju ipak ograničenu usaglašenost sa ovim proizvodom, kao što je opisano ispod.

- Samo AXIS kamere koje podržavaju izlaz i za VAPIX i za MPEG4 su kompatibilne sa ovim proizvodom.
- Kodiranje audio zapisa G711 i-law
- Pretraga kamere: Ne može da pretraži.
- Rezolucija: Na stranici za podešavanje kamere, jedan D1, pola D1 ili CIF se može odabrati kao AXIS rezolucija. Ali određeni modeli AXIS kamere ne podržavaju D1, pola D1 i CIF rezoluciju. U ovom slučaju, molimo vas da koristite sledeću tabelu da biste utvrdili video režim i rezoluciju video zapisa. Na primer, ukoliko želite da koristite CIF rezoluciju za video za AXIS kameru, proverite da li je 352x240, 320x240, ili 352x288 na spisku ispod rezolucije u tabeli. Ukoliko je jedna od veličina dostupna, to znači da možete da koristite rezoluciju. Ukoliko odabrana rezolucija ne može da se primeni, proizvod traži podržanu rezoluciju prema redosledu D1, pola D1 i CIF i potom automatski menja rezoluciju. AXIS kamere koje ne podržavaju nijednu od rezolucija datih ispod se ne mogu koristiti povezane sa NVR.

	NTSC	PAL
D1	704x480, 4CIF, 640x480	704x576
Polovina D1	704x240, 2CIF	704x288
CIF	352x240, 320x240	352x288

- **Camera Search** automatski pretražuje trenutnu mrežu radi pronalazjenja kamera za povezivanje.

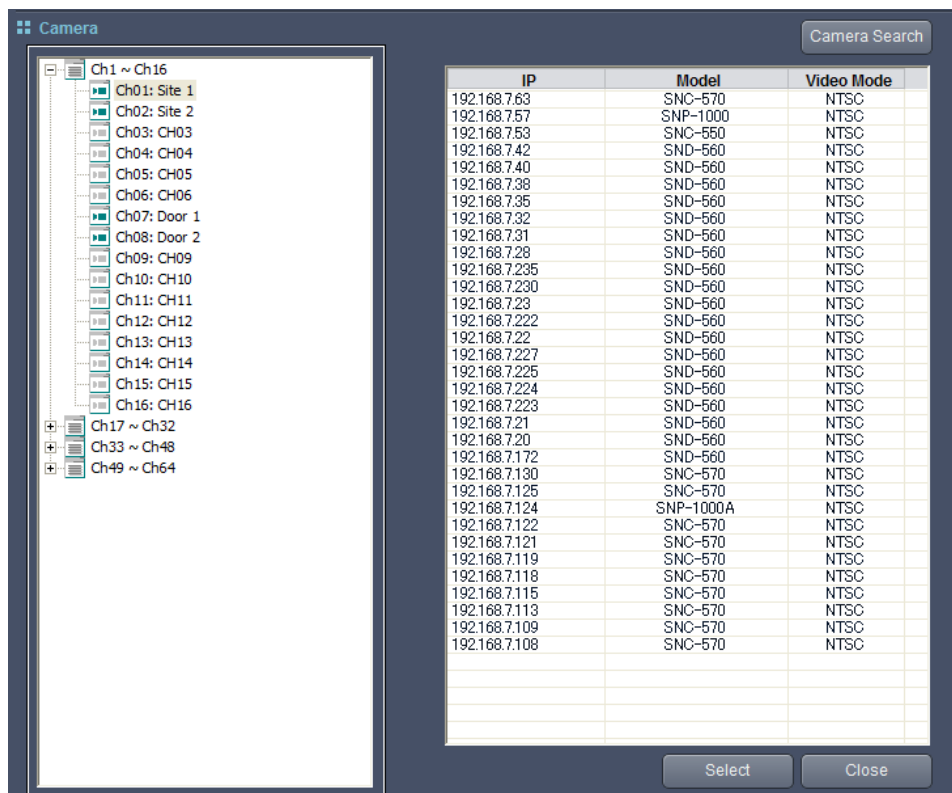

Odaberite kameru na spisku, a potom duplim klikom kliknite na nju, ili jednostavno kliknite na **Select**. Model, tip konekcije, IP i opcije za konekcijski port kamere će se automatski podesiti u zavisnosti od podešavanja kamere.

Model	SNS-100
Connection Type	Static IP
IP	192 168 100 121
Connection Port	4000



Napomena

Pretraga kamere ne nađe uvek sve kamere na mreži; možda će biti potrebno da kliknete na **Camera Search** više od jednom da biste pronašli sve kamere koje želite.




Napomena

Nova podešavanja se primenjuju samo ako pritisnete **Apply**.



Oprez

- Ako se prikaže poruka „Setup fail : bitrate exceeds“ (Neuspešno podešavanje : prekoračena bitska brzina) ili „Setup fail : framerate exceeds“ (Neuspešno podešavanje : prekoračena brzina kadra) (pogledajte donju sliku), više ne možete dodati kameru.

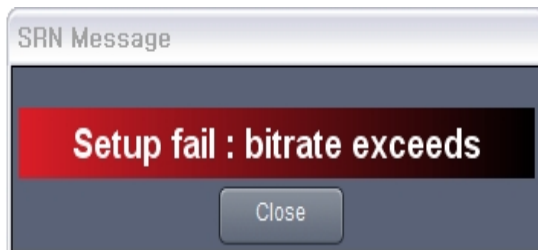

4.6.5. Podešavanje HDD-a

 
Sa ove stranice, možete da konfigurišete uređaje za skladištenje povezane sa sistemom.

[illegible]

❖ HDD

Na vrhu ekrana su izlisteni tipovi i statusi unutrašnjih HDD-ova, spoljašnjih HDD-ova i/ili NAS uređaja koji su trenutno povezani sa sistemom. Unutrašnji i spoljašnji HDD-ovi daju svom modelu, vremena snimanja, "ukupnu veličinu" (ukupni kapacitet) i "slobodnu veličinu" (preostali kapacitet); NAS uređaji daju svoja korisnički dodeljena imena i status trenutne konekcije. RAID-konfigurisani unutrašnji HDD-ovi su prikazani kao "RAID" umesto "unutrašnji" i njihovi nazivi modela su zamenjeni raid režimom: "RAID1 REŽIM" ili "RAID5 REŽIM." Dok se HDD formatira, HDD je u procesu za proveru diska i novi RAID režim se konfiguriše; ; "formatiranje" "testiranje" i "građenje" su prikazani umesto naziva modela uređaja.

Podesite Ponovi snimanje na uključeno i sistem će automatski obrisati najstarije snimljene video zapise da bi napravio prostor za nove video zapise kada više nema slobodnog prostora na HDD-u.


Da obnovite spisak povezanih HDD-ova, kliknite na .

Kada odaberete HDD, pojaviće se ; kliknite na njega da biste formatirali odabrani HDD. Dok je formatiranje u toku, prednji LCD prikazuje sledeću poruku.

Formatting HDD
is in Progress...

HDD Format
[DONE]

 Dok se HDD formatira, HDD je u procesu provere diska, ili se konfiguriše novi RAID režim - proizvod se ne može koristiti da formatira novi HDD; taster  se neće prikazati čak i ako odaberete HDD na spisku.

Odabiranje NAS i potom klik na  ne formatira celi NAS; samo briše sve video podatke odabranog NAS-a.



Napomena

Novo podešavanje za ponavljanje snimanja se primenjuje samo ukoliko kliknete na  na vrhu ekrana.

❖ Automatsko brisanje

U modu automatskog brisanja možete da izaberete i zadate potrebne opcije automatskog brisanja, kao i period skladištenja. Stavku Mode (Režim) postavite na On (Uključeno) i navedite period skladištenja pod stavkom Duration (Vreme). Zatim pritisnite taster [Apply (Primeni)] na desnoj strani. Ovim će se automatski izbrisati podaci sa hard diska koji su

stariji od specificiranog perioda. Period skladištenja se može specificirati po danu, u opsegu od najmanje jednog dana do najviše 365 dana.



Napomena

Ako prvi put aktivirate Automatsko brisanje, podaci sa hard diska koji su stariji od specificiranog vremena će biti automatski izbrisani i može proći izvesno vreme dok se mod Automatskog brisanja ne pokrene.

 
❖ RAID režim



U meniju za RAID režim, možete da promenite podešavanja za RAID sistem. Da biste promenili podešavanja, odaberite Normalno, RAID1 ili RAID5 i potom kliknite na  na desnoj strani. Normalno je ne-RAID režim. Nakon primenjivanja novih RAID podešavanja, sistem se automatski ponovo startuje; bićete diskonektovani sa internet pregledača. Sistemu je potrebno otprilike 2 minuta da se ponovo startuje i uspostavi mrežnu konekciju.

Dok se nova RAID podešavanja primenjuju, prednji LCD prikazuje sledeće poruke u skladu sa progresom.


Preparing RAID1 is in Progress...
Rebooting system is in Progress...
Build RAID1: 48.8% Finish: 37.6min
RAID1 Setup [DONE]

Unbuilding RAID is in Progress...
Rebooting system is in Progress...
Unbuilding RAID [DONE]

  Kada je sistem u RAID režimu,  će se pojaviti na desnoj strani.

 RAID Mode ☐ Normal ☒ RAID1 ☐ RAID5  
--

RAID Status

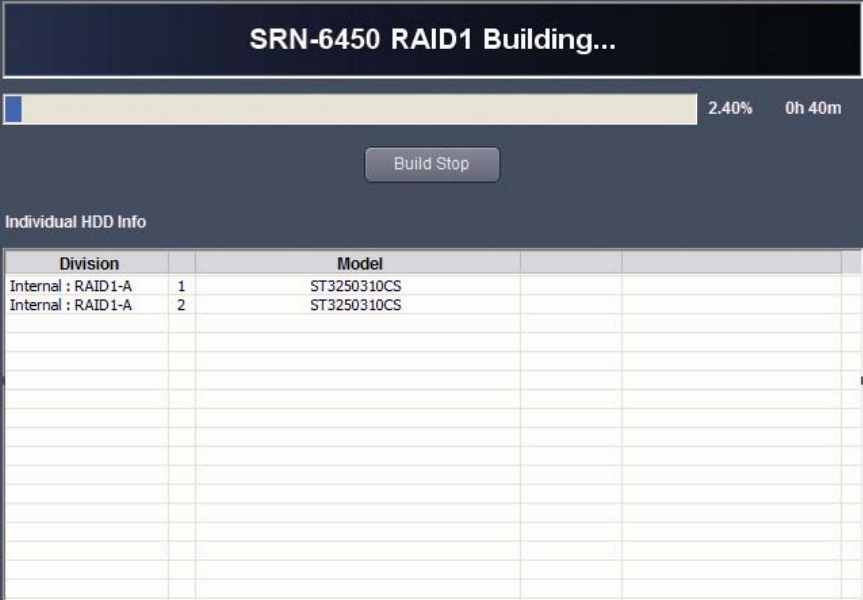

Build Stop



-

- RAID1 zahteva najmanje 2 opremljena HDD-a jedan pored drugog—HDD1 i HDD2, ili HDD3 i HDD4—dok RAID5 zahteva da sva 4 HDD-a budu opremljena.
- Za konfigurisanje RAID režima, HDD mora biti iste veličine. Izuzetno se preporučuje da koristite istu marku i model HDD-ova za konfigurisanje RAID-a.
- RAID podešavanja su dostupna samo za unutrašnje HDD-ove.
- Građenje RAID-a korišćenjem 4 x HDD-a od 500GB traje oko 3 časa za RAID1 i 4 časa za RAID5.

(Kod nepravilnog isključenja sistema, kao na primer pri isključenju napajanja tokom RAID konfiguracije može biti potrebno puno vremena za završetak RAID konfiguracije. Zato se preporučuje korišćenje UPS uređaja za napajanje.)



Oprez

- **Menjanje RAID podešavanja na novi režim automatski briše sve podatke na HDD-ovima proizvođa i novi video fajlovi neće biti sačuvani dok se RAID režim potpuno ne konfiguriše.**
- **Kada se proizvod isključi na neuobičajen način, npr. izvlačenjem adaptera za AC napajanje i potom se uključi, proizvod će možda automatski ponovo konfigurisati RAID podešavanja da bi osigurao celovitost sačuvanih podataka. Dok se novi RAID režim konfiguriše, postojeći podaci se neće izgubiti ali ni novi podaci neće biti sačuvani.**
- **Ukoliko je više od dva RAID-a konfigurisana HDD-a polomljeno ili uklonjeno sa proizvođa, RAID konfiguracija će biti u kvaru, dovodeći do gubitka podataka.**
- **Tokom korišćenja RAID konfiguracije, ni u kom slučaju ne treba pokretati proceduru „Remove HDD“ (Ukloni HDD) iz LCD menija.**
- **Ako bilo koji od HDD-a otkaže za vreme RAID procedure, neophodno je zameniti neispravne HDD što je pre moguće, kako bi se povratila stabilnost sistema.**

❖ NAS

Do četiri NAS uređaja se mogu povezati; na svaki NAS ukazuje njegov NAS port. Odaberite NAS port da biste pregledali ili promenili njegovu konfiguraciju.

Način upotrebe vam omogućuje da odlučite da li da upotrebite odabrani NAS port ili ne.

Naziv vam omogućuje da dodelite naziv NAS uređaju. NAS naziv se prikazuje ispod kategorije modela na HDD spisku na vrhu ekrana.

Standardni folder vam omogućava da odredite folder na NAS-u gde želite da sačuvate snimljene video zapise.

Unesite IP adresu, ID za prijavljivanje i lozinku za NAS u IP, ID i lozinku.



Napomena

- Samo sistem CIFS (Samba) fajlova je podržan za NAS portove..
- Naziv za NAS i naziv standardnog foldera mogu da sadrže maksimalno 32 bita, npr 32 alfanumerička karaktera. (engleski)
- NAS HDD se možda neće pojaviti na HDD spisku ukoliko je isključen u vreme kada je proizvod uključen po prvi put, ili kada proizvod ne uspe da se poveže za HDD iz drugih razloga. U ovim slučajevima, proizvod nije u mogućnosti da se poveže sa NAS HDD-om automatski čak i ako se problem reši. Da biste se povezali sa NAS HDD-om potrebno je da promenite podešavanja na Disable (onemogućiti), a potom promenite nazad na Enable (omogućiti).
- Ukoliko se NAS HDD diskonektuje sa proizvoda, njegov status na HDD spisku će se promeniti sa "Povezan" na "Nepovezan". U ovom slučaju se proizvod automatski povezuje sa NAS HDD-om ukoliko je problem rešen. Status HDD-a se onda vraća na "Povezan".
- NAS brzina čuvanja podataka je sporija nego kod unutrašnjih i spoljašnjih HDD-ova; ovo može dovesti do toga da video fajlovi ne budu sačuvani kako treba.



Napomena

Nova NAS podešavanja se primenjuju samo ukoliko kliknete na  na dnu ekrana.



Oprez

HDD-ovi se ne smeju uklanjati sa sistema dok sistem radi. Da biste sigurno uklonili HDD-ove, molimo vas da pročitate "5.4. Uklanjanje HDD-a".

4.6.6. Podešavanje mreže

Možete da konfigurirate podešavanja mreže na ovom ekranu.

The screenshot displays a network configuration interface with the following sections:

- Monitor Eth Port:**
 - Connection Type: PPPoE
 - Assigned IP: [empty]
 - ID: [empty]
 - Password: [empty]
 - Connection Port: 4000
 - Mac Address: 00:00:00:00:00:00
 - Http Port: 80
 - ATC Mode: ☒ Disable ☐ Enable
 - DDNS:**
 - Use: ☒ Disable ☐ Enable
 - Server Domain: www.samsungipolis.co
 - ID: [empty]
 - Password: [empty]
- Source Eth Port:**
 - Connection Type: Static IP
 - IP Address: 0 . 0 . 0 . 0
 - Subnet Mask: 0 . 0 . 0 . 0
 - Gateway: 0 . 0 . 0 . 0
 - Mac Address: 00:00:00:00:00:00
 - Source DHCP Server:**
 - Use: ☒ Disable ☐ Enable
 - Net Mask: 0.0.0.0
 - IP Range: 0 . 0 . 0 . 0 ~ 0 . 0 . 0 . 0
- Storage Eth Port:**
 - Connection Type: DHCP
 - Assigned IP: [empty]
 - Mac Address: 00:00:00:00:00:00
- DNS (All Ethernet Port):**
 - DNS1: 168 . 126 . 63 . 1
 - DNS2: 168 . 126 . 63 . 2
- RTP/RTSP:**
 - Use RTSP: ☒ Disable ☐ Enable
 - RTSP Port: 554
 - RTP Port: 4000
 - Multicast Address: 224 . 0 . 1 . 1
- E-Mail:**
 - SMTP ServerName: [empty]
 - ☒ Use Authentication
 - ID: [empty]
 - Password: [empty]
 - E-Mail To: [empty]

An **Apply** button is located at the bottom right of the interface.

Možete da koristite bilo PPPoE, statičnu IP, ili DHCP kao metod povezivanja za mrežne portove na zadnjem panelu. Ukoliko niste sigurni koji metod da koristite, molimo vas pitajte svog mrežnog administratora za pomoć.

Ukoliko je proizvod povezan za xDSL liniju PPPoE-tipa, odaberite PPPoE kao metod za povezivanje i unesite ID za pristup i lozinku. Odaberite statičnu IP kao metod za povezivanje ukoliko želite da koristite statičnu IP i unesite IP adresu, subnet masku i adresu prolaza (gateway) za korišćenje. Odaberite DHCP ukoliko je DHCP server povezan za mrežu na koju želite da se povežete; DHCP server će vam automatski dodeliti IP adresu.



Napomena

- Ukoliko koristite PPPoE ili DHCP, naći ćete IP adresu trenutno dodeljenu vašem proizvodu na dodeljenom IP-u); ne možete sami da podesite dodeljeni IP).
- Menjanje metode za mrežno povezivanje sa PPPoE na DHCP ili statični IP će automatski ponovo startovati sistem.

3 zadnja mrežna porta (pogledajte "2.2. Zadnji panel" i "3.1.2. Konfiguracija mreže") su Ethernet port monitora, Ethernet port izvora i Ethernet port skladišta. Ethernet port monitora povezuje kompjuter za nadgledanje sa uređajem NVR preko mreže ili programa za

podešavanje. Ethernet port izvora se povezuje sa kamerama. Ethernet port skladišta se povezuje sa NAS uređajima.

Vezano za Ethernet port monitora, možete da podesite broj konekcijskog porta i http port. Http port se koristi da se poveže za proizvod preko internet pregledača. Ukoliko promenite standardnu vrednost (80) za HTTP port, onda je potrebno da dodate "(svoj broj porta)" adresi proizvoda kada se povezujete za svoj proizvod preko internet pregledača. Na primer, ukoliko je vaša IP adresa 192.168.1.110 i HTTP port 8080 onda je `http://192.168.1.110:8080` adresa za pristup proizvodu uz pomoć internet pregledača. Konekcijski port se koristi da poveže vaš kompjuter sa proizvodom nakon uspostavljanja http konekcije.

Možete da aktivirate ili onemogućite ATC u meniju za ATC režim. ATC automatski podešava kvalitet video zapisa u zavisnosti od statusa mrežne konekcije.

Ethernet port monitora podržava DDNS. Registrovanjem vašeg proizvoda uz pomoć DDNS servera, možete se povezati za ethernet port monitora sa spoljašnje strane, koristeći ID DDNS servera, umesto IP adrese proizvoda. Ukoliko koristite bilo PPPoE ili DHCP da biste se povezali za ethernet port monitora, biće vam dodeljena nova IP adresa svaki put kada povežete proizvod sa mrežom. DDNS je naročito koristan u ovakvim okolnostima.



Napomena

Korišćenje DDNS-a

1. Registrujte se kao član na početnoj stranici iPOLiS-a (www.samsungipolis.com).
2. Prijavite se i registrujte svoj NVR uz pomoć menija za registraciju proizvoda u MY IPOLIS (MOJ IPOLIS). (Obratite pažnju da proverite duple domene kada registrujete svoj domen). Možete da proverite da li je vaš proizvod registrovan kako treba na spisku proizvoda.
3. Potom podesite upotrebu DDNS-a na "Enable" (omogućiti), unesite "www.samsungipolis.com" u domen servera (bez znaka navoda) i na kraju otkucajte ID i lozinku sa kojom ste se registrovali na kućnoj stranici iPOLiS-a.
4. Možete da pogledate status konekcije za svoj registrovani proizvod(e) na spisku proizvoda iPOLiS-a. ("ON" (UKLJUČENO) znači da je proizvod povezan sa DDNS-om).
5. Kliknite na Poveži se sa proizvodom), na opciji Spisak proizvoda) da biste se povezali sa svojim proizvodom.
6. Takođe možete da unesete `http://www.samsungipolis.com/ID` u svoje

polje za adresu internet pretraživača da biste se povezali sa svojim proizvodom. ("ID" je domen koji ste vi izabrali kada ste registrovali svoj proizvod.)

Ethernet port izvora može da se ponaša kao DHCP server da dodeli IP adresu povezanoj kameri. Unesite dve IP adrese—prvu i poslednju adresu IP opsega—da biste ograničili opseg dinamičnih IP-a. Ova opcija za DHCP server je naročito korisna kada želite da otvorite samo NVR ka spoljašnjoj mreži i držite povezane kamere u unutrašnjoj mreži.



Napomena

Da biste koristili DHCP server, metod za povezivanje za ethernet port izvora mora biti podešen na statičnu IP.



Napomena

- Prednji mrežni port (konfigurisani ethernet port) je fiksiran kao IP 192.168.1.100, HTTP port 80, konekcijski port 4000; ne možete da promenite ovo podešavanje.
- Kada se povezujete za sistem preko ethernet porta monitora umesto konfigurisanog ethernet porta, menjanje podešavanja ethernet porta monitora može da prekine konekciju. Ukoliko se to desi, potrebno je da upotrebite novu adresu da biste se povezali sa proizvodom.



Oprez

Ako promenite informacije o DHCP serveru, za primenu promena na sistemu može biti potrebno najviše 5 minuta.

Svi portovi koriste isti DNS server; možete imati do dva DNS servera. DNS1 se koristi kao standardni, a DNS2 se koristi kada DNS1 nije dostupan.

Upotreba RTP/RTSP vam omogućava da gledate video SRN-6450 u sistemu za nadgledanje bez da koristite internet pregledač. Da biste koristili RTP/RTSP, odaberite "Enable" (Omogući) u meniju za korišćenje RTSP-a i potom promenite RTSP i RTP brojeve porta u meniju za podešavanja. (RTSP se koristi za upravljanje video zapisom, a RTP se koristi za prebacivanje video podataka).

Multicast opcija je korisna kada šaljete video većem broju korisnika istovremeno bez previše konzumiranja protoka. Multicast je dostupan samo u lokalnoj mreži koja je konfigurisana sa ruterom za omogućavanje multicasta, ne može se koristiti preko interneta.



Napomena

- Broj porta RTSP-a ne može biti identičan broju konekcijskog porta za ethernet port monitora.
- Molimo vas da uzmete u obzir da ne biste trebali da menjate adresu osim ako niste upoznati sa multicast protokolom RTP-a. Standardna multicast adresa je 224.0.1.1.
- RTSP nadzor se primenjuje samo za MPEG-kompatibilne kamere. (H.264 i JPEG-kompatibilne kamere nisu podržane)




Napomena


Da biste povezali svoj kompjuter sa proizvodom i gledali video preko RTP/RTSP-a, molimo vas da pratite instrukcije ispod. Za video plejer, preporučujemo korišćenje VLV medija plejera. (Neki plejeri kao što su Quicktime možda neće raditi kako treba, jer oni ne podržavaju povezivanje. Meni za konfiguraciju VLC medija plejera može da varira u zavisnosti od njegove verzije. (Verzija 0.9.8a ili novija.)

1. Na stranici za podešavanje mreže, odaberite "Enable" (Omogući) u meniju za korišćenje RTSP-a.

Da biste koristili multicast, odaberite "Enable" (Omogući) u meniju za korišćenje multicast-a.

2. Instalirajte i pokrenite VLC medija plejer na svom kompjuteru.
3. Ispod menija za medije, odaberite Otvorena mreža) ili jednostavno upotrebite tastere za prečicu (Ctrl+N) Odaberite RTSP ispod protokola.

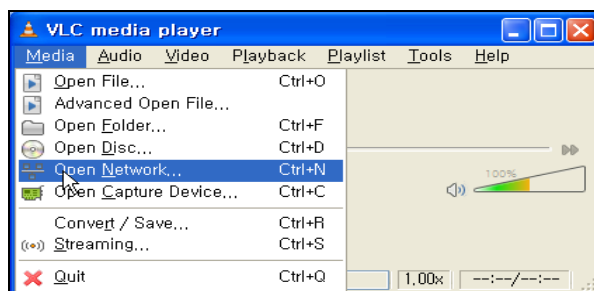

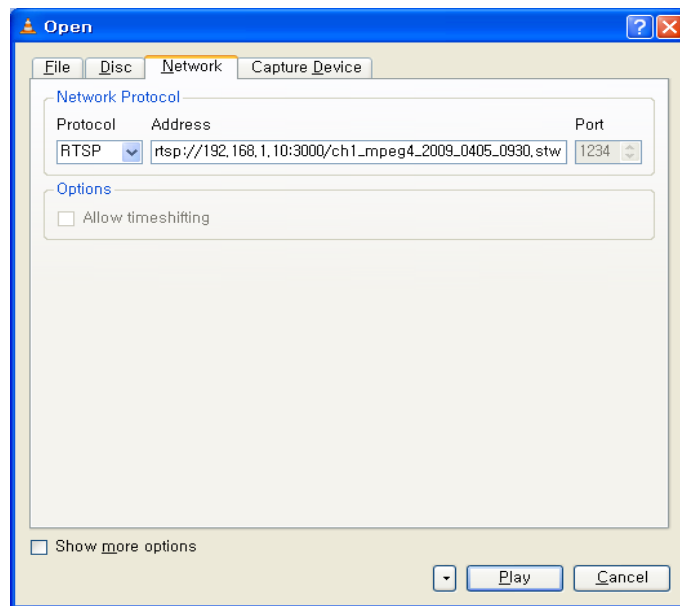

4. U zavisnosti od tipa video zapisa, unesite adresu kao u primerima u sledećoj tabeli, a potom kliknite na Play (Reprodukcija). Kada koristite standardni broj porta RTSP-a, 554, možete da preskočite unošenje broja porta.

Video tip		Adresa
Uživo	U icast	rtsp://<IP>:<Port>/ch<channel>_mpeg4.stw
	Multicast	rtsp://<IP>:< rt>/mch<channel>_ pe 4.stw
Snimljeno	Unicast	rtsp://<IP>:<Port>/ch<channel>_mpeg4_<YYYY>_<MMDD>_<HHMM>.stw
	Multicast	rtsp://<IP>:<Port>/ch<channel>_mpeg4_<YYYY>_<MMDD>_<HHMM>.stw

tj.) Ukoliko je IP adresa ethernet porta monitora 192.168.1.10, a RTSP port 3000, unesite `rtsp://192.168.1.10:3000/ch1_mpeg4_2009_0405_0930.stw` da biste gledali video sa kanala 1 koji je snimljen 5-og aprila 2009-e u 9:30 ujutru.

Možete da registrujete svoju email adresu u ekranu Network Setup (Mrežno podešavanje), tako da vaš proizvod može da vas putem elektronske pošte obavesti kada dođe do definisanog događaja. Molimo pogledajte "4.6.3. Podešavanje događaja". Unesite adresu servera emaila koji se šalje ispod naziva SMTP servera i email adresu ispod Email to (Pošalji

email na). Ukoliko vaš server za poštu zahteva potvrdu o autentičnosti za slanje emaila, proverite autentičnost korisnika. Unesite svoj ID za prijavljivanje i lozinku za svoj server za poštu u opciji za ID i lozinku.



Napomena

Da biste koristili Email opciju, ethernet port monitora mora biti povezan za server pošte.



Napomena

Nova mrežna podešavanja se primenjuju samo ako pritisnete na .

4.6.7. Podešavanje vremena

Ova stranica se bavi podešavanjima vremena sistema.


The screenshot shows a web-based configuration interface for system time. It is divided into three main sections:

- Current Time:** Features a date picker set to '03-06-2009' and a time picker set to '20:31:42'. A 'Set Time' button is located to the right of the time picker.
- Time Configuration:** Contains settings for 'Date Format' (mm.dd.yy), 'Time Format' (24h), and 'Time Zone' ((GMT 00:00) Greenwich Mean Time : Dublin, Edinburgh, Lisbon, London). It also includes 'Use DST' radio buttons (Disable is selected) and 'Start'/'End' date pickers for DST transitions (Mar 5th Sun 01:00:00 and Oct 5th Sun 02:00:00).
- NTP:** Includes 'Use Client' and 'Use Server' radio buttons (both are disabled). Below these are five input fields for NTP server addresses:
 - Public Server1 Address: pool.ntp.org
 - Public Server2 Address: asia.pool.ntp.org
 - Public Server3 Address: europe.pool.ntp.org
 - Public Server4 Address: north-america.pool.ntp.org
 - Public Server5 Address: time.nist.gov

An 'Apply' button is located at the bottom right of the interface.

Podesite trenutno vreme za proizvod ispod (Trenutno vreme)'. Trenutni datum je lociran iznad; trenutno vreme ispod. Odaberite stavku klikom na nju i koristite ili taster sa strelicom za naviše i naniže, ili taster sa brojem na svojoj tastaturi da biste primenili njenu vrednost. Taster za naviše i naniže može da se koristi umesto tastature da se promeni trenutno vreme.

Da biste prikazali kalendar, kliknite na u prozoru za datum. Trenutan datum proizvoda je označen plavom bojom. Trenutan datum proizvoda je označen plavom bojom. Trenutni datum vašeg kompjutera je zaokružen crvenom bojom na kalendaru, kao i ispisan na dnu kalendara. Da biste se pomerili na prethodni ili sledeći mesec, kliknite na ili na vrhu kalendara. Da biste promenili trenutni datum, kliknite na datum na kalendaru.

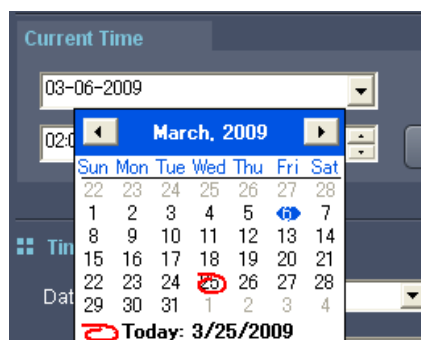

Format datuma vam omogućava da odaberete ili gg.mm.dd, mm.dd.gg ili dd.mm.gg. za prikaz trenutnog datuma. Gg je godina, mm je mesec i dd je dan. Možete da odaberete format vremena kao 24 časa i 12 časa za prikaz trenutnog vremena u Formatu vremena.

Kliknite na Vremensku zonu) da biste odabrali svoju vremensku zonu i grad. Ukoliko vaš grad koristi letnje računanje vremena, vreme će se automatski primeniti. Takođe možete ručno da odlučite da li da upotrebite DST ili ne sa DST upotrebom.

Možete da odaberete da koristite NTP klijent i NTP server u meniju za NTP. NTP (mrežni vremenski protokol) sinhronizuje vreme među različitim uređajima i sistemima povezanih sa mrežom; NTP klijent automatski komunicira sa registrovanim NTP serverima kako bi podesio njegovo podešavanje vremena. Za korišćenje NTP servera koji nije standardni, koristite adresu javnog servera.



Napomena

- Menjanje GMT podešavanja automatski menja trenutno vreme.
- Sinhronizovanje podešavanja vremena NTP servera i proizvoda može malo da potraje ukoliko promenite podešavanja za NTP klijenta sa Onemogućiti na (Omogućiti). Ažuriranje podešavanja vremena proizvoda nema odmah efekta; potrebno je da osvežite ekran tako što ćete otvoriti stranicu za podešavanje vremena).
- Da biste koristili opciju za NTP klijenta, javni NTP server i ethernet port monitora moraju da budu u istoj mreži.
- Kada se opcija za NTP server aktivira, ethernet port izvora se ponaša kao NTP server.




Napomena

Nova mrežna podešavanja se primenjuju samo ako pritisnete **Set Time**. Nova mrežna podešavanja i podešavanja NTP-a se primenjuju samo ako pritisnete

Apply


4.7. Sistem

Pojaviće se sledeća stranica kada odaberete  na vrhu ekrana. Klikom na jedan od tastera na levoj strani ekrana, možete otići na stranicu koja odgovara funkciji opisanoj na tom tasteru.

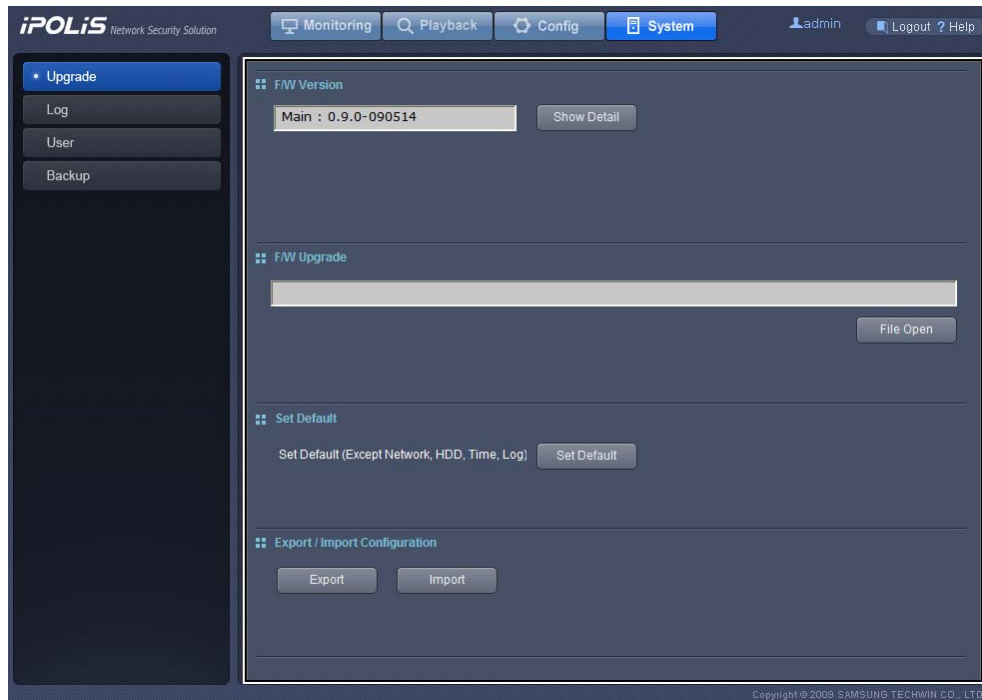



4.7.1. Ažuriranje

Prikazuje trenutnu verziju firmvera sistema i omogućava ponovna podešavanja i podešavanja.

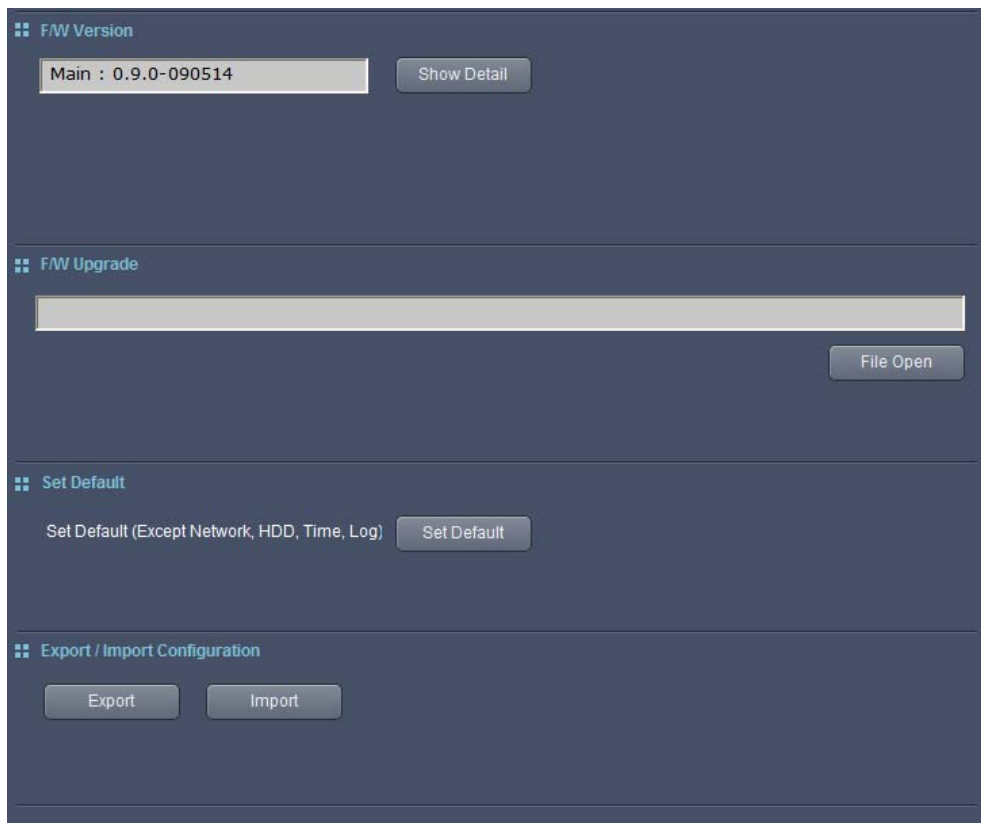




❖ F/W verzija

 Na vrhu ekrana je trenutna verzija firmvera. Kliknite na  za više detalja kao što je prikazano na slici ekrana ispod.

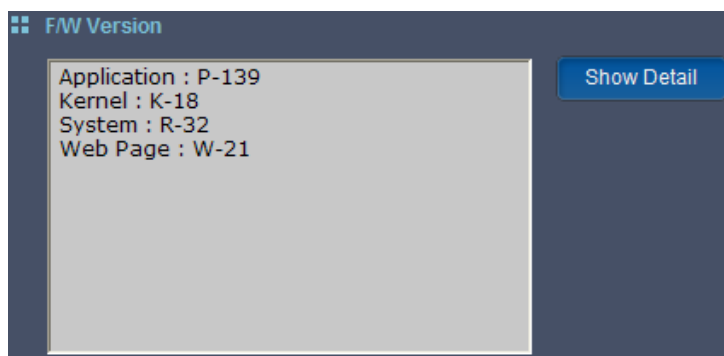

❖ F/W ažuriranje

   Da biste ažurirali firmver proizvoda, kliknite na  ispod menija za F/W ažuriranje i potom odaberite firmver fajl za ažuriranje.

Odabiranje firmver fajla aktivira  ispod . Kliknite na to da biste započeli ažuriranje fajla.

 


Napomena

Da biste preuzeli najnovije firmver fajlove, molimo vas da posetite Support > Download Center (Podrška > Centar za preuzimanje) na www.samsungcctv.com.

Nakon završetka procesa ažuriranja, sistem će se automatski ponovo startovati; bićete diskonektovani sa internet pregledača. Sistemu je potrebno otprilike 2 minuta da se ponovo startuje i uspostavi mrežnu konekciju.

❖ Podesite na standardno



resetuje podešavanja snimaka, događaja, kamere i korisničkog menija.

Za više informacija o podrazumevanim vrednostima podešavanja, molimo pogledajte "2.3. Standardna podešavanja".

❖ Ulazna / Izlazna konfiguracija

Možete da sačuvate trenutna podešavanja proizvoda kao fajl i potom da upotrebite fajl da biste povratili podešavanja u budućnosti. Da biste sačuvali trenutna podešavanja proizvoda kao fajl, kliknite na taster  i potom podesite naziv fajla i putanju.

Da biste ponovo startovali i povratili stara podešavanja sa fajla, kliknite na taster  i potom odaberite fajl za podešavanje.



Opres

Kada unosite stara podešavanja, ukoliko su stara RAID podešavanja drugačija od trenutnih, svi podaci unutrašnjeg HDD-a će biti obrisani.

4.7.2. Sistemski dnevnik

Možete da pregledate sistemski dnevnik na ovoj stranici.

The screenshot shows a web interface titled 'Log'. It has two tabs: 'System Log' (selected) and 'Event Log'. Below the tabs is a 'Type' dropdown menu set to 'All' and an 'Export' button. The main area contains a table with the following columns: Index, Time, Type, and Detail. The table lists various system events such as 'Config Changed', 'Power On', 'Power Off', 'Raid Rebuild Start', and 'Raid Build Start' with their corresponding timestamps and details. At the bottom of the table, there are 'Prev' and 'Next' buttons, a page indicator '1 / 7', and a 'Move' button.

Index	Time	Type	Detail
0001	2009-03-04 23:13:43	Config Changed	Network Page
0002	2009-03-04 23:13:42	Config Changed	Record Page
0003	2009-03-04 23:13:42	Config Changed	
0004	2009-03-04 23:13:36	Power On	
0005	2009-03-04 23:12:16	Power Off	
0006	2009-03-04 21:26:42	Raid Rebuild Start	Raid1 admin
0007	2009-03-04 18:23:01	Config Changed	Network Page
0008	2009-03-04 18:23:01	Config Changed	Record Page
0009	2009-03-04 18:23:01	Config Changed	
0010	2009-03-04 18:22:51	Power On	
0011	2009-03-04 04:16:23	Config Changed	Network Page
0012	2009-03-04 04:16:22	Config Changed	Record Page
0013	2009-03-04 04:16:22	Config Changed	
0014	2009-03-04 04:16:15	Power On	
0015	2009-03-04 04:10:38	Config Changed	Record Page
0016	2009-03-04 04:10:32	Config Changed	
0017	2009-03-04 04:00:36	Config Changed	Network Page
0018	2009-03-04 04:00:29	Power On	
0019	2009-03-01 21:10:28	Raid Build Start	admin
0020	2009-03-01 21:06:05	Raid Build Start	Raid1 admin
0021	2009-03-01 21:04:38	Raid Build Finish	Raid1
0022	2009-03-01 12:26:02	Raid Rebuild Start	Raid1 admin
0023	2009-03-01 09:36:48	Config Changed	Network Page
0024	2009-03-01 09:36:47	Config Changed	Record Page
0025	2009-03-01 09:36:47	Config Changed	
0026	2009-03-01 09:36:40	Power On	
0027	2009-03-01 09:32:38	Config Changed	Record Page
0028	2009-03-01 09:32:36	Config Changed	

Vrsta dnevnika vam omogućuje da odaberete koji dnevnik da pregledate: Dnevnik događaja ili sistemski dnevnik. **System Log** prikazuje dnevnike rada proizvoda dok **Event Log** prikazuje dnevnike unosa događaja poslatih sa povezanih kamera.

Odabiranjem tipa dnevnika u opciji za tip prikazuje samo taj tip dnevnika.

Da biste pogledali istoriju promena podešavanja sistema ili promene grupa događaja, kliknite duplim klikom na fajl dnevnika Promene konfiguracije ili na tip Kreirana grupa događaja. Detalji će se pojaviti kao što je prikazano na slici ekrana ispod.

The screenshot shows a detail view of a log entry. It contains a text box with the following text: 'Ip Channel4 by admin 192.168.7.126 --> 192.168.7.123'. Below the text box are 'Prev' and 'Next' buttons, a page indicator '1 / 7', and a 'Move' button.

Prev **Prev** i **Next** pomera na prethodnu ili sledeću stranicu. Da biste se pomerili direktno na stranicu, unesite broj stranice u kvadratiću za tekst i potom kliknite na **Move**.

Da biste sačuvali fajl sistemskog dnevnika na svoj kompjuter, kliknite na **Export**.

**Napomena**

Do po 10 000 dnevnika za sistemske dnevnike i dnevnike događaja se mogu sačuvati. Ukoliko broj bilo kog tipa dnevnika pređe preko 10 000, sistem će automatski obrisati najstarije dnevnike.

Sledeća tabela prikazuje različite tipove dnevnika.

<Sistemski dnevnik>

Tip dnevnika	Opis
Napajanje uključeno	Napajanje je bilo uključeno.
Napajanje isključeno	Napajanje je bilo isključeno.
Ponovno startovanje sistema	Sistem je ponovo startovan.
Snimanje uključeno	Započeto snimanje video zapisa.
Snimanje isključeno	Završeno snimanje video zapisa.
Formatiranje HDD-a	HDD je formatiran.
Povezivanje kamere	Kamera je bila povezana.
Promena konfiguracije	Konfiguracija proizvoda je bila promenjena.
HDD je pun	Ograničenje kapaciteta za HDD je dostignuto/pređeno.
HDD je dodat	HDD je bio dodat
HDD je uklonjen	Uklanjanje HDD-a
Početak građenja RAID-a	Započeto građenje RAID niz.
Završeno građenje RAID-a	Završeno građenje RAID niza.
RAID razgradnja	RAID niz je uklonjen.
Početak ponovne gradnje RAID-a	RAID je bio ponovo izgrađen.
Kreirana grupa događaja	Grupa događaja je kreirana.
Grupa događaja je obrisana	Grupa događaja je obrisana.
Bravica ključa je uključena	Bravica ključa je bila zaključana.
Bravica ključa je isključena	Bravica ključa je nezaključana.
Test HDD-a	Provera HDD-a je izvršena.
Izlaz fajla dnevnika	Dnevnik je izvežen.
Ažuriranje firmvera	Firmver je ažuriran
Podesite na standardno	Podešavanje na standardno je izvršeno preko internet pregledača.
Fabričko resetovanje	Fabričko resetovanje je izvršeno korišćenjem tastera na prednjem panelu.
RAID greška	Došlo je do greške RAID-a.
Provera greške HDD-a	Došlo je do greške u proveru HDD-a.
HDD I/O greška	HDD je naišao na I/O grešku.
Greška u ažuriranju	Došlo je do greške u ažuriranju firmvera.

Tip dnevnika	Opis
Mrežni status	Povezivanje sa mrežom je ili izgubljeno ili ponovo uspostavljeno.
Greška u povezivanju kamere	Došlo je do greške prilikom povezivanja sa kamerom.
Konfiguracija izvoza	Podešavanja proizvoda su izvežena na kompjuter za nadgledanje.
Konfiguracija uvoza	Stara podešavanja proizvoda su uvežena i ponovo vraćena.
Rez. kopija	Kreira rezervnu kopiju snimljenih podataka
Prijava	Prijavljivanje korisnika
Neusp. prijava	Pokušaj prijavljivanja nije uspeo
Odjava	Odjavljivanje korisnika
DDNS reg. Neusp.	DDNS nije registrovan

<Dnevnik događaja>

Tip dnevnika	Opis
Detekcija pokreta	Pokretanje je detektovano.
Senzor	Podešavanje senzora
Relej	Izlaz za relej.
V-LOSS: (GUBITAK VIDEO ZAPISA)	Video zapis je izgubljen sa kamere.
Nadgledanje konekcije	Ekran uživo je povezan.
Ulazna grupa	Događaj uključen u ulaznu grupu se javio.
Izlazna grupa	Događaj uključen u izlaznu grupu se javio.
Informisanost	Događaj određen u opciji za informisanost se javio.
Ručno brisanje alarma	Upotrebite NVR dugme napred za isključivanje "bipova"
Reprodukcija pokrenuta	Pristupite stranici reprodukcije za proveru video zapisa.

4.7.3. Podešavanja za korisnika

Na ovoj stranici možete da podesite lozinku administratora i da podesite ID, lozinku i privilegije za korisnički nalog.

The screenshot displays a web interface for configuring users, divided into two main sections: 'Admin' and 'User'.

Admin Section:

- Fields for 'Old Password', 'New Password', and 'Re-type New Password' are provided as text inputs.
- An 'Apply' button is located to the right of the password fields.

User Section:

 
- The 'User ID' field contains the text 'User'.
- The 'Password' field contains a series of asterisks '*****'.
- Under the 'Authority' heading, there are three checkboxes: 'Monitoring' (checked), 'Playback', and 'PTZ/OSD Control' (unchecked).
- An 'Apply' button is located to the right of the authority checkboxes.

U opciji za administratora, možete da podesite novu lozinku za administratora. Unesite trenutnu lozinku u "Old Password" (Stara lozinka), unesite novu lozinku u "New Password" (Nova lozinka), potvrdite novu lozinku u "Re-type New Password" (ukucajte ponovo novu lozinku), potom kliknite na taster . Lozinka administratora se koristi za prijavljivanje na nalog administratora, a to je nalog administratora sistema sa najvišim nivoom ovlašćenja.

Pored naloga administratora, možete da podesite jedan korisnički nalog sa ograničenim ovlašćenjima. Korisničkom nalogu su data ovlašćenja od strane administratora ispod menija sa ovlašćenjem. Nadgledanje i reprodukcija se odnose na menije koji se koriste prilikom pristupanja proizvodu preko internet pregelača; PTZ/OSD upravljanje se odnosi na PTZ i OSD funkcije povezanih kamera.

(Pogledajte "4.4.3. PTZ kontrola" i "4.4.4. Kontrola PRIKAZA NA EKRANU")

Ukoliko želite da promenite ID korisničkog naloga, lozinku ili privilegije, možete to uraditi unošenjem nove ID u Korisnička ID, unošenjem nove lozinke u Lozinka i proverom ovlašćenja data korisničkom nalogu. Kliknite na  da biste omogućili promene.



4.7.4. Rezervna kopija

Pravljenje rezervne kopije video fajlova sa proizvoda na kompjuter.

Da biste odabrali period snimanja za rezervnu kopiju video fajlova, kliknite na taster

Odabiranje kanala u opadajućem meniju Kanala prikazuje snimljene periode kanala u panelima From (Od) i To (Do) pod menijem Date/Time /Datum/Vreme). Odaberite početno i završno vreme rezervne kopije video fajlova u Od i Do panelima, a potom kliknite na taster  da biste započeli pravljenje rezervne kopije video fajlova.

Backup

Search Type:

Event & Channel

Input Group:

Channel:

Date/Time

From:

To:

Download Folder:

Index	CH	Start Time	End Time	Download Status
0	1	2009-05-13 21:13:06	2009-05-13 21:13:15	
1	1	2009-05-13 21:13:45	2009-05-13 21:13:53	
2	1	2009-05-13 21:14:23	2009-05-13 21:14:29	
3	1	2009-05-13 21:14:35	2009-05-13 21:14:50	
4	1	2009-05-13 21:15:00	2009-05-13 21:15:04	
5	1	2009-05-13 21:15:08	2009-05-13 21:15:21	
6	1	2009-05-13 21:15:33	2009-05-13 21:15:39	
7	1	2009-05-13 21:15:55	2009-05-13 21:16:02	
8	1	2009-05-13 21:16:22	2009-05-13 21:16:24	
9	1	2009-05-13 21:16:30	2009-05-13 21:16:37	
10	1	2009-05-13 21:17:16	2009-05-13 21:17:24	
11	1	2009-05-13 21:17:30	2009-05-13 21:17:42	
12	1	2009-05-13 21:18:35	2009-05-13 21:18:41	
13	1	2009-05-13 21:18:47	2009-05-13 21:18:54	
14	1	2009-05-13 21:18:58	2009-05-13 21:19:05	
15	1	2009-05-13 21:19:40	2009-05-13 21:19:46	
16	1	2009-05-13 21:20:02	2009-05-13 21:20:09	

SLIM Player Download

Da biste napravili rezervnu kopiju video fajlova određenog događaja, upotrebite taster Event (Događaj) i pretražite događaje. Odabiranjem ulazne grupe događaja u panelu ulazne grupe prikazuje spisak kanala koji sadrže video fajlove odabranog događaja. Odaberite kanal, odaberite željena vremena u Od i Do panelima i potom kliknite na taster da biste prikazali spisak video fajlova odabranog događaja koji su sačuvani u odabranom periodu. Odaberite rezervnu kopiju za video fajlove na spisku i potom kliknite na taster da biste započeli sa pravljanjem rezervne kopije fajlova. Za odabiranje više fajlova, koristite Ctrl + klik ili Shift + klik. Klik na taster odabira sve rezultate pretrage.



Napomena

- Maksimalni period za pretraživanje je 7 dana.
- Ukoliko je više od 500 video fajla događaja snimljeno u okviru odabranog perioda za pretragu, podaci sačuvani posle dana za koji je snimljeno i akumulirano 500 ili više video fajlova se ne pretražuju. (Na primer, ako se video fajlovi pretražuju od 10-og do 15-og i 800 akumuliranih video fajlova je sačuvano do 11-og, program neće pretraživati datume sačuvane nakon 11-og i prikazaće rezultate pretrage samo do 800-og fajla).
- Događaji koji su se javili u toku režima za normalno snimanje se ne mogu pretražiti.
- Nemojte klikovati tasterom miša ili pritiskati bilo koji taster tokom procesa kreiranja rezervne kopije. Ako se pozicija kursora u okviru prozora promeni biranjem druge stavke ili prelaskom na sledeću karticu, kreiranje rezervne kopije neće biti pravilno obavljeno. Kreiranje rezervne kopije će se zaustaviti ako otvorite drugu stavku tokom ovog procesa.

Taster	Naziv	Funkcija
1	Odaberi folder	Upotrebite ovaj taster da biste otvorili folder koji sadrži rezervnu kopiju video fajlova. Dostupni video fajlovi su dati prema redosledu vremena ili kanala
2	Odaberi/Poništi ceo odabit	Odaberi ili poništi odabir svih fajlova.
3	Odaberi fajl	Odaberi jedan ili više fajlova.
4	Poništi odabir fajla	Poništi odabir jednog ili više fajlova.
5	Reprodukcija	Reprodukuju odabrane fajlove jedan po jedan.
6	Stop	Zaustavi reprodukciju i poništi odabir na spisku za reprodukciju.
7	Informacije o kanalima	Prikaži informacije o sačuvanim kanalima.
8	Informacije o vremenu	Prikaži vreme trajanja video fajla koji se reprodukuje.
9	Brzina reprodukcije	Podesi brzinu reprodukcije plejera. 1x, 2x, 4x, i 8x.
10	Opcije za reprodukciju	Opcije za reprodukciju: Preskoči frejm unazad Reprodukuju unazad Pauziraj Reprodukuju unapred Preskoči frejm unapred
11	Ekran. Veličina	Podesi veličinu ekrana plejera. - 1x/2x/Ceo ekran - 704x240 i 704x288 video fajlovi se mogu uvećati 2x bez da se smanji kvalitet slike.
12	Slika ekrana	Sačuvaj trenutni ekran kao JPEG fajl.
13	Rotiraj 180°	Okreće trenutni ekran za 180°.
14	Audio	Uključuje ili isključuje audio.
15	Spisak za reprodukciju	◊ : Čeka ▶ : Reprodukcija unapred ◀ : Reprodukcija unazad ■ : Pauza ■ : Stop
16	Provera vodenog žiga	Aktivirajte ili onemogućite opciju provere vodenog žiga.

Poglavlje 5. LCD podešavanje

LCD prednjeg panela podrazumevano prikazuje trenutno vreme i status snimanja (prikazano ispod).



Prva linija na LCD-u pokazuje Godinu, Mesec, Dan, Sat i Minut. Druga linija ukazuje na broj aktivnih kanala/ukupno kanala i RAID režim.

Korišćenjem LCD-a i <, ^, v, >, ENTER i ESC tastera sa vaše desne strane, možete da proverite status sistema i da promenite neka od podešavanja.

- **Tasteri za naviše i naniže:** Koriste se za kretanje između menija i biraju slova i brojeve u režimu za tekst.
- **Tasteri za levo i desno:** Koriste se za pomeranje kurzora u režimu za unos teksta.
- **Taster za unos, ENTER:** Prelazi na sledeću fazu.
- **ESC taster:** Kada se pritisne, vraća se na prethodnu fazu. Kada ga držite pritisnutog 2 sekunde ili duže, pomera se glavni ekran koji prikazuje trenutno vreme i status snimanja.



Napomena

Ovi tasteri su zaključani kada je taster Lock (Zaključaj) na prednjem panelu zaključan.

5.1. Sistem

Na podrazumevanom LCD ekranu, pritisnite $\wedge$, $\vee$ da pređete na ekran prikazan ispod i pritisnite ENTER.

1. System
[SET]

Pod-meniji će se pojaviti gde možete da koristite $\wedge$, $\vee$ tastere za navigaciju.

1. Firmware Version
2. Key Beep On/Off

3. Relay off
4. System Update

5. Factory Reset
6. Test HDD

7. System Power Off

5.1.1. Proveravanje firmver verzije

Pod opcijom Sistem, odaberite 1. Firmver verzija i potom pritisnite Enter. Trenutna firmver verzija sistema prikazuje se kako je prikazano na ilustraciji ispod.

U nastavku je dat uzorak slike kao referenca; verzija firmvera se razlikuje zavisno od modela.

Firmware Version
0.1.4-090309

5.1.2. Uključivanje/isključivanje bipa

Možete da uključite ili da isključite bip tastera prednjeg panela koristeći ovu stavku menija.

Pod opcijom Sistem, odaberite 2. Uključen/isključen bip tastera i potom pritisnite ENTER.

1. On
2. Off

Odabiranje "1. On" i pritiskanje tastera Enter uključuje bip. Odabiranje "2. Off" i pritiskanje tastera Enter isključuje bip. U svakom slučaju, pojaviće se sledeća poruka.

Key Beep is On!

Key Beep is Off!



Napomena

Bip zvuk se automatski uključuje nakon restartovanja sistema, čak i ukoliko je isključen.

5.1.3. Isključivanje releja

Pod opcijom Sistem, odaberite 3. Isključivanje releja i potom pritisnite taster ENTER. Sledeća poruka se pojavljuje dok se izlazi za Relej 1, 2 na zadnjem panelu uklanjaju.

Relays are off!



Napomena

- Za detaljna uputstva o podešavanju releja za izlaz, molimo vas pogledajte "4.6.3. Podešavanje događaja
- "
- Bip zvuk praćen događajima do kojih dolazi se isključuje ukoliko pritisnete bilo koji taster na panelu.

5.1.4. Ažuriranje sistema



Napomena

- Da biste ažurirali sistem, USB fleš drajv koji sadrži fajl kojim se ažurira mora da se poveže za USB port na zadnjem panelu.
- Datoteka za ažuriranje firmvera počinje slovima „srn“ za ime i završava se ekstenzijom „.bin“.
- Fajl za ažuriranje firmvera mora da se nalazi u osnovnom direktorijumu fleš drajva. Ukoliko postoji više od jednog fajla za ažuriranje na fleš drajvu, ažuriranje firmvera možda neće biti ispravno instalirano.
- Da preuzmete najnovije fajlove za ažuriranje, molimo vas da posetite Support > Download Center na adresi www.samsungcctv.com.

Pod opcijom Sistem, odaberite 4. Ažuriranje sistema i potom pritisnite Enter.

Ukoliko je USB flaš drajv koji sadrži ažuriranje firmvera detektovan, sistem prikazuje poruku koja vas pita da li želite da nastavite ili želite da prekinete ažuriranje, kako je prikazano na ilustraciji ispod.

Warning! All actions
will be stopped

Update Firmware?
Yes: Enter No: Esc

Kada pritisnete Enter, pojaviće se sledeća poruka dok se odabrani firmver ažurira. Jednom kada je proces ažuriranja okončan, sistem se automatski restartuje. Da se vratite na prethodnu fazu, pritisnite ESC. Da otkazete ažuriranje i da se vratite nazad na glavni ekran, držite pritisnut ESC taster u trajanju od 2 sekunde ili duže.

System Update
is in Progress...

System will reboot
after 5 seconds

Rebooting system
is in Progress...

Ukoliko USB fleš drajv nije ubačen u USB terminal na zadnjem panelu proizvoda, pojaviće se sledeća poruka o grešci.

There's no usb stick
Check usb please...

Ukoliko je USB fleš drajv ubačen, ali ne sadrži fajl za ažuriranje firmvera, pojaviće se sledeća poruka o grešci.

No f/w file in usb
Check usb please...

5.1.5. Inicijalizacija podešavanja

Pod opcijom Sistem, odaberite 5. Fabričko podešavanje i potom pritisnite ENTER. Pojaviće se poruka na ekranu koja će od vas zatražiti da potvrdite kako želite da resetujete sve konfiguracije na podrazumevana fabrička podešavanja.

Warning! All actions
will be stopped

Are you sure?
Yes: Enter No: Esc

Kada pritisnete ENTER, pojaviće se sledeće poruke dok se podešavanja inicijaliziraju. Kada je inicijalizovan, sistem se vraća na podrazumevana fabrička podešavanja. Da se vratite na prethodnu fazu, pritisnite ESC. Da otkazete inicijalizaciju i da se vratite nazad na glavni ekran, držite pritisnut ESC taster u trajanju od 2 sekunde ili duže.

Factory reset
is in Progress...

System will reboot
after 5 seconds

Rebooting system
is in Progress...

Za više informacija o vrednostima podrazumevanih podešavanja, molimo vas pogledajte "2.3. Standardna podešavanja".



Napomena

Fabričko resetovanje ne resetuje RAID podešavanja sistema i ne briše podatke koji se čuvaju na HDD-ima.

5.1.6. Provera HDD-a

Pod opcijom Sistem, odaberite 6. Testirajte HDD i potom pritisnite Enter. Pojaviće se sledeća poruka koja će vas upitati da odaberete HDD koji želite da proverite.

HDD to examine
Internal HDD? [1]

HDD to examine
RAID PARTITION? [1]

Nakon odabiranja HDD-a, pojaviće se poruka koja će vas upitati da li zaista želite da obavite proveravanje diska za odabrani HDD.

Record on this HDD
will be stopped

Are you sure?
Yes: Enter No: Esc

Kada pritisnete ENTER, pojaviće se sledeća poruka dok se proces proveravanja HDD-a inicijalizira. Jednom kada se proces završi, ekran prikazuje rezultate provere.

Executing...
Please Wait!!!

Examining Int HDD[1]
is in Progress...

Examining Int HDD[1]
[DONE]

```
HDD test result:
0 bad block
```

Rezultati provere ostaju na ekranu dok ne kliknete na taster.

Kada odabirate HDD koji nije dostupan ili nije povezan, pojaviće se sledeća poruka.

```
Internal HDD [1]
is empty!!
```

```
RAID PARTITION [1]
Does not exist!
```

```
Check HDD to Examine
Please Try Again
```



Napomena

- Kada se HDD proverava, novi podaci se ne čuvaju na HDD-u ili nja njegovom RAID nizu. Međutim, ukoliko su dostupni drugi HDD ili drugi HDD niz, tada se podaci čuvaju na HDD-u ili nizu.
- Opcija za proveravanje HDD-a je dostupna samo za unutrašnje HDD-e.

5.1.7. Gašenje sistema

Pod opcijom Sistem, odaberite 7. Gašenje sistema i potom pritisnite Enter. Pojaviće se sledeća poruka koja će vas upitati da li zaista želite da ugasi sistem.

```
Are you sure?
Yes: Enter  No: Esc
```

Kada pritisnete ENTER, pojaviće se sledeće poruke dok se sistem gasi. Da se vratite na prethodnu fazu, pritisnite ESC. Da otkazete gašenje i da se vratite nazad na glavni ekran, držite pritisnut ESC taster u trajanju od 2 sekunde ili duže.

```
Preparing Poweroff
is in Progress...
```

```
System will be down
in seconds
```

Ove poruke se takođe pojavljuju kada se prekidač za napajanje na zadnjem panelu proizvoda pritisne, dok se sistem u potpunosti ne ugasi.

5.2. Podešavanje mreže

Na podrazumevanom LCD ekranu, pritisnite $\wedge$, $\vee$ da biste pomerili ekran prikazan ispod i potom pritisnite ENTER.

2. Network Setup [SET]

Pojaviće se podmeniji gde možete da upotrebite tastere $\wedge$, $\vee$ za navigaciju.

1. Monitoring Port 2. Source Port

3. Storage Port



Napomena

Za informacije o svakom mrežnom podešavanju i radu mreže, molimo vas pročitajte "{REF}"(Page {PAGEREF})

5.2.1. Podešavanje ethernet porta monitora

Ethernet port monitora je port koji se koristi da poveže vaš kompjuter sa proizvodom.

Pod opcijom Network Setup (Mrežno podešavanje), odaberite 1. Ethernet port monitora, a potom pritisnite ENTER.

1. Use Static IP 2. Use DHCP (Client)
--

3. Use PPPoE 4. Use DDNS

Upotrebite jednu od 3 opcije da podesite IP adresu za Ethernet port monitora. Odabiranje stavke 4 iz menija vam omogućava da koristite DDNS umesto IP adrese.

❖ Podešavanje statične IP

Pritisnite $\wedge$ i $\vee$ da odaberete 1. Upotrebite Statičnu IP, a potom pritisnite Enter.

IP Address 0.0.0.0

Pritisnite tastere $\wedge$, $\vee$ da odaberete brojeve (0~9), razmak i tačku (.); pritisnite tastere $<$, $>$ da se krećete između brojeva. Kada završite sa unosom IP adrese, pritisnite Enter.

Subnet Mask 0.0.0.0
Gateway 0.0.0.0
DNS1 Server IP 192.168.1.1

Unesite Subnet masku, adresu prolaza (gateway) i adresu DNS Servera 1 na isti način.

Confirm IP Setup? Yes: Enter No: Esc

Pritiskom na Enter prelazite na sledeći ekran, dok se IP adresa za Ethernet port monitora čuva. Da se vratite na prethodnu fazu, pritisnite ESC. Da otkazete nova podešavanja i da se vratite nazad na glavni ekran, držite pritisnut ESC taster u trajanju od 2 sekunde ili duže.

IP Setup [DONE]



Napomena

- Adresa DNS1 može se podesiti pod opcijom Monitor Ethernet Port Port > Static IP. DNS 2 adresa se nalazi pod Source Port > Static IP. Jednom kada ih podesite, ove DNS servere koriste svi portovi.
- DNS1 se koristi kao podrazumevano, a DNS2 je za podršku.

❖ Podešavanje DHCP klijenta

Pritisnite $\wedge$ i $\vee$ da odaberete 2. Upotrebite DHCP (Client) i potom pritisnite Enter.

Use DHCP Client? Yes: Enter No: Esc
--

Pritisak na Enter prelazi na sledeći ekran, dok se Monitor Ethernet Port ažurira da koristi DHCP. Da se vratite na prethodnu fazu, pritisnite ESC. Da otkazete nova podešavanja i da se vratite nazad na glavni ekran, držite pritisnut ESC taster u trajanju od 2 sekunde ili duže.

Client Mode Setup [DONE]

❖ PPPoE podešavanje

Pritisnite $\wedge$ i $\vee$ da odaberete 3. Koristi PPPoE, a potom pritisnite Enter.

ID a

Pritisnite tstore $\wedge$, $\vee$ da odaberete karaktere (a~z) i razmak; pritisnite taster $<$, $>$ da pređete na sledeći karakter. Kada završite sa unošenjem ID za korišćenje, pritisnite Enter.

Password a

Ponovite korake da biste uneli lozinku a potom pritisnite Enter.

Confirm PPPoE Setup? Yes: Enter No: Esc
--

Pritiskom na Enter prelazite na sledeći ekran, dok se PPPoE podešavanja za Ethernet port monitora čuva. Da se vratite na prethodnu fazu, pritisnite ESC. Da otkazete nova podešavanja i da se vratite nazad na glavni ekran, držite pritisnut ESC taster u trajanju od 2 sekunde ili duže.

PPPoE podešavanje



Napomena

- Menjanje metoda mrežne konekcije sa PPPoE na DHCP ili na Statičnu IP automatski restartuje sistem.

❖ DDNS podešavanje

Pritisnite $\wedge$ i $\vee$ da odaberete opciju 4. Koristite DDNS, a potom pritisnite Enter.

Server Domain www.samsungipolis.com
--

Podrazumevani DDNS server je www.samsungipolis.com. Da biste koristili DDNS server koji nije iPOLiS, upotrebite $\wedge$ i $\vee$ da odaberete između alfanumeričkih karaktera (a-z i 0-9), razmaka i tačke (.); koristite $<$ and $>$ da se krećete između karaktera i da uredite podrazumevanu DDNS adresu.

Pritisnite Enter kada završite sa unosom adrese DDNS servera.

ID a

Password a

Ponovite korake da unesete ID za prijavljivanje i lozinku novog DDNS servera.

Confirm DDNS Setup? Enter: Yes Esc: No

Pritisak na Enter prebacuje vas na sledeći ekran, a nova DDNS podešavanja se čuvaju. Da se vratite na prethodnu fazu, pritisnite ESC. Da otkazete nova podešavanja i da se vratite nazad na glavni ekran, držite pritisnut ESC taster u trajanju od 2 sekunde ili duže.

DDNS Server Setup [DONE]

5.2.2. Podešavanje ethernet porta izvora

Ethernet port izvora se koristi za komuniciranje između proizvoda i kamere.

Pod opcijom Network Setup (Mrežno podešavanje), odaberite 2. Source Ethernet Port (Ethernet port izvora), a potom pritisnite ENTER.

1. Use Static IP 2. Use DHCP (Client)
--

3. Use PPPoE 4. Use DHCP (Server)

Koristite jednu od prve 3 opcije da podesite IP adresu za Ethernet port izvora. Za detaljna uputstva o podešavanju porta, molimo vas da pogledate podešavanja za Statičnu IP, DHCP klijenta i PPPoE pod "5.2.1. Podešavanje ethernet porta monitora".

Odabiranje stavke 4 iz menija vam omogućava da koristite opciju za DHCP server.

❖ Podešavanje DHCP servera

Pritisnite $\wedge$ i $\vee$ da odaberete 4. Koristite DHCP (Server), a potom pritisnite Enter.

```
IP Range: from
0
```

Pritisnite tastere $\wedge$, $\vee$ da odaberete brojeve (0~9), razmak i tačku (.); koristite $<$ i $>$ da se krećete između karaktera.

```
IP Range: to
0
```

Repeat the steps to enter the ending IP address for the range.

```
Use DHCP Server?
Yes: Enter  No: Esc
```

Pritisak na Enter prebacuje vas na sledeći ekran, a nova podešavanja za DHCP Server se čuvaju. Da se vratite na prethodnu fazu, pritisnite ESC. Da otkazete nova podešavanja i da se vratite nazad na glavni ekran, držite pritisnut ESC taster u trajanju od 2 sekunde ili duže.

```
Server Mode Setup
      [DONE]
```

5.2.3. Podešavanje ethernet porta skladištenja

Ethernet port skladištenja se koristi za komuniciranje između proizvoda i NAS-a.

Pod opcijom Network Setup (Mrežno podešavanje), odaberite 3. Use Storage Ethernet Port (Koristite ethernet port skladištenja), a potom pritisnite ENTER.

```
1. Use Static IP
2. Use DHCP (Client)
```

```
3. Use PPPoE
```

Koristite jednu od prve 3 opcije da podesite IP adresu za Ethernet port izvora. Za detaljna uputstva o podešavanju porta, molimo vas da pogledate podešavanja za Statičnu IP, DHCP klijenta i PPPoE pod "5.2.1. Podešavanje ethernet porta monitora".

5.3. Podešavanje HDD režima

Na glavnom ekranu, pritisnite $\wedge$ i $\vee$ da pređete na sledeći ekran, a potom pritisnite Enter.

3. HDD Mode Setup
[SET]

Pojaviće se podmeniji gde možete da koristite $\wedge$ i $\vee$ za navigaciju.

1. Normal
2. RAID1

2. RAID1
3. RAID5

Odaberite operativni režim HDD-a i potom pritisnite Enter. Pojaviće se sledeća poruka upozorenja. Normalno je režim koji nije RAID.

Warning! All Record
data will be removed

Nakon što poruka upozorenja bude prikazana u trajanju od 3 sekunde, ekran se pomera na sledeći ekran koji odgovara odabranom režimu.

Unbuild RAID?
Yes: Enter No: Esc

Use RAID1?
Yes: Enter No: Esc

Use RAID5?
Yes: Enter No: Esc

Pritisnite Enter da promenite HDD režim na odabrani režim. Da se vratite na prethodnu fazu, pritisnite ESC. Da otkazete nova podešavanja i da se vratite nazad na glavni ekran, držite pritisnut ESC taster u trajanju od 2 sekunde ili duže.

Dok se konfiguriše novi RAID režim, pojavljuju se po redosledu sledeće poruke, koje informišu o progresu i o preostalom vremenu.

Preparing RAID1
is in Progress...

Rebooting system
is in Progress...

Build RAID1: 48.8%
Finish: 37.6min

RAID1 Setup
[DONE]

(Kada su odabrani RAID1 ili RAID5.)

Unbuilding RAID
is in Progress...

Rebooting system
is in Progress...

Unbuilding RAID
[DONE]

(Kada je odabrano Normalno.)

Ukoliko je HDD već podešen na novi RAID režim, pojavljuje se sledeća poruka. .

Current HDD mode is
RAID1 mode

Current HDD mode is
Normal mode

Check HDD mode and
Please Try Again!

Ukoliko broj postojećih HDD-ova nije dovoljan, pojavljuje se sledeća poruka. RAID1 zahteva da najmanje 2 HDD-a budu opremljeni jedan pored drugog, HDD1 i HDD2, ili HDD3 i HDD4, dok RAID5 zahteva da budu opremljena sva 4 HDD-a.

There are not enough
HDD to build RAID5

Check HDD mode and
Please Try Again!



Napomena

- RAID (Redundant Array of Independent Disks, Suvvisni niz nezavisnih diskova) pomaže vam da čuvate podatke na bezbednom mestu u slučaju da se HDD sistema ošteti.
- Odabiranje RAID1 konfiguriše HDD1 and HDD2 kao jedan niz, a HDD3 i HDD4 kao drugi niz. RAID1 koristi 2 fizička HDD-a kao 1 funkcionalni HDD. Na primer, konfigurisane HDD1-a i HDD2—dok je svaki opremljen HDD-om od 500GB HDD—u RAID1 prikazuje funkcioni HDD sistem kao jedan 500GB

RAID. U RAID1 režimu, podaci se ne gube čak i ukoliko je jedan od dva HDD-a RAID niza oštećen.

- Odabiranje RAID5 konfiguriše 4 HDD-a u 1 RAID niz. RAID5 koristi 4 fizička HDD-a kao 3 funkcionalna HDD-a. Na primer, konfigurisanje HDD1, 2, 3 i 4—dok je svaki opremljen HDD-om od 500GB HDD—u RAID5 prikazuje funkcioni HDD sistem kao jedan 1.5TB RAID. U RAID5 režimu, podaci se ne gube čak i ukoliko je jedan od četiri HDD-a oštećen.
- Da biste konfigurisali RAID režim, HDD-i moraju biti iste veličine. Izuzetno preporučujemo da koristite istu marku i model HDD-a da biste konfigurisali RAID.
- RAID podešavanja su dostupna samo za unutrašnje HDD-ove.
- Izgradnja RAID režima korišćenjem 4 x 500GB HDD traje otprilike 3 sata za RAID1 i 4 sata za RAID5.

(Preporučuje se korišćenje UPS-a pri konfigurisanju RAID-a zato što bi rekonfigurisanje RAID-a zbog nestanka struje tokom prvog pokušaja moglo potrajati.)



Oprez

- **Promena RAID podešavanja na novi režim automatski briše sve podatke u HDD-u proizvoda, a novi video zapisi se ne čuvaju dok novi RAID mode nije u potpunosti konfigurisan.**
- **Kada se proizvod abnormalno isključi, na primer izvlačenjem kabla za struju, a potom uključi, proizvod će možda rekonfigurisati svoja RAID podešavanja automatski da bi osigurao integritet sačuvanih podataka. Dok se novi RAID režim konfiguriše, postojeći podaci se ne gube, ali novi podaci takođe neće biti sačuvani.**
- **Ukoliko su više od dva RAID konfigurisana HDD-a pokvarena ili uklonjena iz proizvoda, RAID konfiguracija neće raditi, izazivajući gubitak podataka.**
- **Tokom korišćenja RAID konfiguracije, ni u kom slučaju ne treba pokretati proceduru „Remove HDD“ (Ukloni HDD) iz LCD menija.**
- **Ako bilo koji od HDD-a otkaže za vreme RAID procedure, neophodno je zameniti neispravne HDD što je pre moguće, kako bi se povratila stabilnost sistema.**

5.4. Uklanjanje HDD-a

Na glavnom ekranu, pritisnite $\wedge$ i $\vee$ da pređete na sledeći ekran a potom pritisnite Enter.

4. Remove HDD
[SET]

Pojavljuje se ekran prikazan ispod gde možete da koristite $\wedge$ i $\vee$ da odaberete HDD-ove koje želite da uklonite.

HDD Number to remove
Internal HDD? [1]

HDD Number to remove
External Bay? [1]

Odaberite broj unutrašnjeg HDD-a ili eksterne HDD police i pritisnite Enter. Kada pritisnete Enter, pojaviće se sledeća poruka dok se odabrani HDD uklanja.

Executing...
Please Wait!!!

Remove Int HDD[1]
[DONE]

Remove Ext Bay[1]
[DONE]

Jednom kada se pojavi poruka [Obavljeno], možete fizički da uklonite HDD iz proizvoda.

Kada odabirate HDD koji nije dostupan ili nije povezan, pojaviće se sledeća poruka.

Internal HDD[1]
is empty!!

External Bay[1]
is not connected!!

Check HDD to Remove
Please Try Again



Napomena

Broj za unutrašnji HDD ili spoljašnju HDD policu se određuje u zavisnosti od toga za koji su port proizvoda povezani. Dostupni brojevi su 1, 2, 3 i 4 sa gornje leve strane i desno do donje leve i desne strane. Molimo vas pogledajte "2. Poglavlje - Nazivi delova".

5.5. Formatiranje HDD-a

Na glavnom ekranu, pritisnite $\wedge$ i $\vee$ da pređete na ekran prikazan ispod, a potom pritisnite Enter.

```
5. HDD Format
      [SET]
```

Ekran prikazan ispod pojavljuje se gde možete da koristite $\wedge$ i $\vee$ da odaberete HDD za formatiranje.

```
1. Internal HDD
2. External HDD
```

```
2. External HDD
3. All HDD
```



Oprez

Nikada ne formatirajte HDD u sredini izrade/obnove RAID konfiguracije.

5.5.1. Formatiranje jednog unutrašnjeg HDD-a

Pod opcijom HDD Format (Formatiranje HDD-a), odaberite 1. unutrašnji HDD, i potom pritisnite Enter.

```
1. Individual HDD
2. All Internal HDD
```

1. Odaberite 1. Pojedinačni HDD, i potom pritisnite Enter.

```
HDD Number to format
Internal HDD? [1]
```

Upotrebite $\wedge$, $\vee$ tastere da odaberete broj HDD-a za formatiranje a potom pritisnite ENTER.

```
Format HDD [1]?
Yes: Enter  No: Esc
```

Kada pritisnete ENTER, pojaviće se sledeće poruke dok se odabrani HDD formatira. Da se vratite na prethodnu fazu, pritisnite ESC. Da otkazete formatiranje i da se vratite nazad sa glavnog ekrana, držite pritisnut ESC taster u trajanju od 2 sekunde ili duže.

```
Formatting HDD  
is in Progress...
```

```
HDD Format  
[DONE]
```

Kada odabirate HDD koji nije dostupan ili nije povezan, pojaviće se sledeća poruka.

```
Internal HDD[1]  
is empty!!
```

```
Check HDD to format  
Please Try Again!
```

5.5.2. Formatiranje svih unutrašnjih HDD-a

Pod opcijom HDD Format (Formatiranje HDD-a), odaberite 1. Unutrašnji HDD a potom pritisnite Enter.

```
1. Individual HDD  
2. All Internal HDD
```

2. Odaberite All HDD (Svi HDD-i) i potom pritisnite Enter.

```
Format All HDD?  
Yes: Enter No: Esc
```

Kada pritisnete ENTER, pojaviće se sledeće poruke dok se svi unutrašnji HDD-i formatiraju. Da se vratite na prethodnu fazu, pritisnite ESC. Da otkazete formatiranje i da se vratite nazad sa glavnog ekrana, držite pritisnut ESC taster u trajanju od 2 sekunde ili duže.

```
Formatting HDD  
is in Progress...
```

```
HDD Format  
[DONE]
```

5.5.3. Formatiranje pojedinačnog eksternog HDD-a

Pod opcijom HDD Format (Formatiranje HDD-a), odaberite 2. Eksterni HDD a potom pritisnite Enter.

```
Bay Number to format  
External Bay? [1]
```

Upotrebite $\wedge$ i $\vee$ da odaberete broj eksterne HDD police koja sadrži HDD koji treba formatirati a potom pritisnite Enter.

1. Individual HDD
 2. All HDD in Bay[1]

1. Odaberite 1. Pojedinačni HDD, a potom pritisnite Enter.

```
HDD Number to format
Internal HDD? [1]
```

Upotrebite $\wedge$ i $\vee$ da odaberete broj za eksternu HDD policu koja sadrži HDD koji treba formatirati, a potom pritisnite Enter.

```
Format HDD [1]?
Yes: Enter  No: Esc
```

Kada pritisnete Enter, pojaviće se sledeća poruka dok se odabrani HDD formatira. Da se vratite na prethodnu fazu, pritisnite ESC. Da otkazete formatiranje i da se vratite nazad sa glavnog ekrana, držite pritisnut ESC taster u trajanju od 2 sekunde ili duže.

```
Formatting HDD
is in Progress...
```

```
HDD Format
[DONE]
```

Kada odabirate HDD koji nije dostupan ili nije povezan, pojaviće se sledeća poruka.

```
External Bay[1]
is not connected!!
```

```
External Bay[1]
is not connected!!
```

5.5.4. Formatiranje svih eksternih HDD-a

Pod opcijom HDD Format (Formatiranje HDD-a), odaberite 2. Eksterni HDD a potom pritisnite Enter.

```
Bay Number to format
External Bay [1]
```

Upotrebite $\wedge$ i $\vee$ da odaberete broj eksterne HDD police koja sadrži HDD koje treba formatirati a potom pritisnite Enter.

```
1. Individual HDD
2. All HDD in Bay[1]
```

2. Odaberite All HDD in Bay[#] (SveHDD-e u polici), a potom pritisnite Enter.

Format Bay[1]?
Yes: Enter No: Esc

Kada pritisnete Enter, pojaviće se sledeće poruke dok se svi HDD-i odabrane eksterne police formatiraju. Da se vratite na prethodnu fazu, pritisnite ESC. Da otkazete formatiranje i da se vratite nazad sa glavnog ekrana, držite pritisnut ESC taster u trajanju od 2 sekunde ili duže.

Formatting HDD
is in Progress...

HDD Format
[DONE]

5.5.5. Formatiranje svih HDD-a

Pod opcijom HDD Format (Formatiranje HDD-a), odaberite 3. Svi HDD-i a potom pritisnite Enter.

Format All HDD?
Yes: Enter No: Esc

Kada pritisnete ENTER, pojaviće se sledeće poruke dok se svi HDD-i, i unutrašnji i eksterni, formatiraju. Da se vratite na prethodnu fazu, pritisnite ESC. Da otkazete formatiranje i da se vratite nazad sa glavnog ekrana, držite pritisnut ESC taster u trajanju od 2 sekunde ili duže.

Formatting HDD
is in Progress...

HDD Format
[DONE]

Rešavanje problema

1. Ne može da se pokrene.

- Proverite napajanje
- Proverite kabl za struju

2. Neki kanali ne prikazuju video sliku.

- Proverite napajanje kamere
- Proverite izlaz iz kamere
- Proverite ulazni port rekordera

3. Video zapis se ne skladišti.

- Proverite povezanost HDD-ova na stranici HDD Setup (Podešavanje HDD-ova)
- Proverite slobodni prostor na HDD-u
- Proverite podešavanje video snimanja

4. Uskladišteni video zapisi neće da se reprodukuju.

- Proverite podešavanje video snimanja

5. Video zapis je isuviše svetao ili isuviše taman.

- Proverite podešavanje kamere

6. Tasteri na prednjem panelu ne rade.

- Proverite napajanje
- Proverite status zaključanosti tastera

7. Mreža ne radi.

- Proverite povezanost mrežnog kabla
- Proverite IP podešavanje rekordera
- Proverite IP podešavanje kompjutera
- Pokrenite Ping test

- Ukoliko Web Viewer (Internet pregledač) ne prikaže video zapis na kompjuteru, proverite tehničke specifikacije kompjutera.

8. Morate da kontaktirate svog prodavca kada...

Ukoliko imate problema sa bilo kojim od sledećih pitanja, morate da prekinete da koristite proizvod i da odmah isključite napajanje, a potom da kontaktirate svog prodavca za pomoć.

- Ako želite da dodate ili zamenite HDD
- Proizvod se čudno ponaša (na primer: neuobičajena buka, miris ili dim dolaze iz proizvoda.)
- Konektor kabla za struju je oštećen
- Kiša ili druga tečnost je prodrela u proizvod
- Prosuli ste tečnost na proizvod ili je strana materija ušla u proizvod
- Proizvod ne radi kako je naznačeno u ovom uputstvu za upotrebu
- Proizvod je ispušten ili ozbiljno oštećen
- Postoji primetna degradacija u radu proizvoda



Napomena

Pre instaliranja dodatnog HDD-a ili povezivanja eksternog uređaja za skladištenje (USB memorija ili USB HDD) na ovaj DVR, proverite kompatibilnost.


Pozovite vašeg prodavca da biste dobili listu kompatibilnosti.

Specifikacije proizvoda

		SRN-6450/SNR-6400	SRN-3250/SNR-3200
Ekran			
Video	Ulazi IP kamere	64 kanala	32 kanala
Internet podrška	Uživo	1, 4, 9, 16, 36, 64 kanala simultano	1, 4, 9, 16, 32 kanala simultano
	Pretraživanje	1 kanal simultano	
	Kontrol	panovanje/naginjanje/zumiranje za dostupnu kameru	
	Konfiguracija	IP, port, ID, lozinka, tip slike, video kvalitet, rezolucija, brzina frejmova	
PERFORMANSE			
Snimanje	Kompresija (IP)	H.264,MPEG-4,M-JPEG , podržana povezanom kamerom	
	Propusni opseg	Do 48 Mbps (Do 8 Mbps svaka kamera)	Do 36 Mbps (Do 8 Mbps svaka kamera)
	Frekvencija snimanja / MEGA	Max 160fps@2048 x 1536	Max 60fps@2048 x 1536
		Max 320fps@1280 x 1024	Max 120fps@1280 x 1024
	Frekvencija snimanja / NTSC	Max 1,280fps@704 x 480	Max 480fps@704 x 480
		Max 1,920fps@704 x 240	Max 960fps@704 x 240
		Max 1,920fps@352 x 240	Max 960fps@352 x 240
	Frekvencija snimanja/ PAL	Max 1,152fps@704 x 576	Max 480fps@704 x 576
		Max 1,600fps@704 x 288	Max 800fps@704 x 288
		Max 1,600fps@352 x 288	Max 800fps@352 x 288
	* Režim	Ručni, Raspored (Normalno / Događaj)	
	Režimi za pisanje preko	Stalni	
Pre-alarma	Do 5 sekundi		
Nakon-alarma	Do 60 sekundi		
Pretraživanje & reprodukcija	Režim za pretraživanje	Vreme, Događaj, Kalendar	
	Funnkcija za reprodukciju	REW (nazad), FWD (napred) (Zavisi od CMS-a)	
Mreža	Kontrola protoka	Automatska (Automatska kontrola prenosa)	
	Najveći broj udaljenih korisnika	5 simultano	
	Podrška za protokole	TCP/IP, DHCP, DNS, DDNS, HTTP, ARP, ICMP, NTP, RTP/RTCP, RTSP	
	Nadgledanje	CMS Software (NET-I Viewer), Built-in web server	
Skladištenje	Maksimalni kapacitet	Do 20TB korišćenjem opcije za eksterno skladištenje	
	RAID	Normalno, RAID1, RAID5	Normal, RAID1
	Unutrašnji HDD	Do 4 SATA HDD-a	
	Eksterni HDD	Do 4 ekspanzione police (svaka sa po do 4 HDD-a)	
	NAS	Do 4 NAS konekcije (CIFS/Samba)	
Bezbednost	Zaštita lozinkom	2 nivoa korisnika	
INTERFEJS			
Monitor	DOT Matrix LCD	20 x 2 prikaz statusa	
Alarm	Ulazi	Zavrtite ulaze terminala 2, NO/NC	
	Izlazi	Zavrtite izlaze terminala 2, NO/NC	

Alarm	Obaveštavanje sa udaljenosti	Obaveštavanje preko elektronske pošte
Konekcije	Ethernet	3 (RJ45 100/1000 Base-T), 1 (RJ45 100Base-T)
	Serijski interfejs	RS-232C
	USB	2 USB 2.0 porta (ažuriranje firmvera)
	eSATA	4 eksterna SATA porta
Supported IP Cameras		Samsung Techwin network products, AXIS mrežne kamere (VAPIX,MPEG4 modovi, neke funkcije su ograničene)
OPŠTE		
Elektrika	Ulazni napon	100 ~ 240 V AC $\pm 10\%$, 50/60 Hz, Auto izlaz
	Potrošnja energije	Max. 110W (sa 1xHDD)
		Max.130W (sa 4xHDD)
Prirodna sredina	Radna temperatura	+5°C ~ +40°C (+41°F ~ +104°F)
	Vlažnost vazduha	0%RH ~ 60%RH
Mehanika	Dimenzije (ŠxVxD)	430 x 88 x 501 mm (16.92" x 3.46" x 19.73 ")
	Težina (4 HDD-a)	Približno 11kg (24.25 lb)
	Komplet za montiranje police	Za montiranje jedne jedinice u EIA 19 inčnoj polici
Jezik (LCD)		Srpski
Sertifikacija		FCC (Klasa A), cUL/UL navedena, CE (Klasa A)

Dimenzije proizvoda

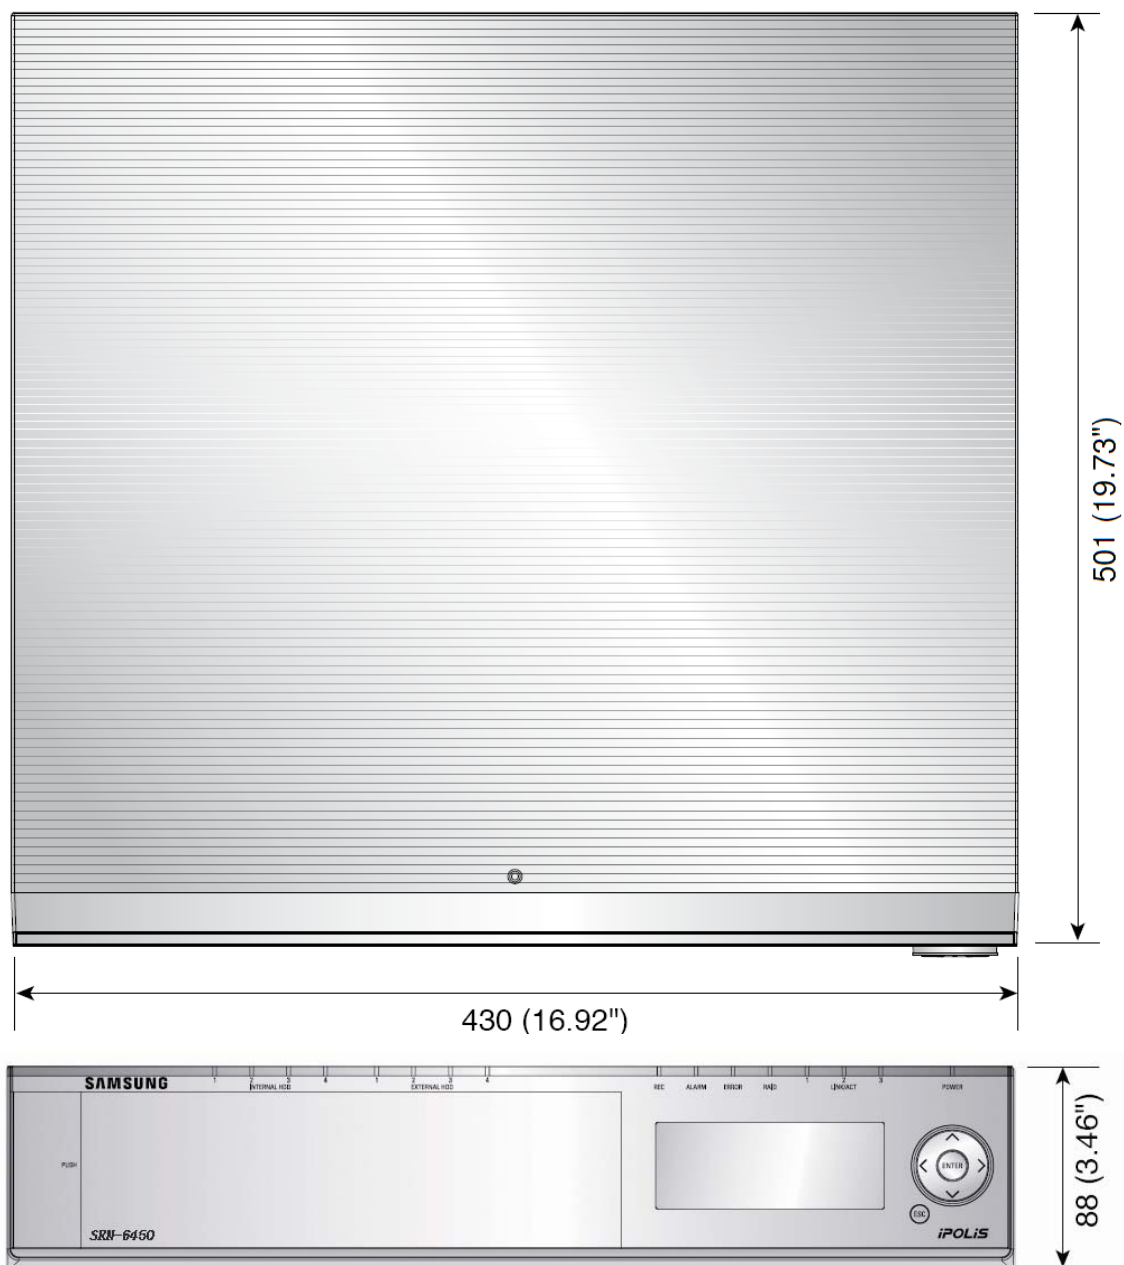

Open Source License Report on the Product

The software included in this product contains copyrighted software that is licensed under the GPL/LGPL. You may obtain the complete Corresponding Source code from us for a period of three years after our last shipment of this product by sending email to help.cctv@samsung.com.

If you want to obtain the complete Corresponding Source code in the physical medium such as CD-ROM, the cost of physically performing source distribution might be charged.

- GPL Software : linux kernel, Sysvinit, dosfstools, wget, msmtmp, busybox, cdrtools, dvd+rw-tools, iconv, smartctl, uboot, minicom, openssl, bash, lm_sensors
- LGPL Software : glibc, vmstat, inetutils
- OpenSSL License : OpenSSL

GNU GENERAL PUBLIC LICENSE

Version 2, June 1991

Copyright (C) 1989, 1991 Free Software Foundation, Inc.

51 Franklin Street, Fifth Floor, Boston, MA 02110-1301, USA

Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.

Preamble

The licenses for most software are designed to take away your freedom to share and change it. By contrast, the GNU General Public License is intended to guarantee your freedom to share and change free software--to make sure the software is free for all its users. This General Public License applies to most of the Free Software Foundation's software and to any other program whose authors commit to using it. (Some other Free Software Foundation software is covered by the GNU Lesser General Public License instead.) You can apply it to your programs, too.

When we speak of free software, we are referring to freedom, not price. Our General Public Licenses are designed to make sure that you have the freedom to distribute copies of free software (and charge for this service if you wish), that you receive source code or can get it if you want it, that you can change the software or use pieces of it in new free programs; and that you know you can do these things.

To protect your rights, we need to make restrictions that forbid anyone to deny you these rights or to ask you to surrender the rights. These restrictions translate to certain responsibilities for you if you distribute copies of the software, or if you modify it.

For example, if you distribute copies of such a program, whether gratis or for a fee, you must give the recipients all the rights that you have. You must make sure that they, too, receive or can get the source code. And you must show them these terms so they know their rights.

We protect your rights with two steps:

(1) copyright the software, and (2) offer you this license which gives you legal permission to copy, distribute and/or modify the software.

Also, for each author's protection and ours, we want to make certain that everyone understands that there is no warranty for this free software. If the software is modified by someone else and passed on, we want its recipients to know that what they have is not the original, so that any problems introduced by others will not reflect on the original authors' reputations.

Finally, any free program is threatened constantly by software patents. We wish to avoid the danger that redistributors of a free program will individually obtain patent licenses, in effect making the program proprietary. To prevent this, we have made it clear that any patent must be licensed for everyone's free use or not licensed at all.

The precise terms and conditions for copying, distribution and modification follow.

TERMS AND CONDITIONS FOR COPYING, DISTRIBUTION AND MODIFICATION

0. This License applies to any program or other work which contains a notice placed by the copyright holder saying it may be distributed under the terms of this General Public License.

The "Program", below, refers to any such program or work, and a "work based on the Program" means either the Program or any derivative work under copyright law: that is to say, a work containing the Program or a portion of it, either verbatim or with modifications and/or translated into another language. (Hereinafter, translation is included without limitation in the term "modification".) Each licensee is addressed as "you".

Activities other than copying, distribution and modification are not covered by this License; they are outside its scope. The act of running the Program is not restricted, and the output from the Program is covered only if its contents constitute a work based on the Program (independent of having been made by running the Program). Whether that is true depends on what the Program does.

1. You may copy and distribute verbatim copies of the Program's source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice and disclaimer of warranty; keep intact all the notices that refer to this License and to the absence of any warranty; and give any other recipients of the Program a copy of this License along with the Program.

You may charge a fee for the physical act of transferring a copy, and you may at your option offer warranty protection in exchange for a fee.

2. You may modify your copy or copies of the Program or any portion of it, thus forming a work based on the Program, and copy and distribute such modifications or work under the terms of Section 1 above, provided that you also meet all of these conditions:
- a) You must cause the modified files to carry prominent notices stating that you changed the files and the date of any change.
 - b) You must cause any work that you distribute or publish, that in whole or in part contains or is derived from the Program or any part thereof, to be licensed as a whole at no charge to all third parties under the terms of this License.
 - c) If the modified program normally reads commands interactively when run, you must cause it, when started running for such interactive use in the most ordinary way, to print or display an announcement including an appropriate copyright notice and a notice that there is no warranty (or else, saying that you provide a warranty) and that users may redistribute the program under these conditions, and telling the user how to view a copy of this License. (Exception: if the Program itself is interactive but does not normally print such an announcement, your work based on the Program is not required to print an announcement.)

These requirements apply to the modified work as a whole. If identifiable sections of that work are not derived from the Program, and can be reasonably considered independent and separate works in themselves, then this License, and its terms, do not apply to those sections when you distribute them as separate works. But when you distribute the same sections as part of a whole which is a work based on the Program, the distribution of the whole must be on the terms of this License, whose permissions for other licensees extend to the entire whole, and thus to each and every part regardless of who wrote it.

Thus, it is not the intent of this section to claim rights or contest your rights to work written entirely by you; rather, the intent is to exercise the right to control the distribution of derivative or collective works based on the Program.

In addition, mere aggregation of another work not based on the Program with the Program (or with a work based on the Program) on a volume of a storage or distribution medium does not bring the other work under the scope of this License.

3. You may copy and distribute the Program (or a work based on it, under Section 2) in object code or executable form under the terms of Sections 1 and 2 above provided that you also do one of the following:
- a) Accompany it with the complete corresponding machine-readable source code, which must be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,
 - b) Accompany it with a written offer, valid for at least three years, to give any third party, for a charge no more than your cost of physically performing source distribution, a complete machine-readable copy of the corresponding source code, to be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,

- c) Accompany it with the information you received as to the offer to distribute corresponding source code. (This alternative is allowed only for noncommercial distribution and only if you received the program in object code or executable form with such an offer, in accord with Subsection b above.)

The source code for a work means the preferred form of the work for making modifications to it. For an executable work, complete source code means all the source code for all modules it contains, plus any associated interface definition files, plus the scripts used to control compilation and installation of the executable. However, as a special exception, the source code distributed need not include anything that is normally distributed (in either source or binary form) with the major components (compiler, kernel, and so on) of the operating system on which the executable runs, unless that component itself accompanies the executable.

If distribution of executable or object code is made by offering access to copy from a designated place, then offering equivalent access to copy the source code from the same place counts as distribution of the source code, even though third parties are not compelled to copy the source along with the object code.

4. You may not copy, modify, sublicense, or distribute the Program except as expressly provided under this License. Any attempt otherwise to copy, modify, sublicense or distribute the Program is void, and will automatically terminate your rights under this License. However, parties who have received copies, or rights, from you under this License will not have their licenses terminated so long as such parties remain in full compliance.
5. You are not required to accept this License, since you have not signed it. However, nothing else grants you permission to modify or distribute the Program or its derivative works. These actions are prohibited by law if you do not accept this License. Therefore, by modifying or distributing the Program (or any work based on the Program), you indicate your acceptance of this License to do so, and all its terms and conditions for copying, distributing or modifying the Program or works based on it.
6. Each time you redistribute the Program (or any work based on the Program), the recipient automatically receives a license from the original licensor to copy, distribute or modify the Program subject to these terms and conditions. You may not impose any further restrictions on the recipients' exercise of the rights granted herein. You are not responsible for enforcing compliance by third parties to this License.
7. If, as a consequence of a court judgment or allegation of patent infringement or for any other reason (not limited to patent issues), conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If you cannot distribute so as to satisfy simultaneously your obligations under this License and any other pertinent obligations, then as a consequence you may not distribute the Program at all.

For example, if a patent license would not permit royalty-free redistribution of the Program by all those who receive copies directly or indirectly through you, then the only way you could satisfy both it and this License would be to refrain entirely from distribution of the Program.

If any portion of this section is held invalid or unenforceable under any particular circumstance, the balance of the section is intended to apply and the section as a whole is intended to apply in other circumstances.

It is not the purpose of this section to induce you to infringe any patents or other property right claims or to contest validity of any such claims; this section has the sole purpose of protecting the integrity of the free software distribution system, which is implemented by public license practices. Many people have made generous contributions to the wide range of software distributed through that system in reliance on consistent application of that system; it is up to the author/donor to decide if he or she is willing to distribute software through any other system and a licensee cannot impose that choice.

This section is intended to make thoroughly clear what is believed to be a consequence of the rest of this License.

8. If the distribution and/or use of the Program is restricted in certain countries either by patents or by copyrighted interfaces, the original copyright holder who places the Program under this License may add an explicit geographical distribution limitation excluding those countries, so that distribution is permitted only in or among countries not thus excluded. In such case, this License incorporates the limitation as if written in the body of this License.
9. The Free Software Foundation may publish revised and/or new versions of the General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns.
Each version is given a distinguishing version number. If the Program specifies a version number of this License which applies to it and "any later version", you have the option of following the terms and conditions either of that version or of any later version published by the Free Software Foundation. If the Program does not specify a version number of this License, you may choose any version ever published by the Free Software Foundation.
10. If you wish to incorporate parts of the Program into other free programs whose distribution conditions are different, write to the author to ask for permission. For software which is copyrighted by the Free Software Foundation, write to the Free Software Foundation; we sometimes make exceptions for this. Our decision will be guided by the two goals of preserving the free status of all derivatives of our free software and of promoting the sharing and reuse of software generally.

NO WARRANTY

11. BECAUSE THE PROGRAM IS LICENSED FREE OF CHARGE, THERE IS NO WARRANTY FOR THE PROGRAM, TO THE EXTENT PERMITTED BY APPLICABLE LAW.

EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE PROGRAM "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE PROGRAM IS WITH YOU. SHOULD THE PROGRAM PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.

12. IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MAY MODIFY AND/OR REDISTRIBUTE THE PROGRAM AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PROGRAM (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE PROGRAM TO OPERATE WITH ANY OTHER PROGRAMS), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

END OF TERMS AND CONDITIONS

How to Apply These Terms to Your New Programs

If you develop a new program, and you want it to be of the greatest possible use to the public, the best way to achieve this is to make it free software which everyone can redistribute and change under these terms.

To do so, attach the following notices to the program. It is safest to attach them to the start of each source file to most effectively convey the exclusion of warranty; and each file should have at least the "copyright" line and a pointer to where the full notice is found.

one line to give the program's name and an idea of what it does. Copyright (C) yyyy name of author

This program is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.

This program is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with this program; if not, write to the Free Software Foundation, Inc., 51 Franklin Street, Fifth Floor, Boston, MA 02110-1301, USA.

Also add information on how to contact you by

electronic and paper mail. If the program is interactive, make it output a short notice like this when it starts in an interactive mode:

Gnomovision version 69, Copyright (C) year name of author Gnomovision comes with ABSOLUTELY NO WARRANTY; for details type 'show w'. This is free software, and you are welcome to redistribute it under certain conditions; type 'show c' for details.

The hypothetical commands 'show w' and 'show c' should show the appropriate parts of the General Public License. Of course, the commands you use may be called something other than 'show w' and 'show c'; they could even be mouse-clicks or menu items-whatever suits your program.

You should also get your employer (if you work as a programmer) or your school, if any, to sign a "copyright disclaimer" for the program, if necessary. Here is a sample; alter the names: Yoyodyne, Inc., hereby disclaims all copyright interest in the program 'Gnomovision' (which makes passes at compilers) written by James Hacker.

signature of Ty Coon, 1 April 1989 Ty Coon, President of Vice This General Public License does not permit

incorporating your program into proprietary programs. If your program is a subroutine library, you may consider it more useful to permit linking proprietary applications with the library. If this is what you want to do, use the GNU Lesser General Public License instead of this License.

GNU GENERAL PUBLIC LICENSE

Version 3, 29 June 2007

Copyright © 2007 Free Software Foundation, Inc. <<http://fsf.org/>> Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.

Preamble

The GNU General Public License is a free, copyleft license for software and other kinds of works. The licenses for most software and other practical works are designed to take away your freedom to share and change the works. By contrast, the GNU General Public License is intended to guarantee your freedom to share and change all versions of a program--to make sure it remains free software for all its users. We, the Free Software Foundation, use the GNU General Public License for most of our software; it applies also to any other work released this way by its authors. You can apply it to your programs, too.

When we speak of free software, we are referring to freedom, not price. Our General Public Licenses are designed to make sure that you have the freedom to distribute copies of free software (and charge for them if you wish), that you receive source code or can get it if you want it, that you can change the software or use pieces of it in new free programs, and that you know you can do these things.

To protect your rights, we need to prevent others from denying you these rights or asking you to surrender the rights. Therefore, you have certain responsibilities if you distribute copies of the software, or if you modify it: responsibilities to respect the freedom of others.

For example, if you distribute copies of such a program, whether gratis or for a fee, you must pass on to the recipients the same freedoms that you received. You must make sure that they, too, receive or can get the source code. And you must show them these terms so they know their rights.

Developers that use the GNU GPL protect your rights with two steps: (1) assert copyright on the software, and (2) offer you this License giving you legal permission to copy, distribute and/or modify it.

For the developers' and authors' protection, the GPL clearly explains that there is no warranty for this free software. For both users' and authors' sake, the GPL requires that modified versions be marked as changed, so that their problems will not be attributed erroneously to authors of previous versions.

Some devices are designed to deny users access to install or run modified versions of the software inside them, although the manufacturer can do so. This is fundamentally incompatible with the aim of protecting users' freedom to change the software. The systematic pattern of such abuse occurs in the area of products for individuals to use, which is precisely where it is most unacceptable. Therefore, we have designed this version of the GPL to prohibit the practice for those products. If such problems arise substantially in other domains, we stand ready to extend this provision to those domains in future versions of the GPL, as needed to protect the freedom of users.

Finally, every program is threatened constantly by software patents. States should not allow patents to restrict development and use of software on general-purpose computers, but in those that do, we wish to avoid the special danger that patents applied to a free program could make it effectively proprietary. To prevent this, the GPL assures that patents cannot be used to render the program non-free.

The precise terms and conditions for copying, distribution and modification follow.

TERMS AND CONDITIONS

0. Definitions.

“This License” refers to version 3 of the GNU General Public License.

“Copyright” also means copyright-like laws that apply to other kinds of works, such as semiconductor masks.

“The Program” refers to any copyrightable work licensed under this License. Each licensee is addressed as “you”. “Licensees” and “recipients” may be individuals or organizations.

To “modify” a work means to copy from or adapt all or part of the work in a fashion requiring copyright permission, other than the making of an exact copy. The resulting work is called a “modified version” of the earlier work or a work “based on” the earlier work.

A “covered work” means either the unmodified Program or a work based on the Program.

To “propagate” a work means to do anything with it that, without permission, would make you directly or secondarily liable for infringement under applicable copyright law, except executing it on a computer or modifying a private copy. Propagation includes copying, distribution (with or without modification), making available to the public, and in some countries other activities as well.

To “convey” a work means any kind of propagation that enables other parties to make or receive copies. Mere interaction with a user through a computer network, with no transfer of a copy, is not conveying.

An interactive user interface displays “Appropriate Legal Notices” to the extent that it includes a convenient and prominently visible feature that (1) displays an appropriate copyright notice, and (2) tells the user that there is no warranty for the work (except to the extent that warranties are provided), that licensees may convey the work under this License, and how to view a copy of this License. If the interface presents a list of user commands or options, such as a menu, a prominent item in the list meets this criterion.

1. Source Code.

The “source code” for a work means the preferred form of the work for making modifications to it. “Object code” means any non-source form of a work.

A “Standard Interface” means an interface that either is an official standard defined by a recognized standards body, or, in the case of interfaces specified for a particular programming language, one that is widely used among developers working in that language.

The “System Libraries” of an executable work include anything, other than the work as a whole, that (a) is included in the normal form of packaging a Major Component, but which is not part of that Major Component, and (b) serves only to enable use of the work with that Major Component, or to implement a Standard Interface for which an implementation is available to the public in source code form. A “Major Component”, in this context, means a major essential component (kernel, window system, and so on) of the specific operating system (if any) on which the executable work runs, or a compiler used to produce the work, or an object code interpreter used to run it.

The “Corresponding Source” for a work in object code form means all the source code needed to generate, install, and (for an executable work) run the object code and to modify the work, including scripts to control those activities. However, it does not include the work’s System Libraries, or general-purpose tools or generally available free programs which are used unmodified in performing those activities but which are not part of the work. For example, Corresponding Source includes

interface definition files associated with source files for the work, and the source code for shared libraries and dynamically linked subprograms that the work is specifically designed to require, such as by intimate data communication or control flow between those subprograms and other parts of the work.

The Corresponding Source need not include anything that users can regenerate automatically from other parts of the Corresponding Source.

The Corresponding Source for a work in source code form is that same work.

2. Basic Permissions.

All rights granted under this License are granted for the term of copyright on the Program, and are irrevocable provided the stated conditions are met. This License explicitly affirms your unlimited permission to run the unmodified Program. The output from running a covered work is covered by this License only if the output, given its content, constitutes a covered work. This License acknowledges your rights of fair use or other equivalent, as provided by copyright law. You may make, run and propagate covered works that you do not convey, without conditions so long as your license otherwise remains in force. You may convey covered works to others for the sole purpose of having them make modifications exclusively for you, or provide you with facilities for running those works, provided that you comply with the terms of this License in conveying all material for which you do not control copyright. Those thus making or running the covered works for you must do so exclusively on your behalf, under your direction and control, on terms that prohibit them from making any copies of your copyrighted material outside their relationship with you.

Conveying under any other circumstances is permitted solely under the conditions stated below. Sublicensing is not allowed; section 10 makes it unnecessary.

3. Protecting Users' Legal Rights From Anti-Circumvention Law.

No covered work shall be deemed part of an effective technological measure under any applicable law fulfilling obligations under article 11 of the WIPO copyright treaty adopted on 20 December 1996, or similar laws prohibiting or restricting circumvention of such measures. When you convey a covered work, you waive any legal power to forbid circumvention of technological measures to the extent such circumvention is effected by exercising rights under this License with respect to the covered work, and you disclaim any intention to limit operation or modification of the work as a means of enforcing, against the work's users, your or third parties' legal rights to forbid circumvention of technological measures.

4. Conveying Verbatim Copies.

You may convey verbatim copies of the Program's source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice; keep intact all notices stating that this License and any non-permissive terms added in accord with section 7 apply to the code; keep intact all notices of the absence of any warranty; and give all recipients a copy of this License along with the Program.

You may charge any price or no price for each copy that you convey, and you may offer support or warranty protection for a fee.

5. Conveying Modified Source Versions.

You may convey a work based on the Program, or the modifications to produce it from the Program, in the form of source code under the terms of section 4, provided that you also meet all of these conditions:

a) The work must carry prominent notices stating that you modified it, and giving a relevant date.

- b) The work must carry prominent notices stating that it is released under this License and any conditions added under section 7. This requirement modifies the requirement in section 4 to “keep intact all notices”.
- c) You must license the entire work, as a whole, under this License to anyone who comes into possession of a copy. This License will therefore apply, along with any applicable section 7 additional terms, to the whole of the work, and all its parts, regardless of how they are packaged. This License gives no permission to license the work in any other way, but it does not invalidate such permission if you have separately received it.
- d) If the work has interactive user interfaces, each must display Appropriate Legal Notices; however, if the Program has interactive interfaces that do not display Appropriate Legal Notices, your work need not make them do so.

A compilation of a covered work with other separate and independent works, which are not by their nature extensions of the covered work, and which are not combined with it such as to form a larger program, in or on a volume of a storage or distribution medium, is called an “aggregate” if the compilation and its resulting copyright are not used to limit the access or legal rights of the compilation's users beyond what the individual works permit. Inclusion of a covered work in an aggregate does not cause this License to apply to the other parts of the aggregate.

6. Conveying Non-Source Forms.

You may convey a covered work in object code form under the terms of sections 4 and 5, provided that you also convey the machine-readable Corresponding Source under the terms of this License, in one of these ways:

- a) Convey the object code in, or embodied in, a physical product (including a physical distribution medium), accompanied by the Corresponding Source fixed on a durable physical medium customarily used for software interchange.
- b) Convey the object code in, or embodied in, a physical product (including a physical distribution medium), accompanied by a written offer, valid for at least three years and valid for as long as you offer spare parts or customer support for that product model, to give anyone who possesses the object code either (1) a copy of the Corresponding Source for all the software in the product that is covered by this License, on a durable physical medium customarily used for software interchange, for a price no more than your reasonable cost of physically performing this conveying of source, or (2) access to copy the Corresponding Source from a network server at no charge.
- c) Convey individual copies of the object code with a copy of the written offer to provide the corresponding Source. This alternative is allowed only occasionally and noncommercially, and only if you received the object code with such an offer, in accord with subsection 6b.
- d) Convey the object code by offering access from a designated place (gratis or for a charge), and offer equivalent access to the Corresponding Source in the same way through the same place at no further charge. You need not require recipients to copy the Corresponding Source along with the object code. If the place to copy the object code is a network server, the

Corresponding Source may be on a different server (operated by you or a third party) that supports equivalent copying facilities, provided you maintain clear directions next to the object code saying where to find the Corresponding Source. Regardless of what server hosts the Corresponding Source, you remain obligated to ensure that it is available for as long as needed to satisfy these requirements.

e) Convey the object code using peer-to-peer transmission, provided you inform other peers where the object code and Corresponding Source of the work are being offered to the general public at no charge under subsection 6d.

A separable portion of the object code, whose source code is excluded from the Corresponding Source as a System Library, need not be included in conveying the object code work.

A “User Product” is either (1) a “consumer product”, which means any tangible personal property which is normally used for personal, family, or household purposes, or (2) anything designed or sold for incorporation into a dwelling. In determining whether a product is a consumer product, doubtful cases shall be resolved in favor of coverage. For a particular product received by a particular user, “normally used” refers to a typical or common use of that class of product, regardless of the status of the particular user or of the way in which the particular user actually uses, or expects or is expected to use, the product. A product is a consumer product regardless of whether the product has substantial commercial, industrial or non-consumer uses, unless such uses represent the only significant mode of use of the product.

“Installation Information” for a User Product means any methods, procedures, authorization keys, or other information required to install and execute modified versions of a covered work in that User Product from a modified version of its Corresponding Source. The information must suffice to ensure that the continued functioning of the modified object code is in no case prevented or interfered with solely because modification has been made.

If you convey an object code work under this section in, or with, or specifically for use in, a User Product, and the conveying occurs as part of a transaction in which the right of possession and use of the User Product is transferred to the recipient in perpetuity or for a fixed term (regardless of how the transaction is characterized), the Corresponding Source conveyed under this section must be accompanied by the Installation Information. But this requirement does not apply if neither you nor any third party retains the ability to install modified object code on the User Product (for example, the work has been installed in ROM). The requirement to provide Installation Information does not include a requirement to continue to provide support service, warranty, or updates for a work that has been modified or installed by the recipient, or for the User Product in which it has been modified or installed. Access to a network may be denied when the modification itself materially and adversely affects the operation of the network or violates the rules and protocols for communication across the network.

Corresponding Source conveyed, and Installation Information provided, in accord with this section must be in a format that is publicly documented (and with an implementation available to the public in source code form), and must require no special password or key for unpacking, reading or copying.

7. Additional Terms.

“Additional permissions” are terms that supplement the terms of this License by making exceptions from one or more of its conditions. Additional permissions that are applicable to the entire Program shall be treated as though they were included in this License, to the extent that they are valid under applicable law. If additional permissions apply only to part of the Program, that part may be used separately under those permissions, but the entire Program remains governed by this License without regard to the additional permissions.

When you convey a copy of a covered work, you may at your option remove any additional permissions from that copy, or from any part of it. (Additional permissions may be written to require their own removal in certain cases when you modify the work.) You may place additional permissions on material, added by you to a covered work, for which you have or can give appropriate copyright permission.

Notwithstanding any other provision of this License, for material you add to a covered work, you may (if authorized by the copyright holders of that material) supplement the terms of this License with terms:

- . a) Disclaiming warranty or limiting liability differently from the terms of sections 15 and 16 of this License; or
- . b) Requiring preservation of specified reasonable legal notices or author attributions in that material or in the Appropriate Legal Notices displayed by works containing it; or
- . c) Prohibiting misrepresentation of the origin of that material, or requiring that modified versions of such material be marked in reasonable ways as different from the original version; or
- . d) Limiting the use for publicity purposes of names of licensors or authors of the material; or
- . e) Declining to grant rights under trademark law for use of some trade names, trademarks, or service marks; or
- . f) Requiring indemnification of licensors and authors of that material by anyone who conveys the material (or modified versions of it) with contractual assumptions of liability to the recipient, for any liability that these contractual assumptions directly impose on those licensors and authors.

All other non-permissive additional terms are considered “further restrictions” within the meaning of section 10. If the Program as you received it, or any part of it, contains a notice stating that it is governed by this License along with a term that is a further restriction, you may remove that term. If a license document contains a further restriction but permits relicensing or conveying under this License, you may add to a covered work material governed by the terms

of that license document, provided that the further restriction does not survive such relicensing or conveying.

If you add terms to a covered work in accord with this section, you must place, in the relevant source files, a statement of the additional terms that apply to those files, or a notice indicating where to find the applicable terms.

Additional terms, permissive or non-permissive, may be stated in the form of a separately written license, or stated as exceptions; the above requirements apply either way.

8. Termination.

You may not propagate or modify a covered work except as expressly provided under this License. Any attempt otherwise to propagate or modify it is void, and will automatically terminate your rights under this License (including any patent licenses granted under the third paragraph of section 11).

However, if you cease all violation of this License, then your license from a particular copyright holder is reinstated (a) provisionally, unless and until the copyright holder explicitly and finally terminates your license, and (b) permanently, if the copyright holder fails to notify you of the violation by some reasonable means prior to 60 days after the cessation.

Moreover, your license from a particular copyright holder is reinstated permanently if the copyright holder notifies you of the violation by some reasonable means, this is the first time you have received notice of violation of this License (for any work) from that copyright holder, and you cure the violation prior to 30 days after your receipt of the notice.

Termination of your rights under this section does not terminate the licenses of parties who have received copies or rights from you under this License. If your rights have been terminated and not permanently reinstated, you do not qualify to receive new licenses for the same material under section 10.

9. Acceptance Not Required for Having Copies.

You are not required to accept this License in order to receive or run a copy of the Program. Ancillary propagation of a covered work occurring solely as a consequence of using peer-to-peer transmission to receive a copy likewise does not require acceptance. However, nothing other than this License grants you permission to propagate or modify any covered work. These actions infringe copyright if you do not accept this License. Therefore, by modifying or propagating a covered work, you indicate your acceptance of this License to do so.

10. Automatic Licensing of Downstream Recipients.

Each time you convey a covered work, the recipient automatically receives a license from the original licensors, to run, modify and propagate that work, subject to this License. You are not responsible for enforcing compliance by third parties with this License.

An “entity transaction” is a transaction transferring control of an organization, or substantially all assets of one, or subdividing an organization, or merging organizations. If propagation of a covered work results from an entity transaction, each party to that transaction who receives a copy of the work also receives whatever licenses to the work the party's predecessor in interest had or could give under the previous paragraph, plus a right to possession of the

Corresponding Source of the work from the predecessor in interest, if the predecessor has it or can get it with reasonable efforts.

You may not impose any further restrictions on the exercise of the rights granted or affirmed under this License. For example, you may not impose a license fee, royalty, or other charge for exercise of rights granted under this License, and you may not initiate litigation (including a cross-claim or counterclaim in a lawsuit) alleging that any patent claim is infringed by making, using, selling, offering for sale, or importing the Program or any portion of it.

11. Patents.

A “contributor” is a copyright holder who authorizes use under this License of the Program or a work on which the Program is based. The work thus licensed is called the contributor's “contributor version”.

A contributor's “essential patent claims” are all patent claims owned or controlled by the contributor, whether already acquired or hereafter acquired, that would be infringed by some manner, permitted by this License, of making, using, or selling its contributor version, but do not include claims that would be infringed only as a consequence of further modification of the contributor version. For purposes of this definition, “control” includes the right to grant patent sublicenses in a manner consistent with the requirements of this License.

Each contributor grants you a non-exclusive, worldwide, royalty-free patent license under the contributor's essential patent claims, to make, use, sell, offer for sale, import and otherwise run, modify and propagate the contents of its contributor version.

In the following three paragraphs, a “patent license” is any express agreement or commitment, however denominated, not to enforce a patent (such as an express permission to practice a patent or covenant not to sue for patent infringement). To “grant” such a patent license to a party means to make such an agreement or commitment not to enforce a patent against the party.

If you convey a covered work, knowingly relying on a patent license, and the Corresponding Source of the work is not available for anyone to copy, free of charge and under the terms of this License, through a publicly available network server or other readily accessible means, then you must either (1) cause the Corresponding Source to be so available, or (2) arrange to deprive yourself of the benefit of the patent license for this particular work, or (3) arrange, in a manner consistent with the requirements of this License, to extend the patent license to downstream recipients. “Knowingly relying” means you have actual knowledge that, but for the patent license, your conveying the covered work in a country, or your recipient's use of the covered work in a country, would infringe one or more identifiable patents in that country that you have reason to believe are valid.

If, pursuant to or in connection with a single transaction or arrangement, you convey, or propagate by procuring conveyance of, a covered work, and grant a patent license to some of the parties receiving the covered work authorizing them to use, propagate, modify or convey a specific copy of the covered work, then the patent license you grant is automatically extended to all recipients of the covered work and works based on it.

A patent license is “discriminatory” if it does not include within the scope of its coverage, prohibits the exercise of, or is conditioned on the non-exercise of one or more of the rights that are specifically granted under this License. You may not convey a covered work if you are a party to an arrangement with a third party that is in the business of distributing software, under which you make payment to the third party based on the extent of your activity of conveying the work, and under which the third party grants, to any of the parties who would receive the covered work from you, a discriminatory patent license

(a) in connection with copies of the covered work conveyed by you (or copies made from those copies), or

(b) primarily for and in connection with specific products or compilations that contain the covered work, unless you entered into that arrangement, or that patent license was granted, prior to 28 March 2007.

Nothing in this License shall be construed as excluding or limiting any implied license or other defenses to infringement that may otherwise be available to you under applicable patent law.

12. No Surrender of Others' Freedom.

If conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If you cannot convey a covered work so as to satisfy simultaneously your obligations under this License and any other pertinent obligations, then as a consequence you may not convey it at all. For example, if you agree to terms that obligate you to collect a royalty for further conveying from those to whom you convey the Program, the only way you could satisfy both those terms and this License would be to refrain entirely from conveying the Program.

13. Use with the GNU Affero General Public License.

Notwithstanding any other provision of this License, you have permission to link or combine any covered work with a work licensed under version 3 of the GNU Affero General Public License into a single combined work, and to convey the resulting work. The terms of this License will continue to apply to the part which is the covered work, but the special requirements of the GNU Affero General Public License, section 13, concerning interaction through a network will apply to the combination as such.

14. Revised Versions of this License.

The Free Software Foundation may publish revised and/ or new versions of the GNU General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns.

Each version is given a distinguishing version number. If the Program specifies that a certain numbered version of the GNU General Public License “or any later version” applies to it, you have the option of following the terms and conditions either of that numbered version or of any later version published by the Free Software Foundation. If the Program does not specify a version number of the GNU General Public License, you may choose any version ever published by the Free Software Foundation.

If the Program specifies that a proxy can decide which future versions of the GNU General Public License can be used, that proxy's public statement of acceptance of a version permanently authorizes you to choose that version for the Program.

Later license versions may give you additional or different permissions. However, no additional obligations are imposed on any author or copyright holder as a result of your choosing to follow a later version.

15. Disclaimer of Warranty.

THERE IS NO WARRANTY FOR THE PROGRAM, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE PROGRAM "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE PROGRAM IS WITH YOU. SHOULD THE PROGRAM PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.

16. Limitation of Liability.

IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MODIFIES AND/OR CONVEYS THE PROGRAM AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PROGRAM (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE PROGRAM TO OPERATE WITH ANY OTHER PROGRAMS), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

17. Interpretation of Sections 15 and 16.

If the disclaimer of warranty and limitation of liability provided above cannot be given local legal effect according to their terms, reviewing courts shall apply local law that most closely approximates an absolute waiver of all civil liability in connection with the Program, unless a warranty or assumption of liability accompanies a copy of the Program in return for a fee.

END OF TERMS AND CONDITIONS

GNU LESSER GENERAL PUBLIC LICENSE

Version 2.1, February 1999

Copyright (C) 1991, 1999 Free Software Foundation, Inc. 51 Franklin Street, Fifth Floor, Boston, MA 02110-1301

USA Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.

[This is the first released version of the Lesser GPL. It also counts as the successor of the GNU Library Public License, version 2, hence the version number 2.1.]

Preamble

The licenses for most software are designed to take away your freedom to share and change it. By contrast, the GNU General Public Licenses are intended to guarantee your freedom to share and change free software to make sure the software is free for all its users.

This license, the Lesser General Public License, applies to some specially designated software packages—typically libraries—of the Free Software Foundation and other authors who decide to use it. You can use it too, but we suggest you first think carefully about whether this license or the ordinary General Public License is the better strategy to use in any particular case, based on the explanations below.

When we speak of free software, we are referring to freedom of use, not price. Our General Public Licenses are designed to make sure that you have the freedom to distribute copies of free software (and charge for this service if you wish); that you receive source code or can get it if you want it; that you can change the software and use pieces of it in new free programs; and that you are informed that you can do these things.

To protect your rights, we need to make restrictions that forbid distributors to deny you these rights or to ask you to surrender these rights. These restrictions translate to certain responsibilities for you if you distribute copies of the library or if you modify it.

For example, if you distribute copies of the library, whether gratis or for a fee, you must give the recipients all the rights that we gave you. You must make sure that they, too, receive or can get the source code. If you link other code with the library, you must provide complete object files to the recipients, so that they can relink them with the library after making changes to the library and recompiling it. And you must show them these terms so they know their rights.

We protect your rights with a two-step method: (1) we copyright the library, and (2) we offer you this license, which gives you legal permission to copy, distribute and/or modify the library.

To protect each distributor, we want to make it very clear that there is no warranty for the free library. Also, if the library is modified by someone else and passed on, the recipients should know that what they have is not the original version, so that the original author's reputation will not be affected by problems that might be introduced by others.

Finally, software patents pose a constant threat to the existence of any free program. We wish to make sure that a company cannot effectively restrict the users of a free program by obtaining a restrictive license from a patent holder. Therefore, we insist that any patent license obtained for a version of the library must be consistent with the full freedom of use specified in this license.

Most GNU software, including some libraries, is covered by the ordinary GNU General Public License. This license, the GNU Lesser General Public License, applies to certain designated libraries, and is quite different from the ordinary General Public License. We use this license for certain libraries in order to permit linking those libraries into non-free programs.

When a program is linked with a library, whether statically or using a shared library, the combination of the two is legally speaking a combined work, a derivative of the original library.

The ordinary General Public License therefore permits such linking only if the entire combination fits its criteria of freedom. The Lesser General Public License permits more lax criteria for linking other code with the library.

We call this license the “Lesser” General Public License because it does Less to protect the user’s freedom than the ordinary General Public License. It also provides other free software developers Less of an advantage over competing non-free programs. These disadvantages are the reason we use the ordinary General Public License for many libraries. However, the Lesser license provides advantages in certain special circumstances.

For example, on rare occasions, there may be a special need to encourage the widest possible use of a certain library, so that it becomes a de-facto standard. To achieve this, non-free programs must be allowed to use the library. A more frequent case is that a free library does the same job as widely used non-free libraries. In this case, there is little to gain by limiting the free library to free software only, so we use the Lesser General Public License.

In other cases, permission to use a particular library in non-free programs enables a greater number of people to use a large body of free software. For example, permission to use the GNU C Library in non-free programs enables many more people to use the whole GNU operating system, as well as its variant, the GNU/ Linux operating system.

Although the Lesser General Public License is Less protective of the users’ freedom, it does ensure that the user of a program that is linked with the Library has the freedom and the wherewithal to run that program using a modified version of the Library.

The precise terms and conditions for copying, distribution and modification follow. Pay close attention to the difference between a “work based on the library” and a “work that uses the library”. The former contains code derived from the library, whereas the latter must be combined with the library in order to run.

TERMS AND CONDITIONS FOR COPYING, DISTRIBUTION AND MODIFICATION

0. This License Agreement applies to any software library or other program which contains a notice placed by the copyright holder or other authorized party saying it may be distributed under the terms of this Lesser General Public License (also called “this License”). Each licensee is addressed as “you”.

A “library” means a collection of software functions and/ or data prepared so as to be conveniently linked with application programs (which use some of those functions and data) to form executables.

The “Library”, below, refers to any such software library or work which has been distributed under these terms. A “work based on the Library” means either the Library or any derivative work under copyright law: that is to say, a work containing the Library or a portion of it, either verbatim or with modifications and/or translated straightforwardly into another language. (Hereinafter, translation is included without limitation in the term “modification”).

“Source code” for a work means the preferred form of the work for making modifications to it. For a library, complete source code means all the source code for all modules it contains, plus

any associated interface definition files, plus the scripts used to control compilation and installation of the library.

Activities other than copying, distribution and modification are not covered by this License; they are outside its scope. The act of running a program using the Library is not restricted, and output from such a program is covered only if its contents constitute a work based on the Library (independent of the use of the Library in a tool for writing it). Whether that is true depends on what the Library does and what the program that uses the Library does.

_. You may copy and distribute verbatim copies of the Library's complete source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice and disclaimer of warranty; keep intact all the notices that refer to this License and to the absence of any warranty; and distribute a copy of this License along with the Library.

You may charge a fee for the physical act of transferring a copy, and you may at your option offer warranty protection in exchange for a fee.

_. You may modify your copy or copies of the Library or any portion of it, thus forming a work based on the Library, and copy and distribute such modifications or work under the terms of Section 1 above, provided that you also meet all of these conditions:

a) The modified work must itself be a software library. b) You must cause the files modified to carry prominent notices stating that you changed the files and the date of any change. c) You must cause the whole of the work to be licensed at no charge to all third parties under the terms of this License. d) If a facility in the modified Library refers to a function or a table of data to be supplied by an application program that uses the facility, other than as an argument passed when the facility is invoked, then you must make a good faith effort to ensure that, in the event an application does not supply such function or table, the facility still operates, and performs whatever part of its purpose remains meaningful. (For example, a function in a library to compute square roots has a purpose that is entirely well-defined independent of the application. Therefore, Subsection 2d requires that any application-supplied function or table used by this function must be optional: if the application does not supply it, the square root function must still compute square roots.) These requirements apply to the modified work as a whole. If identifiable sections of that work are not derived from the Library, and can be reasonably considered independent and separate works in themselves, then this License, and its terms, do not

apply to those sections when you distribute them as separate works. But when you distribute the same sections as part of a whole which is a work based on the Library, the distribution of the whole must be on the terms of this License, whose permissions for other licensees extend to the entire whole, and thus to each and every part regardless of who wrote it.

Thus, it is not the intent of this section to claim rights or contest your rights to work written entirely by you; rather, the intent is to exercise the right to control the distribution of derivative or collective works based on the Library.

In addition, mere aggregation of another work not based on the Library with the Library (or with a work based on the Library) on a volume of a storage or distribution medium does not bring the other work under the scope of this License.

3. You may opt to apply the terms of the ordinary GNU General Public License instead of this License to a given copy of the Library. To do this, you must alter all the notices that refer to this License, so that they refer to the ordinary GNU General Public License, version 2, instead of to this License. (If a newer version than version 2 of the ordinary GNU General Public License has appeared, then you can specify that version instead if you wish.) Do not make any other change in these notices.

Once this change is made in a given copy, it is irreversible for that copy, so the ordinary GNU General Public License applies to all subsequent copies and derivative works made from that copy.

This option is useful when you wish to copy part of the code of the Library into a program that is not a library.

4. You may copy and distribute the Library (or a portion or derivative of it, under Section 2) in object code or executable form under the terms of Sections 1 and 2 above provided that you accompany it with the complete corresponding machine-readable source code, which must be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange.

If distribution of object code is made by offering access to copy from a designated place, then offering equivalent access to copy the source code from the same place satisfies the requirement to distribute the source code, even though third parties are not compelled to copy the source along with the object code.

_. A program that contains no derivative of any portion of the Library, but is designed to work with the Library by being compiled or linked with it, is called a “work that uses the Library”. Such a work, in isolation, is not a derivative work of the Library, and therefore falls outside the scope of this License.

However, linking a “work that uses the Library” with the Library creates an executable that is a derivative of the Library (because it contains portions of the Library), rather than a “work that uses the library”. The executable is therefore covered by this License. Section 6 states terms for distribution of such executables.

When a “work that uses the Library” uses material from a header file that is part of the Library, the object code for the work may be a derivative work of the Library even though the source code is not. Whether this is true is especially significant if the work can be linked without the Library, or if the work is itself a library. The threshold for this to be true is not precisely defined by law.

If such an object file uses only numerical parameters, data structure layouts and accessors, and small macros and small inline functions (ten lines or less in length), then the use of the object file is unrestricted, regardless of whether it is legally a derivative work. (Executables containing this object code plus portions of the Library will still fall under Section 6.)

Otherwise, if the work is a derivative of the Library, you may distribute the object code for the work under the terms of Section 6. Any executables containing that work also fall under Section 6, whether or not they are linked directly with the Library itself.

6. As an exception to the Sections above, you may also combine or link a “work that uses the Library” with the Library to produce a work containing portions of the Library, and distribute that work under terms of your choice, provided that the terms permit modification of the work for the customer’s own use and reverse engineering for debugging such modifications.

You must give prominent notice with each copy of the work that the Library is used in it and that the Library and its use are covered by this License. You must supply a copy of this License. If the work during execution displays copyright notices, you must include the copyright notice for the Library among them, as well as a reference directing the user to the copy of this License. Also, you must do one of these things:

- a) Accompany the work with the complete corresponding machine-readable source code for the Library including whatever changes were used in the work (which must be distributed under Sections 1 and 2 above); and, if the work is an executable linked with the Library, with the complete machine readable “work that uses the Library”, as object code and/or source code, so that the user can modify the Library and then relink to produce a modified executable containing the modified Library. (It is understood that the user who changes the contents of definitions files in the Library will not necessarily be able to recompile the application to use the modified definitions.)
- b) Use a suitable shared library mechanism for linking with the Library. A suitable mechanism is one that
 - (1) uses at run time a copy of the library already present on the user’s computer system, rather than copying library functions into the executable, and (2) will operate properly with a modified version of the library, if the user installs one, as long as the modified version is interface-compatible with the version that the work was made with.
- c) Accompany the work with a written offer, valid for at least three years, to give the same user the materials specified in Subsection 6a, above, for a charge no more than the cost of performing this distribution.
- d) If distribution of the work is made by offering access to copy from a designated place, offer equivalent access to copy the above specified materials from the same place.
- e) Verify that the user has already received a copy of these materials or that you have already sent this user a copy.

For an executable, the required form of the “work that uses the Library” must include any data and utility programs needed for reproducing the executable from it. However, as a special exception, the materials to be distributed need not include anything that is normally distributed (in either source or binary form) with the major components (compiler, kernel, and so on) of the operating system on which the executable runs, unless that component itself accompanies the executable.

It may happen that this requirement contradicts the license restrictions of other proprietary libraries that do not normally accompany the operating system. Such a contradiction means you cannot use both them and the Library together in an executable that you distribute.

7. You may place library facilities that are a work based on the Library side-by-side in a single library together with other library facilities not covered by this License, and distribute such a combined library, provided that the separate distribution of the work based on the Library and of the other library facilities is otherwise permitted, and provided that you do these two things:

- a) Accompany the combined library with a copy of the same work based on the Library, uncombined with any other library facilities. This must be distributed under the terms of the Sections above.
- b) Give prominent notice with the combined library of the fact that part of it is a work based on the Library, and explaining where to find the accompanying uncombined form of the same work.

8. You may not copy, modify, sublicense, link with, or distribute the Library except as expressly provided under this License. Any attempt otherwise to copy, modify, sublicense, link with, or distribute the Library is void, and will automatically terminate your rights under this License. However, parties who have received copies, or rights, from you under this License will not have their licenses terminated so long as such parties remain in full compliance.

9. You are not required to accept this License, since you have not signed it. However, nothing else grants you permission to modify or distribute the Library or its derivative works. These actions are prohibited by law if you do not accept this License. Therefore, by modifying or distributing the Library (or any work based on the Library), you indicate your acceptance of this License to do so, and all its terms and conditions for copying, distributing or modifying the Library or works based on it.

10. Each time you redistribute the Library (or any work based on the Library), the recipient automatically receives a license from the original licensor to copy, distribute, link with or modify the Library subject to these terms and conditions. You may not impose any further restrictions on the recipients' exercise of the rights granted herein. You are not responsible for enforcing compliance by third parties with this License.

11. If, as a consequence of a court judgment or allegation of patent infringement or for any other reason (not limited to patent issues), conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If you cannot distribute so as to satisfy simultaneously your obligations under this License and any other pertinent obligations, then as a consequence you may not distribute the Library at all. For example, if a patent license would not permit royalty free redistribution of the Library by all those who receive copies directly or indirectly through you, then the only way you could satisfy both it and this License would be to refrain entirely from distribution of the Library.

If any portion of this section is held invalid or unenforceable under any particular circumstance, the balance of the section is intended to apply, and the section as a whole is intended to apply in other circumstances.

It is not the purpose of this section to induce you to infringe any patents or other property right claims or to contest validity of any such claims; this section has the sole purpose of protecting the integrity of the free software distribution system which is implemented by public license practices. Many people have made generous contributions to the wide range of software distributed through that system in reliance on consistent application of that system; it is up to the author/donor to decide if he or she is willing to distribute software through any other system and a licensee cannot impose that choice.

This section is intended to make thoroughly clear what is believed to be a consequence of the rest of this License.

12. If the distribution and/or use of the Library is restricted in certain countries either by patents or by copyrighted interfaces, the original copyright holder who places the Library under this License may add an explicit geographical distribution limitation excluding those countries, so that distribution is permitted only in or among countries not thus excluded. In such case, this License incorporates the limitation as if written in the body of this License.

13. The Free Software Foundation may publish revised and/or new versions of the Lesser General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns.

Each version is given a distinguishing version number. If the Library specifies a version number of this License which applies to it and “any later version”, you have the option of following the terms and conditions either of that version or of any later version published by the Free Software Foundation. If the Library does not specify a license version number, you may choose any version ever published by the Free Software Foundation.

14. If you wish to incorporate parts of the Library into other free programs whose distribution conditions are incompatible with these, write to the author to ask for permission. For software which is copyrighted by the Free Software Foundation, write to the Free Software Foundation; we sometimes make exceptions for this. Our decision will be guided by the two goals of preserving the free status of all derivatives of our free software and of promoting the sharing and reuse of software generally.

NO WARRANTY

15. BECAUSE THE LIBRARY IS LICENSED FREE OF CHARGE, THERE IS NO WARRANTY FOR THE LIBRARY, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE LIBRARY “AS IS” WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE LIBRARY IS WITH YOU. SHOULD THE LIBRARY PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.

16. IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MAY MODIFY AND/OR REDISTRIBUTE THE LIBRARY AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE LIBRARY (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE LIBRARY TO OPERATE WITH ANY OTHER SOFTWARE), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

END OF TERMS AND CONDITIONS

How to Apply These Terms to Your New Libraries

If you develop a new library, and you want it to be of the greatest possible use to the public, we recommend making it free software that everyone can redistribute and change. You can do so by permitting redistribution under these terms (or, alternatively, under the terms of the ordinary General Public License).

To apply these terms, attach the following notices to the library. It is safest to attach them to the start of each source file to most effectively convey the exclusion of warranty; and each file should have at least the "copyright" line and a pointer to where the full notice is found. one line to give the library's name and an idea of what it does.

Copyright (C) year name of author

This library is free software; you can redistribute it and/ or modify it under the terms of the GNU Lesser General Public License as published by the Free Software Foundation; either version 2.1 of the License, or (at your option) any later version.

This library is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU Lesser General Public License for more details.

You should have received a copy of the GNU Lesser General Public License along with this library; if not, write to the Free Software Foundation, Inc., 51 Franklin Street, Fifth Floor, Boston, MA 02110-1301 USA Also add information on how to contact you by electronic and paper mail.

You should also get your employer (if you work as a programmer) or your school, if any, to sign a "copyright disclaimer" for the library, if necessary. Here is a sample; alter the names:

Yoyodyne, Inc., hereby disclaims all copyright interest in the library 'Frob' (a library for tweaking knobs) written by James Random Hacker.

signature of Ty Coon, 1 April 1990 Ty Coon, President of Vice.

OpenSSL LICENSE

Copyright (c) 1998-2006 The OpenSSL Project. All rights reserved. Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. All advertising materials mentioning features or use of this software must display the following acknowledgment: "This product includes software developed by the OpenSSL Project for use in the OpenSSL Toolkit. (<http://www.openssl.org/>)"
4. The names "OpenSSL Toolkit" and "OpenSSL Project" must not be used to endorse or promote products derived from this software without prior written permission. For written permission, please contact openssl-core@openssl.org.
5. Products derived from this software may not be called "OpenSSL" nor may "OpenSSL" appear in their names without prior written permission of the OpenSSL Project.
6. Redistributions of any form whatsoever must retain the following acknowledgment: "This product includes software developed by the OpenSSL Project for use in the OpenSSL Toolkit (<http://www.openssl.org/>)"

THIS SOFTWARE IS PROVIDED BY THE OpenSSL PROJECT "AS IS" AND ANY EXPRESSED OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE OpenSSL PROJECT OR ITS CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE. This product includes cryptographic software written by Eric Young (eay@cryptsoft.com). This product includes software written by Tim Hudson(tjh@cryptsoft.com).

Original SSLeay License

Copyright (C) 1995-1998 Eric Young (eay@cryptsoft.com) All rights reserved. This package is

an SSL implementation written by Eric Young (eay@cryptsoft.com). The implementation was written so as to conform with Netscapes SSL. This library is free for commercial and non-commercial use as long as the following conditions are adhered to. The following conditions apply to all code found in this distribution, be it the RC4, RSA, lhash, DES, etc., code; not just the SSL code. The SSL documentation included with this distribution is covered by the same copyright terms except that the holder is Tim Hudson (tjh@cryptsoft.com).

Copyright remains Eric Young's, and as such any Copyright notices in the code are not to be removed. If this package is used in a product, Eric Young should be given attribution as the author of the parts of the library used. This can be in the form of a textual message at program startup or in documentation (online or textual) provided with the package. Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. All advertising materials mentioning features or use of this software must display the following acknowledgement: "This product includes cryptographic software written by Eric Young (eay@cryptsoft.com)" The word 'cryptographic' can be left out if the routines from the library being used are not cryptographic related :-).
4. If you include any Windows specific code (or a derivative thereof) from the apps directory (application code) you must include an acknowledgement: "This product includes software written by Tim Hudson (tjh@cryptsoft.com)"

THIS SOFTWARE IS PROVIDED BY ERIC YOUNG "AS IS", AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

The licence and distribution terms for any publicly available version or derivative of this code cannot be changed. i.e. this code cannot simply be copied and put under another distribution licence [including the GNU Public Licence.]



Cum se elimină corect acest produs (Deșeuri de echipamente electrice și electronice)

(Aplicabil în țările Uniunii Europene și în alte țări cu sisteme de colectare selectivă)

Acest simbol de pe produs, accesorii și documentație indică faptul că produsul și accesoriiile sale electronice (încărcător, căști, cablu USB) nu trebuie eliminate împreună cu alte deșeuri menajere la finalul duratei lor de utilizare. Dat fiind că eliminarea necontrolată a deșeurilor poate dăuna mediului înconjurător sau sănătății umane, vă rugăm să separați aceste articole de alte tipuri de deșeuri și să le reciclați în mod responsabil, promovând astfel reutilizarea durabilă a resurselor materiale.

Utilizatorii casnici trebuie să-l contacteze pe distribuitorul care le-a vândut produsul sau să se intereseze la autoritățile locale unde și cum pot să ducă aceste articole pentru a fi reciclate în mod ecologic.

Utilizatorii comerciali trebuie să-și contacteze furnizorul și să consulte termenii și condițiile din contractul de achiziție. Acest produs și accesoriiile sale electronice nu trebuie eliminate împreună cu alte deșeuri comerciale.



Dispoziții privind eliminarea corectă a bateriilor acestui produs

(aplicabile în Uniunea Europeană și în alte țări europene cu sisteme separate de colectare a bateriilor)

Acest marcaj de pe baterie, de pe manualul de utilizare sau de pe ambalaj indică faptul că bateriile acestui produs nu trebuie eliminate împreună cu alte deșeuri menajere la sfârșitul ciclului lor de viață. Dacă sunt marcate, simbolurile chimice Hg, Cd sau Pb indică faptul că bateria conține mercur, cadmiu sau plumb peste nivelurile de referință prevăzute în Directiva CE 2006/66. În cazul în care bateriile nu sunt eliminate corespunzător, aceste substanțe pot fi dăunătoare pentru sănătatea omului sau pentru mediu.

În vederea protejării resurselor naturale și a promovării refolosirii materialelor, vă rugăm să separați bateriile de celelalte tipuri de deșeuri și să le reciclați prin intermediul sistemului gratuit de returnare a bateriilor la nivel local.



PRODAJNA MREŽA

SAMSUNG TECHWIN CO., LTD.

Samsungtechwin R&D Center, 701, Sampyeong-dong, Bundang-gu, Seongnam-si, Gyeonggi-do, Korea, 463-400
TEL : +82-70-7147-8740~60 FAX : +82-31-8018-3745

SAMSUNG TECHWIN AMERICA Inc.

100 Challenger Rd. Suite 700 Ridgefield Park, NJ 07660
Toll Free : +1-877-213-1222 Direct : +1-201-325-6920
Fax : +1-201-373-0124
www.samsungcctvusa.com

SAMSUNG TECHWIN EUROPE LTD.

Samsung House, 1000 Hillswood Drive, Hillswood Business Park
Chertsey, Surrey, UNITED KINGDOM KT16 0PS
TEL : +44-1932-45-5300 FAX : +44-1932-45-5325

www.samsungtechwin.com

www.samsungsecurity.com

www.samsungipolis.com