

Copyright ⓒ 2017 Hanwha Techwin. All rights reserved

Controller IP address Setting

- Controllers can be accessed using it's virtual IP Address (169.254.242.121)
- Add a new IP address to the PC in the same subnet 169.254.242.xxx (e.g. 169.254.242.100)
- Connect the controller directly to the PC using Ethernet cable
- Open a web browser and navigate to 169.254.242.121
- Enter username as "admin" and leave the password field blank and login
- Change the default IP address to desired IP address and Save
- If the admin password was not set before, you will be prompted to set the password


You can skip this part if the IP address is already changed

Copyright ⓒ 2016 Hanwha Techwin. All rights reserved.


Gateway and “Here I am” Interval Setting

- Once the IP Address setup is complete, login to the controller using the new IP address / Virtual IP address

1. Click on “Advanced Setup”

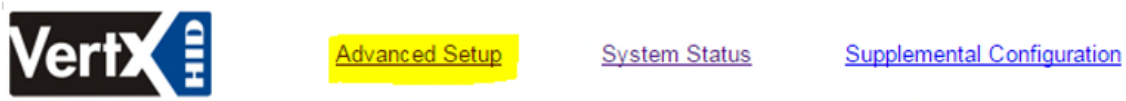


2. Enter Domain Name (Anything is OK)
3. Enable FTP



4. CS/Host Addressing – Enter the *Wisenet Access Gateway* IP Address
5. Set the “Here I am” Interval to 20
6. Click “Save”

- Controller is now ready to be used with Wisenet Access Software

Copyright ⓒ 2016 Hanwha Techwin. All rights reserved.

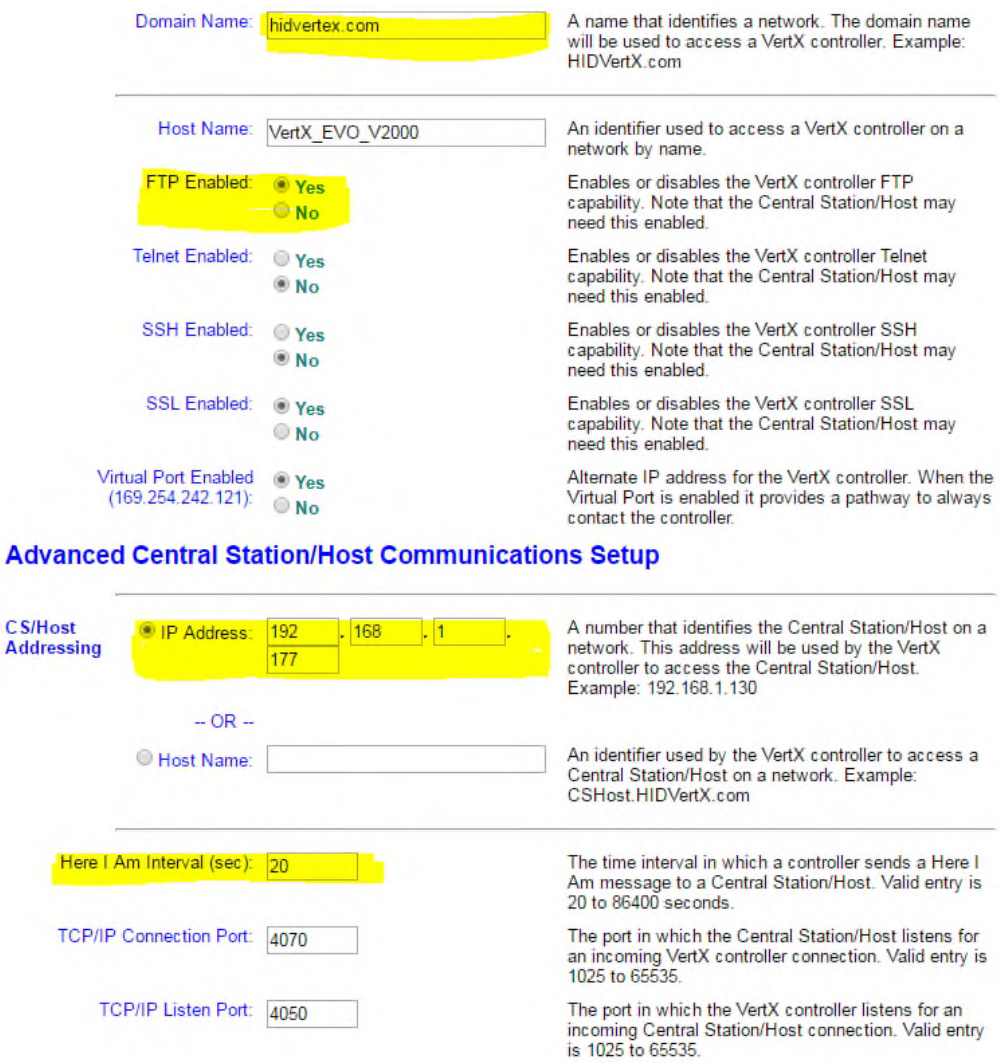

Copyright ⓒ 2016 Hanwha Techwin. All rights reserved.

WISENET

Safeguard your Life

Hanwha Techwin Co.,Ltd.

6, Pangyo-ro 319beon-gil, bundang-gu,

Seongnam-si, Gyeonggi-do, 13488, Korea

TEL 8270.7147.7679 FAX 8231.8018.3711

www.hanwhatechwin.com

Copyright ⓒ 2016 Hanwha Techwin. All rights reserved.