


SAMSUNG TECHWIN

NÄTVERKSKAMERA

Bruksanvisning

SNP-3430H

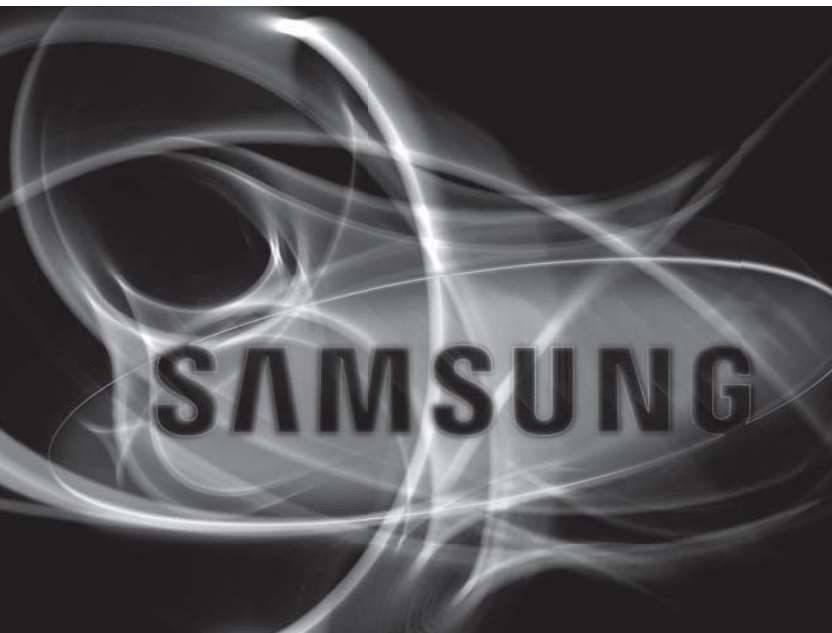

Nätverkskamera

Bruksanvisning

Copyright

© 2011 Samsung Techwin Co., Ltd. Tous droits réservés.

Marque commerciale

 **SAMSUNG TECHWIN** est le logo déposé de Samsung Techwin Co., Ltd.

Le nom du produit est la marque commerciale déposée de Samsung Techwin Co., Ltd.

Les autres marques commerciales mentionnées dans ce manuel sont des marques déposées de leurs propriétaires respectifs.

Restriction

Les droits de copyright de ce document sont la propriété exclusive de Samsung Techwin Co., Ltd. Ce document ne saurait en aucun cas être reproduit, distribué ou modifié, tout ou en partie, sans le consentement formel de Samsung Techwin.

Clause de non responsabilité

Samsung Techwin fait de son mieux pour vérifier l'intégrité et l'exactitude des contenus de ce document, mais aucune garantie formelle ne sera fournie à cet effet. L'utilisation de ce document et les résultats subséquents seront entièrement de la responsabilité de l'utilisateur. Samsung Techwin se réserve le droit de modifier les contenus de ce document sans avis préalable.

Garantie

Om produkten inte fungerar normalt under normala förhållanden vill vi att du informerar oss om det.

Samsung Techwin löser problemet utan avgift. Garantitiden är 3 år. Följande utesluts dock från garantin.

- Om systemet betar sig onormalt på grund av att du kör ett program som inte passar systemanvändningen.
- Försämrad prestanda eller naturligt slitage över tid.

VIKTIGA SÄKERHETSANVISNINGAR

1. Läs de här instruktionerna.
2. Behåll de här instruktionerna.
3. Dölj alla varningar.
4. Följ alla instruktioner.
5. Använd inte apparaten nära vatten.
6. Rengör endast med torr trasa.
7. Blockera inga ventilationsöppningar, installera i enlighet med tillverkarens anvisningar.
8. Installera inte nära några värmekällor, såsom element, värmeaggregat, spisar eller motsvarande apparater (inklusive förstärkare) som producerar värme.
9. Bryt inte mot säkerhetsreglerna för den polariserade eller jordade kontakten. En polariserad kontakt har två blad som är bredare än de andra. En jordad kontakt har två blad och ett tredje jordningsstift. Det breda bladet eller det tredje stiftet finns för din säkerhet. Om den medföljande kontakten inte passar i uttaget ska du kontakta en elektriker för att byta det gamla uttaget.
10. Skydda strömsladden från att utsättas för tryck på grund av att du går på den, eller att den kläms, samt skydda bekväma receptorer och den punkt där de går ut ur apparaten.
11. Använd bara tillbehör/accessoarer som specificeras av tillverkaren.
12. Använd bara med kundvagn, stativ, konsol eller bord som specificeras av tillverkaren eller säljs med apparaten. När en kundvagn används ska du vara försiktig när du flyttar kundvagnen/apparaten för att undvika att skada den till följd av att den välter.
13. Koppla från den här apparaten under åskväder eller när den inte används under längre perioder.
14. Överlåt all service åt behörig personal Service krävs när apparaten har skadats på något sätt, exempelvis då en elsladd eller kontakt har skadats, vätska har spillts ut eller föremål har ramlat ned på apparaten, om apparaten har utsatts för regn eller fukt, inte fungerar normalt eller har fallit.



VARNING

FÖR ATT MINSKA RISKEN FÖR BRAND OCH ELEKTRISK KORTSLUTNING SKA DU INTE UTSÄTTA PRODUKTEN FÖR REGN ELLER FUKT. FÖR INTE IN NÅGRA METALLFÖREMÅL I VENTILATIONSGALLREN ELLER I ANDRA ÖPPNINGAR PÅ ENHETEN.

Apparaten får inte utsättas för droppar eller fukt och därför skall inte föremål som innehåller vatten, exempelvis vaser, placeras på apparaten.

OBSERVERA

	OBSERVERA RISK FÖR ELEKTRISKA STÖTAR ÖPPNA INTE	
OBSERVERA : MINSKA RISKEN FÖR ELEKTRISK KORTSLUTNING. TA INTE BORT SKYDDET (ELLER BAKSIDAN). DET FINNS INGA DELAR INUTI SOM DU KAN REPARERA. ÖVERLÄMNA ALLA REPARATIONER ÅT KVALIFICERAD PERSONAL.		

FÖRKLARING AV GRAFISKA SYMBOLER



Blixtsymbolen med pilsymbol, inom en likformig triangel, är avsedd att varna användaren för att det finns "farlig spänning" inom produktens infattning, som är tillräckligt stark för att utföra en risk för att personer ska utsättas för kortslutning.



Utropstecknet inom en likformad triangel är avsett att informera användaren om att det finns viktiga drifts- och underhållsanvisningar (service) i litteraturen som medföljer produkten.

OBSERVERA

De här serviceanvisningarna ska bara användas av kvalificerad servicepersonal. För att minska risken för elektrisk kortslutning ska du inte utföra någon annan service än den som finns i användaranvisningarna om du inte är behörig för det.

BNC-utgången på skärmen används för att övervaka installationsprocessen för nätverkskameran.

Om du håller BNC-kabeln ansluten finns en risk för att det kan inträffa blixtnedslag på grund av skada eller felfunktion på produkten.

Säkerhetsföreskrifter när det gäller driftstemperatur

1. Produkten fungerar inte i omgivande temperaturer på lägre än -50°C .
2. Avfrostning kanske inte fungerar under -50°C beroende på installationsplats.
3. Låt alltid produkten vara påslagen så att den invändiga temperaturen håller sig över -10°C .
4. Även när du värmer produkten upp till -20°C efter att den har hållit en temperatur som är lägre än -50°C , sänder inte produkten ut någon videosignal utan visar bara upp en blå skärm i 30 minuter före återställning av zoommodulen och under den här tiden fungerar inte produkten normalt.

Sedan försöker den initiera linsmodulen var 30:e minut tills temperaturen inuti produkten ökar till normal driftstemperatur.

översikt

Läs följande rekommenderade säkerhetsföreskrifter noggrant.

- Placera inte den här apparaten på en ojämn yta.
- Installera inte på en yta där den utsätts för direkt solljus, nära värmeaggregat eller på en mycket kall plats.
- Placera inte den här apparaten i närheten av ledande material.
- Försök inte utföra service på apparaten själv.
- Ställ inte ett glas vatten på produkten.
- Installera inte produkten nära några magnetiska källor.
- Blockera inte ventilationsöppningarna.
- Placera inte tunga föremål på strömsladden.

Bruksanvisningen är en vägledningsbok för hur du använder produkterna.

Användarsymbolerna i boken har följande betydelser

- Referens : när det gäller att erbjuda information för att fungera som en hjälp för produktanvändning
 - Obs : Om det finns någon risk för skador på produkter eller den mänskliga hälsan om anvisningarna inte följs.
- ※ Läs den här manualen av säkerhetsskäl innan du använder produkterna och förvara den på en säker plats.

INNEHÅLL

ÖVERSIKT

3

- 3 Viktiga Säkerhetsanvisningar
- 9 Produkttegenskaper
- 9 Rekommenderade
- Datorspecifikationer
- 10 Vad Ingar
- 11 Övergripande översikt

INSTALLATION & ANSLUTNING

15

- 15 Inställning för DIP-Växlare
- 24 Installation
- 29 Mata In/Mata ut SD-minneskort
- 30 Minneskortsinformation (medföljer ej)
- 31 Anslutning till en Annan Enhet

NÄTVERKSANSLUTNING OCH INSTALLATION

35

- 35 Ansluta Kameran Direkt till Lokalt Nätverk
- 36 Ansluta Kameran Direkt till ett DHCP-baserat DSL/Kabelmodem
- 37 Ansluta Kameran Direkt till ett PPPoE-modem
- 38 Ansluta Kameran till en Bredbandsrouter med PPPoE-/Kabelmodem
- 39 Knappar som Används i IP-installationen
- 40 Inställning av Fast IP
- 43 Dynamisk IP-inställning
- 44 Portintervallsinställning Framåt (Portmappning)
- 46 Ansluta till Kameran Från en Delad, Lokal Dator
- 46 Ansluta till Kameran Från en Fjärrdator via Internet

WEB VIEWER

47

- 47 Ansluta till Kameran
- 48 Inloggning
- 49 Installera Silverlight Runtime
- 51 Använda Live-skärmen
- 55 Uppspelning
- 56 Spela upp Säkerhetskopierade Inspelningar

INSTÄLLNINGSSKÄRMEN

57

- 57 Inställningar
- 57 Inställningar för Ljud och Video
- 71 Nätverksinställning
- 78 Händelsinställningar
- 83 Systeminställningar

BILAGA

88

- 88 Specifikationer
- 93 Produktöversikt
- 94 Felsökning
- 96 Open Source Announcement
- 98 GPL/LGPL Software License

PRODUKTEGENSKAPER

- **H.264/MPEG-4/MPEG-4 Multi-Streaming**

Den här nätverkskameran stöder H.264/MPEG-4/MPEG-4 codec och kan visa videor i olika upplösningar och kvantiteter samtidigt med olika codec.



- MPEG4-videor kan inte spelas upp på en webbsida. Används CMS-programvara om du vill spela upp videor på en webbsida.

- **Stöder olika kommunikationsprotokoll**

Stöder TCP/IP, UDP, RTP/RTSP och FTP-protokoll, samt olika Internet-protokoll, såsom ARP, HTTP, HTTPS och DHCP.

- **Webbläsarbaserad övervakning**

Använda Internet-webbläsaren för att visa bilden i en lokal nätverksmiljö.

- **Alarmfunktion**

Om det inträffar en händelse överförs den händelserelaterade videon till angiven FTP/ e-post av användaren eller så sparas den till SD-minnet, eller också skickas händelsen till den utgående alarmporten.

- **ONVIF-efterlevnad (spec 1.01)**

Den här produkten stöder ONVIF Core Spec. 1.01.
För mer information, se www.onvif.org.




Driving network video through global standardization

REKOMMENDERADE DATORSPECIFIKATIONER

- Processor : Intel(R) Core(TM)2 2.00 GHz eller högre
- Operativsystem : Windows XP, VISTA, 7, Mac OS
- Upplösning : 1280X1024 pixlar eller högre
- RAM : 1GB eller högre
- Webbläsare : Internet Explorer 6.0 eller högre
Firefox, Google Chrome, Safari
 - Varken en betatestversion som skiljer sig från versionen som är publicerad på företagswebbsidan eller en utvecklingsversion stöds.
 - På Firefox v3.5 eller högre kan visning av varningsmeddelandet orsaka ett fel.
 - Om du ansluter Ipv6 i Windows XP kan det orsaka problem.
Vi rekommenderar att du ansluter till Ipv6 i Windows 7.
- Videominne : 128MB eller högre


VAD INGAR

Kontrollera om kameran och tillbehören är inkluderade i produktförpackningen.

Utseende	Artikelnamn	Kvantitet	Beskrivning
	Bruksanvisning, Installations-S/W, CMS S/W DVD	1	
	Snabbguide	1	
	9-stiftsuttag	2	Används för alarmanslutning
	4-stiftsuttag	1	Används för RS-485-kommunikation.
	3-stiftsuttag	1	Används för strömanslutning
	Sexkantsnyckel	1	Används för att ta bort/montera skyddsskåpan


ÖVERGRIPANDE ÖVERSIKT

Utseende

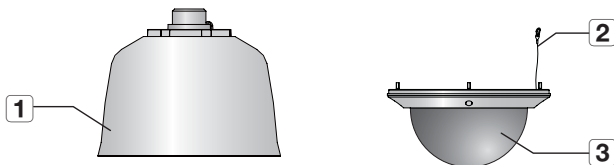

Post	Beskrivning
1 Solskydd och kåpa	Kåpa som skyddar den inbyggda PTZ-mekanismen från direkt soljus, regn och utvärdig påverkan.
2 Sakerhetskabel för kappan	Förhindrar att kåpan ramlar ned.
3 Skyddskåpa	Skyddskåpa för lins och enhetsskydd.


I förpackningen

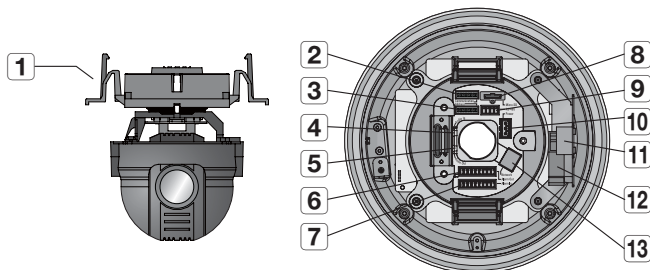

Post	Beskrivning
1 PTZ-mekanism	Kontrollera PTZ-funktionerna för kameran.
2 Komm. Setup-reglage	Ange överföringshastighet och protokoll.
3 ID-inställningsreglage	Specificera kamera-ID.
4 Ljudingångsport	Används för att ansluta ljudingångskabel.
5 Ljudutgångsport	Används för att ansluta ljudutgångskabel.
6 Utgående alarmport	Terminalsparport som används för att ansluta kabeln för utgående alarm.
7 Ingående alarmport	Terminalsparport som används för att ansluta kabeln för ingående alarm.
8 Micro SD-kortplats	Micro SD-kortplats.
9 Kommunikationsport	Används för RS-485-kommunikation.
10 Strömport	Anslut strömsladden här.
11 Värmare	Avfrosta kåpan i låg temperatur genom att öka den invändiga temperaturen i kåpan.
12 Fläkt	Avfrostar kåpan och avlägsnar fukt.
13 Nätverksanslutningar	Nätverkskabelport.

❖ Gränssnittskort för kamerans kabeldragning

Se bilden nedan för mer information om kamerans kabeldragning.

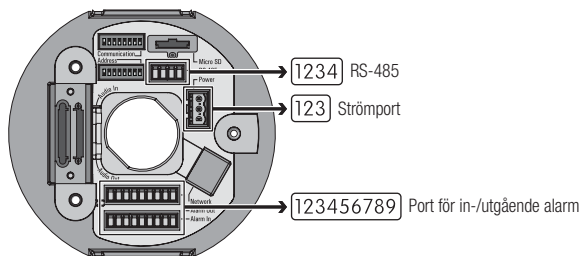

Ingående alarmsignal

Nr.	Namn	Användning
1	IN1	Alarmingångssensor port 1
2	IN2	Alarmingångssensor port 2
3	IN3	Alarmingångssensor port 3
4	IN4	Alarmingångssensor port 4
5	GND	JORD
6	IN5	Alarmingångssensor port 5
7	IN6	Alarmingångssensor port 6
8	IN7	Alarmingångssensor port 7
9	IN8	Alarmingångssensor port 8

Utgående alarmsignal

Nr.	Namn	Användning
1	OUT1	ALARM UT 1
2	OUT1	ALARM UT 1
3	OUT2	ALARM UT 2
4	OUT2	ALARM UT 2
5	DUMMY	Oaärvänd
6	OUT3	ALARM UT 3
7	OUT3	ALARM UT 3
8	OUT4	ALARM UT 4
9	OUT4	ALARM UT 4

RS-485-kommunikationssignal

Nr.	Namn	Användning
1	RS485+	Styringsdatalinje
2	RS485-	Styringsdatalinje
3	RS485+	Styringsdatalinje
4	RS485-	Styringsdatalinje

Strömport

Nr.	Namn	Användning
1	AC	AC 24V
2	F.G	Jordad linje
3	AC	AC 24V



- Strömadaptern (AC) har ingen polaritet.




- Den maximala förmågan för utgående alarmport är 30V DC/1A, 125V AC/0.5A.
- När du ansluter kameran till en extern produkt med för hög effekt använd då en separat reläenhet för att se till att allt fungerar som det ska.
- För att förhindra eventuellt inflöde av ljus under testövervakningen ska du utföra testet med FG-terminalen jordad.

INSTÄLLNING FÖR DIP-VÄXLARE

Ställa in protokoll och ID DIP-växlare


Du kan styra olika inställningar för kameran systemet med hjälp av kommunikations- och ID DIP-växlarna. Innan du installerar produkten ska du ställa in DIP-växlarna enligt installationsmiljön.

1. Ställ in växlarna enligt installationsmiljön. På nästa sida finns mer detaljerad installationsinformation.
2. Det kan uppstå tekniska fel på kameran om växlarna inte är helt på- /avslagna. Dubbelkolla växlarna innan du slutför installationen.

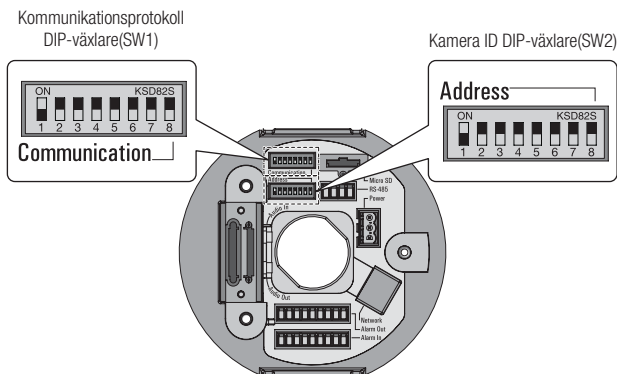

installation & anslutning

Inställningar för kommunikationsprotokoll DIP-växlare (SW1)

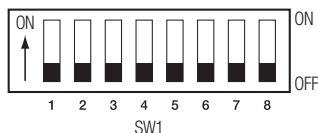

SW1 Pinnr.	Syfte
1~4	Protokollinställningar
5~7	Inställning av baudhastighet
8	Inställning av termination

• Protokollinställningar

Välj ett kommunikationsprotokoll för kameran

Nr.	Protokoll	SW1-#1	SW1-#2	SW1-#3	SW1-#4
1	AUTOIDENTIFIERING	OFF	OFF	OFF	OFF
2	SAMSUNG-T	ON	ON	ON	OFF
3	PELCO-D	ON	OFF	OFF	OFF
4	PELCO-P	OFF	ON	OFF	OFF
5	SAMSUNG-E	ON	ON	OFF	OFF
6	Panasonic	OFF	OFF	ON	OFF
7	GE	ON	OFF	ON	OFF
8	AD	OFF	ON	ON	OFF
9	VICON	OFF	OFF	OFF	ON
10	Honeywell (KD6)	ON	OFF	OFF	ON
11	BOSCH	OFF	ON	OFF	ON
12	Honeywell (VCLTP)	ON	ON	OFF	ON

• Inställning av baudhastighet

Välj överföringshastighet för ett valt kommunikationsprotokoll.

Nr.	Baudhastighet (BPS)	SW1-#5	SW1-#6	SW1-#7
1	2400	OFF	OFF	OFF
2	4800	ON	OFF	OFF
3	9600	OFF	ON	OFF
4	19200	ON	ON	OFF
5	38400	OFF	OFF	ON

• Inställning av termination

För att förhindra förtunning av kommunikationssignalerna mellan kameran och styrenheten måste posterna i slutet av linjen ställas in med terminationsinställningar.


Kameraingångsposition	SW1- #8
Termination av längsta vägen	ON
På vägen	OFF



- Standardvärdet är skuggat i varje inställningstabell.
- Använd inte en styrenhet från tredje part med den här produkten, kontakta vår efterförsäljningstjänst eller teknikavdelningen.

Inställningar för kamerans ID DIP-växlare (SW2)

Mer information om hur du ställer in kamerans ID finns på nästa sida, under "Tabell över kamera-ID".

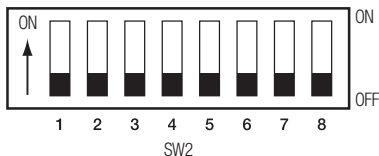

installation & anslutning

• Tabell över kamera-ID

ID	SW2-#1	SW2-#2	SW2-#3	SW2-#4	SW2-#5	SW2-#6	SW2-#7	SW2-#8
1	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF
2	OFF	ON	OFF	OFF	OFF	OFF	OFF	OFF
3	ON	ON	OFF	OFF	OFF	OFF	OFF	OFF
4	OFF	OFF	ON	OFF	OFF	OFF	OFF	OFF
5	ON	OFF	ON	OFF	OFF	OFF	OFF	OFF
6	OFF	ON	ON	OFF	OFF	OFF	OFF	OFF
7	ON	ON	ON	OFF	OFF	OFF	OFF	OFF
8	OFF	OFF	OFF	ON	OFF	OFF	OFF	OFF
9	ON	OFF	OFF	ON	OFF	OFF	OFF	OFF
10	OFF	ON	OFF	ON	OFF	OFF	OFF	OFF
11	ON	ON	OFF	ON	OFF	OFF	OFF	OFF
12	OFF	OFF	ON	ON	OFF	OFF	OFF	OFF
13	ON	OFF	ON	ON	OFF	OFF	OFF	OFF
14	OFF	ON	ON	ON	OFF	OFF	OFF	OFF
15	ON	ON	ON	ON	OFF	OFF	OFF	OFF
16	OFF	OFF	OFF	OFF	ON	OFF	OFF	OFF
17	ON	OFF	OFF	OFF	ON	OFF	OFF	OFF
18	OFF	ON	OFF	OFF	ON	OFF	OFF	OFF
19	ON	ON	OFF	OFF	ON	OFF	OFF	OFF
20	OFF	OFF	ON	OFF	ON	OFF	OFF	OFF
21	ON	OFF	ON	OFF	ON	OFF	OFF	OFF
22	OFF	ON	ON	OFF	ON	OFF	OFF	OFF
23	ON	ON	ON	OFF	ON	OFF	OFF	OFF
24	OFF	OFF	OFF	ON	ON	OFF	OFF	OFF
25	ON	OFF	OFF	ON	ON	OFF	OFF	OFF
26	OFF	ON	OFF	ON	ON	OFF	OFF	OFF
27	ON	ON	OFF	ON	ON	OFF	OFF	OFF
28	OFF	OFF	ON	ON	ON	OFF	OFF	OFF
29	ON	OFF	ON	ON	ON	OFF	OFF	OFF
30	OFF	ON	ON	ON	ON	OFF	OFF	OFF
31	ON	ON	ON	ON	ON	OFF	OFF	OFF
32	OFF	OFF	OFF	OFF	OFF	ON	OFF	OFF
33	ON	OFF	OFF	OFF	OFF	ON	OFF	OFF
34	OFF	ON	OFF	OFF	OFF	ON	OFF	OFF
35	ON	ON	OFF	OFF	OFF	ON	OFF	OFF
36	OFF	OFF	ON	OFF	OFF	ON	OFF	OFF
37	ON	OFF	ON	OFF	OFF	ON	OFF	OFF
38	OFF	ON	ON	OFF	OFF	ON	OFF	OFF
39	ON	ON	ON	OFF	OFF	ON	OFF	OFF
40	OFF	OFF	OFF	ON	OFF	ON	OFF	OFF
41	ON	OFF	OFF	ON	OFF	ON	OFF	OFF

ID	SW2-#1	SW2-#2	SW2-#3	SW2-#4	SW2-#5	SW2-#6	SW2-#7	SW2-#8
42	OFF	ON	OFF	ON	OFF	ON	OFF	OFF
43	ON	ON	OFF	ON	OFF	ON	OFF	OFF
44	OFF	OFF	ON	ON	OFF	ON	OFF	OFF
45	ON	OFF	ON	ON	OFF	ON	OFF	OFF
46	OFF	ON	ON	ON	OFF	ON	OFF	OFF
47	ON	ON	ON	ON	OFF	ON	OFF	OFF
48	OFF	OFF	OFF	OFF	ON	ON	OFF	OFF
49	ON	OFF	OFF	OFF	ON	ON	OFF	OFF
50	OFF	ON	OFF	OFF	ON	ON	OFF	OFF
51	ON	ON	OFF	OFF	ON	ON	OFF	OFF
52	OFF	OFF	ON	OFF	ON	ON	OFF	OFF
53	ON	OFF	ON	OFF	ON	ON	OFF	OFF
54	OFF	ON	ON	OFF	ON	ON	OFF	OFF
55	ON	ON	ON	OFF	ON	ON	OFF	OFF
56	OFF	OFF	OFF	ON	ON	ON	OFF	OFF
57	ON	OFF	OFF	ON	ON	ON	OFF	OFF
58	OFF	ON	OFF	ON	ON	ON	OFF	OFF
59	ON	ON	OFF	ON	ON	ON	OFF	OFF
60	OFF	OFF	ON	ON	ON	ON	OFF	OFF
61	ON	OFF	ON	ON	ON	ON	OFF	OFF
62	OFF	ON	ON	ON	ON	ON	OFF	OFF
63	ON	ON	ON	ON	ON	ON	OFF	OFF
64	OFF	OFF	OFF	OFF	OFF	OFF	ON	OFF
65	ON	OFF	OFF	OFF	OFF	OFF	ON	OFF
66	OFF	ON	OFF	OFF	OFF	OFF	ON	OFF
67	ON	ON	OFF	OFF	OFF	OFF	ON	OFF
68	OFF	OFF	ON	OFF	OFF	OFF	ON	OFF
69	ON	OFF	ON	OFF	OFF	OFF	ON	OFF
70	OFF	ON	ON	OFF	OFF	OFF	ON	OFF
71	ON	ON	ON	OFF	OFF	OFF	ON	OFF
72	OFF	OFF	OFF	ON	OFF	OFF	ON	OFF
73	ON	OFF	OFF	ON	OFF	OFF	ON	OFF
74	OFF	ON	OFF	ON	OFF	OFF	ON	OFF
75	ON	ON	OFF	ON	OFF	OFF	ON	OFF
76	OFF	OFF	ON	ON	OFF	OFF	ON	OFF
77	ON	OFF	ON	ON	OFF	OFF	ON	OFF
78	OFF	ON	ON	ON	OFF	OFF	ON	OFF
79	ON	ON	ON	ON	OFF	OFF	ON	OFF
80	OFF	OFF	OFF	OFF	ON	OFF	ON	OFF
81	ON	OFF	OFF	OFF	ON	OFF	ON	OFF
82	OFF	ON	OFF	OFF	ON	OFF	ON	OFF
83	ON	ON	OFF	OFF	ON	OFF	ON	OFF
84	OFF	OFF	ON	OFF	ON	OFF	ON	OFF

installation & anslutning

ID	SW2-#1	SW2-#2	SW2-#3	SW2-#4	SW2-#5	SW2-#6	SW2-#7	SW2-#8
85	ON	OFF	ON	OFF	ON	OFF	ON	OFF
86	OFF	ON	ON	OFF	ON	OFF	ON	OFF
87	ON	ON	ON	OFF	ON	OFF	ON	OFF
88	OFF	OFF	OFF	ON	ON	OFF	ON	OFF
89	ON	OFF	OFF	ON	ON	OFF	ON	OFF
90	OFF	ON	OFF	ON	ON	OFF	ON	OFF
91	ON	ON	OFF	ON	ON	OFF	ON	OFF
92	OFF	OFF	ON	ON	ON	OFF	ON	OFF
93	ON	OFF	ON	ON	ON	OFF	ON	OFF
94	OFF	ON	ON	ON	ON	OFF	ON	OFF
95	ON	ON	ON	ON	ON	OFF	ON	OFF
96	OFF	OFF	OFF	OFF	OFF	ON	ON	OFF
97	ON	OFF	OFF	OFF	OFF	ON	ON	OFF
98	OFF	ON	OFF	OFF	OFF	ON	ON	OFF
99	ON	ON	OFF	OFF	OFF	ON	ON	OFF
100	OFF	OFF	ON	OFF	OFF	ON	ON	OFF
101	ON	OFF	ON	OFF	OFF	ON	ON	OFF
102	OFF	ON	ON	OFF	OFF	ON	ON	OFF
103	ON	ON	ON	OFF	OFF	ON	ON	OFF
104	OFF	OFF	OFF	ON	OFF	ON	ON	OFF
105	ON	OFF	OFF	ON	OFF	ON	ON	OFF
106	OFF	ON	OFF	ON	OFF	ON	ON	OFF
107	ON	ON	OFF	ON	OFF	ON	ON	OFF
108	OFF	OFF	ON	ON	OFF	ON	ON	OFF
109	ON	OFF	ON	ON	OFF	ON	ON	OFF
110	OFF	ON	ON	ON	OFF	ON	ON	OFF
111	ON	ON	ON	ON	OFF	ON	ON	OFF
112	OFF	OFF	OFF	OFF	ON	ON	ON	OFF
113	ON	OFF	OFF	OFF	ON	ON	ON	OFF
114	OFF	ON	OFF	OFF	ON	ON	ON	OFF
115	ON	ON	OFF	OFF	ON	ON	ON	OFF
116	OFF	OFF	ON	OFF	ON	ON	ON	OFF
117	ON	OFF	ON	OFF	ON	ON	ON	OFF
118	OFF	ON	ON	OFF	ON	ON	ON	OFF
119	ON	ON	ON	OFF	ON	ON	ON	OFF
120	OFF	OFF	OFF	ON	ON	ON	ON	OFF
121	ON	OFF	OFF	ON	ON	ON	ON	OFF
122	OFF	ON	OFF	ON	ON	ON	ON	OFF
123	ON	ON	OFF	ON	ON	ON	ON	OFF
124	OFF	OFF	ON	ON	ON	ON	ON	OFF
125	ON	OFF	ON	ON	ON	ON	ON	OFF
126	OFF	ON	ON	ON	ON	ON	ON	OFF
127	ON	ON	ON	ON	ON	ON	ON	OFF

ID	SW2-#1	SW2-#2	SW2-#3	SW2-#4	SW2-#5	SW2-#6	SW2-#7	SW2-#8
128	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON
129	ON	OFF	OFF	OFF	OFF	OFF	OFF	ON
130	OFF	ON	OFF	OFF	OFF	OFF	OFF	ON
131	ON	ON	OFF	OFF	OFF	OFF	OFF	ON
132	OFF	OFF	ON	OFF	OFF	OFF	OFF	ON
133	ON	OFF	ON	OFF	OFF	OFF	OFF	ON
134	OFF	ON	ON	OFF	OFF	OFF	OFF	ON
135	ON	ON	ON	OFF	OFF	OFF	OFF	ON
136	OFF	OFF	OFF	ON	OFF	OFF	OFF	ON
137	ON	OFF	OFF	ON	OFF	OFF	OFF	ON
138	OFF	ON	OFF	ON	OFF	OFF	OFF	ON
139	ON	ON	OFF	ON	OFF	OFF	OFF	ON
140	OFF	OFF	ON	ON	OFF	OFF	OFF	ON
141	ON	OFF	ON	ON	OFF	OFF	OFF	ON
142	OFF	ON	ON	ON	OFF	OFF	OFF	ON
143	ON	ON	ON	ON	OFF	OFF	OFF	ON
144	OFF	OFF	OFF	OFF	ON	OFF	OFF	ON
145	ON	OFF	OFF	OFF	ON	OFF	OFF	ON
146	OFF	ON	OFF	OFF	ON	OFF	OFF	ON
147	ON	ON	OFF	OFF	ON	OFF	OFF	ON
148	OFF	OFF	ON	OFF	ON	OFF	OFF	ON
149	ON	OFF	ON	OFF	ON	OFF	OFF	ON
150	OFF	ON	ON	OFF	ON	OFF	OFF	ON
151	ON	ON	ON	OFF	ON	OFF	OFF	ON
152	OFF	OFF	OFF	ON	ON	OFF	OFF	ON
153	ON	OFF	OFF	ON	ON	OFF	OFF	ON
154	OFF	ON	OFF	ON	ON	OFF	OFF	ON
155	ON	ON	OFF	ON	ON	OFF	OFF	ON
156	OFF	OFF	ON	ON	ON	OFF	OFF	ON
157	ON	OFF	ON	ON	ON	OFF	OFF	ON
158	OFF	ON	ON	ON	ON	OFF	OFF	ON
159	ON	ON	ON	ON	ON	OFF	OFF	ON
160	OFF	OFF	OFF	OFF	OFF	ON	OFF	ON
161	ON	OFF	OFF	OFF	OFF	ON	OFF	ON
162	OFF	ON	OFF	OFF	OFF	ON	OFF	ON
163	ON	ON	OFF	OFF	OFF	ON	OFF	ON
164	OFF	OFF	ON	OFF	OFF	ON	OFF	ON
165	ON	OFF	ON	OFF	OFF	ON	OFF	ON
166	OFF	ON	ON	OFF	OFF	ON	OFF	ON
167	ON	ON	ON	OFF	OFF	ON	OFF	ON
168	OFF	OFF	OFF	ON	OFF	ON	OFF	ON
169	ON	OFF	OFF	ON	OFF	ON	OFF	ON
170	OFF	ON	OFF	ON	OFF	ON	OFF	ON

installation & anslutning


ID	SW2-#1	SW2-#2	SW2-#3	SW2-#4	SW2-#5	SW2-#6	SW2-#7	SW2-#8
171	ON	ON	OFF	ON	OFF	ON	OFF	ON
172	OFF	OFF	ON	ON	OFF	ON	OFF	ON
173	ON	OFF	ON	ON	OFF	ON	OFF	ON
174	OFF	ON	ON	ON	OFF	ON	OFF	ON
175	ON	ON	ON	ON	OFF	ON	OFF	ON
176	OFF	OFF	OFF	OFF	ON	ON	OFF	ON
177	ON	OFF	OFF	OFF	ON	ON	OFF	ON
178	OFF	ON	OFF	OFF	ON	ON	OFF	ON
179	ON	ON	OFF	OFF	ON	ON	OFF	ON
180	OFF	OFF	ON	OFF	ON	ON	OFF	ON
181	ON	OFF	ON	OFF	ON	ON	OFF	ON
182	OFF	ON	ON	OFF	ON	ON	OFF	ON
183	ON	ON	ON	OFF	ON	ON	OFF	ON
184	OFF	OFF	OFF	ON	ON	ON	OFF	ON
185	ON	OFF	OFF	ON	ON	ON	OFF	ON
186	OFF	ON	OFF	ON	ON	ON	OFF	ON
187	ON	ON	OFF	ON	ON	ON	OFF	ON
188	OFF	OFF	ON	ON	ON	ON	OFF	ON
189	ON	OFF	ON	ON	ON	ON	OFF	ON
190	OFF	ON	ON	ON	ON	ON	OFF	ON
191	ON	ON	ON	ON	ON	ON	OFF	ON
192	OFF	OFF	OFF	OFF	OFF	OFF	ON	ON
193	ON	OFF	OFF	OFF	OFF	OFF	ON	ON
194	OFF	ON	OFF	OFF	OFF	OFF	ON	ON
195	ON	ON	OFF	OFF	OFF	OFF	ON	ON
196	OFF	OFF	ON	OFF	OFF	OFF	ON	ON
197	ON	OFF	ON	OFF	OFF	OFF	ON	ON
198	OFF	ON	ON	OFF	OFF	OFF	ON	ON
199	ON	ON	ON	OFF	OFF	OFF	ON	ON
200	OFF	OFF	OFF	ON	OFF	OFF	ON	ON
201	ON	OFF	OFF	ON	OFF	OFF	ON	ON
202	OFF	ON	OFF	ON	OFF	OFF	ON	ON
203	ON	ON	OFF	ON	OFF	OFF	ON	ON
204	OFF	OFF	ON	ON	OFF	OFF	ON	ON
205	ON	OFF	ON	ON	OFF	OFF	ON	ON
206	OFF	ON	ON	ON	OFF	OFF	ON	ON
207	ON	ON	ON	ON	OFF	OFF	ON	ON
208	OFF	OFF	OFF	OFF	ON	OFF	ON	ON
209	ON	OFF	OFF	OFF	ON	OFF	ON	ON
210	OFF	ON	OFF	OFF	ON	OFF	ON	ON
211	ON	ON	OFF	OFF	ON	OFF	ON	ON
212	OFF	OFF	ON	OFF	ON	OFF	ON	ON
213	ON	OFF	ON	OFF	ON	OFF	ON	ON

ID	SW2-#1	SW2-#2	SW2-#3	SW2-#4	SW2-#5	SW2-#6	SW2-#7	SW2-#8
214	OFF	ON	ON	OFF	ON	OFF	ON	ON
215	ON	ON	ON	OFF	ON	OFF	ON	ON
216	OFF	OFF	OFF	ON	ON	OFF	ON	ON
217	ON	OFF	OFF	ON	ON	OFF	ON	ON
218	OFF	ON	OFF	ON	ON	OFF	ON	ON
219	ON	ON	OFF	ON	ON	OFF	ON	ON
220	OFF	OFF	ON	ON	ON	OFF	ON	ON
221	ON	OFF	ON	ON	ON	OFF	ON	ON
222	OFF	ON	ON	ON	ON	OFF	ON	ON
223	ON	ON	ON	ON	ON	OFF	ON	ON
224	OFF	OFF	OFF	OFF	OFF	ON	ON	ON
225	ON	OFF	OFF	OFF	OFF	ON	ON	ON
226	OFF	ON	OFF	OFF	OFF	ON	ON	ON
227	ON	ON	OFF	OFF	OFF	ON	ON	ON
228	OFF	OFF	ON	OFF	OFF	ON	ON	ON
229	ON	OFF	ON	OFF	OFF	ON	ON	ON
230	OFF	ON	ON	OFF	OFF	ON	ON	ON
231	ON	ON	ON	OFF	OFF	ON	ON	ON
232	OFF	OFF	OFF	ON	OFF	ON	ON	ON
233	ON	OFF	OFF	ON	OFF	ON	ON	ON
234	OFF	ON	OFF	ON	OFF	ON	ON	ON
235	ON	ON	OFF	ON	OFF	ON	ON	ON
236	OFF	OFF	ON	ON	OFF	ON	ON	ON
237	ON	OFF	ON	ON	OFF	ON	ON	ON
238	OFF	ON	ON	ON	OFF	ON	ON	ON
239	ON	ON	ON	ON	OFF	ON	ON	ON
240	OFF	OFF	OFF	OFF	ON	ON	ON	ON
241	ON	OFF	OFF	OFF	ON	ON	ON	ON
242	OFF	ON	OFF	OFF	ON	ON	ON	ON
243	ON	ON	OFF	OFF	ON	ON	ON	ON
244	OFF	OFF	ON	OFF	ON	ON	ON	ON
245	ON	OFF	ON	OFF	ON	ON	ON	ON
246	OFF	ON	ON	OFF	ON	ON	ON	ON
247	ON	ON	ON	OFF	ON	ON	ON	ON
248	OFF	OFF	OFF	ON	ON	ON	ON	ON
249	ON	OFF	OFF	ON	ON	ON	ON	ON
250	OFF	ON	OFF	ON	ON	ON	ON	ON
251	ON	ON	OFF	ON	ON	ON	ON	ON
252	OFF	OFF	ON	ON	ON	ON	ON	ON
253	ON	OFF	ON	ON	ON	ON	ON	ON
254	OFF	ON	ON	ON	ON	ON	ON	ON
255	ON	ON	ON	ON	ON	ON	ON	ON


installation & anslutning

INSTALLATION


1. Innan du kan ansluta kablarna håller du ned både handtag A och B på PTZ-mekanismen för att avlägsna det.

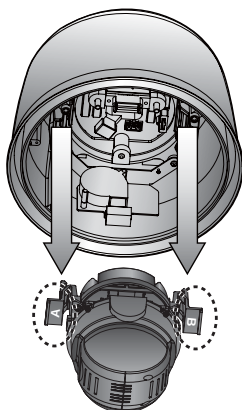

2. Vira in kablarna på kåpans ovansida i vattenresistent tejp. Vira minst 7 varv innan du monterar övre kåpan på konsolen. För att fixera övre kåpan vrids du handtaget på den dubbla muttern medurs så långt det går.

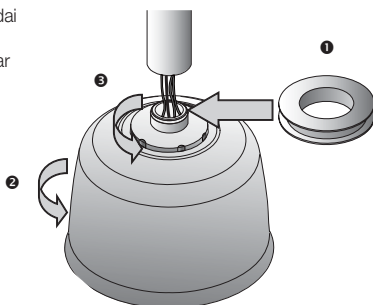


3. Se till att kåpan är ordentligt ansluten till säkerhetskabeln.

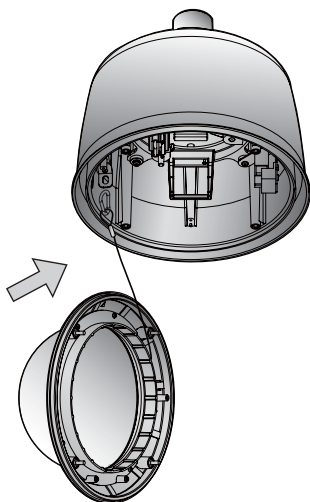


4. Anslut var och en av följande kablar till tillämplig port.

- ❶ Ljud in/ut
- ❷ Terminalspar
- ❸ Nätverk
- ❹ Ström
- ❺ Micro SD-kort
- ❻ RS-485

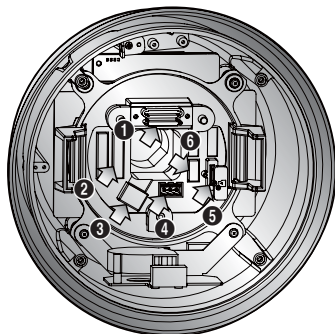


installation & anslutning


5. Kontrollera riktningen på entryckskontakten på övre kåpan innan du pasar in PTZ-mekanismen i krokarna på övre kåpan och trycker nedåt.

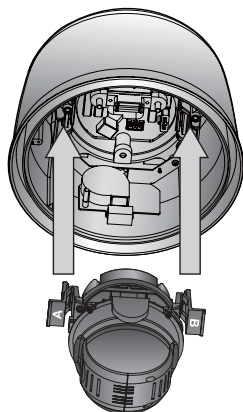

6. För att säkra PTZ-mekanismen mot övre kåpan håller du ned de båda svarta handtagen tills du hör ett klickljud.

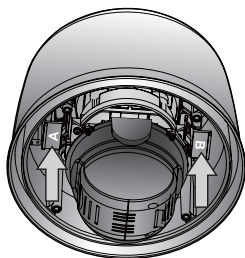


7. Stäng den kupolfärgade kåpan. Se till att du stänger kåpan i pilens riktning.

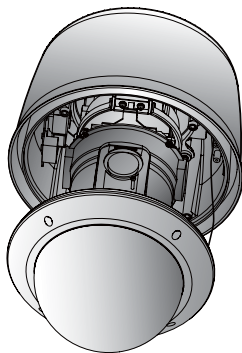

8. Dra åt skruvarna (x4) i numerisk ordning så som visas på bilden.



- För att bibehålla optimal försegling drar du åt skruven i ett åtdragningsmoment på 0,5 N·m – 1,0 N·m.

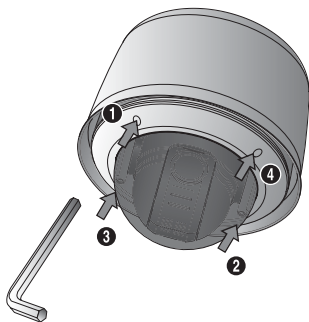

installation & anslutning

Tillbehör för installation

För enklare installation kan du köpa lämpliga tillbehör som finns tillgängliga.


1. ADAPTER FÖR VÄGGMONTERING (SCX-300WM)

Den här adaptern används när du installerar den hängande kameran på en vägg.




2. ADAPTER FÖR TAKMONTERING (SCX-300CM)

Den här adaptern används när du installerar kameran i taket.




3. ADAPTER FÖR PÅLMONTERING (SCX-300PM)

Det här är en adapter för VÄGGMONTERING (SCX-300WM) för påinstallation vars diameter är större än 80 mm.

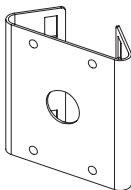

4. ADAPTER FÖR HÖRNMONTERING (SCX-300KM)


Det här är en adapter för VÄGGMONTERING (SCX-300WM) för installation i ett hörn.

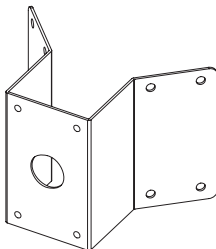

MATA IN/MATA UT SD-MINNESKORT

Mata in ett SD-minneskort

Så som visas på bilden ska du skruva loss skruven innan du avlägsnar SD-minneskortet. För in SD-kortet i pilens riktning.

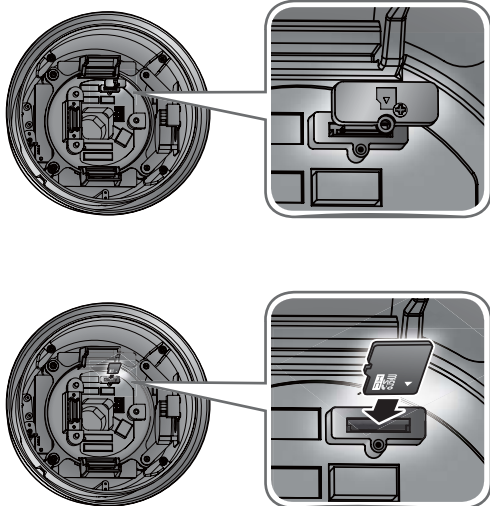


- För inte in SD-minneskortet upp och ned med tvång. Annars kan du skada SD-minneskortet.

installation & anslutning

Mata ut ett SD-minneskort

Tryck försiktigt nedåt på minneskortet så som visas i diagrammet för att mata ut det ur kortplatsen.

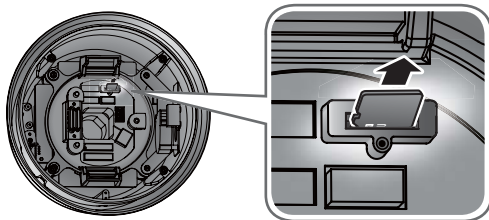

- Om du trycker för hårt på SD-minneskortet kan det göra att kortet kommer ut okontrollerat ur kortplatsen när det matas ut.
- För att ta bort SD-minneskortet ställer du in **<Inspelning>** till **<Av>** från **<SD-inspelning>** och tryck på **[Tillämpa ()]**. (sidan 79)
- Om du har sparat data på SD-minneskortet kommer det att förstöra data som lagrats på det om du tar bort SD-minneskortet.

MINNESKORTSINFORMATION (MEDFÖLJER EJ)

Vad är ett minneskort?

Minneskortet är ett externt datalagringsmedia som har utvecklats för att erbjuda ett helt nytt sätt att spela in och dela video, ljud och textinformation vid användning av digitala enheter.

Välja ett minneskort som är lämpligt för dig

Du kan använda Micro SD-/SDHC-minneskort i den här kameran.

Du kan dock uppleva kompatibilitetsproblem beroende på modell och fabrikat av minneskortet.


För din kamera rekommenderar vi att du använder ett minneskort från följande tillverkare: Tillverkare av Micro SD-/SDHC-minneskort: Sandisk, Transcend, Kingston

Din kamera stöder 2GB till 32GB minneskortskapacitet.

Uppspelningsprestandan kan påverkas beroende på hastigheten på minneskortet, så du bör använda ett höghastighetskort.

För att säkerställa lämplig inspelning av videodata rekommenderar vi att du använder ett minneskort som stöder en läs-/skrivhastighet på minst 10 Mbps och klass 6.

ANSLUTNING TILL EN ANNAN ENHET

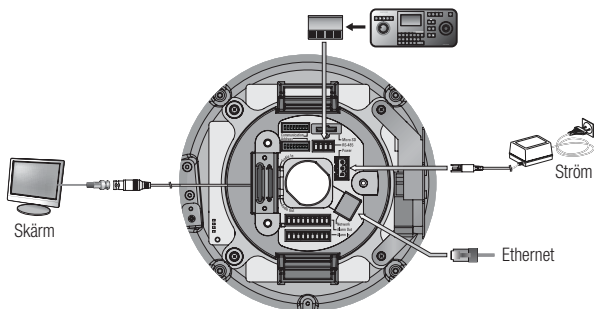

Strömkälla

Kontrollera märkspänning och ström innan du kopplar in några anslutningar.

Märkström	Tillåten ingångsspänning	Strömförbrukning
AC 24V	AC 19V ~ 29V	2,5 A




- Om du använder PoE+ kommer värmaren inte att fungera alls. Använd en adapter om installationsstället kräver värmefunktioner. Adapter säljs separat.
- Se till att skärm och kamera är avstängda när du kopplar in dem.

installation & anslutning

RS-485-kommunikationer

För att kontrollera PTZ-funktionen ansluter du den här linjen till DVR-enheten.

För att kontrollera flera kameror samtidigt måste RS-485-kommunikationerna konfigureras parallellt enligt följande:

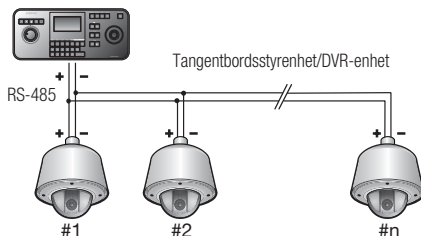


Videoanslutning

Utför videoanslutningen med BNC-koaxialkabeln.



- BNC-utgången på skärmen används för att övervaka installationsprocessen för nätverkskameran. Om du håller BNC-kabeln ansluten finns en risk för att det kan inträffa blixtnedslag på grund av skada eller felfunktion på produkten.

Ansluta till ingående/utgående ljud

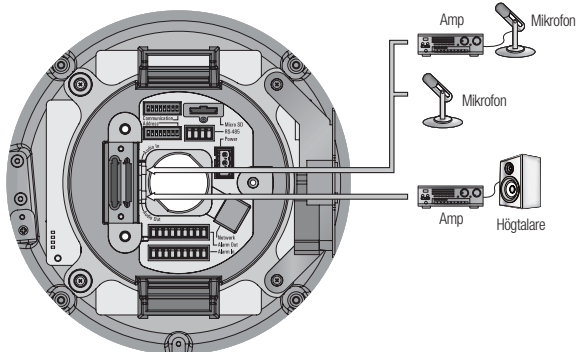


1. Anslut porten AUDIO IN på kameran med mikrofonen direkt till porten LINE OUT på förstärkaren som mikrofonen är ansluten till.
2. Anslut porten AUDIO OUT på kameran till porten LINE IN på högtalaren.
3. Kontrollera specifikationerna för ljudingång.

- **Audio Codec**
G.711 PCM. μ -law 64kbps 8kHz sampling
- **Full duplex Audio**
- **Audio in**
Används för mono-signallinjeingång (max.2.4 Vpp)
- **Audio out**
Används för mono-signallinjeutgång (max.2.4 Vpp)
- **Impedans för linje ut**
600 Ω

installation & anslutning

Kablagediagram för alarmingång

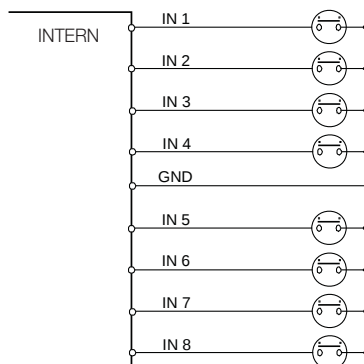


Sensoringång

Anslutning av GND till ingångssignalsstiftet indikerar att alarmet aktiveras.



- Om du vill aktivera alarmingång måste du välja en sensortyp i inställningsmenyn.
- Du har två val när det gäller sensortyp: Normalt öppen och normalt stängd. Ett felaktigt val av sensortyp kan orsaka att alarmet arbetar i motsatt riktning.

ALARM UT

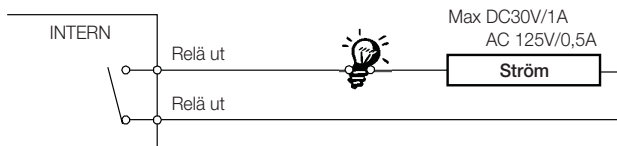

- Det finns 4 tillgängliga alarmutgångar, där var och en har reläkontakttyp. Du behöver alltså inte vara uppmärksam på korskanalpolar, AC/DC eller isolering. Däremot ska du se till att du redan har kontrollerat strömförbrukningen på reläkontakten.


nätverksanslutning och installation

Du kan göra nätverksinställningar enligt dina nätverkskonfigurationer.

ANSLUTA KAMERAN DIREKT TILL LOKALT NÄTVERK

Ansluta till kameran från en lokal dator i nätverket

1. Starta Internet-klienten på den lokala datorn.
2. Ange IP-adressen för kameran i adressfältet för webbläsaren.

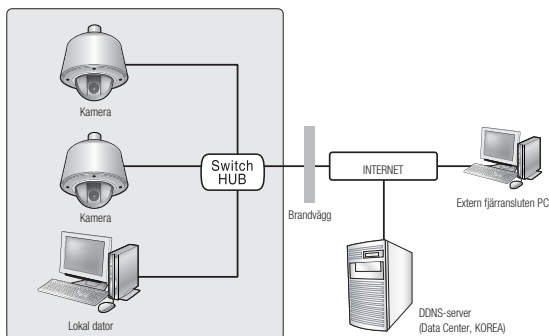


<Lokalt nätverk>



- En fjärrdator på externt Internet utanför LAN-nätverket kan inte ansluta till kameran som är installerad i Intranätet om portvidarebefordran inte har ställts in eller om en brandvägg är inställd. I så fall ska du kontakta nätverksadministratören för att lösa problemet.
- IP-adressen är inställd på 192.168.1.100 vid leveransen. Om du vill ändra IP-adressen ska du använda IP-installationsprogrammet. För mer information om användning av IP-installationsprogrammet, se "Inställning av fast IP". (sidan 40)

nätverksanslutning och installation

ANSLUTA KAMERAN DIREKT TILL ETT DHCP-BASERAT DSL/KABELMODEM

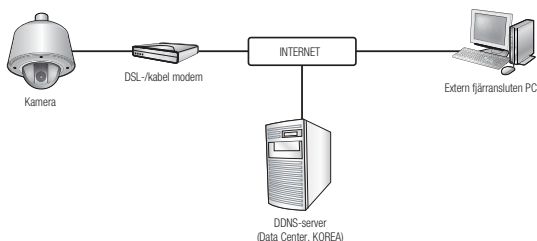


1. Använd LAN-kabeln för att ansluta nätverkskabeln direkt till din dator.
2. Kör IP-installationsprogrammet och ändra IP-adress för kameran så att du kan använda webbläsaren på skrivbordet för att ansluta till Internet.
3. Använd Internet-klienten för att ansluta till kameran.
4. Gå till sidan [Inst.]
5. Gå till [Nätverk] – [DDNS] och konfigurera DDNS-inställningarna.
6. Gå till [Nätverk] – [Gränssnitt] och ställ in nätverkstyp till [DHCP].
7. Anslut kameran, som togs bort från datorn, direkt till modem.
8. Starta om kameran.



- För registrering av DDNS-inställningarna, se "**Registrering med DDNS**". (sidan 74)
- För konfiguration av DDNS-inställningarna, se "**DDNS**". (sidan 73)
- För inställning av nätverkstyp, se "**Gränssnitt**". (sidan 71)

ANSLUTA KAMERAN DIREKT TILL ETT PPPoE-MODEM

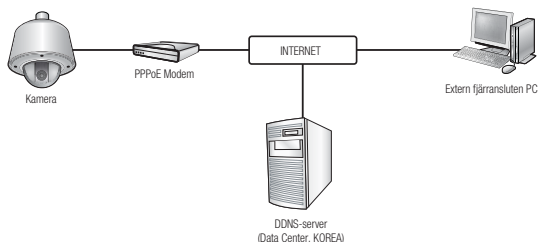

1. Använd LAN-kabeln för att ansluta nätverkskabeln direkt till din dator.
2. Kör IP-installationsprogrammet och ändra IP-adress för kameran så att du kan använda webbläsaren på skrivbordet för att ansluta till Internet.
3. Använd Internet-klienten för att ansluta till kameran.
4. Gå till sidan [Inst.]
5. Gå till [Nätverk] – [DDNS] och konfigurera DDNS-inställningarna.
6. Gå till [Nätverk] – [Gränssnitt] och ställ in nätverkstyp till [PPPoE].
7. Anslut kameran, som togs bort från datorn, direkt till modemmet.
8. Starta om kameran.




- För registrering av DDNS-inställningarna, se "**Registrering med DDNS**". (sidan 74)
- För konfigurering av DDNS-inställningarna, se "**DDNS**". (sidan 73)
- För inställning av nätverkstyp, se "**Gränssnitt**". (sidan 71)

nätverksanslutning och installation

ANSLUTA KAMERAN TILL EN BREDBANDSROUTER MED PPPoE-/KABELMODEM

Det här är för små nätverksmiljöer, såsom hem, SOHO och vanliga butiker.

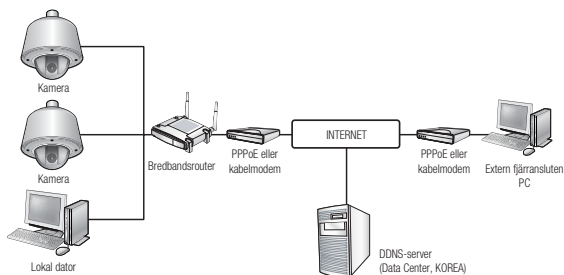

Konfigurera nätverksinställningar för den lokala datorn som är ansluten till en Bredbandsrouter


Konfigurera nätverksinställningar för den lokala datorn som är ansluten till en Bredbandsrouter enligt anvisningarna nedan.

- Välj : <Närliggande nätverk> → <Egenskaper> → <Lokalt nätverk> → <Egenskaper> → <Allmänt> → <Internet Protocol (TCP/IP)> → <Egenskaper> → <Erhåll en IP-adress automatiskt> eller <Använd följande IP-adress>.
- Följ anvisningarna nedan om du väljer <Använd följande IP-adress>:
 - ex1) Om adressen (LAN IP) för Bredbandsroutern är 192.168.1.1
IP-adress : 192.168.1.100
Nätmask : 255.255.255.0
Standard-Gateway : 192.168.1.1
 - ex2) Om adressen (LAN IP) för Bredbandsroutern är 192.168.0.1
IP-adress : 192.168.0.100
Nätmask : 255.255.255.0
Standard-Gatewa : 192.168.0.1
 - ex3) Om adressen (LAN IP) för Bredbandsroutern är 192.168.xxx.1
IP-adress : 192.168.xxx.100
Nätmask : 255.255.255.0
Standard-Gateway : 192.168.xxx.1



- Se produktdokumentationen för Bredbandsrouterns adress.
- Se avsnittet "Portintervallsinstallning frammat (portmapping)" i dokumentationen för Bredbandsroutern. (sidan 44)

KNAPPAR SOM ANVÄNDS I IP-INSTALLATIONEN

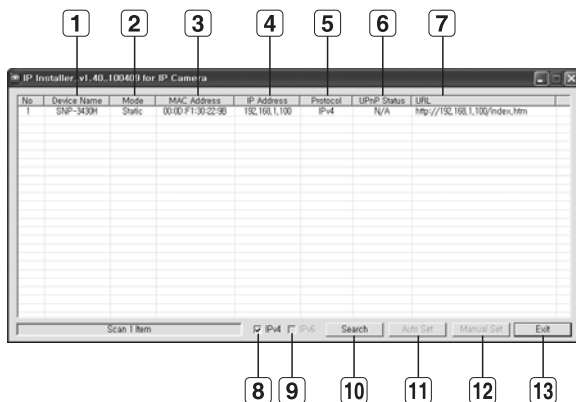

Post	Beskrivning
1 Device Name	Modellnamn för ansluten kamera. Klicka i kolumnen för att sortera listan enligt modellnamn. Sökningen stoppas dock om du klickar under sökningen.
2 Mode	Visar antingen <Static> eller <Dynamic> för aktuell nätverksanslutningsstatus.
3 MAC(Ethernet) Address	Ethernet-adress för ansluten kamera. Klicka i kolumnen för att sortera listan enligt Ethernet-adress. Sökningen stoppas dock om du klickar under sökningen.
4 IP Address	IP-adress. Klicka i kolumnen för att sortera listan enligt IP-adress. Sökningen stoppas dock om du klickar under sökningen. Fabriksstandard är " 192.168.1.100 "
5 Protocol	Nätverksinställning för kamera. Fabriksstandard är "IPv4". Kameror med IPv6-inställning visas som "IPv6".
6 UPnP Status	Den här funktionen är inte implementerad just nu.

nätverksanslutning och installation

Post	Beskrivning
7 URL	DDNS URL-adressen möjliggör åtkomst från externt Internet. Detta ersätts dock av <IP Address> för kameran om DDNS-registreringen misslyckas.
8 IPv4	Söker kameror med IPv4-inställning.
9 IPv6	Söker kameror med IPv6-inställning.
10 Search	Söker kameror som är anslutna till nätverket. Den här knappen blir dock gråmarkerad om varken IPv4 eller IPv6 är markerat.
11 Auto Set	IP-installationsprogrammet konfigurerar nätverksinställningarna automatiskt.
12 Manual Set	Du ska konfigurera nätverksinställningarna manuellt.
13 Exit	Stänger IP-installationsprogrammet



- För IP-installeraren, använd endast installationsversionen som medföljer installations-DVD:n eller den senaste versionen om den finns tillgänglig. Du kan ladda ner den senaste versionen från webbsidan för produkten.

INSTÄLLNING AV FAST IP

Manuell nätverksinställning

Kör <IP Installer.exe> för att visa kamerasöklistan.

Vid den första starten blir både [Auto Set] och [Manual Set] gråmarkerade.



- För kameror med IPv6-inställning blir de här knapparna gråmarkerade, eftersom kamerorna inte stöder den här funktionen.

1. Sök en kamera i listan.

Sök MAC-adressen (Ethernet) som finns på baksidan på kameran. Båda knapparna [Auto Set] och [Manual Set] aktiveras.

2. Klicka på [Manual Set].

Dialogrutan för Manual Setting visas. Standardvärdena för <IP Address>, <Subnet Mask>, <Gateway>, <HTTP Port> och <VNP Port> för kameran visas.



3. I rutan <Address> anger du nödvändig information.

- MAC (Ethernet) Address : MAC-adressen (Ethernet) för den tillämpliga kameran ställs in automatiskt så att du inte behöver mata in den manuellt.



- Du kan konfigurera statiska IP-inställningar endast om DHCP-kryssrutan är avmarkerad.

Vid användning av en Bredbandsrouter

- IP Address : Ange en adress som ligger inom IP-intervallet som erbjuds av Bredbandsroutern.
ex) 192.168.1.2~254,
192.168.0.2~254,
192.168.XXX.2~254
- Subnet Mask : <Subnet Mask> för Bredbandsroutern blir kamerans <Subnet Mask>.
- Gateway : <Local IP Address> för Bredbandsroutern blir <Gateway> för kameran.



- Inställningarna kan variera beroende på ansluten Bredbandsroutermodell. För vidare information, se användarhandboken för tillämplig router.
- Se avsnittet "**Portintervallsinställning framåt (portmapping)**" i dokumentationen för Bredbandsroutern. (sidan 44)

Utan användning av en Bredbandsrouter :

För inställning av <IP Address>, <Subnet Mask> och <Gateway>, kontakta nätverksadministratören.

4. I rutan <Port> anger du nödvändig information.

- HTTP Port : Används för att komma åt kameran med Internetklienten, med standard på 80. Använd den här knappen för att ändra HTTP-portvärde.
- VNP Port : Används för att kontrollera videosignalöverföringen, med 4520 som standard.

nätverksanslutning och installation

5. Ange lösenord.

Det här är inloggningslösenordet för användaren "admin" som har åtkomst till kameran. Standardlösenordet är "4321".

6. Klicka på [OK].

Den manuella nätverksinställningen slutförs.

7. När den manuella inställningen, inklusive IP slutförs startar kameran om.

Om Bredbandsroutern har mer än en kamera ansluten

Konfigurera IP-relaterade inställningar och portrelaterade inställningar separerat från varandra.

Kategori		Kamera #1	Kamera #2
IP-relaterade inställningar	IP Address	192.168.1.100	192.168.1.101
	Subnet Mask	255.255.255.0	255.255.255.0
	Gateway	192.168.1.1	192.168.1.1
Portrelaterade inställningar	HTTP Port	8080	8081
	VNP Port	4520	4521



- Om <HTTP Port> är inställd på något annat än 80, måste du ange <Port>-numret i adressfältet på Internet-klienten innan du kan komma åt kameran.

ex) http://IP-adress: HTTP-port
http://192.168.1.100:8080

Automatisk nätverksinställning

Kör <IP Installer.exe> för att visa kameran söklistan.

Vid den första starten blir både [Auto Set] och [Manual Set] gråmarkerade.



- För kameror med IPv6-inställning blir de här knapparna gråmarkerade, eftersom kamerorna inte stöder den här funktionen.

1. Välj en kamera i söklistan.

Sök MAC-adressen (Ethernet) som finns på baksidan på kameran. Båda knapparna [Auto Set] och [Manual Set] aktiveras.


2. Klicka på [Auto Set].

Dialogrutan Auto Setting visas.

<IP Address>, <Subnet Mask> och <Gateway> ställs in automatiskt.



3. Ange lösenord.
Det här är inloggningslösenordet för användaren "**admin**" som har åtkomst till kameran. Standardlösenordet är "**4321**".
4. Klicka på [OK].
Den automatiska nätverksinställningen slutförs.

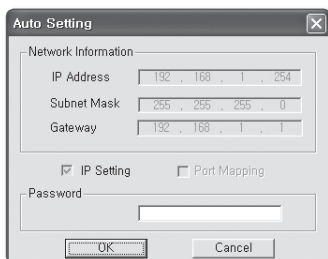

DYNAMISK IP-INSTÄLLNING

Inställning av dynamisk IP-miljö

- Exempel på dynamisk IP-miljö
 - Om en Bredbandsrouter, med anslutna kameror, tilldelas en IP-adress av DHCP-servern
 - Om kameran ansluts direkt till modemmet med DHCP-protokoll
 - Om IP-adresser tilldelas av den interna DHCP-servern via LAN

Kontrollera dynamisk IP

1. Kör IP-installationsprogrammet på användarens lokala dator för att visa kameror som allokerats med <Dynamic IP>-adresser i listan.
2. Välj en kamera i listan och klicka på [Manual Set] för att markera <Dynamic IP> på kameran. Om du avmarkerar <DHCP>, kan du ändra IP till <Static>.




nätverksanslutning och installation

PORTINTERVALLSINSTÄLLNING FRAMÅT (PORTMAPPNING)

Om du har installerat en Bredbandsrouter med en kamera ansluten måste du ställa in portintervall för vidarebefordran av Bredbandsroutern så att en fjärr dator kan få åtkomst till kameran i den.

Manuell vidarebefordran för portintervall

1. I inställningsmenyn för Bredbandsroutern väljer du **<Applications & Gaming>** - **<Port Range Forward>**. För inställning av vidarebefordran för portintervall gällande en tredjeparts Bredbandsrouter, läs bruksanvisningen för Bredbandsroutern.
2. Välj **<TCP>** och **<UDP Port>** för varje ansluten kamera till Bredbandsroutern. Varje portnummer för Bredbandsroutern ska matcha det som anges i **<Nätverk>** - **<Port>** från kamerans inställningsmeny.
3. När du är klar klickar du på **[Save Settings]**. Inställningarna sparas.

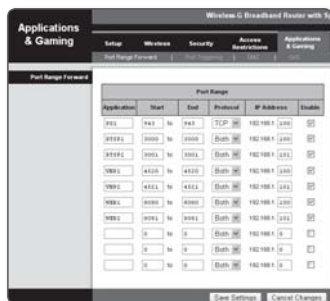

- Instruktionerna ovan är baserade på CISCO:s Bredbandsrouter (modell: LINKSYS).
- Inställningarna kan variera beroende på ansluten Bredbandsroutermodell. För vidare information, se användarhandboken för tillämplig router.

Installera vidarebefordran av port för flera nätverksskameror


När flera nätverksskameror ansluter till en Bredbandsrouter ska du vidarebefordra porten TCP 943 på routern till porten TCP 943 på den anslutna kameran.



- Om du inte ställer in porten TCP 943 på routern så som den ska vara kan du inte hämta några videostreamar från webbsidan för kameran.

- Porten TCP 943 är en port för Silverlight-policyservern på en kamera.

När Kamera1 och Kamera2 är anslutna till en router.

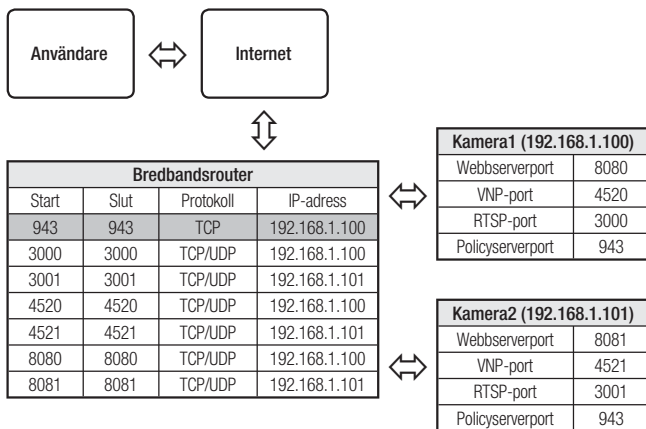

- Du kan ställa in en regel för portvidarebefordran på Bredbandsrouterenheten genom dess konfiguration för webbsidan.
- Du kan inte ändra policyserverporten för Silverlight på kameran.
- Du kan ändra portarna på kameran, förutom policyserverporten genom dess konfigurationswebbsidor.

nätverksanslutning och installation

ANSLUTA TILL KAMERAN FRÅN EN DELAD, LOKAL DATOR

1. Kör IP-installationsprogrammet.
Den söker efter anslutna kameror och visar en lista över dem.
2. Dubbelklicka på en kamera du vill komma åt.
Internetklienten startar och ansluter till kameran.



- Du kan även komma åt kameran genom att skriva in IP-adressen för den uppsökta kameran i adressfältet för Internet-klienten.

ANSLUTA TILL KAMERAN FRÅN EN FJÄRRDATOR VIA INTERNET


Eftersom användning av IP-installationsprogrammet på en fjärrdator som inte är i Bredbandsrouterns nätverk är otillåten kan användare få tillgång till kameror inom ett Bredbandsrouternätverk genom att använda kamerans DDNS-URL.

1. Innan du kan få åtkomst till en kamera i nätverket för Bredbandsroutern ska du ha ställt in portintervall för vidarebefordran för Bredbandsroutern.
2. Starta Internet-klienten från fjärrdatorn och skriv in DDNS URL-adressen för kameran, eller IP-adressen för Bredbandsroutern i adressfältet.
ex) [http://www.samsungipolis.com/\[DDNS-domän\]](http://www.samsungipolis.com/[DDNS-domän])

ANSLUTA TILL KAMERAN

I normala ska du

1. Starta Internet-klienten
2. Skriv in IP-adressen för kameran i adressfältet.
ex) • IP-adress (IPv4) : 192.168.1.100
→ http://192.168.1.100
- inloggningsfönstret ska öppnas
• IP-adress (IPv6) : 2001:230:abcd:ffff:0000:0000:ffff:1111
→ http://[2001:230:abcd:ffff:0000:0000:ffff:1111] - inloggningsfönstret ska öppnas.

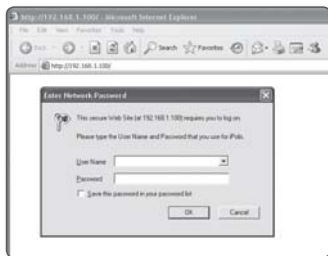

Om HTTP-porten är någon annan än 80

1. Starta Internet-klienten.
2. Skriv in IP-adressen och HTTP-portnumret för kameran i adressfältet.
ex) IP-adress: 192.168.1.100:HTTP Port number(8080)
→ http://192.168.1.100:8080 - inloggningsfönstret ska öppnas.

Använda URL

1. Starta Internet-klienten.
2. Skriv in DDNS URL-adressen för kameran i adressfältet.
ex) URL-adress: http://www.samsungipolis.com/[DDNS-domän]
- inloggningsfönstret ska öppnas.

Kontrollera DDNS-adressen

Om kameran är ansluten direkt till DHCP-kabelmodem, DSL-modem eller PPPoE-modem, ändras IP-adressen för ditt nätverk varje gång du försöker ansluta till ISP-servern (Internet Service Provider).

Om detta är fallet informeras du inte om att IP-adressen har ändrats av DDNS.

Så fort du registrerar en dynamisk, IP-baserad enhet med DDNS-servern kan du enkelt kontrollera den ändrade IP-adressen när du försöker få tillgång till enheten.

För att lägga till IP-adress till <DDNS>-servern ska du gå till www.samsungipolis.com och registrera enheten och ställa in DDNS-alternativet som <Samsung DDNS> innan du anger värdnamnet för DDNS-servern.

INLOGGNING

Standardanvändar-ID:t är "**admin**" och standardlösenordet är "**4321**".

1. Ange "**admin**" i inmatningsrutan <User Name>.
2. Ange "**4321**" i inmatningsrutan <Password>.
Om lösenordet har ändrats anger du det ändrade lösenordet istället.
3. Klicka på [OK].
Om du har loggat in utan problem kommer du till skärmen Live Viewer.



-  Av säkerhetsskäl ska du se till att ändra lösenordet i <System> - <användare>. Administratörs-ID, "**admin**", är fast och kan inte ändras.
- Om du markerar alternativet "**Save this password in your password list**" när inmatningen har gjorts loggas du automatiskt in utan att tillfrågas om att ange inloggningsinformationen från nästa gång.
-  Om du använder Internet Explorer 7.0 eller 8.0 som standardwebbläsare kan du visa bästa bildkvalitet med ett skärmförhållande på 100 %. Om du minskar förhållandet kan det kapa bilden i kanterna.

Den här nätverksskameran använder Microsoft Silverlight för visning av video.

INSTALLERA SILVERLIGHT RUNTIME

Om datorn inte har installerat Silverlight Runtime eller bara har installerat en gammal runtime-version omdirigeras du till installationssidan för Silverlight Runtime automatiskt när du öppnar web viewer.

1. Klicka på **<Click Here>**.



2. När dialogrutan för filhämtning visas klickar du på **<Run>**.



3. När hämtningen är klar klickar du på **<Run>**.



4. Installationssidan för Silverlight Runtime visas. Välj **<Install now>** för att fortsätta med installationen.



web viewer

5. När du är klar klickar du på <Close>.



6. Stäng och starta om webbläsaren och försök få åtkomst till Web Viewer.
När Silverlight Runtime är korrekt installerad ser du Live-skärmen.



- För normal installation ställer du in inställningarna för blockering av popupfönster enligt följande:
ex) **Internet Explorer → Verktyg → Blockering av popupfönster → Tillåt alltid popupfönster från den här sidan(A)**
- MAC OS X-användare som inte är anslutna till Internet kan använda medföljande installations-DVD för att installera Silverlight Runtime (öppna den körbara filen "Silverlight_XXX.dmg" på DVD:n och du blir guidad genom programinstallationen).



ANVÄNDA LIVE-SKÄRMEN



Post	Beskrivning
1 Övervakning	Gå till övervakningsskärmen.
2 UPPSPELNING	Växla till övervakningsskärmen som visar inspelningsdata i SD-minnet.
3 INSTÄLLNINGAR	Gå till inställningsskärmen.
4 Visningsskärmen	Visar Live-video på skärmen.
5 Alarmlinje	Aktivera porten för utgående alarm.
6 Ljud	Visa knapparna för att växla mellan att lyssna och tala på skärmen.
7 Återställa alarm	Återställ alarmlinjesinställningarna.
8 PTZ	Gör det möjligt för dig att kontrollera användningen av kamerans zoomobjektiv.

Post	Beskrivning
9 Digital PTZ	Du kan använda mushjulet för att aktivera digital zoomning.
10 Skärmoptimering, helskärm	Justera skärmen till optimal storlek och visa ikonerna för helskärm på Live-skärmen.
11 Lagring	Sparar ögonblicksbilden som en bildfil i .bmp-format.
12 Videoformat	Du kan välja en profiltyp i <Videoprofil> under inställningsmenyn <Ljud och video>. ☑ För användare av IE 6.0, tryck på knappen Sök intill dialogrutan <Videoprofil> och välj en profiltyp igen om den valda profilen inte spelas upp. ☑ Om meddelandet "Ogiltig codec" visas väljer en profiltyp från profillistan igen.




- Om temperaturen faller under driftsintervall kanske videosignalen inte produceras. Vänta i så fall på videon.

Aktivera zoomläget för området

Från visningsskärmen högerklickar du för att visa kontextmenyn nedan:
Menyalternativ och beskrivningar

- Gå till 1x : Ändra aktuell zoomfaktor till x1.
- Föregående : Återgår till föregående område och inställningar.
- Nästa : Går till nästa område och inställningar.
- Avsluta områdeszoomläge : Stänger läget för områdeszoom.
- Gå till förinställning : Går till förinställd position.

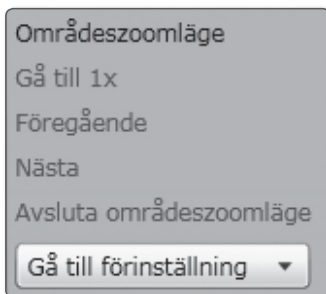

Lagra ögonblicksbilden

1. Klicka på [] på det motiv du vill lagra.
Fönstret för lagring ska öppnas.
2. Klicka på knappen [Save].
Skärmbilden sparas under angiven sökväg.



- Om du använder Internet Explorer 8 som standardwebbläsare markerar du **"Verktyg-Internet-alternativ-Säkerhet"** och avmarkerar **"Använd skyddat läge"**.



Växla ljud

1. Klicka på knappen [Ljud ()].
Överensstämmande knapp visas i Viewer.
2. Klicka på knappen för att lyssna på eller tysta ljudet, beroende på vad du önskar.
Den här knappen fungerar som en växlingsknapp.



Växla mikrofonljud

1. Klicka på knappen [Mic ()].
Överensstämmande knapp visas i Viewer.



- Meddelandet **"Kan inte hitta ljudinspelningsenhet"** visas om det inte finns någon mikrofon.

2. Klicka på knappen för att starta/avbryta samtal.
Den här knappen fungerar som en växlingsknapp.
Dialogrutan för Silverlight-behörighet visas när du klickar på mikrofonknappen.

Passa hela skärmen


1. Klicka på knappen **[Helskärm ()]**.
Överensstämmande knapp visas i Viewer.
2. Klicka på knappen.
Detta anpassar Viewer till helskärm.
3. För att stänga helskärmsläget trycker du på **[Esc]** på tangentbordet.

Så här kontrollerar du PTZ

1. Tryck på knappen **[PTZ ()]**.
2. När PTZ-knappen visas på skärmen ska du använda pilknapparna för att ändra kameravinkeln, zoomvärdet eller fokusen, efter önskemål.



- Mer information om PTZ-användning finns under **"Inställningar för PTZ"**.
(sidan 65)

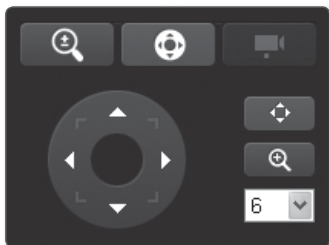

UPPSPELNING


1. Klicka på knappen **[UPPSPELNING ()]**.
2. Ange start- och sluttid för sökningen.
3. Välj en söktyp.
4. Klicka på knappen **[Sök ()]**.
Sökresultaten visas i listan.



- Om fler än 500 händelser registreras inom sökperioden kommer sökningen att begränsas till det datum den 500:e händelsen registrerades.

Om sökperioden t.ex. är mellan den 10:e och den 15:e en månad och det finns mer än 500 poster mellan den 10:e och 11:e kommer sökningen att begränsas upp till den 11:e med totalt 500 händelser. Händelser därefter (från den 12:e) kommer inte att inkluderas.

5. Välj ett dataalternativ att visa i söklistan.
6. Klicka på knappen **[Spela ()]**.
7. För att stoppa uppspelning av videon klickar du på **[Stopp ()]**.
För att återgå till sökskärmen klickar du på **[Stäng ()]**.

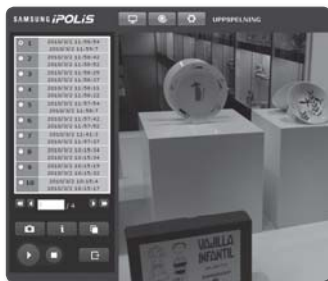

Kontrollera tidsinformationen för den uppspelade videon

1. Klicka på knappen **[Omkring ()]**.
2. Information om datum och tid visas på skärmen.

Säkerhetskopiera den sökta videon

1. Klicka på [] på det motiv du vill säkerhetskopiera.
Fönstret för lagring ska öppnas.
2. Klicka på [Save].
Skärmbilden säkerhetskopieras under angiven sökväg.



- Om du använder Internet Explorer 8 so standardwebbläsare markerar du **"Verktyg-Internet-alternativ-Säkerhet"** och avmarkerar **"Använd skyddat läge"**.




SPELA UPP SÄKERHETSKOPIERADE INSPELNINGAR

Du kan spela upp säkerhetskopierade inspelningar genom att använda SlimPlayer.

Hämta SlimPlayer

1. Klicka på [SlimPlayer ()].
Du ser ett hämtfönster där du kan ange hämtningssökväg.
2. Specificera sökvägen med lämpligt filnamn och klicka på [Save].
3. Zippa upp den hämtade filen och kör den.

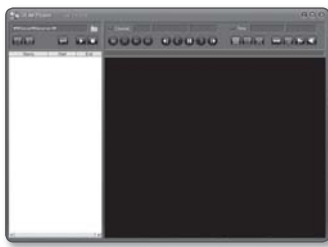

inställningsskärmen

INSTÄLLNINGAR

Du kan konfigurera ljud och video, nätverk, händelse- och systeminställningar för kameran i nätverket.

1. På liveskärmen klickar du på **[INSTÄLLNINGAR ()]**.
2. Inställningsskärmen visas.

INSTÄLLNINGAR FÖR LJUD OCH VIDEO

Videoprofil

1. På inställningsmenyn väljer du filiken **<Ljud och video ()>**.
 2. Klicka på **<Videoprofil>**.
 3. Välj ett nummer för **<Videoprofil>**.
 4. Klicka i inmatningsrutan för varje alternativ och ange/välj ett önskat värde.
 - Kontextmenyn kan variera beroende på vald codec-typ.
 - Standardprofil : Detta är standardvideoprofilen.
 - Profil för fast bildhastighet : Fixera ruthastigheten för den valda profilen oavsett inställningar för andra profiler.
 - Profil för E-mail/FTP : Videoprofilen som ska överföras till angiven E-post- eller FTP-plats.
 - Endast MJPEG codec kan ställas in som Profil för E-mail/FTP.
 - Inspelningsprofil : Det här är profilen som används för videoinspelning.
 5. När du är klar klickar du på **[Tillämpa ()]**.
-  ■ Profiler som använder H.264 codec kan endast lagras i SD-minnet med upplösningen 640x480 eller mindre.
MPEG-4-videor kan inte lagras i SD-minnet.



inställningsskärmen

Lägga till en videoprofil

Du kan lägga till så många codec som behövs så att ett urval av profiler kan användas beroende på inspelningsförhållanden.

1. Välj ett profilnummer.
2. Ange namnet och välj en codec.
3. Specificera förhållanden under vilka codec används.
4. Specificera detaljerna för vald codec, inklusive upplösning och ruthastighet.
 - Upplösning : Ställ in videostorlek för MPEG-4-, H.264- och MJPEG-filer.
 - Bildhastighet : Specificera ruthastigheten.
 - Kompression : Specificera komprimeringshastigheten för video.
 - Styrning av bithastighet : Konstant bithastighet (CBR) varierar videokvaliteten och åtgärdar bithastighet för övering, medan variabel bithastighet förstärker kvaliteten genom att variera nätverksöverföringens bithastighet.
 - Målbithastighet : Specificera den bithastighet du vill använda för videoöverföring.
 - Kodningsprioritet : Du kan ställa in videoöverföringssätt till Bildhastighet eller Kompression.
 - GOP-storlek : Välj en GOP-storlek mellan 1 och 15.
 - Profil : Du kan välja profileringsmetoden H.264.
 - Entropikodning : Minska möjlig komprimeringsförlust på grund av kodning.
 - Multisändning(VNP) : Specificera användning av VNP-protokoll.
 - IPv4 : Ange en IPv4-adress med vilken du kan ansluta till IPv4-nätverket.
 - Port : Specificera videokommunikationsporten.
 - TTL : Ställ in TTL för VNP-paket
 - Multisändning(RTP) : Specificera användning av RTP-protokoll.
 - IPv4 : Ange en IPv4-adress med vilken du kan ansluta till IPv4-nätverket.
 - Port : Specificera videokommunikationsporten.
 - TTL : Du kan ställa in TTL för RTP-paket.

Vad är GOP-storlek?

GOP (Group of Pictures) är en uppsättning videoramar för MPEG-4- och H.264-formatkomprimering, som indikerar en uppsättning ramar från den ursprungliga I-rutan (nyckelrutan) till nästa I-ruta. GOP består av 2 typer av rutor: I-ruta och P-ruta.

I-rutan är den grundläggande ramen för komprimering, även känt som nyckelramen, som innehåller en komplett P-ruta för bilddata med enbart den information som har ändrats sedan den föregående I-rutan.

Du kan ställa in mellan 1 och 15 för MPEG-4 och H.264 CODEC.

Videoinställningar

1. På inställningsmenyn väljer du fliken <Ljud och video ()>.
2. Klicka på <Videoinställningar>.
3. Du kan konfigurera inställningarna efter önskemål. OSD, allmänt, vitbalans, exponering, speciellt och område.

Så här ställer du in OSD

- Enhetsnamn : Visa <Enhetsnamn> på Live-skärmen, som du har angett i <Produktinformation> från <System>.
- Datum och tid : Visar datum- och tidsinformation på Live-skärmen.
- PTZ : Visar PTZ-information på Live-skärmen. Om du ställer in på <Auto>, visas PTZ-informationen bara om en PTZ-rörelse upptäcks och försvinner om rörelsen stannar.
- Åtgärd : Visas på Live-skärmen för information relaterat till åtgärder, såsom förinställning, svänga, grupp eller sökning.



Så här ställer du in Allmänt

- Fokusläge
 - ENAF : Autofokuserar en gång efter att funktionen panorering, lutning eller zoom har använts.
 - Auto : Utför kontinuerlig autofokus.
 - Manuell : Ändrar kameraläget till manuell fokus.
- Digital Zoom : Ställ in användningen av digital zoomfunktion. Om den optiska zoomen ställs in på <Av>, fungerar den fortfarande men den digitala zoomen aktiveras inte vid maximal optisk zoom.
- Rotationsläge : Om du ställer in till PÅ kommer bilden att visas omvänt.
- DIS (Digital Image Stabilizer) : Korrigerar visningen av en bild som skakar lätt. Med DIS kan du få en skarp bild även om kameran påverkas av omgivande vibrationer eller skakningar.
Det här är praktiskt, speciellt när du installerar kameran på ett högt stativ, i mitten av en bro, eller på en väg eller en blåsig plats.

inställningsskärmen



- Till skillnad från den optiska zoomen blir den grafiska kvaliteten på den digitala zoomen sämre ju mer du zoomar in.
- Autofokusfunktionen kanske inte fungerar som den ska under följande förhållanden:
 - Ljus belysning, blinkande ljus, såsom en neonskylt
 - När bakgrundsbelysningen är dålig.
 - Om du använder långsam slutare.
 - Mörka motiv
 - När bakgrundsbelysningen är för stark.
 - Om ett objekt på långt håll och ett objekt på nära håll ser ut att vara på samma ställe i översyningsområdet.
 - Om det inte finns någon kontrast, t.ex. i ett tak eller på en vägg.
 - Om kameran är riktad mot en tunn horisontell linje.
- Autofokus fokuserar på ett objekt i mitten av bilden, objekt runt om och närmare skärmkanterna kanske inte har optimal fokus.

Så här ställer du in vitbalansen

I menyn för vitbalans ändrar du balansen på skärmens färger under olika ljussättningar. Du kan ställa in vitbalansen separat för dag- och nattläge.

1. Välj dagläge.

2. Välj ett läge för vitbalans för dagsförhållanden från ATW1/ATW2/ABC/3200K/5600K.

- ATW1, ATW2 : Kameran kan automatiskt justera färgtemperatur i realtid, enligt omgivande förhållanden. Den tillåtna temperaturen ligger mellan 2500K - 9300K för ATW1, och mellan 2000K och 10000K för ATW2.
- ABC : Genomför automatisk vitbalans en gång för aktuell video.
- 3200K : Läget som är optimerat för färgtemperaturen på 3200K.
- 5600K : Läget som är optimerat för färgtemperaturen på 5600K.

3. Justera styrkan genom att välja ett värde mellan -32 och 32 för var och en av de röda och blå inställningarna.

4. Välj nattläge.

Välj ett läge för vitbalans för nattförhållanden från ATW1/ATW2/ABC/3200K/5600K/Av. Ställ in värdena för rödjustering och blåjustering för varje vitbalansläge.





- Om NATT-läget är inställt på <Av>, fungerar <Vitbalans> i ett läge som är specificerat i DAG-läget alltid; annars växlar skärmen till ett läge som anges i <Dag/Natt>.
- Vitbalans kanske inte fungerar som det ska under följande förhållanden.
 - När färgtemperaturen i omgivningsmiljön för objektet ligger utan för styrintervall.
 - När omgivande ljus är för dåligt.
 - När kameran är riktad mot ett fluorescerande ljus eller är installerad på en plats där ljusförhållandena ändras drastiskt. Justering av vitbalans kanske inte ger ett jämnt resultat.


Så här ställer du in exponering

Exponeringsinställningarna styr kamerans exponeringsmätning.

IRIS-inställning

1. Ställ in iris till antingen ALC eller Manuellt.

- ALC : Du kan ställa in både irisnivå och bakgrundsbelysning i autoläge.
- Manuell : Du kan ställa in irisnivå manuellt.

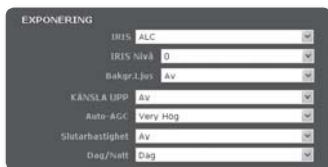

2. Välj en irisnivå mellan -32 och 32.

3. Du kan ställa in irisläge till ALC, välja en irisnivå och ställa in bakgrundsbelyst läge.

Välja ett alternativ mellan Av/BLC/WDR med bakgrundsbelysning.

- Av : Använd inte bakgrundsbelyst läge.
- BLC : Du kan specificera ett önskat område manuellt på videon och ställa in så att området visas tydligare.
- WDR : Visa en skarp bild av motiv i en scen där både ljusa och mörka områden finns.

4. Om du ställer in bakgrundsbelyst läge till BLC kan du konfigurera motljusinställningar.

5. Om du ställer in läget för bakgrundslys till WDR konfigurerar du inställningarna för WDR-vikt, WDR-nivå och WDR WB.

- WDR-Vikt : Välj ett alternativ mellan låg/mellan/hög.
- WDR-Nivå : Välj ett alternativ mellan -0 och 9.
- WDR-Autovitbalans : Välj antingen inomhus eller utomhus.



- Om du ställer in ljusläget till BLC kan du specificera motljusområdet.

inställningsskärmen

KÄNSLA UPP

Det här alternativet gör det möjligt för dig att kontrollera kamerans elektriska slutare. Välj ett alternativ bland Av/Auto x2 ~ x512 / Fix x2 ~ x512.

- Auto : Det här återställer ljusstyrkan genom att samla in videoramar om slutarhastigheten faller drastiskt på natten eller i en scen med låg kontrast.
- Fix : Det här samlar videorutor oavsett videoljusstyrka.



- Om WDR är inställt till PÅ kan du inte ställa in Sens-Up till <Fix>.

Auto-AGC

AGC (Automatic Gain Control) ändrar kamerans förstärkningsstyrning och skärmens ljusstyrka om kameran har tagit bilder av ett objekt under dåliga ljusförhållanden.



- AGC-menyalternativet visas bara om Sens-Up är inställt på <Av> eller <Fix>.
- Om läget för Dag/Natt är inställt på Auto, korrigeras gain till <Mycket hög>.

Rörelse

Rörelse gör det möjligt för dig att justera gain-nivån i ett mörkt motiv. Det visar även flimmemnivån i läget Sens-Up.

Välj ett av alternativen bland S.Långsam/Långsam/Normal/Snabb/F.Snabb.



- Rörelsemenyalternativet visas bara om Sens-Up är inställt på <Auto>.

Slutarhastighet

Du kan justera slutarhastigheten för kameran.

- Välj mellan Av / 1/120 / 1/250 / 1/500 / 1/00 / 1/2000 / 1/4000 / 1/10K.



- Om WDR är inställt till På, kan du inte justera slutarhastigheten.
- Du kan bara ställa in slutarhastigheten om Sens-Up är inställt på <Av>.

Dag/Natt

Med dag/natt-funktionen kan kameran växla mellan lägena Färg och Svartvitt. Du kan ställa in läget för Dag/Natt till Auto/Dag/Natt.

- Mode
 - Auto : Använder oftast färgläget men växlar till svartvitt läge om det är låg ljusnivå under natten.
 - Dag : Använder alltid färgläget.
 - Natt : Använder alltid svartvitt läge.

Så här ställer du in Special

DNR (Dynamic Noise Reduction)

DNR minskar bruset i bilden.

- Välj ett alternativ mellan Av/Låg/Mitten/Hög/Användare1~16.



XDR (eXtended Dynamic Range)

XDR lyser upp mörka ställen i en bild och håller samtidigt samma ljusnivå för ljusare punkter för att jämna ut den generella ljusstyrkan i bilder med hög kontrast mellan mörka och ljusa punkter.

- Lägena Av, Låg, Mitten och Hög är tillgängliga.

Zoom Hastighet (1 ~ 4)

Du kan specificera zoomhastighet. Ju högre värde, desto högre hastighet.

Detalj (0 ~ 3)

Du kan kontrollera den övergripande layouten för en bild.

Auto-AGC Färg SUP

Du kan justera färgreproduktionsintervallet enligt AGC.

inställningsskärmen

BIB

Du kan visa en huvudbild med en underbild på samma skärm.

Ställa in sekretesszon.

Du kan ange ett visst område på kameravideon som ska skyddas för din säkerhet.

1. Välj <Avskildhetsområde> i <Område>.

2. Välj <På> i <Avskildhetsområde>.

3. Klicka på ett område på bilden och väljer 4 hörnpunkter för att ange önskad zon. Ett popup-meddelande visas där du anger ett namn för zonen, klicka sedan på **OK** ().

- Dra inte i området för att ange en avskildhetszon, det fungerar inte.

4. Klicka på **Ta bort** () för att ta bort det valda området.

5. Om du slutför inställningen klickar du på knappen **Tillämpa** ().

- Du kan ange upp till 12 sekretesszoner.



Ange område för motljuskompensation.

1. I <EXPONERING>, ställer du in <Bakgr.Ljus> till <BLC>.

2. Välj <BLC> från <Område> och använd dra och släpp för att släppa på ett visst område på förhandsgranskningsskärmen.

3. Dialogrutan Lägg till område visas där du anger ett namn för området, klicka sedan på **OK** ().

4. Klicka på **Ta bort** () för att ta bort det valda området.

- Du kan bara specificera ett område.

5. För att visa det specificerade området med motljus väljer du <På> för visning av området med motljus.

Även om du ställer in alternativet till <Av>, ställs det faktiskt området in på normalt sätt.



Ljudinställningar

Du kan konfigurera I/O-inställningarna för ljudkällan från kameran.

1. På inställningsmenyn väljer du fliken <**Ljud och video** ()>.
2. Klicka på <**Ljudinställningar**>.
3. Justera I/O-ljudnivåerna enligt önskemål.
 - Ljud-in : Ställ in ljudingångsvärdet.
 - Ljud-ut : Ställ in ljudutgångsvärdet.
4. När du är klar klickar du på [**Tillämpa** ()].



Inställningar för PTZ

Du kan ändra objektivetts riktning och aktivera zoomen.

1. På inställningsmenyn väljer du fliken <**Ljud och video** ()>.
2. Klicka på <**Inställningar för PTZ**>.
3. Klicka på [**Riktningsjustering** ()].
 - [**Ändra riktning till** ()/()/()/()] : Ändra riktningen på kamera-linsen.
 - [**Styra rörelsehastigheten** ()] : Ju högre nummer desto snabbare rörelsehastighet.



inställningsskärmen

4. Ställ in kontrollknapparna för zoom och fokus.
 - [Zooma in (🔍)] : Zoomar in skärmen.
 - [Zooma ut (🔍)] : Zoomar ut skärmen.
 - [Justera fokus (📐 / 📐)] : Justerar fokus på skärmen.
5. Ange förinställningen.

Lägga till en förinställning


1. Välj det förinställda numret som ska läggas till.
2. Ställ in namnet för förinställningen.
3. Tryck på knappen [+].

Ta bort en förinställning

1. Välj det förinställda numret som ska tas bort.
2. Tryck på knappen [🗑].

Gå till en förinställning


1. Välj det förinställda nummer du vill flytta.
2. Tryck på knappen [⬅].

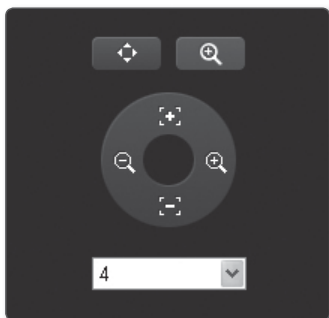

Vridning

Svänga är en övervakningsfunktion som flyttar mellan två förinställda punkter och gör att du kan spåra rörelsen.

- Om Svänga är aktiverat förflyttar sig kameran från den första förinställda positionen till den andra förinställda positionen i riktningen medurs. Sedan förflyttar den sig från den andra förinställda positionen tillbaka till den första förinställda positionen i riktningen moturs.

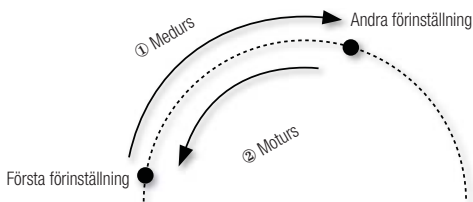

Om den första förinställningen är samma som den andra kommer kameran att rotera av sig själv med 360° i riktningen medurs och sedan rotera tillbaka med 360° i riktningen moturs.

Du kan specificera hastigheten mellan 1°/sek och 180°/sek.

Konfigurera inställningarna för Svänga

- Ställ in <Läge> i <Sekvensinställningar> som <Vridning>.

Menyskärmen växlar till inställningsskärmen för Svänga.

- Ställ in <Första förinställning> och <Andra förinställning> för att ange svängningsintervallet.

- Ange rörelsens hastighet.

- Tryck på knappen [].

Första förinställningen, andra förinställningen, hastighet och fördröjningstid sparas i inställningsläget.

- Tryck på knappen [].

Då utförs kommandot som finns lagrat i svängnumret.

- Tryck på knappen [].

Detta avbryter den pågående svängningen.




inställningsskärmen

Grupp

Med gruppfunktionen kan du gruppera flera förinställningar, svängningar eller sökningar innan du anropar dem i sekvens.

Du kan skapa upp till 8 grupper, där var och en innehåller upp till 20 funktioner.

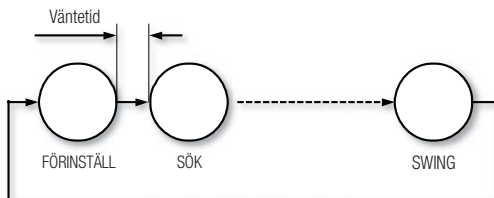

Max. 20

Ställ in en grupp

1. Ställ in <Läge> i <Sekvensinställningar> som <Grupp>. Menyskärmen växlar till inställningsskärmen för Grupp.

2. Välj ett gruppnummer.

3. Välj ett indexnummer mellan 1 och 20.

4. Välj en funktion från förinställningen, svängning och sökning.

5. Specificera väntetiden mellan 00:04 och 04:00.

6. Om du väljer Förinställ för funktionen ska du specificera rörelsehastighet; om du väljer Svänga eller Söka ska du specificera upprepningsantal.

7. Tryck på knappen [Lägg till (+)]. Dina inställningar anges i den högra listan.

8. Upprepa steg 3-7 ovan för att slutföra grupplistan.

9. När du har specificerat alla grupper trycker du på [Spara (■)]. Sedan sparas nyligen skapade grupper i kameran.




Spårning

Sökfunktionen lagrar rörelser som visas för en specificerad tid med joysticken och reproducerar dem senare för framtida referens.

Du kan använda upp till 4 sökningar, där var och en kan lagra upp till 1 000 kommunikationskommandon.

Ställa in spårningsfunktionen

1. Ställ in <Läge> i <Sekvensinställningar> som <Spåra och autokörning>. Menyskärmen växlar till menyskärmen för PTZ-spårning och autokörning.
2. Välj ett spårningsnummer.
3. Tryck på knappen []. Följande skärm visas.
4. Använd joysticken för att skapa en sökväg med rörelser. Minneskapaciteten visas i förloppsältet.
5. När du har slutfört sökvägen trycker du på [Stoppa inspelning ()].

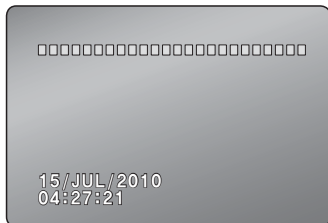

Aktivera spårningsfunktionen

1. Välj ett spårningsnummer.
2. Tryck på knappen [].



inställningsskärmen

Autokörning

Detta utför sekvenskörningen som du har angivit, om det inte finns någon styrmingsändring för en viss tid.

Spara autokörning

1. Ställ in <Läge> i <Sekvensinställningar> som <Spåra och autokörning>.
2. Välj ett autokörningsläge.
 - Startposit. : Kör automatiskt åtgärden till startpositionen.
 - Förinställning : Kör automatiskt åtgärden till förinställningsnumret.
 - Vridning : Kör automatiskt åtgärden i läget Svänga.
 - Grupp : Kör automatiskt åtgärden i läget Grupp.
 - Spårning : Kör automatiskt åtgärden i läget Spårning.
3. Specificera väntetiden mellan 5 sekunder och 4 timmar.
4. Tryck på knappen [].



NÄTVERKSINSTÄLLNING

Gränssnitt


1. På inställningsmenyn väljer du fliken **<Nätverk ()>**.
2. Klicka på **<Gränssnitt>**.
3. Ställ in **<Gränssnitt>** och **<Inställningar för IPv6>** enligt önskemål.
 - IP-typ : Välj en IP-anslutningstyp.
 - Manuell : Specificera IP-adress, Subnätmask, Gateway, DNS1 och DNS2.
 - DHCP : Specificera DNS1 och DNS2.
 - PPPoE : Specificera DNS1, DNS2, ID och lösenord.
 - Om du ställer in på **<Manuell>** ska du specificera IP, nätmask, gateway, DNS 1 & 2 manuellt.
 - MAC-adress : Visar MAC-adressen.
 - IP-adress : Visar aktuell IP-adress.
 - Subnätmask : Visar **<Subnätmask>** för inställd IP.
 - Gateway : Visar **<Gateway>** för inställd IP.
 - DNS1/DNS2 : Visar DNS-serveradress (Domain Name Service).
 - IPv6-användning : Specificera användning av IPv6.
 - IPv6-adress : Erhåller IPv6-adress för åtkomst till IPv6-nätverket.
4. När du är klar klickar du på **[Tillämpa ()]**.



inställningsskärmen

Port

1. På inställningsmenyn väljer du fliken **<Nätverk ()>**.
2. Klicka på **<Port>**.
3. Skriv in varje alternativ i portmenyn enligt önskemål.
 - Inget portintervall mellan 0 och 1023 och inte heller port 3702 är tillgängligt.
 - HTTP-port : HTTP-porten används för åtkomst till kameran via web-bläsaren.
Standard är 80 (TCP).
 - VNP-port : Ställ in en port för överföring av videosignaler med Samsung-protokoll.
 - RTSP-port : Används för att överföra videor i RTSP-läge, standard är 554.
 - Viewer-port : Används för att överföra videor till Web Viewer, standard är 4520.
 - Portintervallet för Web Viewer ligger mellan 4502 och 4532. Om VNP-porten ligger inom det effektiva intervallet ska Web Viewer-porten specificeras med samma namn som VNP-porten.
4. När du är klar klickar du på **[Tillämpa ()]**.

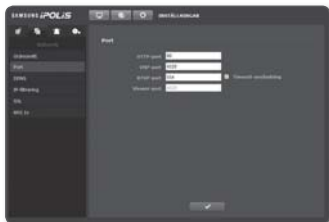

DDNS

DDNS är en förkortning av Dynamic Domain Name Service som konverterar IP-adressen för en kamera till ett allmänt värddamn, så att användaren enkelt kan komma ihåg den.

1. På inställningsmenyn väljer du fliken **<Nätverk ()>**.
2. Klicka på **<DDNS>**.
3. Välj **<DDNS>**.
4. Skriv in DDNS-alternativen enligt vald typ.
 - Samsung DDNS : Välj det här alternativet om du använder DDNS-servern som erbjuds av Samsung Techwin.
 - Publik DDNS : Välj en av de offentliga DDNS-servrarna som erbjuds när du använder en offentlig DDNS-server.
 - Värddamn : Ange namnet på värden (dvs. värddamnet på Dyndns) som är registrerad med DDNS-servern.
 - Användarnamn : Ange användarnamn för DDNS-tjänsten. (dvs. användar-ID som registreras med Dyndns)
 - Lösenord : Ange lösenord för DDNS-tjänsten. (dvs. lösenord som registreras med Dyndns)
5. När du är klar klickar du på **[Tillämpa ()]**.



inställningsskärmen

Registrering med DDNS

Registrera produkten med Samsung DDNS

1. Besök webbsidan för iPOLiS (www.samsungipolis.com) och logga in med ett registrerat konto.



2. Från övre menyfältet väljer du <DDNS SERVICE> - <MY DDNS>.



3. Klicka på [PRODUCT REGISTRATION].
4. Ange produktomdän.
 - Du måste utföra den dubbla kontrollen för domänen du har angett.



5. Välj en <CLASSIFICATION> och ange <MODEL NUMBER>.
6. Specificera produktplaceringen med en beskrivning om det behövs.
7. Klicka på [REGISTRATION]. Den här produkten läggs till produktlistan som du kan kontrollera.



Ansluta till Samsung DDNS i kamerainställningarna

1. Från DDNS-inställningssidan ställer du in <DDNS> till <Samsung DDNS>.
2. Ange det <Värddnamn> du angav när du registrerade produktdomänen på DDNS-platsen.
3. Klicka på [Tillämpa ()]. När anslutningen har gjorts ser du meddelandet <(Slutfört)> på skärmen.



Konfigurera offentlig DDNS i kamerainställningar

1. Öppna sidan för DDNS-inställningar och välj <Publik DDNS> för <DDNS>.
2. Ange överensstämmande värddnamn för platsen, användarnamn och lösenord.
3. Klicka på knappen [Tillämpa ()]. Om anslutningen upprättas som den ska visas meddelandet <(Slutfört)>.
4. När du är klar klickar du på [Tillämpa ()].

inställningsskärmen

IP-filtrering

Du kan skapa en lista över IP-adresser som du vill tillåta eller förneka åtkomst för.


1. På inställningsmenyn väljer du fliken **<Nätverk ()>**.
2. Klicka på **<IP-filtrering>**.
3. Välj **<Filtreringstyp>**.
 - Neka : Om du väljer det här alternativet begränsas åtkomsten för de IP-adresser som läggs till filtreringen.
 - Tillåt : Om du väljer det här alternativet godkänns åtkomsten endast för de IP-adresser som läggs till filtreringen
4. Ange den IP som du vill utdela eller neka åtkomst för.
För IPv4, är standard-IP-adressen 0.0.0.0, och standardprefixet är 32.
5. Välj önskad IP-adress som ska godkännas eller avvisas bland de angivna IP-adresserna.
Endast valda IP-adresser filtreras ut.
6. När du är klar klickar du på **[Tillämpa ()]**.



SSL

Du kan välja ett säkert anslutningssystem eller installera allmänt certifikat i det här syftet.

1. På inställningsmenyn väljer du fliken **<Nätverk ()>**.
2. Klicka på **<SSL>**.
3. Välj ett säkert anslutningssystem.
 - För att få åtkomst till kameran med HTTPS-läge, måste du skriva in IP-adressen för kameran i form av "https://<Camera_IP>".
4. Sök det publika certifikat som du vill installera på kameran.
För att installera certifikatet på kameran behöver du ange ett certifikatsnamn (kan tilldelas av användaren), publicerad certifikatsfil från certifieringsmyndigheten och en nyckelfil.
 - Alternativet **<HTTPS (säker anslutning som använder det publika certifikatet)>** blir bara aktiverat om det finns ett publikt certifikat installerat.
5. När du är klar klickar du på **[Tillämpa ()]**.

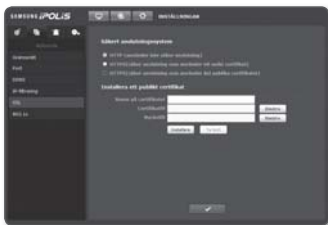

Installera certifikatet

1. Ange certifikatsnamnet.
2. Markera certifikatsfilen som ska installeras och certifikatsnyckeln och klickar sedan på knappen [Installera ()].

Radera certifikatet

1. Klicka på knappen [Ta bort ()].

802.1x

Vid anslutning till nätverket kan du välja om du vill använda protokollet 802.1x och sedan installera certifieringen.

1. På inställningsmenyn väljer du fliken <Nätverk ()>.
2. Klicka på <802.1x>.
3. Ställ in <IEEE 802.1x Setting(EAPOL using EAP-TLS)>.
 - Aktivera IEEE 802.1x : Specificera användning av 802.1x-protokoll.
 - EAPOL-version : Välj version 1 eller 2.
 - EAPOL-id : Ange EAPOL-ID.
 - EAPOL-lösenord : Ange EAPOL-lösenordet.



-  Om den anslutna nätverksenheten inte stöder protokollet 802.1x, kommer inte protokollet att fungera korrekt även om du ställer in det.

Så här installerar/tar du bort 802.1x-relaterade certifikat

1. Tryck på knappen [Bläddra ()] för varje alternativ och välj ett certifikat att installera.
2. Om inga certifikat är installerade visas meddelandet "Inte tillgänglig" intill det valda alternativet.
3. Tryck på knappen [Installera ()] för att starta installationen med ett meddelande för "Installerad" intill alternativet.
4. Tryck på knappen [Ta bort ()] för att ta bort certifikatet.

inställningsskärmen

HÄNDELSINSTÄLLNINGAR

FTP / E-mail

Du kan konfigurera FTP-/E-postserverinställningarna så att du kan överföra bilderna som har lagrats i kameran till din dator om en händelse inträffar.


1. På inställningsmenyn väljer du fliken **<Händelse ()>**.
2. Klicka på **<FTP / E-mail>**.
3. Välj **<Konfiguration av FTP>** eller **<Konfiguration av E-mail>** och ange/ välj önskat värde.

- Konfiguration av FTP

- Serveradress : Ange IP-adress för FTP-servern som du överför alarmbilder till.
- Användar-ID : Ange användar-ID med vilket du vill logga in på FTP-servern.
- Lösenord : Ange lösenord för användarkonto för att logga in på FTP-servern.
- Överföringskatalog : Specificera FTP-sökvägen där du ska överföra alarmbilder.
- Port : Standardporten för FTP-servern är 21; du kan dock använda ett annat portnummer enligt FTP-serverinställningarna.
- Passivt läge : Välj **<På>** om du behöver ansluta i passivt läge på grund av brandväggen eller FTP-serverinställningar.

- Konfiguration av E-mail

- Serveradress : Ange IP-adress för e-postservern som du använder för e-postöverföring.
ex) SMTP. hotmail. com
- Användarautentisering : Välj om du vill använda behörighet.
- Användar-ID : Ange användar-ID för att logga in på e-postservern.
- Lösenord : Ange lösenord för användarkonto för att logga in på e-postservern.
- Port : Standardporten för e-postservern är 25; du kan dock använda ett annat portnummer enligt e-postinställningarna.
- Mottagare : Ange adress för e-postmottagare.

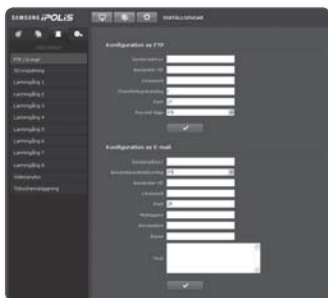

- Avsändare : Ange adress för e-postavsändare. Om avsändaradressen är felaktig kan e-posten från avsändaren klassificeras som SPAM av e-postservern och därmed inte skickas.
- Ämne : Ange ett ämne för e-postmeddelandet.
- Text : Ange text för meddelandet. Bifoga alarmbilder till e-postmeddelandet som du förbereder.

4. När du är klar klickar du på **[Tillämpa (

SD-inspelning**

Du kan ställa in inspelningsförhållanden eller användning av inspelning för SD-minnet, kontrollera storlek på lagrad information eller formatera själva SD-minnet.

1. På inställningsmenyn väljer du fliken **<Händelse (
**

Göra en inspelning i SD-minnet

1. Kontrollera **<Total storlek>** och **<Ledigt utrymme>**.
2. Om SD-minnet har tillräckligt med ledigt utrymme ställer du in **<Inspeknings>** till **<På>**. Annars kontrollerar du lagrad information och om du inte anser att den är viktig klickar du på **<Format>** för att formatera SD-minnet.
 - Om ditt SD-minneskort skriver långsamt lagras bara en ruta per sekund.
 - För ett SD-minneskort med stor kapacitet blir formateringen långsammare.
 - Om storleken på data växer med tid kan bara 1 fps lagras även om du ställer in inspelningskvaliteten till helbild.

inställningsskärmen

3. Specificera inspelningsförhållanden.

- Tvingad inspelning 1 fps : Endast en ruta per sekund spelas in oavsett befintlig inspelningsprofil.
- Skriv över : Om SD-minnet är fullt raderar detta gamla data och lagrar nya istället.
- Förlarmets varaktighet : Specificera tidpunkten före alarmet ska aktiveras, med start från tidpunkten då bilderna ska överföras. Du kan specificera upp till 5 sekunder innan alarmet ska aktiveras.
- Efterlarmets varaktighet : Specificera tidpunkten efter att alarmet har aktiveras, till tidpunkten då bilderna ska överföras. Du kan specificera upp till 120 sekunder efter att alarmet har aktiveras.

4. När du är klar klickar du på [Tillämpa ()].

Larmingång 1~8


Du kan ställa in ingångstyp för alarm, aktiveringstid och användningsläge.

1. På inställningsmenyn väljer du fliken <Händelse ()>.

2. Klicka på <Larmingång>.

3. Specificera en inmatningsenhet.

- Typ
 - Normalt öppen : Den är normalt öppen, men om den är stängd utlöses ett alarm.
 - Normalt stängd : Den är normalt stängd, men om den är öppen utlöses ett alarm.

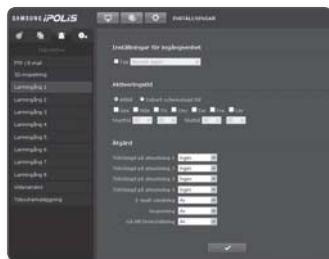

4. Specificera <Aktiveringstid>.

- Alltid : Kontrollera alltid om ett alarm inträffar. Kontrollera alltid om ett alarm inträffar.
- Enbart schemalagd tid : Kontrollera om ett alarm aktiveras på en viss veckodag och en viss tids- period. Aktiveras i använt läge när alarmet hör.

5. Specificera en åtgärd som utförs om ett alarm aktiveras.
 - Tidslängd på utmatning 1~4 : Välj om larmet ska ställas in om det finns ett inkommande larm, och ange larmets tid.
 - E-mail sändning : Specificera användningen av e-postöverföring i inställningarna för alarmsgång.
 - Inspelning : Specificera användningen av inspelning i inställningarna för alarmsgång.
 - Gå till förinställning : Går till specificerad, förinställd plats vid inställning av alarmsgång.
6. När du är klar klickar du på [Tillämpa ()].


Videoanalys

1. På inställningsmenyn väljer du fliken <Händelse ()>.
2. Klicka på <Videoanalys>.
3. Specificera användning av intelligent videoanalys.
4. Ange upplösningvärde och känslighet-nivå för att identifiera ett objekt.

Upplösningvärde	Motivstorlek
1	32 för 8x8 pixlar
2	24 för 8x8 pixlar
3	16 för 8x8 pixlar
4	8 för 8x8 pixlar
5	1 för 8x8 pixlar

- Om du ställer in upplösningvärdet på hög nivå kan kameran identifiera detaljerade rörelser i motivet.

5. Ställ in typ för rörelsedetektering.
Ställer in detektering och sökning av det rörliga motivet.
 - Sök : Identifierar ett rörligt motiv och utför tilläggsfunktioner.
 - Detektera : Detekterar ett rörligt motiv.
6. Ange om du vill använda extra rörelsefunktioner eller inte.
Detekterar rörelser för ett motiv, visar videon med ändringar och söker rörelsebanan.
 - Om du väljer <Rörelse/åtgärdande> kan du visa överensstämmande område när ett motiv försvinner från skärmen eller ett motiv visas och ligger kvar på skärmen under en angiven tidsperiod.

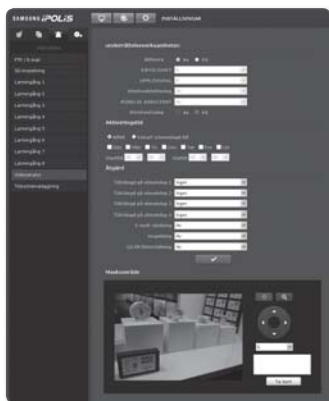

inställningsskärmen

7. Ange om du vill använda funktionen för rörelsevisning eller inte.
 8. Specificera aktiveringstid och villkor.
 - Se **"Larmgång 1~8"** för hur du ställer in **<Aktiveringstid>** och **<Åtgärd>**. (sidan 80)
 9. Efter att du har ställt in till **<På>** för **<underrättelseverksamheten>** ställer du in **<Maskområde>**. Det går att ange upp till 4 maskområden. Klicka på skärmen och dra till önskad punkt. Detta ställer in maskområde. Rörelsedetektering är inte aktiverat i angivet maskområde.
För att radera det valda området klickar du på knappen **[Ta bort (Ta bort)]**.
- Ändra inte inställningen för **<Rotationsläge>** under **<Videoinställningar>** efter att du har ställt in maskområde.
Om du ändrar inställningen för **<Rotationsläge>** efter att du har ställt in maskområde, ska du radera alla befintliga maskområden och ställa in dem igen.




Tidsschemaläggning

Du kan konfigurera så att en händelse inträffar vid en schemalagd tid, oavsett när händelsen faktiskt inträffar.

1. På inställningsmenyn väljer du fliken **<Händelse ([Händelse])>**.
2. Klicka på **<Tidsschemaläggning>**.

Ställa in timerhändelsen

1. Ställ in **<Inställningar för timerhändelser>** på **<Aktivera>**.
2. Specificera **<Aktiveringstid>**
 - Alltid : Aktiveras alltid i använt läge på angivna intervaller.
 - Enbart schemalagd tid : Aktiveras periodiskt i använt läge på specifik tid och specifikt datum.
3. Ange **<Överföringsintervall>**.
4. Specificera aktiveringsförhållanden.
 - FTP-sändning : Specificera användning av FTP-överföring om en händelse inträffar.
 - Inspelning : Specificera användning av inspelning om en händelse inträffar.
5. När du är klar klickar du på **[Tillämpa ([✓])]**.

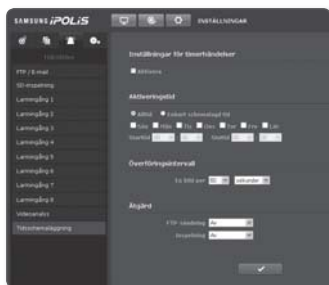

SYSTEMINSTÄLLNINGAR

Produktinformation

1. På inställningsmenyn väljer du fliken <System ()>.
2. Klicka på <Produktinformation>.
3. Kontrollera kamerainformationen, eller ange detaljer beroende på nätverksmiljö.
 - Enhetsnamn : Om du vill visa enhetsnamnet på Live-skärmen anger du ett enhetsnamn och ställer in skärmen för <Enhetsnamn> i <OSD> från <Videoinställningar>.
 - Plats : Specificera platsen där kameran är installerad.
 - Beskrivning : Ange detaljerad information om kameraplatsen.
 - Anteckningar : Ange en förklaring om kameran för bättre förståelse.
 - Språk : Välj ett förinställt språk för kameramenyer och skärmspråk för Web Viewer.
4. När du är klar klickar du på [Tillämpa ()].



- Produktrelaterad information tillåter bara engelska för inmatning.



inställningsskärmen

Datum och tid

1. På inställningsmenyn väljer du fliken <System ()>.
2. Klicka på <Datum och tid>.
3. Ange tid och datum som ska användas för kameran.
 - Aktuell systemtid : Visar aktuella tidsinställningar för ditt system.
 - Tidszon : Specificera den lokala tidszonen baserat på GMT.
 - Tillämpa sommartid : Om alternativet är markerat ställs tiden in till en timme tidigare än den lokala tidszonen för angiven tidsperiod. Det här alternativet visas bara i områden där DST används.
 - Systemtidsinställningar : Ange tid och datum som ska användas för systemet.
 - Manuell : Specificera tiden manuellt.
 - Synkronisera med NTP-server : Synka med tiden för den angivna server-adressen.
 - Synkronisera med PC Viewer : Synka tiden med ansluten dator
4. När du är klar klickar du på [Tillämpa ()].



- Om du väljer <Synkronisera med PC Viewer>, ska standardtidszonen ställas in på samma sätt som aktuell tidszon i datorn.




Användare

1. På inställningsmenyn väljer du fliken <System ()>.
2. Klicka på <Användare>.
3. Ange nödvändig användarinformation.
 - Ändra administratörslösenord : Ändra aktuellt lösenord för administratören.
 - Gästinställning : Om <Gäståtkomst> tillåts kan alla gäster komma åt Web Viewer-skärmen, men bara visa Live viewer-skärmen.
 - Nuvarande användare : Du kan ändra användarinformationen och justera behörighetsnivå för en användare som är inställd på <Aktivera>.
 - VIDEO : Du kan välja en videoprofil i Live viewer-skärmen.
 - Ljud-in : Ljudingångsalternativet aktiveras på Live Viewer-skärmen.
 - Kontroller : Du kan kontrollera kameramenyn, PTZ, MIK och alarmknapp.
4. När du är klar klickar du på [Tillämpa ()].



Uppgradera / starta om

1. På inställningsmenyn väljer du fliken <System ()>.
2. Klicka på <Uppgradera / starta om>.
3. Välj önskat alternativ och ställ in det korrekt.
 - Uppgradera : Uppgraderar systemet.
 - Fabriksstandard : Återställer systemet till fabriksstandard.
 - Parameter för nätverksundantag : Återställer övriga inställningar förutom filterinställningar för gränssnitt/port/DDNS/IP.
 - Alla : Återställer alla inställningar, inklusive kamerainställningarna. (inloggningsinformationen återställs dock inte)
 - Om du återställer alla inställningar blir IP-adressen 192.168.1.100.
 - Konfiguration av säkerhetskopiering och återställning : Säkerhetskopierar aktuella systeminställningar innan du utför återställningsprocessen. Systemet startar automatiskt om efter säkerhetskopiering eller återställning.
 - Starta om : Startar om systemet

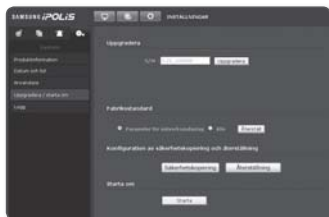


inställningsskärmen

Utföra uppgraderingen

1. Klicka på [**Uppgradera**].
2. Klicka på [**Bläddra**] och ange en fil som ska uppgraderas.
3. Klicka på [**Skicka**].
4. Dialogrutan "**Uppgradera**" visas där förloppet visas längst ned.




- Om du tvingas avsluta uppgraderingsprocessen kommer inte uppgraderingen att genomföras korrekt.

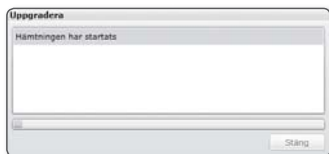

Spara aktuella inställningar och återställa inställningar för säkerhetskopiering


1. Klicka på [**Säkerhetskopiering**].
Dialogrutan Spara som ska visas.
2. Specificera sökvägen för säkerhetskopian med lämpligt filnamn och klicka på [**Save**].
Säkerhetskopieringsfilen sparas till angiven sökväg i formatet ".bin".
3. Återställ säkerhetskopieringsinställningarna genom att klicka på [**Återställning**].
4. Välj en säkerhetskopieringsfil och klicka på [**Open**].

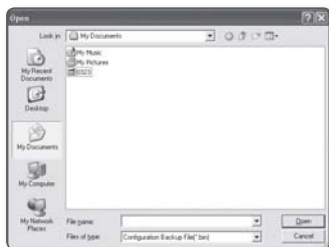

Logg

Du kan kontrollera system- eller händelseloggen.

1. På inställningsmenyn väljer du fliken <System ()>.
 2. Klicka på <Logg>.
 3. Välj en loggtyp.
 - Syslog : Du kan kontrollera system-loggar där systemändringar lagras inklusive tidsinformationen.
 - Evtlog : Du kan kontrollera händelseloggar inklusive tidsinformation.
 4. Från den högra logglistan väljer du ett alternativ att söka efter.
 - Om du väljer <All> i översta menyn till vänster så visas alla loggar för tillämplig loggtyp.
 5. Om en sida inte kan visa alla tillgängliga loggar ska du använda de nedre knapparna för att gå till föregående, nästa eller sista alternativet.
-  ■ Om du vill visa detaljerna för en logg klickar du på [Info ()] i högra loggkolumnen, så visas logginformationen i nedersta rutan.
- Varje sida visar 15 loggar med den senaste visad överst.
- Händelse-/systemlogglistan kan innehålla upp till 1000 loggar; efter det kommer befintliga loggar att raderas, med start från den äldsta varje gång en ny logg skapas.

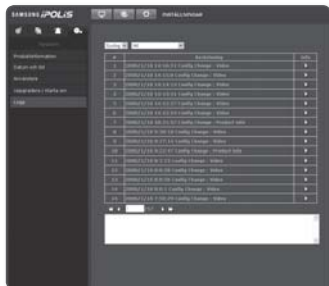

SPECIFIKATIONER

	Artiklar	Beskrivning
Video	Bildenhet	1/4" Ex-view HAD PS CCD
	Totalt antal pixlar	NTSC : 811(H) x 508(V), PAL : 795(H) x 596(V)
	Effektiva pixlar	NTSC : 768(H) x 494(V), PAL : 752(H) x 582(V)
	Skanningssystem	Progressiv (VPS ON) (Om WDR på, Sammanflätad skanning)
	Synkronisering	Endast internt
	Frekvens	NTSC : H : 15,734KHz / V : 59,94Hz, PAL : H : 15,625KHz / V : 50Hz
	Horisontal upplösning	Färg : 600 TV-linjer
	Min. upplysning	Färg : 0,7 Lux (F1.6, 50IRE), 0,001 Lux (Sens-up 512X, 50IRE) S/V : 0,07 Lux (F1.6, 50IRE), 0,0001 Lux (Sens-up 512X, 50IRE)
	S/N-kvot	52dB
	Video ut	CVBS : 1,0 Vp-p / 75Ω komposit
Objektiv	Fokallängd (zoomförhållande)	3,2~138,5mm (43X)
	Max. bländarförhållande	F1.6(Vidvinkel) / F3.7(Tele)
	Vinkel på visningsfält	H : 61,2°(Vidvinkel) ~ 1,47°(Tele) / V : 47,2°(Vidvinkel) ~ 1,1°(Tele)
	Min. avstånd till objekt	1m (99,97cm)
	Fokuskontroll	AF / Enbilds-AF / Manuell
	Zoomhastighet	Max. 3,2 sek (Vidvinkel → Tele)
	Objektivtyp	DC Auto Iris
	Monteringstyp	Inbyggd korttyp



	Artiklar	Beskrivning
Pan / Tilt	Pan-intervall	360° Oändlig
	Pan-hastighet	Förinställning : 360°/sek, Manuell : 0,05°/sek ~ 200°/sek
	Tilt-intervall	180°(0° ~ 180°)
	Tilt-hastighet	Förinställning : 360°/sek, Manuell : 0,05°/sek ~ 200°/sek
	Förinställning	255 ea
Användning	Skärmvisning	Engelska, Webb-OSD : Engelska, Franska, Tyska, Spanska, Italienska, Italienska, Kinesiska, Koreanska, Ryska, Japanska, Svenska, Danska, Portugisiska
	Kameratitel	Off / On (Displayed up to 32 characters)
	Dag och natt	Auto (ICR) / Color / B/W
	Motljuskompensation	Off / BLC
	Brett dynamiskt intervall	NTSC : 128X / PAL : 160X
	Aprimoramento de contraste	XDR (eXtended Dynamic Range) (Av/Låg/Medium/Hög)
	Digital brusreducering	Rörelseadaptiv 2D+3D Brusfilter (Av/Låg/Medium/Hög)
	Digital bildstabilisering	Av / På
	Rörelsedetektering	Ja
	Sekretessmask	Av / På (12 polygonala programmerbara zoner)
	Sens-up (ramintegrering)	Av / Auto (2X ~ 512X)

Artiklar		Beskrivning
Användning	Gain-kontroll	Av / Låg / Medium / Hög / Manuell
	Vitbalans	ATW (In) / ATW (Ut) / AWC / Manuell
	Elektronisk slutarhastighet	NTSC : Av / A.FLK/Manuell (1/120 ~ 1/10Ksek) PAL : Av / A.FLK/Manuell (1/100 ~ 1/10Ksek)
	Digital zoom	16X
	Vänt	Av / På
	Profile	-
	VPS	Av / På
	Intelligent Video Analytics	Flyttad / Fast
	PIP	Av / På
	Schedule	Dags-/tidsschema
	Alarm I/O	Ingång 8ea / Utgång 4ea (Relä)
	Remote Control Interface	RS-485
Nätverk	RS-485 Protocol	Samsung-E, Samsung-T, Pelco-D, Pelco-P, Panasonic, GE(Kalatel), AD, Vicon, Honeywell(DK6), Bosch(Philips), Honeywell(VCLTP)
	Ethernet	RJ-45 (10/100BASE-T)
	Videokomprimeringsformat	H.264, MPEG-4, MJPEG
	Upplösning	NTSC : 704x480, 640x480, 352x240 PAL : 704x576, 640x480, 352x288
	Max. ramhastighet	NTSC : 30fps / PAL : 25fps

Nätverk	Artiklar	Beskrivning
	Videokvalitetsjustering	H.264/MPEG-4 : Komprimeringsnivå, målbithastighetskontroll MJPEG : Kvalitetsnivåkontroll
	Metod för bildhastighetskontroll	H.264/MPEG-4 : CBR eller VBR MJPEG : VBR
	Strömningskapacitet	Multiströmning (upp till 10 profiler)
	Ljud I/O	Linje in / Linje ut
	Ljudkomprimeringsformat	G.711 μ -law
	Ljudkommunikation	2-vägs
	IP	IPv4, IPv6
	Protokoll	TCP/IP, UDP/IP, RTP(UDP), RTP(TCP), RTSP, NTP, HTTP, HTTPS, SSL, DHCP, PPPoE, FTP, SMTP, ICMP, IGMP, SNMPv1/v2c/v3(MIB-2), ARP, DNS, DDNS
	Säkerhet	HTTPS(SSL) inloggningsautentisering Digest inloggningsautentisering IP-adressfiltrering Användaråtkomstlogg 802.1X autentiseringsmetod
	Strömningsmetod	Unicast / Multicast
	Max. användaråtkomst	10 användare i Unicast-läge
	Minnesplats	SD/SDHC-minneskortsplats
	ONVIF-anpassad	Ja
	Webbviewer	Operativsystem som stöds: Windows XP / VISTA / 7, MAC OS Webbläsare som stöds: Internet Explorer 6.0 eller högre, Firefox, Chrome, Safari
	Centralhanteringsprogram	NET-i viewer

Artiklar		Beskrivning
Omgivande miljö	Driftstemperatur /-luftfuktighet	-50°C ~ +50°C (-58°F ~ +122°F) / 20% ~ 80% RH
	Vattentäthet	IP66 (vattentät)
Elektricitet	Volt / ström	Klass 2 24V~50/60Hz, PoE+ 44~57V
	Strömförbrukning	Max. 20W (värmare av), Max. 50W (värmare på), PoE+ 24W
Mekanik	Färg / Material	Elfenben / Aluminium (klåfingerresistent) / plastsolskydd
	Mått (Ø x H)	Ø259 x H290,5 mm
	Vikt	4,5kg

PRODUKTÖVERSIKT

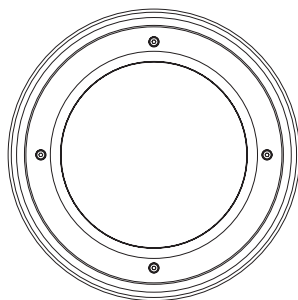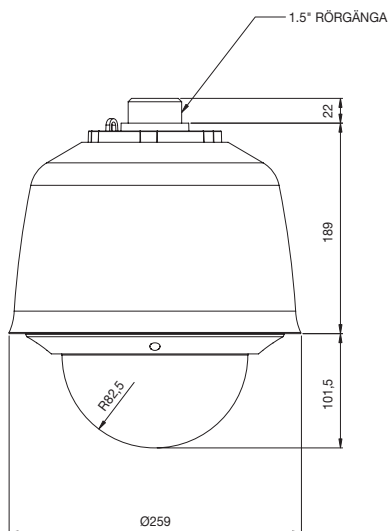

FELSÖKNING

PROBLEM	LÖSNING
Jag kan inte komma åt kameran från en webbläsare.	- Kontrollera för att säkerställa att kamerans nätverksinställningar är korrekta. - Kontrollera för att säkerställa att alla nätverkskablar har anslutits korrekt. - Om den är ansluten och du använder DHCP ska du kontrollera att kameran kan förvärva dynamiska IP-adresser utan problem. - Om den är ansluten med en DDNS URL, ska du kontrollera att MAC-adressen har angetts korrekt. - Om kameran har anslutits till en bredbandsrouter ska du se till att portvidarebefordran är korrekt konfigurerat.
Viewern har kopplats ur under övervakningen.	- Anslutna användare blir frånkopplade vid en ändring i kamera- eller nätverkskonfigurationen. - Kontrollera alla nätverksanslutningar. - Om kameran är ansluten över ett PPPoE-nätverk är det möjligt att Viewern kopplas från under dåliga nätverksförhållanden.
Jag kan inte ansluta till systemet med en utforskare eller Internet Explorer 7.0.	När du försöker ansluta till systemet med en utforskare delas samma cookie-information, vilket resulterar i fel under anslutningen. Använd därför istället en utforskare, öppna i ett nytt fönster för att ansluta till systemet.
Den kamera som är ansluten till nätverket identifieras inte i IP-installationsprogrammet.	Slå av inställningarna för brandväggen på datorn och sök kameran igen.
Bilderna överlappas.	Kontrollera om två eller fler kameror är inställda på enkel multicast-adress istället för olika adresser. Om en enkel adress används för flera kameror kan bilderna överlappas.
Ingen bild visas.	Om sändningsmetoden är inställd på multicast ska du kontrollera om det finns en router som stöder multicast i nätverket som kameran är ansluten till.

PROBLEM	LÖSNING
Kan inte lagra på SD-minneskort.	• Kontrollera om det finns fel på minneskortet. • Kontrollera om skrivskyddsfliken för minneskortet är inställd på "LOCK".
SD-minneskortet är isatt men kameran fungerar inte som den ska.	• Kontrollera om minneskortet har satts i på rätt håll. Användning av minneskort som har formaterats av andra enheter garanteras inte med den här kameran. • Formatera minneskortet igen i <Inställningar> → <Händelse> → <SD-inspelning>.
Kan inte formatera SD-minneskort.	• Kontrollera om skrivskyddsfliken för minneskortet är inställd på "LOCK".

OPEN SOURCE ANNOUNCEMENT

Some software components of this product incorporate source code covered under the BSD license as follows.

Component Name	License	License URL
lighttpd 1.4.25	BSD 2.0	http://www.opensource.org/licenses/bsd-license.html
librtsp 1.20	BSD 1.0	

lighttpd is a secure, fast, compliant, and very flexible web-server that has been optimized for high-performance environments. It has a very low memory footprint compared to other web servers and takes care of cpu-load. Its advanced feature-set (FastCGI, CGI, Auth, Output-Compression, URL-Rewriting and many more) make lighttpd the perfect webserver-software for every server that suffers load problems.

For more additional information, send email to help.cctv@samsung.com.

Copyright (C) 2004, Kneschke, incremental

All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met :

- Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- Neither the name of the 'incremental' nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT OWNER OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Copyright (c) 1998-2001 University College London

All rights reserved.

Redistribution and use in source and binary forms, with or without modification, is permitted provided that the following conditions are met :

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. All advertising materials mentioning features or use of this software must display the following acknowledgement: This product includes software developed by the Computer Science Department at University College London.
4. Neither the name of the University nor of the Department may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE AUTHORS AND CONTRIBUTORS "AS IS" AND ANY EXPRESSED OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHORS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

GPL/LGPL SOFTWARE LICENSE

The software included in this product contains copyrighted software that is licensed under the GPL/LGPL. You may obtain the complete Corresponding Source code from us for a period of three years after our last shipment of this product by sending email to help.cctv@samsung.com

If you want to obtain the complete Corresponding Source code in the physical medium such as CD-ROM, the cost of physically performing source distribution might be charged.

- GPL S/W
 - Base Kernel, Busybox, Sysvinit, dosfstools
 - LGPL S/W
 - glibc, Inetutils
-

GNU GENERAL PUBLIC LICENSE

Version 2, June 1991

Copyright (C)1989, 1991 Free Software Foundation, Inc.

51 Franklin Street, Fifth Floor, Boston, MA 02110-1301, USA

Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.

Preamble

The licenses for most software are designed to take away your freedom to share and change it. By contrast, the GNU General Public License is intended to guarantee your freedom to share and change free software-- to make sure the software is free for all its users.

This General Public License applies to most of the Free Software Foundation's software and to any other program whose authors commit to using it. (Some other Free Software Foundation software is covered by the GNU Lesser General Public License instead.) You can apply it to your programs, too.

When we speak of free software, we are referring to freedom, not price.

Our General Public Licenses are designed to make sure that you have the freedom to distribute copies of free software (and

charge for this service if you wish), that you receive source code or can get it if you want it, that you can change the software or use pieces of it in new free programs ; and that you know you can do these things.

To protect your rights, we need to make restrictions that forbid anyone to deny you these rights or to ask you to surrender the rights. These restrictions translate to certain responsibilities for you if you distribute copies of the software, or if you modify it.

For example, if you distribute copies of such a program, whether gratis or for a fee, you must give the recipients all the rights that you have.

You must make sure that they, too, receive or can get the source code. And you must show them these terms so they know their rights.

We protect your rights with two steps :

(1)copyright the software, and (2)offer you this license which gives you legal permission to copy, distribute and/or modify the software.

Also, for each author's protection and ours, we want to make certain that everyone understands that there is no warranty for this free software. If the software is modified by someone else and passed on, we want its recipients to know that what they have is not the original, so that any problems introduced by others will not reflect on the

original authors' reputations.

Finally, any free program is threatened constantly by software patents. We wish to avoid the danger that redistributors of a free program will individually obtain patent licenses, in effect making the program proprietary. To prevent this, we have made it clear that any patent must be licensed for everyone's free use or not licensed at all.

The precise terms and conditions for copying, distribution and modification follow.

TERMS AND CONDITIONS FOR COPYING, DISTRIBUTION AND MODIFICATION

Version 2, June 1991 Copyright (C) 1989, 1991 Free Software Foundation, Inc. 51 Franklin S

0. This License applies to any program or other work which contains a notice placed by the copyright holder saying it may be distributed under the terms of this General Public License.

The "Program", below, refers to any such program or work, and a "work based on the Program" means either the Program or any derivative work under copyright law : that is to say, a work containing the Program or a portion of it, either verbatim or with modifications and/or translated into another language. (Hereinafter, translation is included without limitation in the term "modification".) Each licensee is addressed as "you".

Activities other than copying, distribution and modification are not covered by this License ; they are outside its scope. The act of running the Program is not restricted, and the output from the Program is covered only if its contents constitute a work based on the Program (independent of having been made by running the Program). Whether that is true depends on what the Program does.

1. You may copy and distribute verbatim copies of the Program's source code as

you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice and disclaimer of warranty; keep intact all the notices that refer to this License and to the absence of any warranty ; and give any other recipients of the Program a copy of this License along with the Program.

You may charge a fee for the physical act of transferring a copy, and you may at your option offer warranty protection in exchange for a fee.

2. You may modify your copy or copies of the Program or any portion of it, thus forming a work based on the Program, and copy and distribute such modifications or work under the terms of Section 1 above, provided that you also meet all of these conditions :
- a) You must cause the modified files to carry prominent notices stating that you changed the files and the date of any change.
 - b) You must cause any work that you distribute or publish, that in whole or in part contains or is derived from the Program or any part thereof, to be licensed as a whole at no charge to all third parties under the terms of this License.
 - c) If the modified program normally reads commands interactively when run, you must cause it, when started running for such interactive use in the most ordinary way, to print or display an announcement including an appropriate copyright notice and a notice that there is no warranty (or else, saying that you provide a warranty) and that users may redistribute the program under these conditions, and telling the user how to view a copy of this License. (Exception: if the Program itself is interactive but does not normally print such an announcement, your work

based on the Program is not required to print an announcement.)

These requirements apply to the modified work as a whole. If identifiable sections of that work are not derived from the Program, and can be reasonably considered independent and separate works in themselves, then this License, and its terms, do not apply to those sections when you distribute them as separate works. But when you distribute the same sections as part of a whole which is a work based on the Program, the distribution of the whole must be on the terms of this License, whose permissions for other licensees extend to the entire whole, and thus to each and every part regardless of who wrote it.

Thus, it is not the intent of this section to claim rights or contest your rights to work written entirely by you ; rather, the intent is to exercise the right to control the distribution of derivative or collective works based on the Program. In addition, mere aggregation of another work not based on the Program with the Program (or with a work based on the Program) on a volume of a storage or distribution medium does not bring the other work under the scope of this License.

3. You may copy and distribute the Program (or a work based on it, under Section 2) in object code or executable form under the terms of Sections 1 and 2 above provided that you also do one of the following :

- a) Accompany it with the complete corresponding machine-readable source code, which must be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange ; or,
- b) Accompany it with a written offer, valid for at least three years, to give any third party, for a charge no more than your cost of physically

performing source distribution, a complete machine-readable copy of the corresponding source code, to be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange ; or,

- c) Accompany it with the information you received as to the offer to distribute corresponding source code. (This alternative is allowed only for noncommercial distribution and only if you received the program in object code or executable form with such an offer, in accord with Subsection b above.)

The source code for a work means the preferred form of the work for making modifications to it. For an executable work, complete source code means all the source code for all modules it contains, plus any associated interface definition files, plus the scripts used to control compilation and installation of the executable. However, as a special exception, the source code distributed need not include anything that is normally distributed (in either source or binary form) with the major components (compiler, kernel, and so on) of the operating system on which the executable runs, unless that component itself accompanies the executable.

If distribution of executable or object code is made by offering access to copy from a designated place, then offering equivalent access to copy the source code from the same place counts as distribution of the source code, even though third parties are not compelled to copy the source along with the object code.

- 4. You may not copy, modify, sublicense, or distribute the Program except as expressly provided under this License. Any attempt otherwise to copy, modify, sublicense or distribute the Program is void, and will automatically terminate your rights under this License.

However, parties who have received copies, or rights, from you under this License will not have their licenses terminated so long as such parties remain in full compliance.

5. You are not required to accept this License, since you have not signed it. However, nothing else grants you permission to modify or distribute the Program or its derivative works. These actions are prohibited by law if you do not accept this License. Therefore, by modifying or distributing the Program (or any work based on the Program), you indicate your acceptance of this License to do so, and all its terms and conditions for copying, distributing or modifying the Program or works based on it.
6. Each time you redistribute the Program (or any work based on the Program), the recipient automatically receives a license from the original licensor to copy, distribute or modify the Program subject to these terms and conditions. You may not impose any further restrictions on the recipients' exercise of the rights granted herein. You are not responsible for enforcing compliance by third parties to this License.
7. If, as a consequence of a court judgment or allegation of patent infringement or for any other reason (not limited to patent issues), conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If you cannot distribute so as to satisfy simultaneously your obligations under this License and any other pertinent obligations, then as a consequence you may not distribute the Program at all. For example, if a patent license would not permit royalty-free redistribution of the Program by all those who receive copies directly or indirectly through you,

then the only way you could satisfy both it and this License would be to refrain entirely from distribution of the Program.

- If any portion of this section is held invalid or unenforceable under any particular circumstance, the balance of the section is intended to apply and the section as a whole is intended to apply in other circumstances. It is not the purpose of this section to induce you to infringe any patents or other property right claims or to contest validity of any such claims; this section has the sole purpose of protecting the integrity of the free software distribution system, which is implemented by public license practices. Many people have made generous contributions to the wide range of software distributed through that system in reliance on consistent application of that system; it is up to the author/donor to decide if he or she is willing to distribute software through any other system and a licensee cannot impose that choice. This section is intended to make thoroughly clear what is believed to be a consequence of the rest of this License.
8. If the distribution and/or use of the Program is restricted in certain countries either by patents or by copyrighted interfaces, the original copyright holder who places the Program under this License may add an explicit geographical distribution limitation excluding those countries, so that distribution is permitted only in or among countries not thus excluded. In such case, this License incorporates the limitation as if written in the body of this License.
 9. The Free Software Foundation may publish revised and/or new versions of the General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns.

Each version is given a distinguishing version number. If the Program specifies

a version number of this License which applies to it and "any later version", you have the option of following the terms and conditions either of that version or of any later version published by the Free Software Foundation. If the Program does not specify a version number of this License, you may choose any version ever published by the Free Software Foundation.

10. If you wish to incorporate parts of the Program into other free programs whose distribution conditions are different, write to the author to ask for permission. For software which is copyrighted by the Free Software Foundation, write to the Free Software Foundation; we sometimes make exceptions for this. Our decision will be guided by the two goals of preserving the free status of all derivatives of our free software and of promoting the sharing and reuse of software generally.

NO WARRANTY

11. BECAUSE THE PROGRAM IS LICENSED FREE OF CHARGE, THERE IS NO WARRANTY FOR THE PROGRAM, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE PROGRAM "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE PROGRAM IS WITH YOU. SHOULD THE PROGRAM PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.
12. IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED

TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MAY MODIFY AND/OR REDISTRIBUTE DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PROGRAM (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE PROGRAM TO OPERATE WITH ANY OTHER PROGRAMS), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

END OF TERMS AND CONDITIONS

How to Apply These Terms to Your New Programs

If you develop a new program, and you want it to be of the greatest possible use to the public, the best way to achieve this is to make it free software which everyone can redistribute and change under these terms.

To do so, attach the following notices to the program. It is safest to attach them to the start of each source file to most effectively convey the exclusion of warranty; and each file should have at least the "copyright" line and a pointer to where the full notice is found.

one line to give the program's name and an idea of what it does.

Copyright (C)yyy name of author

This program is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.

This program is distributed in the hope that it will be useful, but WITHOUT ANY

WARRANTY ; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with this program ; if not, write to the Free Software Foundation, Inc., 51 Franklin Street, Fifth Floor, Boston, MA 02110-1301, USA.

Also add information on how to contact you by electronic and paper mail. If the program is interactive, make it output a short notice like this when it starts in an interactive mode :

Gnomovision version 69,

Copyright (C) year name of author

Gnomovision comes with ABSOLUTELY NO

WARRANTY ; for details type 'show w'. This is free software, and you are welcome to redistribute it under certain conditions ; type 'show c' for details.

The hypothetical commands 'show w' and 'show c' should show the appropriate parts of the General Public License. Of course, the commands you use may be called something other than 'show w' and 'show c' ; they could even be mouse-clicks or menu items-- whatever suits your program.

You should also get your employer (if you work as a programmer) or your school, if any, to sign a "copyright disclaimer" for the program, if necessary. Here is a sample ; alter the names:

Yoyodyne, Inc., hereby disclaims all copyright interest in the program 'Gnomovision' (which makes passes at compilers) written by James Hacker.

signature of Ty Coon, 1 April 1989 Ty Coon, President of Vice This General Public License does not permit incorporating your program into proprietary programs. If your

program is a subroutine library, you may consider it more useful to permit linking proprietary applications with the library. If this is what you want to do, use the **GNU Lesser General Public License** instead of this License.

GNU GENERAL PUBLIC LICENSE

Version 3, 29 June 2007

Copyright © 2007 Free Software Foundation, Inc. <<http://fsf.org/>>

Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.

Preamble

The GNU General Public License is a free, copyleft

license for software and other kinds of works. The licenses for most software and other practical works are designed to take away your freedom to share and change the works. By contrast, the GNU General Public License is intended to guarantee your freedom to share and change all versions of a program--to make sure it remains free software for all its users. We, the Free Software Foundation, use the GNU General Public License for most of our software; it applies also to any other work released this way by its authors. You can apply it to your programs, too.

When we speak of free software, we are referring to freedom, not price. Our General Public Licenses are designed to make sure that you have the freedom to distribute copies of free software (and charge for them if you wish), that you receive source code or can get it if you want it, that you can change the software or use pieces of it in new free programs, and that you know you can do these things.

To protect your rights, we need to prevent others from denying you these rights

or asking you to surrender the rights. Therefore, you have certain responsibilities if you distribute copies of the software, or if you modify it: responsibilities to respect the freedom of others.

For example, if you distribute copies of such a program, whether gratis or for a fee, you must pass on to the recipients the same freedoms that you received. You must make sure that they, too, receive or can get the source code. And you must show them these terms so they know their rights.

Developers that use the GNU GPL protect your rights with two steps: (1) assert copyright on the software, and (2) offer you this License giving you legal permission to copy, distribute and/or modify it.

For the developers' and authors' protection, the GPL clearly explains that there is no warranty for this free software. For both users' and authors' sake, the GPL requires that modified versions be marked as changed, so that their problems will not be attributed erroneously to authors of previous versions.

Some devices are designed to deny users access to install or run modified versions of the software inside them, although the manufacturer can do so. This is fundamentally incompatible with the aim of protecting users' freedom to change the software. The systematic pattern of such abuse occurs in the area of products for individuals to use, which is precisely where it is most unacceptable. Therefore, we have designed this version of the GPL to prohibit the practice for those products. If such problems arise substantially in other domains, we stand ready to extend this provision to those domains in future versions of the GPL, as needed to protect the freedom of users.

Finally, every program is threatened constantly by software patents. States should not allow patents to restrict

development and use of software on general-purpose computers, but in those that do, we wish to avoid the special danger that patents applied to a free program could make it effectively proprietary. To prevent this, the GPL assures that patents cannot be used to render the program non-free.

The precise terms and conditions for copying, distribution and modification follow.

TERMS AND CONDITIONS

0. Definitions.

"This License" refers to version 3 of the GNU General Public License.

"Copyright" also means copyright-like laws that apply to other kinds of works, such as semiconductor masks.

"The Program" refers to any copyrightable work licensed under this License. Each licensee is addressed as "you". "Licensees" and "recipients" may be individuals or organizations.

To "modify" a work means to copy from or adapt all or part of the work in a fashion requiring copyright permission, other than the making of an exact copy. The resulting work is called a "modified version" of the earlier work or a work "based on" the earlier work.

A "covered work" means either the unmodified Program or a work based on the Program.

To "propagate" a work means to do anything with it that, without permission, would make you directly or secondarily liable for infringement under applicable copyright law, except executing it on a computer or modifying a private copy. Propagation includes copying, distribution (with or without modification), making available to the public, and in some countries other activities as well.

To "convey" a work means any kind of propagation that enables other parties to make or receive copies. Mere interaction with a user through a computer network, with no transfer of a copy, is not conveying.

An interactive user interface displays "Appropriate Legal Notices" to the extent that it includes a convenient and prominently visible feature that (1) displays an appropriate copyright notice, and (2) tells the user that there is no warranty for the work (except to the extent that warranties are provided), that licensees may convey the work under this License, and how to view a copy of this License. If the interface presents a list of user commands or options, such as a menu, a prominent item in the list meets this criterion.

1. Source Code.

The "source code" for a work means the preferred form of the work for making modifications to it. "Object code" means any non-source form of a work.

A "Standard Interface" means an interface that either is an official standard defined by a recognized standards body, or, in the case of interfaces specified for a particular programming language, one that is widely used among developers working in that language.

The "System Libraries" of an executable work include anything, other than the work as a whole, that (a) is included in the normal form of packaging a Major Component, but which is not part of that Major Component, and (b) serves only to enable use of the work with that Major Component, or to implement a Standard Interface for which an implementation is available to the public in source code form. A "Major Component", in this context, means a major essential component (kernel, window system, and so on) of the specific operating system (if any) on which the executable work runs, or a compiler used to produce the work, or an object code interpreter used to run it.

The "Corresponding Source" for a work in object code form means all the source code needed to generate, install, and (for an executable work) run the object code and to modify the work, including scripts to control those activities. However, it does not include the work's System Libraries, or general-purpose tools or generally available free programs which are used unmodified in

performing those activities but which are not part of the work. For example, Corresponding Source includes interface definition files associated with source files for the work, and the source code for shared libraries and dynamically linked subprograms that the work is specifically designed to require, such as by intimate data communication or control flow between those subprograms and other parts of the work.

The Corresponding Source need not include anything that users can regenerate automatically from other parts of the Corresponding Source.

The Corresponding Source for a work in source code form is that same work.

2. Basic Permissions.

All rights granted under this License are granted for the term of copyright on the Program, and are irrevocable provided the stated conditions are met. This License explicitly affirms your unlimited permission to run the unmodified Program. The output from running a covered work is covered by this License only if the output, given its content, constitutes a covered work. This License acknowledges your rights of fair use or other equivalent, as provided by copyright law.

You may make, run and propagate covered works that you do not convey, without conditions so long as your license otherwise remains in force. You may convey covered works to others for the sole purpose of having them make modifications exclusively for you, or provide you with facilities for running those works, provided that you comply with the terms of this License in conveying all material for which you do not control copyright. Those thus making or running the covered works for you must do so exclusively on your behalf, under your direction and control, on terms that prohibit them from making any copies of your copyrighted material outside their relationship with you.

Conveying under any other circumstances is permitted solely under the conditions stated below. Sublicensing is not allowed; section 10 makes it unnecessary.

3. Protecting Users' Legal Rights From Anti-Circumvention Law.

No covered work shall be deemed part of an effective technological measure under any applicable law fulfilling obligations under article 11 of the WIPO copyright treaty adopted on 20 December 1996, or similar laws prohibiting or restricting circumvention of such measures.

When you convey a covered work, you waive any legal power to forbid circumvention of technological measures to the extent such circumvention is effected by exercising rights under this License with respect to the covered work, and you disclaim any intention to limit operation or modification of the work as a means of enforcing, against the work's users, your or third parties' legal rights to forbid circumvention of technological measures.

4. Conveying Verbatim Copies.

You may convey verbatim copies of the Program's source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice; keep intact all notices stating that this License and any non-permissive terms added in accord with section 7 apply to the code; keep intact all notices of the absence of any warranty; and give all recipients a copy of this License along with the Program.

You may charge any price or no price for each copy that you convey, and you may offer support or warranty protection for a fee.

5. Conveying Modified Source Versions.

You may convey a work based on the Program, or the modifications to produce it from the Program, in the form of source code under the terms of section 4, provided that you also meet all of these conditions:

- a) The work must carry prominent notices stating that you modified it, and giving a relevant date.
- b) The work must carry prominent notices stating that it is released under this License and any conditions added under section 7. This requirement modifies the requirement in section 4 to "keep intact all notices".

c) You must license the entire work, as a whole, under this License to anyone who comes into possession of a copy. This License will therefore apply, along with any applicable section 7 additional terms, to the whole of the work, and all its parts, regardless of how they are packaged. This License gives no permission to license the work in any other way, but it does not invalidate such permission if you have separately received it.

d) If the work has interactive user interfaces, each must display Appropriate Legal Notices; however, if the Program has interactive interfaces that do not display Appropriate Legal Notices, your work need not make them do so.

A compilation of a covered work with other separate and independent works, which are not by their nature extensions of the covered work, and which are not combined with it such as to form a larger program, in or on a volume of a storage or distribution medium, is called an "aggregate" if the compilation and its resulting copyright are not used to limit the access or legal rights of the compilation's users beyond what the individual works permit. Inclusion of a covered work in an aggregate does not cause this License to apply to the other parts of the aggregate.

6. Conveying Non-Source Forms.

You may convey a covered work in object code form under the terms of sections 4 and 5, provided that you also convey the machine-readable Corresponding Source under the terms of this License, in one of these ways:

- a) Convey the object code in, or embodied in, a physical product (including a physical distribution medium), accompanied by the Corresponding Source fixed on a durable physical medium customarily used for software interchange.
- b) Convey the object code in, or embodied in, a physical product (including a physical distribution medium), accompanied by a written offer, valid for at least three years and valid for as long as you offer spare parts or customer support for that product

model, to give anyone who possesses the object code either (1) a copy of the Corresponding Source for all the software in the product that is covered by this License, on a durable physical medium customarily used for software interchange, for a price no more than your reasonable cost of physically performing this conveying of source, or (2) access to copy the Corresponding Source from a network server at no charge.

- c) Convey individual copies of the object code with a copy of the written offer to provide the corresponding Source. This alternative is allowed only occasionally and noncommercially, and only if you received the object code with such an offer, in accord with subsection 6b.
- d) Convey the object code by offering access from a designated place (gratis or for a charge), and offer equivalent access to the Corresponding Source in the same way through the same place at no further charge. You need not require recipients to copy the Corresponding Source along with the object code. If the place to copy the object code is a network server, the Corresponding Source may be on a different server (operated by you or a third party) that supports equivalent copying facilities, provided you maintain clear directions next to the object code saying where to find the Corresponding Source. Regardless of what server hosts the Corresponding Source, you remain obligated to ensure that it is available for as long as needed to satisfy these requirements.
- e) Convey the object code using peer-to-peer transmission, provided you inform other peers where the object code and Corresponding Source of the work are being offered to the general public at no charge under subsection 6d.

A separable portion of the object code, whose source code is excluded from the Corresponding Source as a System Library, need not be included in conveying the object code work.

A “User Product” is either (1) a “consumer product”, which means any tangible personal property which is normally used for personal, family, or household purposes, or (2) anything designed or sold for incorporation into a dwelling. In determining whether a product is a consumer product, doubtful cases shall be resolved in favor of coverage. For a particular product received by a particular user, “normally used” refers to a typical or common use of that class of product, regardless of the status of the particular user or of the way in which the particular user actually uses, or expects or is expected to use, the product. A product is a consumer product regardless of whether the product has substantial commercial, industrial or non-consumer uses, unless such uses represent the only significant mode of use of the product.

“Installation Information” for a User Product means any methods, procedures, authorization keys, or other information required to install and execute modified versions of a covered work in that User Product from a modified version of its Corresponding Source. The information must suffice to ensure that the continued functioning of the modified object code is in no case prevented or interfered with solely because modification has been made.

If you convey an object code work under this section in, or with, or specifically for use in, a User Product, and the conveying occurs as part of a transaction in which the right of possession and use of the User Product is transferred to the recipient in perpetuity or for a fixed term (regardless of how the transaction is characterized), the Corresponding Source conveyed under this section must be accompanied by the Installation Information. But this requirement does not apply if neither you nor any third party retains the ability to install modified object code on the User Product (for example, the work has been installed in ROM).

The requirement to provide Installation Information does not include a requirement to continue to provide support service, warranty, or updates for a work that has been modified

or installed by the recipient, or for the User Product in which it has been modified or installed. Access to a network may be denied when the modification itself materially and adversely affects the operation of the network or violates the rules and protocols for communication across the network.

Corresponding Source conveyed, and Installation Information provided, in accord with this section must be in a format that is publicly documented (and with an implementation available to the public in source code form), and must require no special password or key for unpacking, reading or copying.

7. Additional Terms.

“Additional permissions” are terms that supplement the terms of this License by making exceptions from one or more of its conditions. Additional permissions that are applicable to the entire Program shall be treated as though they were included in this License, to the extent that they are valid under applicable law. If additional permissions apply only to part of the Program, that part may be used separately under those permissions, but the entire Program remains governed by this License without regard to the additional permissions.

When you convey a copy of a covered work, you may at your option remove any additional permissions from that copy, or from any part of it. (Additional permissions may be written to require their own removal in certain cases when you modify the work.) You may place additional permissions on material, added by you to a covered work, for which you have or can give appropriate copyright permission.

Notwithstanding any other provision of this License, for material you add to a covered work, you may (if authorized by the copyright holders of that material) supplement the terms of this License with terms:

- a) Disclaiming warranty or limiting liability differently from the terms of sections 15 and 16 of this License; or
- b) Requiring preservation of specified reasonable legal notices or author attributions in that material or in the Appropriate Legal Notices displayed by

works containing it; or

- c) Prohibiting misrepresentation of the origin of that material, or requiring that modified versions of such material be marked in reasonable ways as different from the original version; or
- d) Limiting the use for publicity purposes of names of licensors or authors of the material; or
- e) Declining to grant rights under trademark law for use of some trade names, trademarks, or service marks; or
- f) Requiring indemnification of licensors and authors of that material by anyone who conveys the material (or modified versions of it) with contractual assumptions of liability to the recipient, for any liability that these contractual assumptions directly impose on those licensors and authors.

All other non-permissive additional terms are considered “further restrictions” within the meaning of section 10. If the Program as you received it, or any part of it, contains a notice stating that it is governed by this License along with a term that is a further restriction, you may remove that term. If a license document contains a further restriction but permits relicensing or conveying under this License, you may add to a covered work material governed by the terms of that license document, provided that the further restriction does not survive such relicensing or conveying.

If you add terms to a covered work in accord with this section, you must place, in the relevant source files, a statement of the additional terms that apply to those files, or a notice indicating where to find the applicable terms.

Additional terms, permissive or non-permissive, may be stated in the form of a separately written license, or stated as exceptions; the above requirements apply either way.

8. Termination.

You may not propagate or modify a covered work except as expressly provided under this License. Any attempt otherwise to propagate

or modify it is void, and will automatically terminate your rights under this License (including any patent licenses granted under the third paragraph of section 11).

However, if you cease all violation of this License, then your license from a particular copyright holder is reinstated (a) provisionally, unless and until the copyright holder explicitly and finally terminates your license, and (b) permanently, if the copyright holder fails to notify you of the violation by some reasonable means prior to 60 days after the cessation.

Moreover, your license from a particular copyright holder is reinstated permanently if the copyright holder notifies you of the violation by some reasonable means, this is the first time you have received notice of violation of this License (for any work) from that copyright holder, and you cure the violation prior to 30 days after your receipt of the notice.

Termination of your rights under this section does not terminate the licenses of parties who have received copies or rights from you under this License. If your rights have been terminated and not permanently reinstated, you do not qualify to receive new licenses for the same material under section 10.

9. Acceptance Not Required for Having Copies.

You are not required to accept this License in order to receive or run a copy of the Program. Ancillary propagation of a covered work occurring solely as a consequence of using peer-to-peer transmission to receive a copy likewise does not require acceptance. However, nothing other than this License grants you permission to propagate or modify any covered work. These actions infringe copyright if you do not accept this License. Therefore, by modifying or propagating a covered work, you indicate your acceptance of this License to do so.

10. Automatic Licensing of Downstream Recipients.

Each time you convey a covered work, the recipient automatically receives a license

from the original licensors, to run, modify and propagate that work, subject to this License. You are not responsible for enforcing compliance by third parties with this License.

An “entity transaction” is a transaction transferring control of an organization, or substantially all assets of one, or subdividing an organization, or merging organizations. If propagation of a covered work results from an entity transaction, each party to that transaction who receives a copy of the work also receives whatever licenses to the work the party's predecessor in interest had or could give under the previous paragraph, plus a right to possession of the Corresponding Source of the work from the predecessor in interest, if the predecessor has it or can get it with reasonable efforts.

You may not impose any further restrictions on the exercise of the rights granted or affirmed under this License. For example, you may not impose a license fee, royalty, or other charge for exercise of rights granted under this License, and you may not initiate litigation (including a cross-claim or counterclaim in a lawsuit) alleging that any patent claim is infringed by making, using, selling, offering for sale, or importing the Program or any portion of it.

11. Patents.

A “contributor” is a copyright holder who authorizes use under this License of the Program or a work on which the Program is based. The work thus licensed is called the contributor's “contributor version”.

A contributor's “essential patent claims” are all patent claims owned or controlled by the contributor, whether already acquired or hereafter acquired, that would be infringed by some manner, permitted by this License, of making, using, or selling its contributor version, but do not include claims that would be infringed only as a consequence of further modification of the contributor version. For purposes of this definition, “control” includes the right to grant patent sublicenses in a manner consistent with the requirements of this License.

Each contributor grants you a non-exclusive, worldwide, royalty-free patent license under the contributor's essential patent claims, to make, use, sell, offer for sale, import and otherwise run, modify and propagate the contents of its contributor version.

In the following three paragraphs, a "patent license" is any express agreement or commitment, however denominated, not to enforce a patent (such as an express permission to practice a patent or covenant not to sue for patent infringement). To "grant" such a patent license to a party means to make such an agreement or commitment not to enforce a patent against the party.

If you convey a covered work, knowingly relying on a patent license, and the Corresponding Source of the work is not available for anyone to copy, free of charge and under the terms of this License, through a publicly available network server or other readily accessible means, then you must either (1) cause the Corresponding Source to be so available, or (2) arrange to deprive yourself of the benefit of the patent license for this particular work, or (3) arrange, in a manner consistent with the requirements of this License, to extend the patent license to downstream recipients. "Knowingly relying" means you have actual knowledge that, but for the patent license, your conveying the covered work in a country, or your recipient's use of the covered work in a country, would infringe one or more identifiable patents in that country that you have reason to believe are valid.

If, pursuant to or in connection with a single transaction or arrangement, you convey, or propagate by procuring conveyance of, a covered work, and grant a patent license to some of the parties receiving the covered work authorizing them to use, propagate, modify or convey a specific copy of the covered work, then the patent license you grant is automatically extended to all recipients of the covered work and works based on it.

A patent license is "discriminatory" if it does not include within the scope of its coverage,

prohibits the exercise of, or is conditioned on the non-exercise of one or more of the rights that are specifically granted under this License. You may not convey a covered work if you are a party to an arrangement with a third party that is in the business of distributing software, under which you make payment to the third party based on the extent of your activity of conveying the work, and under which the third party grants, to any of the parties who would receive the covered work from you, a discriminatory patent license

- (a) in connection with copies of the covered work conveyed by you (or copies made from those copies), or
- (b) primarily for and in connection with specific products or compilations that contain the covered work, unless you entered into that arrangement, or that patent license was granted, prior to 28 March 2007.

Nothing in this License shall be construed as excluding or limiting any implied license or other defenses to infringement that may otherwise be available to you under applicable patent law.

12. No Surrender of Others' Freedom.

If conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If you cannot convey a covered work so as to satisfy simultaneously your obligations under this License and any other pertinent obligations, then as a consequence you may not convey it at all. For example, if you agree to terms that obligate you to collect a royalty for further conveying from those to whom you convey the Program, the only way you could satisfy both those terms and this License would be to refrain entirely from conveying the Program.

13. Use with the GNU Affero General Public License.

Notwithstanding any other provision of this License, you have permission to link or combine any covered work with a work licensed under version 3 of the GNU Affero General Public License into a single combined

work, and to convey the resulting work. The terms of this License will continue to apply to the part which is the covered work, but the special requirements of the GNU Affero General Public License, section 13, concerning interaction through a network will apply to the combination as such.

14. Revised Versions of this License.

The Free Software Foundation may publish revised and/ or new versions of the GNU General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns.

Each version is given a distinguishing version number. If the Program specifies that a certain numbered version of the GNU General Public License "or any later version" applies to it, you have the option of following the terms and conditions either of that numbered version or of any later version published by the Free Software Foundation. If the Program does not specify a version number of the GNU General Public License, you may choose any version ever published by the Free Software Foundation.

If the Program specifies that a proxy can decide which future versions of the GNU General Public License can be used, that proxy's public statement of acceptance of a version permanently authorizes you to choose that version for the Program.

Later license versions may give you additional or different permissions. However, no additional obligations are imposed on any author or copyright holder as a result of your choosing to follow a later version.

15. Disclaimer of Warranty.

THERE IS NO WARRANTY FOR THE PROGRAM, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE PROGRAM "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED

TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE PROGRAM IS WITH YOU. SHOULD THE PROGRAM PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.

16. Limitation of Liability.

IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MODIFIES AND/OR CONVEYS THE PROGRAM AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PROGRAM (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE PROGRAM TO OPERATE WITH ANY OTHER PROGRAMS), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

17. Interpretation of Sections 15 and 16.

If the disclaimer of warranty and limitation of liability provided above cannot be given local legal effect according to their terms, reviewing courts shall apply local law that most closely approximates an absolute waiver of all civil liability in connection with the Program, unless a warranty or assumption of liability accompanies a copy of the Program in return for a fee.

END OF TERMS AND CONDITIONS

GNU LESSER GENERAL PUBLIC LICENSE

Version 2.1, February 1999

Copyright (C) 1991, 1999 Free Software Foundation, Inc. 51 Franklin Street, Fifth Floor, Boston, MA 02110-1301

USA Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.

[This is the first released version of the Lesser GPL. It also counts as the successor of the GNU Library Public License, version 2, hence the version number 2.1.]

Preamble

The licenses for most software are designed to take away your freedom to share and change it. By contrast, the GNU General Public Licenses are intended to guarantee your freedom to share and change free software to make sure the software is free for all its users.

This license, the Lesser General Public License, applies to some specially designated software packages—typically libraries—of the Free Software Foundation and other authors who decide to use it. You can use it too, but we suggest you first think carefully about whether this license or the ordinary General Public License is the better strategy to use in any particular case, based on the explanations below.

When we speak of free software, we are referring to freedom of use, not price. Our General Public Licenses are designed to make sure that you have the freedom to distribute copies of free software (and charge for this service if you wish); that you receive source code or can get it if you want it; that you can change the software and use pieces of it in new free programs; and that you are informed that you can do these things.

To protect your rights, we need to make restrictions that forbid distributors to deny you these rights or to ask you to surrender these rights. These restrictions translate to certain responsibilities for you if you distribute copies of the library or if you modify it.

For example, if you distribute copies of the library, whether gratis or for a fee, you must give the recipients all the rights that

we gave you. You must make sure that they, too, receive or can get the source code. If you link other code with the library, you must provide complete object files to the recipients, so that they can relink them with the library after making changes to the library and recompiling it. And you must show them these terms so they know their rights.

We protect your rights with a two-step method: (1) we copyright the library, and (2) we offer you this license, which gives you legal permission to copy, distribute and/or modify the library.

To protect each distributor, we want to make it very clear that there is no warranty for the free library. Also, if the library is modified by someone else and passed on, the recipients should know that what they have is not the original version, so that the original author's reputation will not be affected by problems that might be introduced by others.

Finally, software patents pose a constant threat to the existence of any free program. We wish to make sure that a company cannot effectively restrict the users of a free program by obtaining a restrictive license from a patent holder. Therefore, we insist that any patent license obtained for a version of the library must be consistent with the full freedom of use specified in this license.

Most GNU software, including some libraries, is covered by the ordinary GNU General Public License. This license, the GNU Lesser General Public License, applies to certain designated libraries, and is quite different from the ordinary General Public License. We use this license for certain libraries in order to permit linking those libraries into non-free programs.

When a program is linked with a library, whether statically or using a shared library, the combination of the two is legally speaking a combined work, a derivative of the original library. The ordinary General

Public License therefore permits such linking only if the entire combination fits its criteria of freedom. The Lesser General Public License permits more lax criteria for linking other code with the library.

We call this license the “Lesser” General Public License because it does Less to protect the user’s freedom than the ordinary General Public License. It also provides other free software developers Less of an advantage over competing non-free programs. These disadvantages are the reason we use the ordinary General Public License for many libraries. However, the Lesser license provides advantages in certain special circumstances.

For example, on rare occasions, there may be a special need to encourage the widest possible use of a certain library, so that it becomes a de-facto standard. To achieve this, non-free programs must be allowed to use the library. A more frequent case is that a free library does the same job as widely used non-free libraries. In this case, there is little to gain by limiting the free library to free software only, so we use the Lesser General Public License.

In other cases, permission to use a particular library in non-free programs enables a greater number of people to use a large body of free software. For example, permission to use the GNU C Library in non-free programs enables many more people to use the whole GNU operating system, as well as its variant, the GNU/Linux operating system.

Although the Lesser General Public License is Less protective of the users’ freedom, it does ensure that the user of a program that is linked with the Library has the freedom and the wherewithal to run that program using a modified version of the Library.

The precise terms and conditions for copying, distribution and modification follow. Pay close attention to the difference between a “work based on the library” and

a “work that uses the library”. The former contains code derived from the library, whereas the latter must be combined with the library in order to run.

TERMS AND CONDITIONS FOR COPYING, DISTRIBUTION AND MODIFICATION

0. This License Agreement applies to any software library or other program which contains a notice placed by the copyright holder or other authorized party saying it may be distributed under the terms of this Lesser General Public License (also called “this License”). Each licensee is addressed as “you”.

A “library” means a collection of software functions and/ or data prepared so as to be conveniently linked with application programs (which use some of those functions and data) to form executables.

The “Library”, below, refers to any such software library or work which has been distributed under these terms. A “work based on the Library” means either the Library or any derivative work under copyright law: that is to say, a work containing the Library or a portion of it, either verbatim or with modifications and/or translated straightforwardly into another language. (Hereinafter, translation is included without limitation in the term “modification”).

“Source code” for a work means the preferred form of the work for making modifications to it. For a library, complete source code means all the source code for all modules it contains, plus any associated interface definition files, plus the scripts used to control compilation and installation of the library.

Activities other than copying, distribution and modification are not covered by this License; they are outside its scope. The act of running a program using the Library is not restricted, and output from such a program

is covered only if its contents constitute a work based on the Library (independent of the use of the Library in a tool for writing it). Whether that is true depends on what the Library does and what the program that uses the Library does.

1. You may copy and distribute verbatim copies of the Library's complete source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice and disclaimer of warranty; keep intact all the notices that refer to this License and to the absence of any warranty; and distribute a copy of this License along with the Library.

You may charge a fee for the physical act of transferring a copy, and you may at your option offer warranty protection in exchange for a fee.

2. You may modify your copy or copies of the Library or any portion of it, thus forming a work based on the Library, and copy and distribute such modifications or work under the terms of Section 1 above, provided that you also meet all of these conditions:

a) The modified work must itself be a software library. b) You must cause the files modified to carry prominent notices stating that you changed the files and the date of any change. c) You must cause the whole of the work to be licensed at no charge to all third parties under the terms of this License. d) If a facility in the modified Library refers to a function or a table of data to be supplied by an application program that uses the facility, other than as an argument passed when the facility is invoked, then you must make a good faith effort to ensure that, in the event an application does not supply such function or table, the facility still operates, and performs whatever part of its purpose remains meaningful. (For example, a function in a library to compute square roots has a purpose that is entirely

well-defined independent of the application. Therefore, Subsection 2d requires that any application-supplied function or table used by this function must be optional: if the application does not supply it, the square root function must still compute square roots.) These requirements apply to the modified work as a whole. If identifiable sections of that work are not derived from the Library, and can be reasonably considered independent and separate works in themselves, then this License, and its terms, do not apply to those sections when you distribute them as separate works. But when you distribute the same sections as part of a whole which is a work based on the Library, the distribution of the whole must be on the terms of this License, whose permissions for other licensees extend to the entire whole, and thus to each and every part regardless of who wrote it.

Thus, it is not the intent of this section to claim rights or contest your rights to work written entirely by you; rather, the intent is to exercise the right to control the distribution of derivative or collective works based on the Library.

In addition, mere aggregation of another work not based on the Library with the Library (or with a work based on the Library) on a volume of a storage or distribution medium does not bring the other work under the scope of this License.

3. You may opt to apply the terms of the ordinary GNU General Public License instead of this License to a given copy of the Library. To do this, you must alter all the notices that refer to this License, so that they refer to the ordinary GNU General Public License, version 2, instead of to this License. (If a newer version than version 2 of the ordinary GNU General Public License has appeared, then you can specify that version instead if you wish.) Do not make any other change in these notices.

Once this change is made in a given copy,

it is irreversible for that copy, so the ordinary GNU General Public License applies to all subsequent copies and derivative works made from that copy.

This option is useful when you wish to copy part of the code of the Library into a program that is not a library.

4. You may copy and distribute the Library (or a portion or derivative of it, under Section 2) in object code or executable form under the terms of Sections 1 and 2 above provided that you accompany it with the complete corresponding machine-readable source code, which must be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange.

If distribution of object code is made by offering access to copy from a designated place, then offering equivalent access to copy the source code from the same place satisfies the requirement to distribute the source code, even though third parties are not compelled to copy the source along with the object code.

5. A program that contains no derivative of any portion of the Library, but is designed to work with the Library by being compiled or linked with it, is called a “work that uses the Library”. Such a work, in isolation, is not a derivative work of the Library, and therefore falls outside the scope of this License.

However, linking a “work that uses the Library” with the Library creates an executable that is a derivative of the Library (because it contains portions of the Library), rather than a “work that uses the library”. The executable is therefore covered by this License. Section 6 states terms for distribution of such executables.

When a “work that uses the Library” uses material from a header file that is part of the Library, the object code for the work may be a derivative work of the Library even

though the source code is not. Whether this is true is especially significant if the work can be linked without the Library, or if the work is itself a library. The threshold for this to be true is not precisely defined by law.

If such an object file uses only numerical parameters, data structure layouts and accessors, and small macros and small inline functions (ten lines or less in length), then the use of the object file is unrestricted, regardless of whether it is legally a derivative work. (Executables containing this object code plus portions of the Library will still fall under Section 6.)

Otherwise, if the work is a derivative of the Library, you may distribute the object code for the work under the terms of Section 6. Any executables containing that work also fall under Section 6, whether or not they are linked directly with the Library itself.

6. As an exception to the Sections above, you may also combine or link a “work that uses the Library” with the Library to produce a work containing portions of the Library, and distribute that work under terms of your choice, provided that the terms permit modification of the work for the customer’s own use and reverse engineering for debugging such modifications.

You must give prominent notice with each copy of the work that the Library is used in it and that the Library and its use are covered by this License. You must supply a copy of this License. If the work during execution displays copyright notices, you must include the copyright notice for the Library among them, as well as a reference directing the user to the copy of this License. Also, you must do one of these things:

- a) Accompany the work with the complete corresponding machine-readable source code for the Library including whatever changes were used in the work (which must be distributed under Sections

1 and 2 above); and, if the work is an executable linked with the Library, with the complete machine readable “work that uses the Library”, as object code and/or source code, so that the user can modify the Library and then relink to produce a modified executable containing the modified Library. (It is understood that the user who changes the contents of definitions files in the Library will not necessarily be able to recompile the application to use the modified definitions.)

b) Use a suitable shared library mechanism for linking with the Library. A suitable mechanism is one that

(1) uses at run time a copy of the library already present on the user's computer system, rather than copying library functions into the executable, and (2) will operate properly with a modified version of the library, if the user installs one, as long as the modified version is interface-compatible with the version that the work was made with.

c) Accompany the work with a written offer, valid for at least three years, to give the same user the materials specified in Subsection 6a, above, for a charge no more than the cost of performing this distribution.

d) If distribution of the work is made by offering access to copy from a designated place, offer equivalent access to copy the above specified materials from the same place.

e) Verify that the user has already received a copy of these materials or that you have already sent this user a copy.

For an executable, the required form of the “work that uses the Library” must include any data and utility programs needed for reproducing the executable from it. However, as a special exception, the materials to be distributed need not include anything that is normally distributed (in

either source or binary form) with the major components (compiler, kernel, and so on) of the operating system on which the executable runs, unless that component itself accompanies the executable.

It may happen that this requirement contradicts the license restrictions of other proprietary libraries that do not normally accompany the operating system. Such a contradiction means you cannot use both them and the Library together in an executable that you distribute.

7. You may place library facilities that are a work based on the Library side-by-side in a single library together with other library facilities not covered by this License, and distribute such a combined library, provided that the separate distribution of the work based on the Library and of the other library facilities is otherwise permitted, and provided that you do these two things:

a) Accompany the combined library with a copy of the same work based on the Library, uncombined with any other library facilities. This must be distributed under the terms of the Sections above.

b) Give prominent notice with the combined library of the fact that part of it is a work based on the Library, and explaining where to find the accompanying uncombined form of the same work.

8. You may not copy, modify, sublicense, link with, or distribute the Library except as expressly provided under this License. Any attempt otherwise to copy, modify, sublicense, link with, or distribute the Library is void, and will automatically terminate your rights under this License. However, parties who have received copies, or rights, from you under this License will not have their licenses terminated so long as such parties remain in full compliance.

9. You are not required to accept this License, since you have not signed

it. However, nothing else grants you permission to modify or distribute the Library or its derivative works. These actions are prohibited by law if you do not accept this License. Therefore, by modifying or distributing the Library (or any work based on the Library), you indicate your acceptance of this License to do so, and all its terms and conditions for copying, distributing or modifying the Library or works based on it.

10. Each time you redistribute the Library (or any work based on the Library), the recipient automatically receives a license from the original licensor to copy, distribute, link with or modify the Library subject to these terms and conditions. You may not impose any further restrictions on the recipients' exercise of the rights granted herein. You are not responsible for enforcing compliance by third parties with this License.
11. If, as a consequence of a court judgment or allegation of patent infringement or for any other reason (not limited to patent issues), conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If you cannot distribute so as to satisfy simultaneously your obligations under this License and any other pertinent obligations, then as a consequence you may not distribute the Library at all. For example, if a patent license would not permit royalty free redistribution of the Library by all those who receive copies directly or indirectly through you, then the only way you could satisfy both it and this License would be to refrain entirely from distribution of the Library.

If any portion of this section is held invalid or unenforceable under any particular circumstance, the balance of the section

is intended to apply, and the section as a whole is intended to apply in other circumstances.

It is not the purpose of this section to induce you to infringe any patents or other property right claims or to contest validity of any such claims; this section has the sole purpose of protecting the integrity of the free software distribution system which is implemented by public license practices. Many people have made generous contributions to the wide range of software distributed through that system in reliance on consistent application of that system; it is up to the author/donor to decide if he or she is willing to distribute software through any other system and a licensee cannot impose that choice.

This section is intended to make thoroughly clear what is believed to be a consequence of the rest of this License.

12. If the distribution and/or use of the Library is restricted in certain countries either by patents or by copyrighted interfaces, the original copyright holder who places the Library under this License may add an explicit geographical distribution limitation excluding those countries, so that distribution is permitted only in or among countries not thus excluded. In such case, this License incorporates the limitation as if written in the body of this License.
13. The Free Software Foundation may publish revised and/or new versions of the Lesser General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns.

Each version is given a distinguishing version number. If the Library specifies a version number of this License which applies to it and "any later version", you have the option of following the terms and conditions either of that version or of any

later version published by the Free Software Foundation. If the Library does not specify a license version number, you may choose any version ever published by the Free Software Foundation.

14. If you wish to incorporate parts of the Library into other free programs whose distribution conditions are incompatible with these, write to the author to ask for permission. For software which is copyrighted by the Free Software Foundation, write to the Free Software Foundation; we sometimes make exceptions for this. Our decision will be guided by the two goals of preserving the free status of all derivatives of our free software and of promoting the sharing and reuse of software generally.

NO WARRANTY

15. BECAUSE THE LIBRARY IS LICENSED FREE OF CHARGE, THERE IS NO WARRANTY FOR THE LIBRARY, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE LIBRARY "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE LIBRARY IS WITH YOU. SHOULD THE LIBRARY PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.
16. IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MAY MODIFY AND/OR REDISTRIBUTE THE LIBRARY AS

PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE LIBRARY (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE LIBRARY TO OPERATE WITH ANY OTHER SOFTWARE), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

END OF TERMS AND CONDITIONS

How to Apply These Terms to Your New Libraries

If you develop a new library, and you want it to be of the greatest possible use to the public, we recommend making it free software that everyone can redistribute and change. You can do so by permitting redistribution under these terms (or, alternatively, under the terms of the ordinary General Public License).

To apply these terms, attach the following notices to the library. It is safest to attach them to the start of each source file to most effectively convey the exclusion of warranty; and each file should have at least the "copyright" line and a pointer to where the full notice is found. one line to give the library's name and an idea of what it does.

Copyright (C) year name of author

This library is free software; you can redistribute it and/ or modify it under the terms of the GNU Lesser General Public License as published by the Free Software Foundation; either version 2.1 of the License, or (at your option) any later version.

This library is distributed in the hope that it will be useful, but WITHOUT ANY

WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU Lesser General Public License for more details.

You should have received a copy of the GNU Lesser General Public License along with this library; if not, write to the Free Software Foundation, Inc., 51 Franklin Street, Fifth Floor, Boston, MA 02110-1301 USA Also add information on how to contact you by electronic and paper mail.

You should also get your employer (if you work as a programmer) or your school, if any, to sign a "copyright disclaimer" for the library, if necessary. Here is a sample; alter the names:

Yoyodyne, Inc., hereby disclaims all copyright interest in the library 'Frob' (a library for tweaking knobs) written by James Random Hacker.

signature of Ty Coon, 1 April 1990 Ty Coon, President of Vice.

OpenSSL LICENSE

Copyright (c) 1998-2006 The OpenSSL Project. All rights reserved. Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. All advertising materials mentioning features or use of this software must display the following acknowledgment: "This product includes software developed by the OpenSSL Project for

use in the OpenSSL Toolkit. (<http://www.openssl.org/>)"

4. The names "OpenSSL Toolkit" and "OpenSSL Project" must not be used to endorse or promote products derived from this software without prior written permission. For written permission, please contact openssl-core@openssl.org.
5. Products derived from this software may not be called "OpenSSL" nor may "OpenSSL" appear in their names without prior written permission of the OpenSSL Project.
6. Redistributions of any form whatsoever must retain the following acknowledgment: "This product includes software developed by the OpenSSL Project for use in the OpenSSL Toolkit (<http://www.openssl.org/>)"

THIS SOFTWARE IS PROVIDED BY THE OPENSSL PROJECT "AS IS" AND ANY EXPRESSED OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE OPENSSL PROJECT OR ITS CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE. This product includes cryptographic software written by Eric Young (eyay@cryptsoft.com). This product includes software written by Tim Hudson (tjh@cryptsoft.com).

Original SSLeay License

Copyright (C) 1995-1998 Eric Young (eay@cryptsoft.com) All rights reserved. This package is an SSL implementation written by Eric Young (eay@cryptsoft.com).

The implementation was written so as to conform with Netscapes SSL. This library is free for commercial and non-commercial use as long as the following conditions are aheared to. The following conditions apply to all code found in this distribution, be it the RC4, RSA, lhash, DES, etc., code; not just the SSL code. The SSL documentation included with this distribution is covered by the same copyright terms except that the holder is Tim Hudson (tjh@cryptsoft.com).

Copyright remains Eric Young's, and as such any Copyright notices in the code are not to be removed. If this package is used in a product, Eric Young should be given attribution as the author of the parts of the library used. This can be in the form of a textual message at program startup or in documentation (online or textual) provided with the package. Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. All advertising materials mentioning features or use of this software must display the following acknowledgement: "This product includes cryptographic software written by Eric Young (eay@cryptsoft.com)" The word 'cryptographic' can be left out if the rouines from the library being used are not cryptographic related :-).

4. If you include any Windows specific code (or a derivative thereof) from the apps directory (application code) you must include an acknowledgement: "This product includes software written by Tim Hudson (tjh@cryptsoft.com)"

THIS SOFTWARE IS PROVIDED BY ERIC YOUNG "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

The licence and distribution terms for any publically available version or derivative of this code cannot be changed. i.e. this code cannot simply be copied and put under another distribution licence [including the GNU Public Licence].



Samsung Techwin värnar om miljön i alla produkttillverkningssteg och vidtar ett antal åtgärder för att erbjuda kunderna miljövänligare produkter.

Eco-märkningen symboliserar Samsung Techwins strävan att skapa miljövänligaprodukter och visar att produkten uppfyller EU RoHS Directive.



Korrekt avfallshantering av produkten (elektriska och elektroniska produkter)

Denna markering på produkten, tillbehören och i manualen anger att produkten och de elektroniska tillbehören (t.ex. laddare, headset, USBkabel) inte bör sorteras tillsammans med annat hushållsavfall när de kasseras. Till förebyggande av skada på miljö och hälsa bör dessa föremål hanteras separat för ändamålsenlig återvinning av beståndsdelarna.

Hushållsanvändare bör kontakta den återförsäljare som sålt produkten eller sin kommun för vidare information om var och hur produkten och tillbehören kan återvinnas på ett miljösäkert sätt.

Företagsanvändare bör kontakta leverantören samt verifiera angivna villkor i köpekontraktet. Produkten och de elektroniska tillbehören bör inte hanteras tillsammans med annat kommersiellt avfall.



SÄLJNÄTVERK

SAMSUNG TECHWIN CO., LTD.

Samsungtechwin R&D Center, 701, Sampyeong-dong, Bundang-gu, Seongnam-si, Gyeonggi-do, Korea, 463-400
TEL : +82-70-7147-8740~60 FAX : +82-31-8018-3745

SAMSUNG TECHWIN AMERICA Inc.

100 Challenger Rd. Suite 700 Ridgefield Park, NJ 07660
Toll Free : +1-877-213-1222 Direct : +1-201-325-6920
Fax : +1-201-373-0124
www.samsungcctvusa.com

SAMSUNG TECHWIN EUROPE LTD.

Samsung House, 1000 Hillswood Drive, Hillswood Business
Park Chertsey, Surrey, UNITED KINGDOM KT16 OPS
TEL : +44-1932-45-5300 FAX : +44-1932-45-5325

www.samsungtechwin.com
www.samsungsecurity.com
www.samsungipolis.com