

NETWORK VIDEO RECORDER

제품 사용 설명서

SRN-1000



A급 기기(업무용 방송통신기자재)

이 기기는 업무용(A급) 전자파적합기기로서 판매자 또는 사용자는 이 점을 주의하시기 바라며,
가정외의 지역에서 사용하는 것을 목적으로 합니다.
<http://cctv.hanwhatechwin.co.kr>

본 제품은 대한민국에서만 사용하도록 만들어져 있으며, 해외에서는 품질을 보증하지 않습니다.
FOR KOREA UNIT STANDARD ONLY



Network Video Recorder

제품 사용 설명서

Copyright

©2015 Hanwha Techwin Co., Ltd. All rights reserved.

Trademark

여기에 기재된 상표는 모두 등록된 것으로 이 매뉴얼에 기재된 이 상품의 이름과 다른 상표는 각 회사로부터 등록된 상표입니다.

Restriction

이 문서는 저작권에 의해 보호됩니다. 어떠한 경우에도, 공식적인 동의 없이 이 문서의 전체 혹은 부분을 복제, 배포, 수정할 수 없습니다.

Disclaimer

한화테크윈(주)는 이 문서에 수록된 정보의 완결성과 정확성을 검증하기 위해 최대한 노력하였으나 이에 대해 보증하지는 않습니다. 문서의 사용 결과에 따른 책임은 전적으로 사용자에게 있습니다. 한화테크윈(주)은 사전 예고 없이 이 문서의 내용을 변경할 수 있습니다.

Warranty

정상적인 사용 조건에서 제품을 운용했음에도 제품이 제대로 동작하지 않을 경우, 한화테크윈(주)에서 무료로 수리해 드립니다. 보증 기간은 3년이며, 다음과 같은 상황은 보증에서 제외됩니다.

- 하드디스크의 손상으로 인한 데이터 손실
- 시스템 운용과 관련 없는 프로그램을 실행하여 시스템이 잘못된 동작을 한 경우
- 바이러스에 감염되어 데이터가 손상된 경우
- 시간 경과에 따른 제품의 변화 또는 사용 중 자연적 마모에 의한 이상
- 품질 및 기능에 영향을 미치지 않는 감각적 현상 (예. 발생음)

❖ 제품의 외관, 사양등은 성능 개선을 위해 예고 없이 변경될 수 있습니다.

❖ 최초 관리자 ID는 “admin”이며, 비밀번호는 최초 로그인 시 설정해야 합니다.

무선 공유기에 연결하여 본 제품을 사용할 경우 공유기의 초기 설정된 비밀번호를 그대로 사용하거나 비밀번호를 설정하지 않을 경우 노출의 위험이 있으므로 반드시 공유기에 새로운 비밀번호를 설정하세요.

안전하게 개인정보를 보호하고, 개인정보도용 피해를 예방하기 위해 3개월 마다 주기적으로 비밀번호를 변경하세요. 부주의한 비밀번호 관리로 인한 보안 및 기타 문제의 책임은 사용자에게 있으므로 각별히 주의하세요.

개요

안전상의 경고 및 주의

사용자의 안전을 보호하고 재산상의 손해 등을 막기 위한 내용입니다.

반드시 읽고 올바르게 사용해 주세요.

경고/주의의 내용

 경고	사람이 사망하거나 중상을 입을 가능성이 있는 내용입니다.	 주의	사람이 부상을 입거나 물적 손해 발생이 예상되는 내용입니다.
---	---------------------------------	---	-----------------------------------

 경고			
설치하기 전에 반드시 본 기기의 전원 코드를 뽑은 상태에서 설치하세요. 또한 전원 플러그를 동시에 여러개 꽂아 사용하지 마세요. 이상 발열 및 화재, 감전의 위험이 있습니다.	제품 위에 물, 커피, 음료수 등과 같은 액체가 담긴 그릇을 올려 놓지 마세요. 액체가 쏟아져 제품 내부로 들어가면 고장 및 화재의 원인이 됩니다.	전원 코드를 무리하게 구부리거나 무거운 물건에 눌러 파손되지 않도록 하세요. 화재의 원인이 됩니다.	
본 기기의 내부에 고전압 부위가 있으므로 임의로 뚜껑을 열지 않도록 하고, 절대로 분해, 수리, 개조하지 마세요. 이상 작동으로 인해 화재, 감전, 상해의 위험이 있습니다.	습기, 먼지나 그을음 등이 많은 곳에는 설치하지 마세요. 감전, 화재의 원인이 됩니다.	전원 코드 부분을 무리하게 잡아당겨 빼거나 젖은 손으로 전원 플러그를 꽂거나 빼지 마시고, 전원 플러그 구멍이 헐거울 경우 전원 플러그를 꽂지 마세요. 화재 및 감전의 위험이 있습니다.	
본 기기를 설치하는 도중이나 설치한 이후에도 기기가 위치하는 장소를 항상 깨끗하게 하여 먼지가 없도록 유지하고, 특히 기기를 청소할 때에는 반드시 마른 수건으로 닦아 주고, 물이나 신나, 유기용제를 사용하지 마세요. 기기의 표면을 상하게 할 우려가 있고, 고장 및 감전의 위험이 있습니다.	제품을 직사광선이 비치지 않는 서늘한 장소에 두고, 적정 온도를 유지해야 하며, 촛불, 난방 기구 등 열이 나는 곳을 피해주시기 바랍니다. 또한 장치나 도구를 사람들이 왕래하는 장소에서 멀리 떨어지게 두세요. 화재의 위험이 있습니다.	습기찬 바닥, 접지되지 않은 전원 확장 케이블, 낡은 전원 코드, 안전 접지의 결여 등 작업 공간에서 있을 수 있는 위험을 주의 깊게 살피고, 문제가 발생할 경우 구입처나 전문가에게 문의하세요. 화재 및 감전의 위험이 있습니다.	
전원 코드 등 각종 외부 입출력 포트 등이 기기의 뒷면에 돌출되어 있어서 벽에 너무 가깝게 설치하면 케이블이 무리하게 구부러지거나 눌러 파손되거나 끊어질 수 있으므로, 제품 뒷면을 벽으로부터 15cm 이상, 옆면은 5cm 이상 거리를 유지하세요. 화재, 감전, 상해의 원인이 됩니다.	본 기기의 작동을 위한 입력 전압은 전압 변동 범위가 규정 전압의 10% 이내여야 하며, 전원콘센트는 반드시 접지가 되어 있어야 합니다. 또한, 전원 커넥터를 연결하는 콘센트에는 헤어 드라이기, 다리미, 냉장고 등의 전열 기구를 같이 사용하지 마세요. 이상 발열 및 화재, 감전의 원인이 됩니다.	데이터를 저장하는 HDD가 수명이 다하면 저장하려는 영상 데이터가 손상되어 복구되지 않을 수 있습니다. 녹화 중에 HDD에 저장되어 있는 데이터를 재생할 경우 화면이 깨지면 HDD의 수명이 다한 것이므로 빨리 구입처나 서비스 센터에 의뢰하여 HDD를 교체하시기 바랍니다. 사용자의 부주의로 인해 손상된 데이터에 대해서는 당사가 책임지지 않습니다.	

개요

경고

배터리는 제조자가 지정한 동일 형명 또는 동등 품으로만 교환하세요. 그리고 사용한 배터리는 제조자의 지시에 따라 폐기하세요. 방폭의 위험이 있습니다.	HDD가 꽂 찼을 때 녹화를 계속할 경우 이전의 저장 데이터가 지워지므로 데이터가 지워져도 좋은지를 한번 더 확인하세요. (부록의 문제 해결에서 녹화에 관련된 증상에 대해 참조하세요.) 사용자의 부주의로 인해 지워진 데이터에 대해서는 당사가 책임지지 않습니다.	시스템 전면의 HDD 상태표시 LED가 지속적으로 깜빡이는 것으로 시스템이 HDD에 정상적으로 접속하고 있다는 것을 알 수 있습니다. HDD 상태 표시 LED가 지속적으로 깜빡이는지 수시로 확인하세요.
최초 관리자 ID는 “admin”이며, 비밀번호는 최초 로그인 시 설정해야 합니다. 안전하게 개인정보를 보호하고, 개인정보도용 피해를 예방하기 위해 3개월 마다 주기적으로 비밀번호를 변경하세요. 부주의한 비밀번호 관리로 인한 보안 및 기타 문제의 책임은 사용자에게 있으므로 각별히 주의하세요.	무선 공유기에 연결하여 본 제품을 사용할 경우 공유기의 초기 설정된 비밀번호를 그대로 사용하거나 비밀번호를 설정하지 않을 경우 노출의 위험이 있으므로 반드시 공유기에 새로운 비밀번호를 설정하세요.	

주의

강한 자성이나 전파가 있는 곳, 라디오나 TV 등의 무선 기기에 근접한 곳에는 설치를 피하여 주십시오. 자석류나 전파, 심한 진동이 없는 곳에 설치하세요.	주위 온도와 습도는 적절한 곳이 좋습니다. 온도가 너무 높은 곳(40℃ 이상)이나 낮은 곳(0℃ 이하), 습기가 많은 곳은 피하세요.	제품 위에 무거운 물건을 올려 놓거나 제품내부로 이물질이 들어가지 않도록 하세요. 고장의 원인이 됩니다.
바람이 잘 통하는 곳이 좋고, 직사광선이나 열기구를 피해 설치하세요.	평평하고 안정된 장소에 설치하고, 수직으로 세우거나 비스듬히 놓고 사용하지 마세요. 동작이 제대로 되지 않거나, 기기가 넘어져 떨어질 수 있어 위험합니다.	강한 충격이나 진동은 기기 고장의 원인이 되므로 사용시 주의하도록 합니다. 심한 진동이 없는 곳에 설치하세요.
이상한 소리가 나거나 냄새가 날 때에는 즉시 전원 플러그를 뽑고 구입처나 서비스 센터로 문의하세요. 화재, 감전의 위험이 있습니다.	시스템 운영실의 공기를 적절히 순환시키고, 본체의 덮개를 단단히 고정시키세요. 주변 환경 요소에 의한 고장의 원인이 됩니다.	시스템의 성능을 유지하기 위해서는 서비스 센터에 의뢰하여 정기적으로 점검을 받으시기 바랍니다. 사용자의 부주의로 인한 고장에 대해서는 당사가 책임지지 않습니다.
안정된 전원 공급을 위해 AVR (자동 전원 공급기)을 사용하는 것이 좋습니다. 본 기기에 연결하는 커넥터에는 EMI에 영향을 줄 수 있으므로 Core-Ferrite(자기 코어)를 감아서 사용하는 것이 좋습니다. 권장 사항으로 필수 사항은 아닙니다.	반드시 접지가 된 콘센트에 전원코드를 연결하세요. 전기적쇼크(감전) 및 상해를 입을 수 있습니다.	전원플러그는 조작하기 쉬운 곳에 두세요. 제품의 문제가 발생했을 경우 완전한 전원차단을 위해서는 전원플러그를 뽑아야 합니다. 본체의 전원 버튼만으로는 전원이 완전히 차단되지 않습니다.

사용설명서를 읽기 전에

본 사용설명서는 제품을 사용하는데 필요한 정보를 제공하며 제품에 대한 간략한 소개와 각 부분의 명칭, 기능, 연결방법, 메뉴 설정 등 제품 사용에 필요한 내용을 포함하고 있습니다.

사용설명서를 읽기 전에 아래의 내용을 꼭 확인하세요.

- 본 사용설명서의 저작권은 제조회사에 있습니다.
- 본 사용설명서는 무단으로 복제할 수 없습니다.
- 규격품 외 제품을 사용하거나 사용설명서에 언급된 이외의 사용으로 인한 손상에 대해서는 당사에서 책임지지 않으므로 주의하세요.
- 고장 수리를 위해 제품의 케이스를 열고 내부에 손을 대야 하는 경우에는 반드시 제품 구입처에 문의하여 전문가의 도움을 받으세요.
- 본 제품에 HDD를 추가하거나 SATA 장치를 연결하기 전에, 먼저 본 제품과 호환이 되는지 여부를 확인하세요. 이를 위한 호환성 리스트는 제품 구입처에 문의하세요.

경고

배터리

제품 내부의 배터리를 잘못 교체할 경우에는 폭발의 위험이 있으므로 꼭 제품에서 사용하는 동일한 배터리를 사용하세요.

현재 사용 중인 배터리의 사양은 다음과 같습니다.

- 전압 : 3V
- 용량 : 170mAh
- 지속표준부하 : 0.2mA
- 사용가능온도 : -20°C ~ +85°C



- 직사광선이나 난방기구 등 열이 나는 곳에 배터리를 두지 마세요.

시스템 종료

동작 중에 전원을 끄거나 비정상적으로 작동 했을 경우 하드디스크 및 제품에 손상을 줄 수 있습니다.

사용 중 하드디스크 자체의 문제로 인하여 오류가 발생할 수 있습니다.

안전한 전원 차단을 위해서 웹뷰어 접속 후 화면 우측의 <종료> 버튼을 클릭하고 팝업창의 <확인>을 클릭한 후 전원코드를 빼세요.

갑작스런 정전 등으로 인한 제품의 손상을 막기 위해서는 별도의 UPS 시스템을 설치하세요.
(UPS 관련 문의는 UPS 판매처에 하세요.)



- 비정상적으로 전원을 차단할 경우 재동작시 하드디스크 복구를 위해 구동시간이 지연될 수 있습니다.

개요

동작온도

본 제품의 동작 가능 온도는 0°C ~ 40°C 입니다.

동작온도 이하의 저온에서 장시간 방치한 경우에는 사용 시 기기가 동작이 안될 수도 있습니다.

이런 경우에는 상온에서 일정시간 보관 후 사용하세요.

세트 내부에 장착된 하드디스크는 0°C 이하의 저온 상태에서 정상 동작이 안될 수도 있으므로 제품 보관 온도에 유의하세요.

보안관련

최초 관리자 ID는 “**admin**”이며, 비밀번호는 최초 로그인 시 설정해야 합니다.

무선 공유기에 연결하여 본 제품을 사용할 경우 공유기의 초기 설정된 비밀번호를 그대로 사용하거나 비밀번호를 설정하지 않을 경우 노출의 위험이 있으므로 반드시 공유기에 새로운 비밀번호를 설정하세요.

안전하게 개인정보를 보호하고, 개인정보도용 피해를 예방하기 위해 3개월 마다 주기적으로 비밀번호를 변경하세요. 부주의한 비밀번호 관리로 인한 보안 및 기타 문제의 책임은 사용자에게 있으므로 각별히 주의하세요.



한화테크윈은 지구환경보전을 위하여 제품과 관련된 전 과정에서 환경을 고려하고 있으며, 고객에게 보다 친환경적인 제품을 제공하기 위하여 다양한 활동을 추진하고 있습니다.

에코(Eco)마크는 친 환경제품을 만들기 위한 한화테크윈의 의지이며, 유럽의 환경규제(RoHS)에 만족하는 제품임을 의미합니다.

개요

3

- 3 안전상의 경고 및 주의
- 5 사용설명서를 읽기 전에
- 7 목차
- 9 제품의 주요기능
- 11 전면의 명칭 및 기능
- 12 후면의 명칭 및 기능

설치하기

13

- 13 설치환경 점검하기
- 14 랙(Rack)설치
- 14 HDD 장착하기

다른 기기와 연결

17

- 17 외부 장치 연결하기
- 19 네트워크 연결하기
- 21 IP Installer를 통해 네트워크 연결하기
- 25 포트 포워딩 (포트 맵핑) 설정하기
- 25 공유된 로컬 PC에서 IP 인스톨러로 검색하여 NVR 접속하기
- 25 외부의 원격 PC에서 인터넷으로 NVR에 접속하기

웹뷰어 시작하기

26

- 26 웹뷰어란
- 27 시스템 시작하기
- 28 웹뷰어에 접속하기

라이브 뷰어

33

- 33 라이브 뷰어
- 35 라이브 화면 구성
- 43 연결중인 네트워크 카메라 제어하기

개요

검색 뷰어

47

47 검색 뷰어

메뉴 설정

51

51 설정
52 시스템환경 설정
61 장치 설정
76 녹화 설정
80 이벤트 설정
83 네트워크 설정

부록

94

94 제품 사양
97 외관도
98 초기 상태
101 문제 해결(FAQ)
104 Open Source License Notification on the Product

제품의 주요기능






본 제품은 네트워크 카메라의 영상 및 음성을 하드디스크에 녹화 및 재생을 할 수 있습니다.
또한 네트워크를 이용하여 영상 및 음성을 원격지에서 PC를 통해 모니터링 할 수 있는 환경을 제공합니다.

- VGA, 4CIF, 최대 2592x1944 (500만 화소) 녹화 지원
- 영상 녹화 및 재생
- 음성 녹음 및 재생
- ONVIF 및 표준 RTP/RTSP 프로토콜 지원
- HDD SMART 기능을 이용한 HDD 정보 및 상태표시
- 하드디스크 덮어쓰기 기능
- eSATA를 이용한 대용량 하드디스크 지원
- 다양한 저장 모드 (일반 녹화, 이벤트, 예약녹화)
- 알람 입/출력 기능
- PC와 연동하여 네트워크 카메라 라이브 모니터링 지원

개요

구성품 확인하기


제품 구입 시 먼저 포장을 벗겨낸 후 평평한 바닥이나 설치 장소에 본 기기를 내려 놓으세요.
다음의 구성품이 모두 포함되어 있는지 확인하세요.

		
NVR	전원코드	네트워크 부어 SW / 제품 사용 설명서 및 설치 소프트웨어 CD
		
제품 사용 설명서 또는 간단설명서	SATA 케이블	SATA 전원 추가 케이블
		
브라켓 랙	브라켓 장착용 나사	HDD 장착용 나사
		
터미널 블록		



■ HDD 미장착 모델의 경우 SATA 케이블 1개와 HDD 장착용 나사 3개가 추가됩니다.

전면의 명칭 및 기능

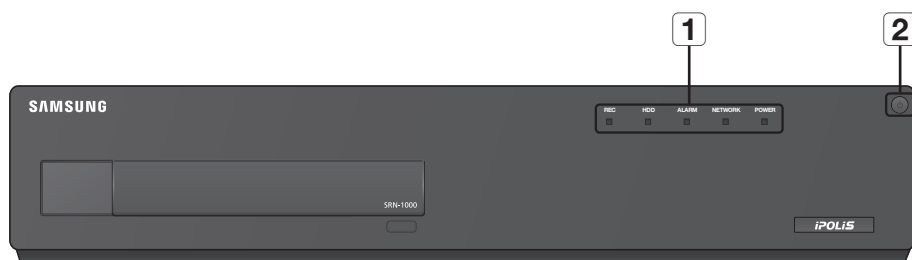


명 칭		기능설명
1	LED 램프	REC : 녹화가 진행 중일 때 불이 켜집니다
		HDD : 하드디스크를 정상적으로 접속하고 있는지를 표시합니다. 하드디스크 접속 시 LED가 점등합니다.
		ALARM : 이벤트 발생 시 불이 켜집니다.
		NETWORK : 네트워크 접속 상태 및 데이터 전송 상태를 표시합니다.
		POWER : 전원 ON/OFF 상태를 표시합니다.
2	전원	전원을 켜기 위해 사용합니다.



- 전원을 연결하고 부팅 시 **[REC]**와 **[ALARM]** 램프의 점등 상태로 부팅 진행 상황을 확인할 수 있습니다. (27쪽)

개요

후면의 명칭 및 기능

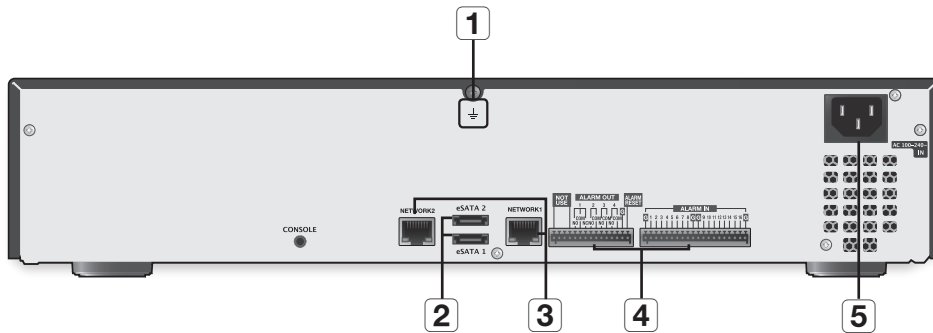

명 칭		기능설명
1	접지	별도의 접지케이블을 연결하는 단자입니다. ▪ 장치의 안전한 사용을 위해서 접지선을 추가하세요.
2	eSATA 1/2	외장 저장 장치 연결 단자입니다.
3	NETWORK 1/2	네트워크 연결 단자입니다.
4	ALARM	- ALARM IN : 알람 입력 단자입니다. - ALARM RESET : 알람 리셋 단자입니다. - ALARM OUT : 알람 출력 단자입니다.
5	전원	전원을 연결하는 단자입니다.



- [CONSOLE]은 사후 A/S를 위한 장치입니다.

설치하기


제품을 설치하기 전 다음의 사항들을 주의하여 설치하세요.

- 실내에서만 사용하세요.
- 물이나 액체가 제품의 접촉부에 닿지 않게 하세요.
- 무리한 충격이나 힘을 가하지 마세요.
- 전원 코드를 무리하게 잡아 당기지 마세요.
- 임의로 제품을 분해하지 마세요.
- 정격 입출력 범위에서만 사용하세요.
- 승인된 전원 코드만 사용하세요.
- 입력 그라운드가 있는 제품에 대해서는 반드시 그라운드가 있는 전원 플러그와 함께 사용하세요.

설치환경 점검하기


본 제품은 첨단 보안 장치로 내부에 고용량 하드디스크와 중요한 회로를 탑재하고 있습니다.

제품 내부 온도가 높을 경우, 수명이 단축되거나 고장이 발생 (우측 그래프를 참조) 할 수 있으므로 설치 전에 아래의 권고 사항들을 참조하세요.

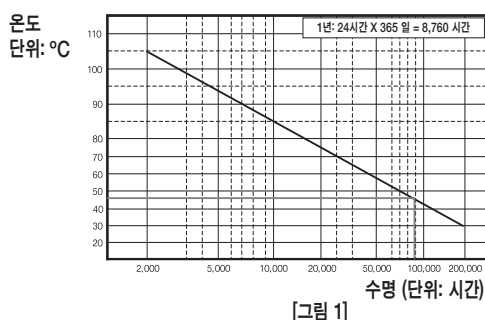

본 제품을 랙에 설치할 경우 아래의 권고 사항을 준수하세요.

1. 제품이 설치되는 랙 내부를 밀폐 되지 않도록 하세요.
2. 그림에서와 같이 흡기구와 배기구를 통해 공기 순환을 원활하게 해주세요.
3. 그림 2에 보이는 것처럼 제품 또는 기타 랙 설치 제품과 적층 하는 경우 일정한 공간을 확보하거나 공기 순환을 위한 통풍구를 설치하세요.
4. 공기의 자연 대류를 위해서 흡기구는 랙의 하단에 배기구는 상단에 설치하세요.
5. 각 흡기구와 배기구에는 공기 순환을 위한 팬 모터를 설치할 것을 적극 권장합니다. (흡기구의 팬에는 먼지나 이물질을 거르는 필터를 함께 설치하세요.)
6. 그림 1에 보이는 것처럼 랙 내부나 제품 주변의 온도를 0°C ~ 40°C 로 꼭 유지시켜주세요.

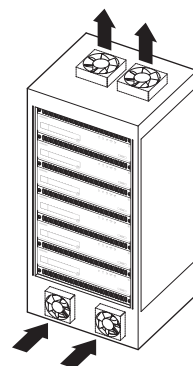


설치하기

랙(RACK)설치

브라켓 랙을 그림과 같이 장착 후 좌, 우측면 나사(각 2개)를 체결하세요.

- 나사가 진동에도 풀리지 않도록 단단히 체결하세요.

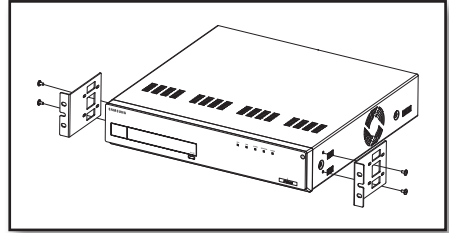

HDD 장착하기

제품 내부에는 감전이나 사고 및 제품의 고장 등을 발생시킬 요소가 많으므로 전원을 뽑은 후 설치하시기 바랍니다. 설치나 설정방법을 적절하게 적용하지 못한 경우 제품이 작동하지 않을 수도 있으니, HDD 추가 작업은 반드시 제품 구입처에 문의하세요.

- 장착 가능한 HDD 개수 : 최대 8개 장착 가능
- 작업을 진행하기 전 반드시 전원코드를 콘센트에서 빼주세요.
- HDD 장착 모델은 공장출고시 HDD 1대가 장착되어 있습니다.



■ 데이터 유실에 관한 주의 사항 (HDD 관리)

HDD의 데이터가 손상되지 않도록 주의하세요.

HDD를 추가할 경우 당사 제품과 호환되는 HDD 제품인지 우선 확인하세요.

HDD는 외부 환경이나 사용 중 충격으로 인하여 불량이 발생할 수 있는 민감한 제품이므로, 충격을 받아 손상되지 않도록 주의하세요.

사용자의 부주의나 외부 환경으로 인해 HDD가 손상된 경우, 제조업체에서는 유무상의 어떠한 책임도 지지 않습니다.

■ HDD와 데이터가 손상 될 수 있는 경우

HDD 손상으로 인한 피해를 최소화하려면 자주 백업(복제)을 해 두세요.

제품을 분리하거나 설치 작업 중 외부 충격이 가해졌을 경우 데이터가 손상 될 수 있습니다.


HDD 동작 중에 정전이나, 전원을 끄는 등 갑자기 제품이 정지될 경우 HDD가 손상 될 수 있습니다.

HDD 동작 중에 본체를 이동하거나 충격을 가하면 파일이 손상되거나 HDD가 손상 될 수 있습니다.


HDD 장착 작업 시 유의 사항

1. 작업 시 케이블이 부적절한 곳에 끼이거나 절연피복이 벗겨지지 않도록 주의하세요.
2. 나사 및 부품을 잃어버리지 않도록 주의하세요.
 - 나사 및 부품을 조립하지 않은 경우, 제품에 고장이 발생하거나 제대로 동작하지 않을 수도 있습니다.
3. HDD를 장착하기 전에 지원하는 호환성 리스트의 HDD를 확인하세요.
 - 호환성 리스트는 제품 구입처에 문의하세요.


1. 먼저 좌·우 측면에 위치한 나사와 후면의 나사를 풀고 커버를 분리하세요.

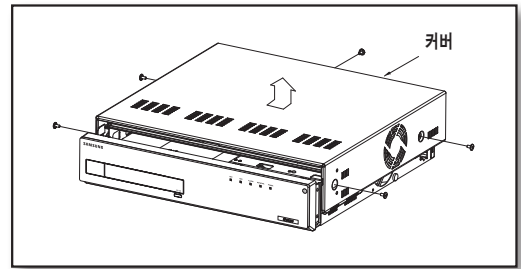

2. 좌·우 측의 나사(4개)를 풀고 상부 브라켓을 분리시키세요.

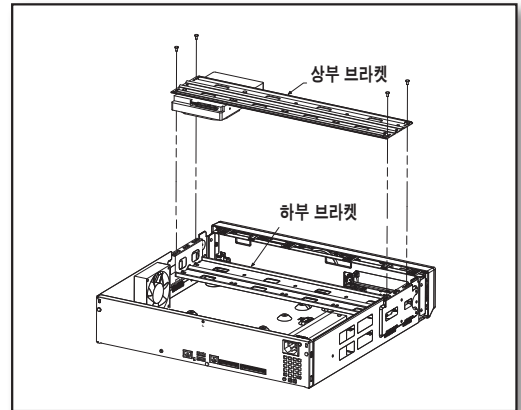


3. 하부 브라켓에 HDD 4개를 장착한 후 나사로 고정시키세요.
4. 상부 브라켓에 HDD 4개를 장착한 후 나사로 고정시키세요.

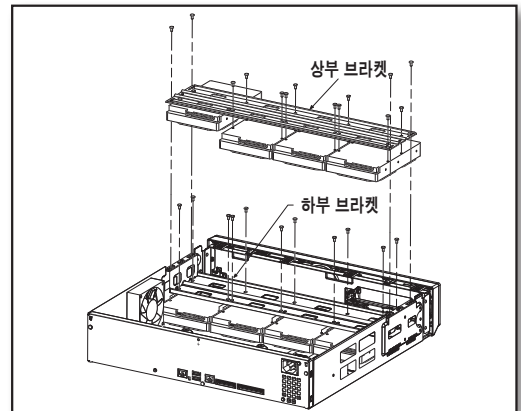



설치하기

5. HDD 추가 장치가 완료된 하부 브래킷과 상부 브래킷을 NVR에 장착하고 나사로 고정하세요.

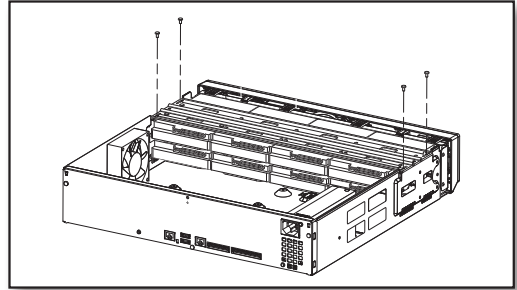


6. HDD 추가 장치가 완료되면 전원케이블을 연결하고, HDD 신호전달용 케이블 (SATA Cable) 은 케이블 길이를 고려하여 메인보드의 커넥터 ① ~ ⑧ 에 연결하세요.

- HDD용 커넥터는 번호가 맞지 않게 연결되어도 동작에 문제가 없으니, 케이블 길이를 고려하여 연결하세요.

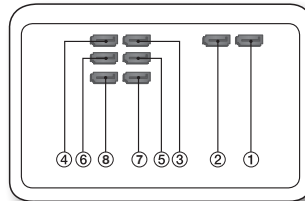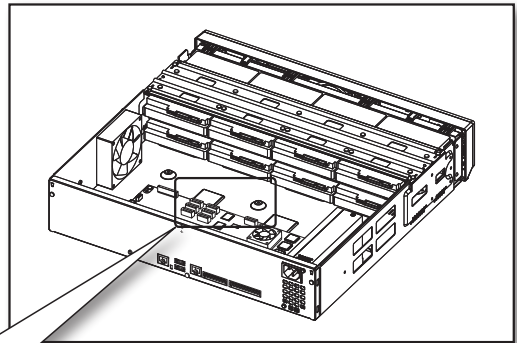


7. 제품 내부의 연결 단자와 배선에 문제가 없는지 확인 후 커버를 닫고 나사를 이용해 고정시키세요.

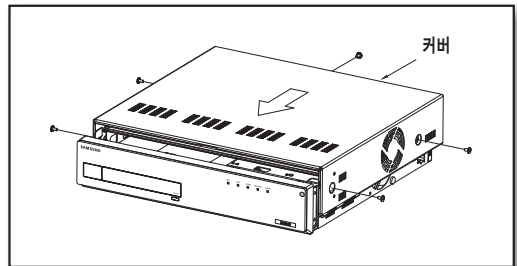

다른 기기와 연결

외부 장치 연결하기

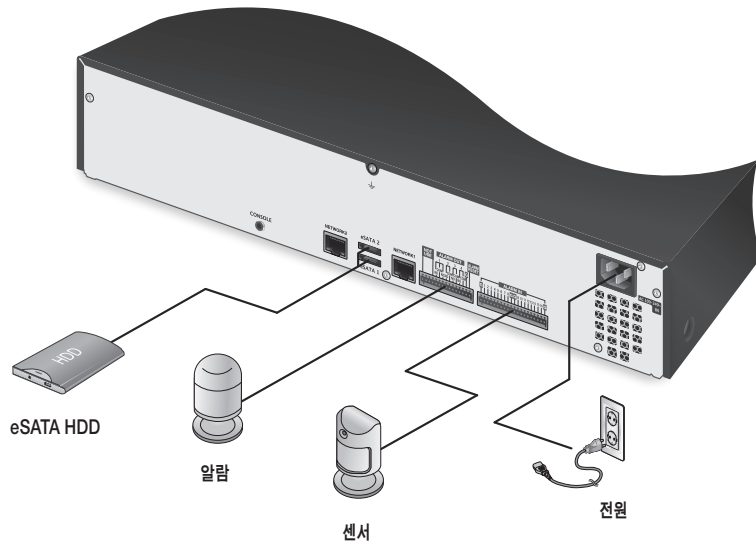

- 부적절한 전원 전압을 연결 시 시스템에 파손을 초래할 수 있으므로, 시스템에 전원을 연결하기 전에 반드시 정격 전압을 확인하세요.

외장형 eSATA HDD 연결하기

제품의 후면에 eSATA 연결용 포트가 있습니다.

eSATA HDD가 시스템에 연결되어 있다면 **설정 > 장치 > 저장매체**를 통해 인식과 설정이 가능해집니다.




- 외장형 eSATA HDD 연결용 케이블의 길이는 1m 이내의 것을 사용하세요.
- 외장형 eSATA의 전원은 별도로 공급합니다.
- eSATA 단자로 연결된 장치를 사용하는 중에 연결을 끊으면 시스템이 재부팅될 수 있으므로 연결 종료 전에 사용 여부를 확인하세요.

다른 기기와 연결

알람 입/출력 연결하기

후면의 알람 IN/OUT 포트는 아래와 같이 구성됩니다.

- ALARM IN 1 ~ 16 : 알람 입력 포트
- ALARM RESET : 알람 리셋 신호를 받으면 현재의 알람 입력을 해제하고 알람 전송을 다시 시작합니다.
- ALARM OUT 1 ~ 4 : 알람 출력 포트

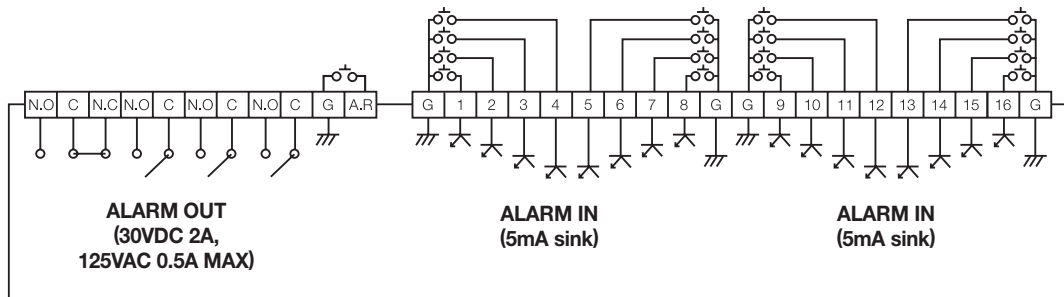


네트워크 연결하기




- 네트워크 연결에 관한 자세한 설명은 “네트워크 설정”을 참조하세요. (83쪽)

이더넷 (10/100/1000BaseT)을 통해 네트워크 연결하기

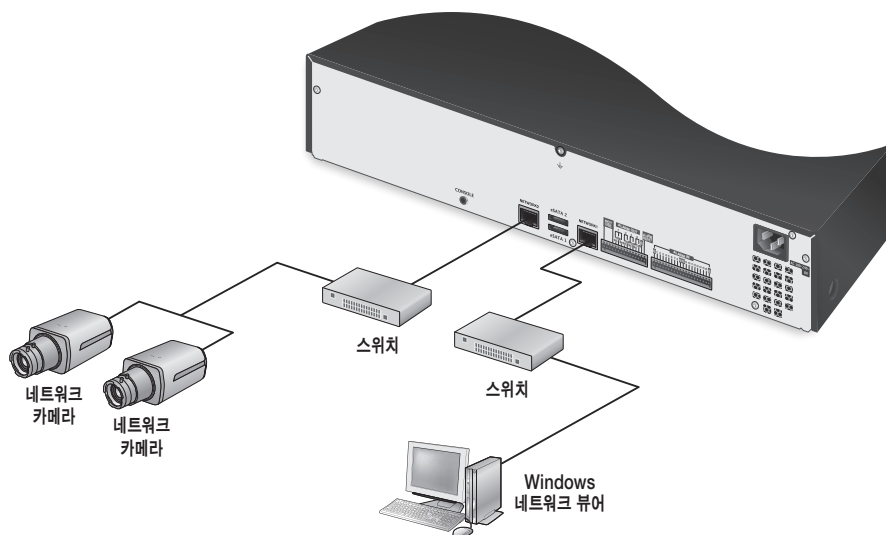


공유기를 통해 네트워크 연결하기

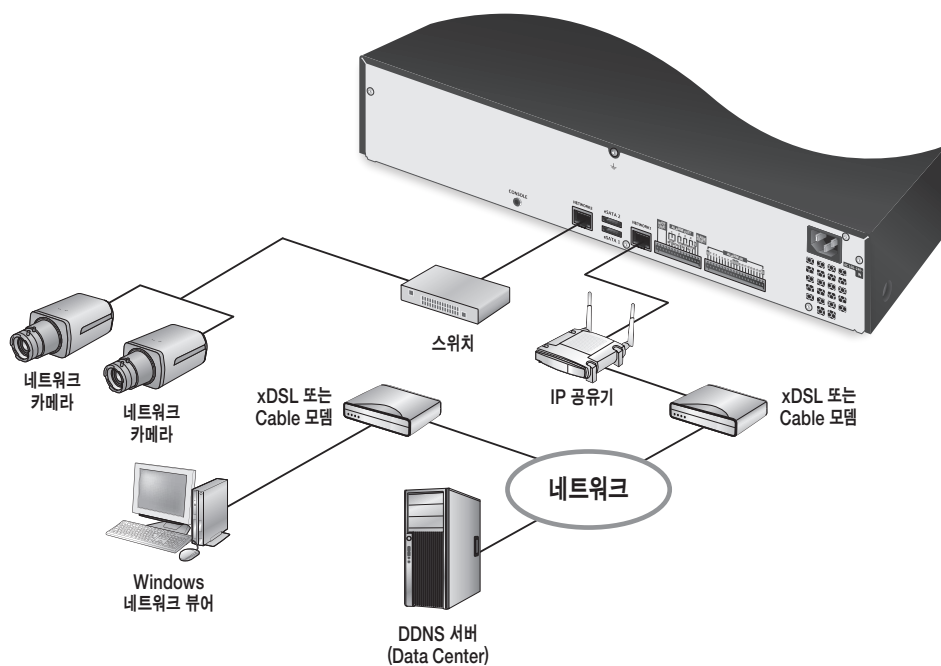


다른 기기와 연결

PPPoE를 통해 네트워크 연결하기

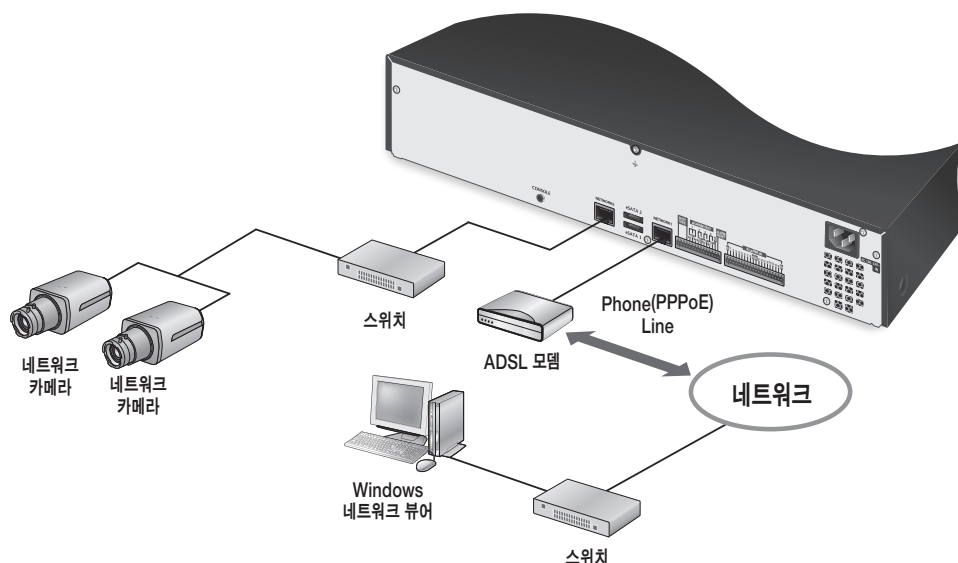

네트워크 카메라 연결하기

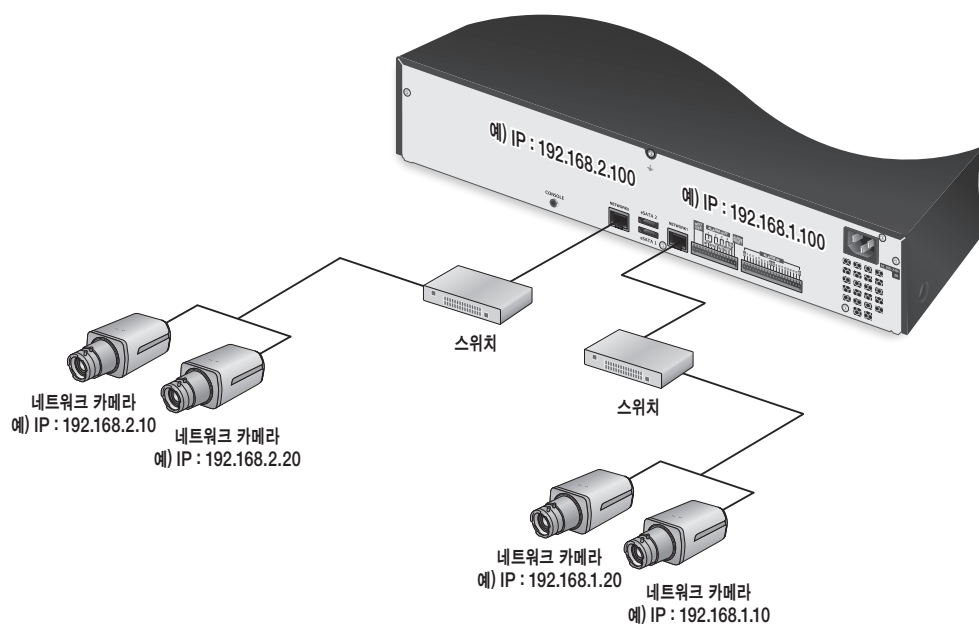


- 카메라 및 네트워크 뷰어는 [NETWORK1]과 [NETWORK2]에 선택적으로 연결할 수 있습니다.
- 네트워크 연결을 위한 스위치는 Giga bit 스위치를 사용하세요.

IP INSTALLER를 통해 네트워크 연결하기

함께 제공된 IP INSTALLER 프로그램을 실행하여 네트워크 상에 존재하는 장치를 검색하고, 검색한 장치의 네트워크 설정을 수동으로 변경할 수 있습니다.

IP 인스톨러의 명칭 및 기능

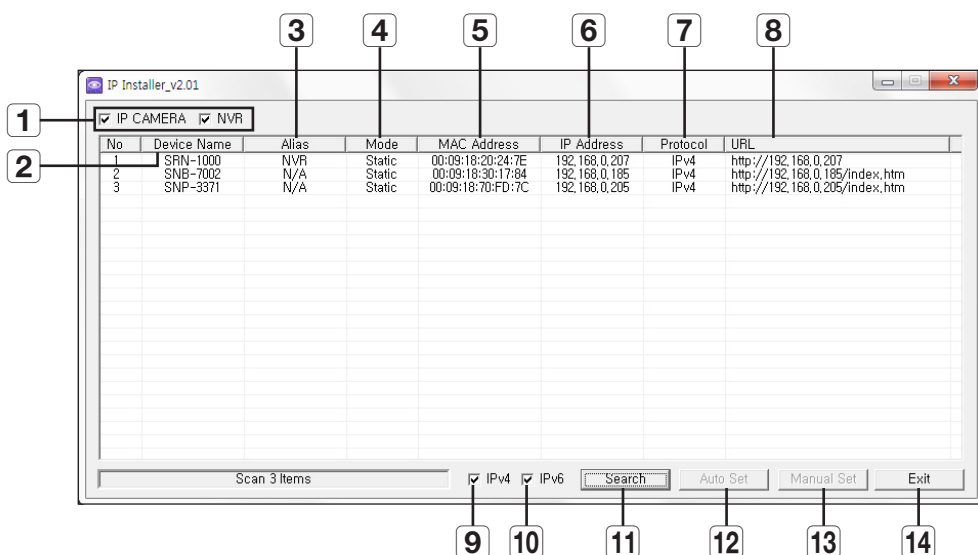

명 칭		기능설명
1	장치 선택	검색할 장치의 종류를 선택합니다.
2	Device Name	연결된 장치 모델명입니다. 컬럼을 누르면 모델명 기준으로 정렬합니다. 단, 검색 도중 누르면 검색이 중단됩니다.
3	Alias	<시스템관리>의 장치이름에서 설정한 NVR 이름을 표시합니다.
4	Mode	<Static>, <Dynamic>, <PPPoE> 중 현재 연결된 네트워크의 상태를 나타냅니다.
5	MAC Address	연결된 장치의 맥주소입니다. 컬럼을 누르면 맥주소 기준으로 정렬합니다. 단, 검색 도중 누르면 검색이 중단됩니다.
6	IP Address	검색한 장치의 IP 주소입니다. 컬럼을 누르면 IP 주소 기준으로 정렬합니다. 단, 검색 도중 누르면 검색이 중단됩니다.

다른 기기와 연결

명칭	기능설명
7 Protocol	장치의 네트워크 설정입니다. 제품 출하 시 초기값은 'IPv4' 입니다. IPv6로 설정된 장치는 IPv6로 표시됩니다.
8 URL	외부 인터넷에서 접속할 수 있는 DDNS URL 주소입니다. 단, DDNS 등록이 실패한 경우에는 장치의 <IP Address>로 표시됩니다.
9 IPv4	IPv4로 설정된 장치를 검색합니다.
10 IPv6	IPv6로 설정된 장치를 검색합니다.
11 Search	현재 네트워크 상에 연결된 네트워크 장치를 검색합니다. 단, IPv4와 IPv6 모두 체크되어 있지 않으면 버튼이 비활성화됩니다.
12 Auto Set	네트워크 설정을 IP 인스톨러가 자동으로 설정해줍니다.
13 Manual Set	네트워크 설정을 사용자가 직접 입력합니다.
14 Exit	IP 인스톨러 프로그램을 종료합니다.



- IP 인스톨러는 동봉된 CD에 포함되어 있는 버전을 사용하거나, 최신 버전을 사용하세요.
최신 버전은 한화 웹 사이트 <http://cctv.hanwhatechwin.co.kr> 에서 받으실 수 있습니다.

Static IP 설정하기


수동으로 네트워크 설정하기

<IP Installer_vX.XX.exe> 프로그램을 실행하여 장치 검색 목록이 나타나게 하세요.

초기 실행 시에는 [Auto Set] 버튼과 [Manual Set] 버튼이 모두 비활성화되어 있습니다.

- 검색목록에서 네트워크 설정을 원하는 NVR을 선택하세요.
[Auto Set] 버튼과 [Manual Set] 버튼이 활성화됩니다.

- [Manual Set] 버튼을 클릭하세요.
수동 설정 창이 나타납니다.
NVR의 <IP Address>, <Subnet Mask>, <Gateway>, <HTTP Port>, <Port(TCP)>가 초기값으로 표시됩니다.

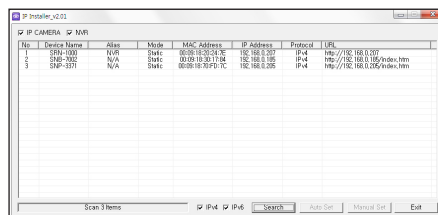


- IP가 같은 장치가 있을 경우 IP충돌을 막기 위해 장치를 각각 다른 IP로 설정해야 합니다.
- 두개 이상의 장치가 같은 IP로 충돌이 일어났을 경우 복구하는 데 시간이 지연될 수 있습니다.

- <Address>에서 IP 관련 항목을 설정하세요.
 - MAC Address : 각 NVR의 고유한 MAC Address가 자동으로 표시되므로 설정하지 않아도 됩니다.



- DHCP가 체크되지 않은 상태에서만, Static IP의 설정이 가능합니다.

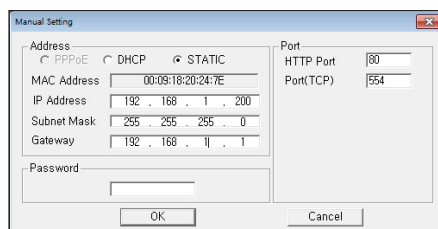

IP 공유기를 사용하지 않는 경우

네트워크 관리자에게 <IP Address>, <Subnet Mask>, <Gateway> 설정값을 문의하세요.

4. <Port>에서 포트 관련 항목을 설정하세요.

- HTTP Port : 인터넷 브라우저를 사용하여 NVR에 접속할 때 사용되는 HTTP 포트이며, 기본값은 80입니다.
HTTP 포트값은 직접 입력하여 변경할 수 있습니다.
- Port(TCP) : 영상전송을 제어하는 포트이며, 기본값은 554입니다.

5. 비밀번호를 입력하세요.

최초 관리자 ID는 “admin”이며, 비밀번호는 최초 로그인 시 설정해야 합니다.



- 안전하게 개인정보를 보호하고, 개인정보도용 피해를 예방하기 위해 3개월 마다 주기적으로 비밀번호를 변경하세요. 부주의한 비밀번호 관리로 인한 보안 및 기타 문제의 책임은 사용자에게 있으므로 각별히 주의하세요.

6. [OK] 버튼을 클릭하세요.

수동 네트워크 설정이 완료됩니다.


IP 공유기를 사용하는 경우

- IP Address : IP 공유기가 제공하는 사설 IP 범위에 맞게 설정하세요.
예) 192.168.1.2~254, 192.168.0.2~254, 192.168.XXX.2~254
- Subnet Mask : IP 공유기의 <Subnet Mask>가 NVR의 <Subnet Mask> 값이 됩니다.
- Gateway : IP 공유기의 <Local IP Address>가 NVR의 <Gateway> 값이 됩니다.



- 연결된 IP 공유기 모델에 따라 설정 방법이 다를 수 있습니다. 해당 공유기의 사용설명서를 참고하세요.

- IP 공유기의 포트 포워딩 설정의 “포트 포워딩 (포트 맵핑) 설정하기”를 참고하세요. (25쪽)

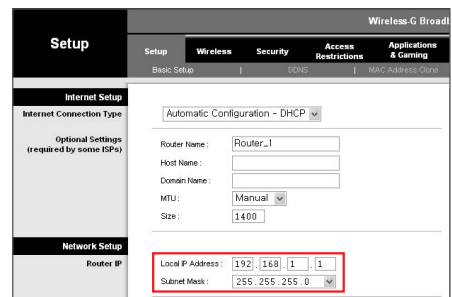

자동으로 네트워크 설정하기

<IP Installer_vX.XX.exe> 프로그램을 실행하여 장치 검색 목록이 나타나게 하세요.

초기 실행시에는 [Auto Set] 버튼과 [Manual Set] 버튼이 모두 비활성화되어 있습니다.

1. 검색목록에서 원하는 NVR을 선택하세요.

[Auto Set] 버튼과 [Manual Set] 버튼이 활성화됩니다.

2. [Auto Set] 버튼을 클릭하세요.

자동 설정 창이 나타납니다.

자동으로 검색된 <IP Address>, <Subnet Mask>, <Gateway>를 표시합니다.

다른 기기와 연결

3. 비밀번호를 입력하세요.

최초 관리자 ID는 “admin”이며, 비밀번호는 최초 로그인 시 설정해야 합니다.



- 안전하게 개인정보를 보호하고, 개인정보도용 피해를 예방하기 위해 3개월 마다 주기적으로 비밀번호를 변경하세요.
부주의한 비밀번호 관리로 인한 보안 및 기타 문제의 책임은 사용자에게 있으므로 각별히 주의하세요.

4. [OK] 버튼을 클릭하세요.

자동 네트워크 설정이 완료됩니다.

Dynamic IP 설정하기

Dynamic IP 환경 설정하기

• Dynamic IP 사용 환경 예

- IP 공유기에 NVR을 설치한 경우, DHCP를 이용하여 IP를 할당 받는 경우
- DHCP 방식을 사용하는 모뎀에 NVR을 직접 설치한 경우
- LAN 환경에서 내부 DHCP 서버로부터 IP를 할당 받는 경우

Dynamic IP 확인하기

1. 사용자의 로컬 PC에서 IP 인스톨러를 실행하면 검색 목록에서 <Dynamic>으로 IP를 할당 받은 장치를 확인할 수 있습니다.
2. 검색된 NVR을 선택하고, [Manual Set] 버튼을 클릭하면 현재 NVR에 설정된 IP를 확인할 수 있습니다.
<DHCP>를 해제하면 <Static>으로 IP를 변경할 수 있습니다.

No	Device Name	Alias	Mode	MAC Address	IP Address	Protocol	URL
1	SNP-1001	N/A	Dynamic	00:0B:12:32:13:14	192.168.1.100	IP-v4	http://192.168.1.100
2	SNP-1002	N/A	Dynamic	00:0B:12:32:13:14	192.168.1.100	IP-v4	http://192.168.1.100/index.htm
3	SNP-1010	N/A	Dynamic	00:0B:12:32:13:14	192.168.1.101	IP-v4	http://192.168.1.101/index.htm
4	SNP-1011	N/A	Dynamic	00:0B:12:32:13:14	192.168.1.101	IP-v4	http://192.168.1.101/index.htm

포트 포워딩 (포트 맵핑) 설정하기


IP 공유기에 NVR이 설치된 경우, IP 공유기 외부 원격 PC에서 IP 공유기 내부의 NVR에 접속하기 위해서는 IP 공유기에 포트 포워딩을 설정해 주어야 합니다.

수동으로 포트 포워딩 설정하기

1. IP 공유기의 설정 메뉴에서 <Applications & Gaming> - <Port Range Forward>를 클릭하세요.
타사 IP 공유기의 포트 포워딩 메뉴 위치 및 설정 방법은 각 IP 공유기의 사용설명서를 참고하시기 바랍니다.
2. IP 공유기에 연결되어 있는 각 NVR에 대해 <TCP>와 <UDP Port>를 선택하세요.
IP 공유기에 설정할 각 포트 번호는 NVR의 설정 화면의 <네트워크> - <인터페이스> - <접속포트>에서 지정한 포트 번호에 맞게 설정해야 합니다.
3. 설정이 완료되면 [Save Settings] 버튼을 클릭하세요.
설정이 저장됩니다.



- 위 설명은 CISCO IP 공유기로 설정한 예시입니다.
- 연결된 IP 공유기 모델에 따라 설정 방법이 다를 수 있습니다.
해당 공유기의 사용설명서를 참고하세요.

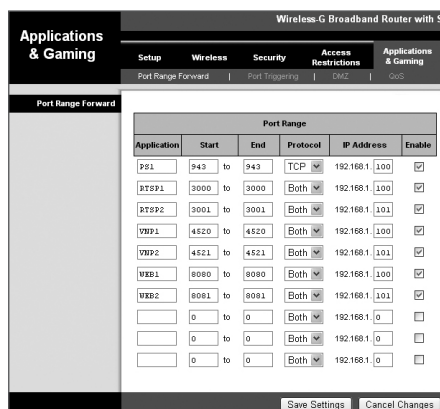


공유된 로컬 PC에서 IP 인스톨러로 검색하여 NVR 접속하기

1. IP 인스톨러를 실행하세요.
연결된 NVR을 검색하여 리스트에 표시합니다.
2. 연결할 NVR을 더블 클릭하세요.
인터넷 브라우저가 시작되면서 NVR에 접속합니다.



- 사용자가 직접 인터넷 브라우저를 실행시켜, 주소 창에 검색된 NVR의 IP 주소를 입력하여 접속할 수 있습니다.

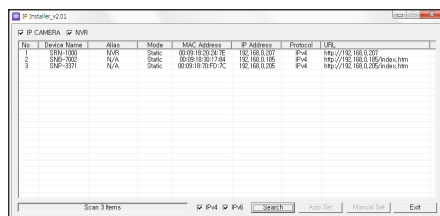

외부의 원격 PC에서 인터넷으로 NVR에 접속하기


IP 공유기 외부의 원격 PC에서는 IP 인스톨러를 사용할 수 없으므로, 사용자는 NVR의 DDNS URL을 이용하여 IP 공유기 내부의 NVR에 접속할 수 있습니다.

1. IP 공유기 내부에 설치되어 있는 NVR을 외부에서 접속하기 위해서는 반드시 IP 공유기에 포트 포워딩 설정을 하세요.
2. 외부 원격 PC에서 인터넷 브라우저를 실행하여 주소창에 NVR에 접속하기 위한 DDNS URL 주소, 또는 IP 공유기의 인터넷 IP 주소를 입력하세요.
예) <http://www.samsungipolis.com/>[제품아이디]

웹뷰어 시작하기

웹뷰어란

웹뷰어는 NVR(Network Video Recorder)를 원격으로 접속하여 실시간 모니터링, PTZ (구성되어 있는 경우) 제어, 검색 등을 제어할 수 있는 소프트웨어입니다.

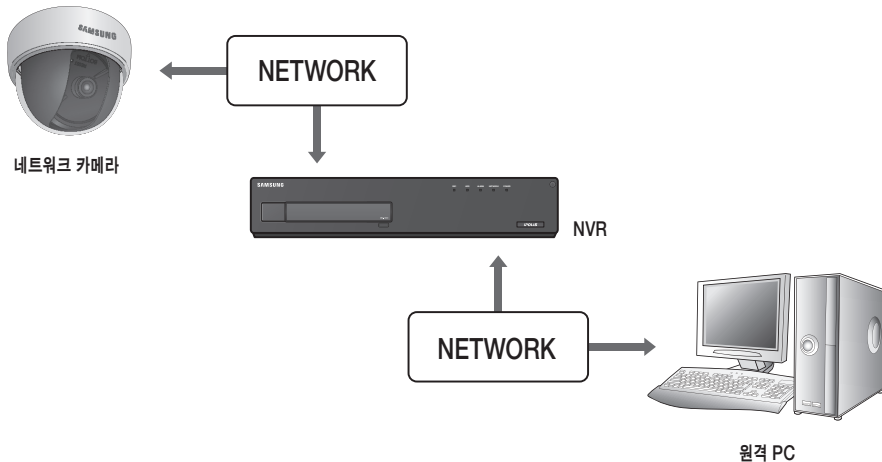

주요 기능

- 브라우저를 통한 원격 접속
- PTZ 카메라 제어 지원
- 1, 4, 9, 16, 36, 64 채널 지원 (최대 64대의 카메라)
- 인쇄 또는 보존을 위한 JPEG, BMP 포맷 저장 기능
- 범용 미디어 플레이어와 호환 가능한 AVI 포맷 녹화 기능 (멀티 코덱이 필요함)

시스템 요구사항

웹뷰어를 실행하기 위한 최소한의 하드웨어와 운영체제의 요구사항은 다음과 같습니다.


명칭	최소 사양	권장 사양
CPU	인텔 코어 2쿼드 2.5GHz 이상	인텔 i7 이상
RAM	3GB 이상	3GB 이상
HDD	200GB 이상	200GB 이상
VGA 메모리	512MB 이상	1GB 이상
디스플레이 해상도	1280 x 1024 이상	
OS	Windows XP Professional, Windows Vista Home Basic/Premium/Ultimate, Windows 7, Window 8 DirectX 9.0c (Direct3D 가속기능 사용) 인터넷 익스플로러 7, 8, 9, 10 (Windows 7, 8 64bit 환경에서는 인터넷 익스플로러 x86)	
네트워크	10/100/1000 Ethernet NIC	

시스템 시작하기

1. NVR 후면의 전원을 연결하세요.
2. 경고음과 함께 커집니다.
3. 웹 브라우저를 열고 주소창에 NVR의 IP 주소 또는 URL을 입력하세요.



4. 초기화 화면이 나타납니다.
초기화는 아이콘 순서대로 약 2분정도 진행됩니다.
새로운 하드디스크가 설치된 경우, 초기화 시간이 오래 걸릴 수 있습니다.

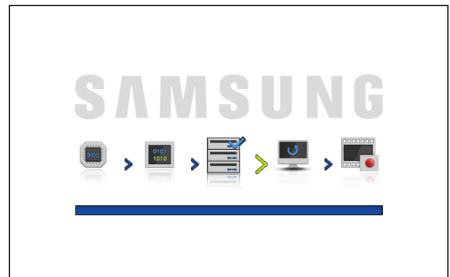


- LED로 시스템 실행 상태를 단계별로 확인할 수 있습니다.
<ALARM>과 <REC> LED가 순서대로 켜지다 함께 깜박이면 부팅이 완료됩니다.
- 전원케이블을 연결하면 NVR이 자동으로 구동됩니다.

5. 부팅이 완료되면 로그인 창이 나타납니다.

인터넷 익스플로러 옵션 설정하기

제품으로부터 정확한 데이터를 전송 받기 위해 웹뷰어를 실행하기 전에 인터넷 익스플로러의 다음 옵션값을 확인하세요.

- “인터넷 옵션 > 일반 탭 > 설정 (검색기록) > 임시 인터넷 파일 > 저장된 페이지의 새 버전 확인”
위 항목의 설정값을 페이지를 열 때마다 설정해 주어야합니다.
- 정상동작이나 Window/인터넷 익스플로러의 보안을 위하여 Window/인터넷 익스플로러의 중요 업데이트를 항상 최신 버전으로 설치하세요.

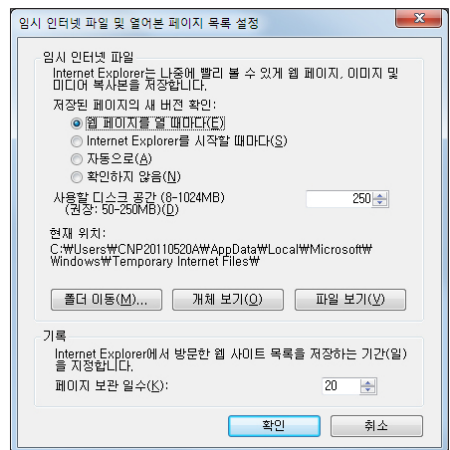

웹뷰어 시작하기

웹뷰어에 접속하기

1. 웹 브라우저를 열고 주소창에 NVR의 IP 주소 또는 URL을 입력하세요.



- 초기 설정된 IP는 “192.168.1.200”입니다.
- IP 인스톨러 또는 “네트워크 > 접속모드”에서 연결 가능한 IP 주소로 설정해야 합니다.
- URL 접속은 DDNS 접속 설정이 되어 있어야 가능합니다.



2. 관리자 권한을 가진 사용자는 관리자 ID와 비밀번호를 입력하세요. 정식 사용자는 사용자 ID와 비밀번호를 입력해야 합니다.



- 최초 관리자 ID는 “admin”이며, 비밀번호는 최초 로그인 시 설정해야 합니다. (관리자 접속의 초기 비밀번호는 “4321”입니다.)
- ID는 대소문자 영문과 숫자를 입력할 수 있습니다.
- 비밀번호는 <\>와 <">를 제외한 영문과 특수 기호를 입력할 수 있습니다.
- 무선 공유기에 연결하여 본 제품을 사용할 경우 공유기의 초기 설정된 비밀번호를 그대로 사용하거나 비밀번호를 설정하지 않을 경우 노출의 위험이 있으므로 반드시 공유기에 새로운 비밀번호를 설정하세요.
- 안전하게 개인정보를 보호하고, 개인정보도용 피해를 예방하기 위해 3개월 마다 주기적으로 비밀번호를 변경하세요. 부주의한 비밀번호 관리로 인한 보안 및 기타 문제의 책임은 사용자에게 있으므로 각별히 주의하세요.




- 관리자와 일반 사용자를 포함하여 최대 10명의 동시 접속을 허용합니다.
- 관리자는 중복 로그인을 할 수 없습니다.
- 관리자와 일반 사용자의 비밀번호는 NVR의 <권한관리> 메뉴에서 변경할 수 있습니다.
- 모든 설정은 NVR의 설정에 따라 적용됩니다.

3. <이 컴퓨터에 있는 모든 사용자를 위해 이 추가 기능 설치(A)>를 클릭하세요.



4. 설치 확인 창이 나타나면 [예(Y)] 버튼을 클릭하세요.

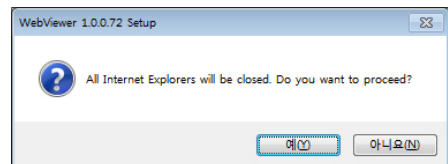


5. 프로그램 설치 마법사 창이 나타나면 **[Install]** 버튼을 클릭해 프로그램을 설치하세요.

- 설치되는 버전은 업데이트 버전에 따라 다를 수 있습니다.



6. 프로그램 설치를 완료하고 웹뷰어 창을 열어 다시 로그인하세요.
설치가 완료되고 로그인 성공하면 라이브 뷰어 메인 화면이 나타납니다.

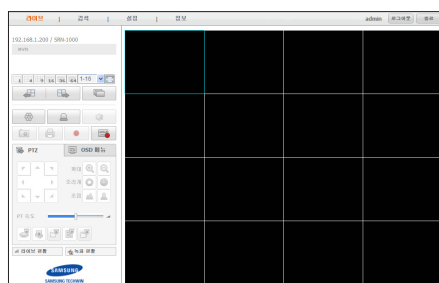

동일한 PC에서 웹뷰어를 2개 이상 사용할 경우


인터넷 익스플로러에서 웹뷰어를 실행 중 새 웹뷰어를 열었을 때 새로 로그인 한 사용자로 자동 변경될 수 있습니다. 이때, 새 세션으로 창을 열면 Session Cookie를 적용하지 않고 계정 변경 없이 별도의 창을 열 수 있습니다.

- 인터넷 익스플로러 7, 8, 9 : 이미 웹뷰어에 로그인하고 실행하고 있는 상태에서 새 탭이나 새 창을 열면 새로 로그인한 ID로 기존에 실행 중인 웹뷰어의 로그인 계정이 변경됩니다.
- 인터넷 익스플로러 8, 9 : **“파일 > 새 세션”**을 클릭하여 새 창을 열면 기존 계정과 독립적으로 웹뷰어를 실행 가능합니다.



■ 용어설명

- **Cookie** : 사용자가 특정 페이지를 접속할 때 생성되는 정보를 담은 임시 파일입니다.
- **Session** : 웹 페이지에 접속해서 페이지가 종료될 때까지 사용되는 정보들을 지칭합니다.
- **Session Cookie** : 보통 세션이라고도 하며 지속적으로 사용되는 Cookie와 다르게 통신이 연결된 상태에서만 사용됩니다. 일반적인 로그인을 진행하거나 중요한 Cookie 값을 전송할 때에 암호화된 Session Cookie를 이용해서 접속합니다.

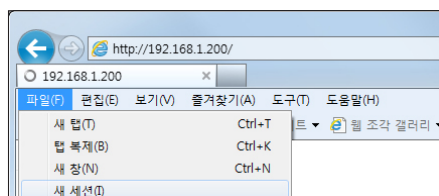


웹뷰어 시작하기

사용권한에 따른 웹뷰어 사용 시의 차이점

Windows Vista/7에서 인터넷 익스플로러를 열 때 관리자 권한으로 실행할 수 있으며, 사용자 권한으로 실행했을 때와 관리자 권한으로 실행 했을 때에는 사용 권한에 차이가 있습니다.

인터넷 익스플로러를 관리자 권한으로 실행했을 때

- 라이브, 검색 메뉴의 캡처 기능을 사용할 때 파일 저장 경로를 변경할 수 있으며, BMP, JPG, PNG 포맷으로 파일을 저장할 수 있습니다.
- AVI로 영상 저장을 할 경우 저장 경로를 설정할 수 있습니다.
- “설정정보관리 > 내보내기” 기능 사용시 <내보내기> 기능을 사용할 수 있습니다.

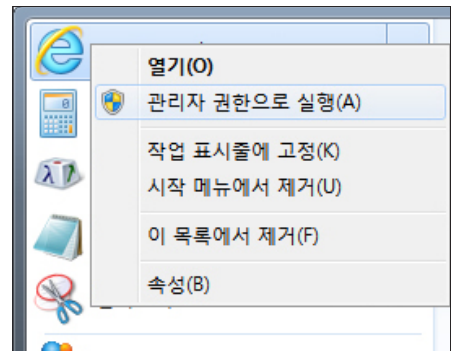

인터넷 익스플로러를 사용자 권한으로 실행했을 때


1. UAC가 동작 중이 아닐 경우
 - 라이브, 검색 메뉴의 캡처 기능을 사용할 때 파일 저장 경로를 변경할 수 없으며, BMP format으로 파일 저장이 가능합니다.
 - AVI로 영상 저장을 할 경우 저장 경로 설정이 불가능합니다.
 - “설정정보관리 > 내보내기” 기능 사용시 <내보내기> 기능을 사용할 수 있습니다.
2. UAC가 동작 중일 경우
 - 라이브, 검색 메뉴의 캡처 기능을 사용할 때 인터넷 익스플로러를 관리자 모드로 실행하라는 경고 문구를 보여줍니다.
 - AVI로 영상 저장을 할 경우 인터넷 익스플로러를 관리자 모드로 실행하라는 경고 문구를 보여줍니다.
 - “설정정보관리 > 내보내기” 기능 사용시 인터넷 익스플로러를 관리자 모드로 실행하라는 경고 문구를 보여줍니다.

사용자 계정 컨트롤(User Account Control, UAC)이란?


사용자 계정 컨트롤 (User Account Control, UAC)은 마이크로소프트의 Windows Vista 운영 체제에서 처음 선보인 보안 기술입니다. Windows Server 2008과 Windows 7에도 도입되었습니다. 관리자가 권한 수준을 높이는 것을 허용할 때까지 응용 프로그램들은 표준 사용자 권한으로 제한을 둬에 따라 운영 체제의 보안을 개선하는 데 중점을 둔 기능입니다.

UAC 동작여부를 확인하려면

1. 제어판의 사용자 계정에서 사용자 계정 설정 컨트롤 설정 변경을 선택하세요.

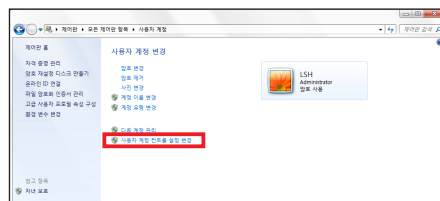


2. 좌측의 슬라이드 버튼을 조정해서 UAC값을 설정하세요.

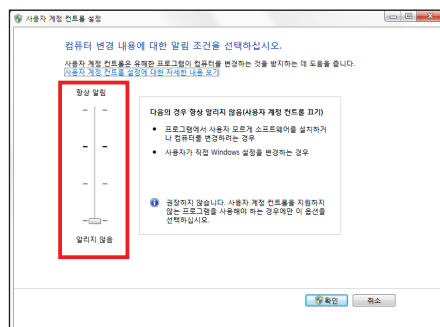

팝업차단을 해제하려면

웹뷰어를 사용할 때 발생하는 상황들을 알려주는 팝업창을 사용하기 위해 유저는 브라우저 옵션에서 팝업 차단 사용 항목을 해제해야 할 수도 있습니다.

인터넷 익스플로러의 <인터넷 옵션> 중 <개인 정보> 탭에서 <팝업 차단 사용(B)> 부분을 해제하세요.

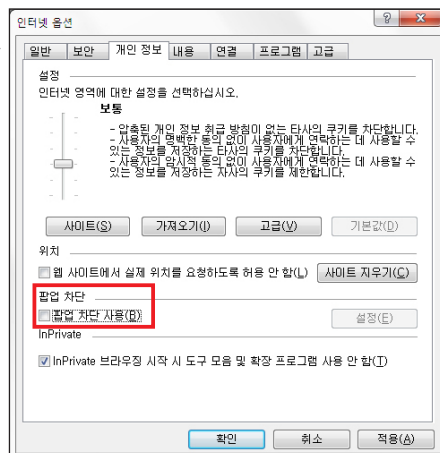

웹뷰어 시작하기

웹뷰어의 정상동작을 위한 Direct3D 기능 동작 확인

라이브 뷰어의 영상을 확인하기 위해서는 Direct3D가 정상적으로 동작하고 있어야 합니다.

1. 화면 좌측 하단의 윈도우 시작버튼을 클릭해서 프로그램 및 파일 검색 창에 “DxDiag”를 입력하고 [Enter] 키를 누르세요.
2. Direct X 진단 도구 페이지가 실행되면 상단의 두 번째 탭인 <디스플레이> 탭으로 이동하세요.
DirectX 기능 중 Direct3D 가속 항목이 <사용>으로 되어 있으면 정상적으로 웹뷰어를 사용할 수 있습니다.
3. 만약 Direct3D 가속 항목이 <사용할 수 없음>으로 되어 있으면 현재 사용하고 있는 PC의 비디오 카드 드라이버를 다시 설치하세요.



라이브 뷰어

라이브 뷰어

원격 PC에서 접속한 NVR에 등록된 카메라의 영상을 확인하고 카메라를 조정하고, 네트워크 전송 상태를 확인할 수 있습니다.

라이브 뷰어 화면 구성



메뉴명	기능 설명
1 메뉴 선택	각 메뉴를 클릭하면 해당 메뉴 화면으로 전환합니다.
2 주소, 명칭, 시간	접속하고 있는 NVR의 IP와 모델명, 시간 등을 표시합니다.
3 시스템 상태 표시	화면 상태나 시스템 상황을 나타내는 아이콘을 표시합니다.
4 분할 모드 선택	분할 화면 타입을 선택하고, 영상창에 나오는 채널을 선택합니다.
5 채널 변경	이전 / 다음 채널로 전환하거나, 자동 전환을 실행합니다. 자동 전환 버튼을 클릭하면 시간 간격 선택 메뉴를 팝업합니다.
일시정지	전체 채널의 영상을 일시 정지하거나, 일시 정지 상태에서 일시 정지를 해제합니다.
6 알람 정지	알람 발생 시 알람을 해제합니다.
음향	각 채널과 연결된 음향을 ON/OFF 설정합니다.


라이브 뷰어

메뉴명		기능 설명
7	캡처	선택한 채널의 현재 영상을 지정한 경로에 저장합니다.
	인쇄	선택한 채널의 현재 영상을 지정한 프린터를 통해 인쇄합니다.
	AVI 저장	라이브 영상을 AVI 파일로 지정한 경로에 녹화하고 정지합니다. 녹화 시에는 화면에 녹화 상태 아이콘을 표시합니다.
	NVR 수동 녹화	NVR 수동 녹화를 실행하고 정지합니다.
8	PTZ	연결된 PTZ 카메라를 제어합니다.
	OSD 메뉴	OSD 메뉴를 지원하는 카메라의 메뉴 화면에 진입하여 설정을 변경합니다.
9	라이브 현황	각 채널에 연결된 카메라의 라이브 현황 정보를 보여줍니다.
	녹화 현황	각 채널의 녹화 현황 정보를 보여줍니다.
10	영상창	NVR에 연결된 카메라의 영상을 보여줍니다.
11	종료	접속하고 있는 NVR을 원격으로 종료합니다. 종료 확인창이 팝업됩니다.
12	로그아웃	로그아웃을 실행합니다.
13	아이디	접속한 사용자 아이디를 표시합니다.

라이브 화면 구성

시스템 상태 확인

라이브 화면에 표시되는 아이콘은 현재의 설정 상태나 기능을 표시해 줍니다.

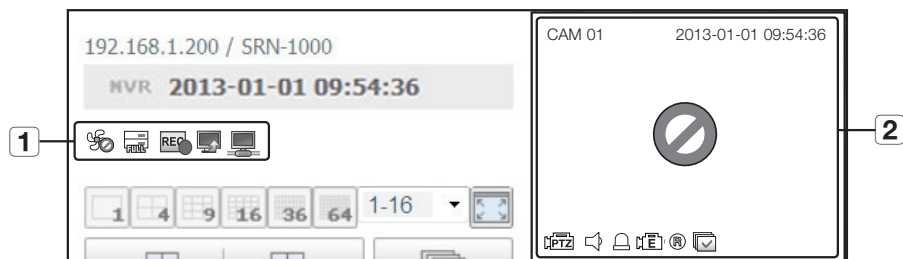

명 칭		기능설명		
1	시스템 상황 표시		팬에 문제가 발생할 경우 표시됩니다.	
		HDD		HDD 점검이 필요할 경우 표시됩니다.
				HDD가 없거나 교체해야 할 경우 표시됩니다.
				녹화 중 하드디스크가 가득차 녹화 용량이 부족할 경우 표시됩니다.
		녹화		녹화가 진행되고 있을 때 표시됩니다.
				전체 녹화데이터가 100Mbps를 넘게 되어 일부 채널이 주요장면만 녹화하게 될 때 표시됩니다. (77쪽)
			네트워크에 신규 펌웨어가 업데이트 될 경우 표시됩니다.	
			네트워크 과부화로 녹화제한 사항 발생 시 나타납니다.	
2	카메라 상황 표시		화면 정지 버튼을 누를 경우 표시됩니다.	
			카메라가 <ON>인 상태에서 입력이 없을 경우 표시됩니다.	
			라이브 뷰 권한이 없는 경우 표시됩니다.	
			카메라가 <OFF>인 경우 또는 <Covert>인 경우 화면에 아무것도 표시되지 않습니다.	

라이브 뷰어

명칭		기능설명
2	카메라 상황 표시	 카메라 이름/채널 표시 카메라 이름과 변경되는 채널을 표시합니다.
		 현재 날짜, 시간 현재의 날짜와 시간을 표시합니다.
		 PTZ PTZ 기능 카메라가 연결된 채널에 표시됩니다.
		 오디오 ON/OFF 상태 표시 오디오 ON/OFF 상태를 표시합니다. 비활성화 된 경우 비디오 모드에서 나타나지 않습니다.
		 센서 센서를 <ON>으로 설정할 경우 외부 입력 신호가 입력될 경우 연결된 채널에 표시됩니다.
		 이벤트 카메라 이벤트를 <ON>으로 설정하고, 카메라 이벤트가 발생했을 경우 표시됩니다.
		 일반/이벤트/예약녹화 상태 표시 일반/이벤트/예약녹화 상태를 표시합니다.
		 설정된 전환간격에 맞춰 모든 채널을 자동전환모드로 보여줄 때 표시됩니다.

 36분할, 64분할 화면인 경우에는 만 표시됩니다.

오류 정보

- 내장 HDD가 연결되지 않으면 “NO HDD” 아이콘()이 좌측 상단에 표시됩니다. 이 때는 녹화, 재생 및 백업 기능이 동작하지 않으므로 반드시 서비스 센터에 문의하세요.
- 팬이 제대로 동작하지 않거나 문제가 생긴 경우는 <팬 정보창>이 나타나고, 팬 이상 아이콘()이 좌측의 시스템 상황 표시란에 표시됩니다. 이 경우에는 제품 내부의 팬을 확인해 보시기 바랍니다.
팬 이상 발생시 제품의 수명을 단축시킬 수 있으므로 반드시 서비스 센터에 의뢰하세요.

-  팬 이상 아이콘이나 No HDD, HDD FAIL 아이콘이 보이는 경우, 서비스 센터에 문의하세요.
- NO HDD, HDD FAIL, 팬이상 발생시 전면부의 LED(ALARM, REC)가 계속 깜빡이게 됩니다.

카메라 등록하기

카메라를 등록하고 설정을 저장해야지만 라이브 뷰어에서 등록된 카메라 영상을 볼 수 있습니다.

카메라를 등록하려면

1. <설정> 메뉴를 클릭하세요.
2. <장치>-<카메라>-<등록> 메뉴를 클릭하세요.
3. 장치 등록 창에서 <자동입력>을 클릭하세요.
“카메라 자동 추가” 창이 나타나고 네트워크 상에 존재하는 등록 가능한 카메라를 목록에 표시합니다.
4. 목록 중 등록할 카메라의 체크박스를 클릭하여 선택하세요.
5. 선택한 카메라의 <ID>와 <비밀번호>를 입력하세요.
6. <등록> 버튼을 클릭하세요.
 - 여러대의 카메라를 선택하고 일괄 등록 시 동일한 ID와 비밀번호로 설정된 카메라만 등록됩니다.
7. “접속테스트” 확인 창이 뜨면 등록 상태를 확인하고 <확인> 버튼을 클릭하세요.
“카메라 자동 추가” 창이 닫히고 등록된 카메라를 목록에 표시합니다.
8. 등록을 완료하려면 <확인> 버튼을 클릭하세요.



- 카메라 등록 및 삭제에 관한 자세한 설명은 “카메라 등록하기”를 참조하세요. (61쪽)




라이브 뷰어

분할화면 변경하기

분할화면 선택 버튼을 클릭하면 해당 분할화면으로 화면을 변경합니다.



■ 36 분할/64 분할 화면에서는 OSD 정보가 표시되지 않습니다.

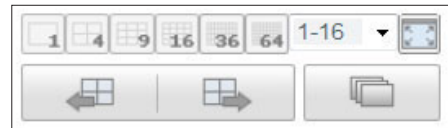


단일화면으로 변경하려면

< 1 >을 클릭하세요.

디스플레이 되고 있는 채널 중 선택된 카메라의 단일화면으로 변경됩니다.

원하는 카메라의 채널을 더블 클릭해도 단일화면으로 변경됩니다.


이전/다음 버튼을 클릭해 이전/다음 채널로 이동할 수 있습니다.

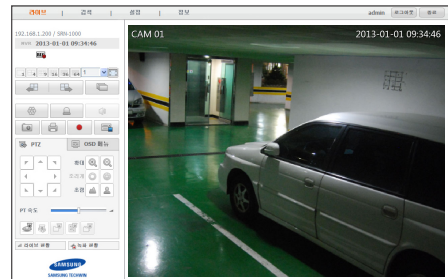

4 분할화면으로 변경하려면

< 4 >을 클릭하세요.


디스플레이 되고 있는 채널 중 선택된 카메라 포함한 채널군을 처음 순서로 위치시키며 4분할화면으로 변경됩니다.

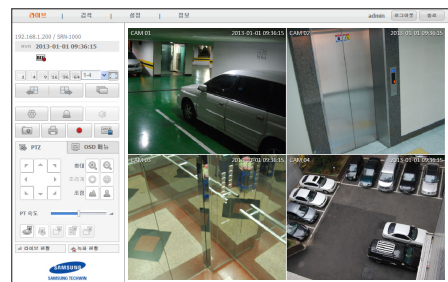

9 분할화면으로 변경하려면

< 9 >을 클릭하세요.


디스플레이 되고 있는 채널 중 선택된 카메라 포함한 채널군을 처음 순서로 위치시키며 9분할화면으로 변경됩니다.

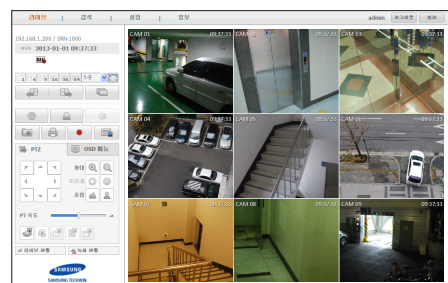

16 분할화면으로 변경하려면

< 16 >을 클릭하세요.


디스플레이 되고 있는 채널 중 선택된 카메라 포함한 채널군을 처음 순서로 위치시키며 16분할화면으로 변경됩니다.

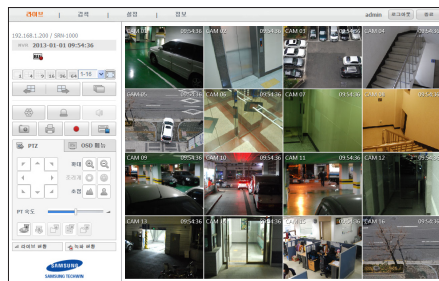

36 분할화면으로 변경하려면

< 36 >을 클릭하세요.


디스플레이 되고 있는 채널 중 선택된 카메라 포함한 채널군을 처음 순서로 위치시키며 36분할화면으로 변경됩니다.

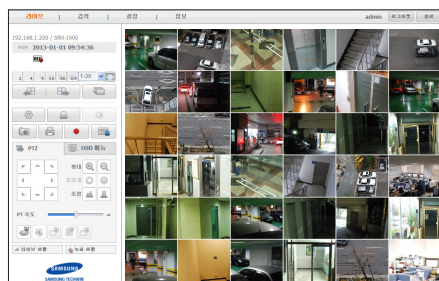

64 분할화면으로 변경하려면

< 64 >을 클릭하세요.

디스플레이 되고 있는 채널 중 선택된 카메라 포함한 채널군을 처음 순서로 위치시키며 64분할화면으로 변경됩니다.

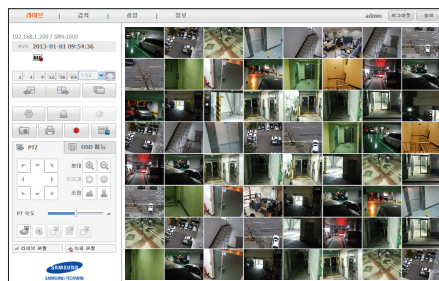

원하는 채널 화면으로 이동하려면

이전/다음 버튼을 눌러 이전 다음 채널 군으로 변경하거나 분할화면 버튼 우측의 채널 선택 바를 클릭하여 드롭되는 채널 목록에서 원하는 채널을 선택하면 바로 해당 화면으로 변경됩니다.




라이브 뷰어

전체 화면으로 변경하려면

<  >을 클릭하세요.

현재 분할화면 상태로 전체 화면으로 변경됩니다.


전체 화면에서 나가려면 키보드의 [ESC] 키를 누르세요.

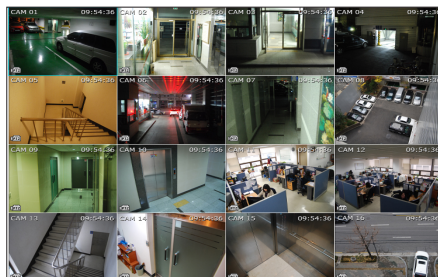

분할화면 전환하기

64개의 라이브 영상을 단일, 4분할, 9분할, 16분할, 36분할화면으로 분할하여 순차적으로 볼 수 있습니다.

화면 자동전환

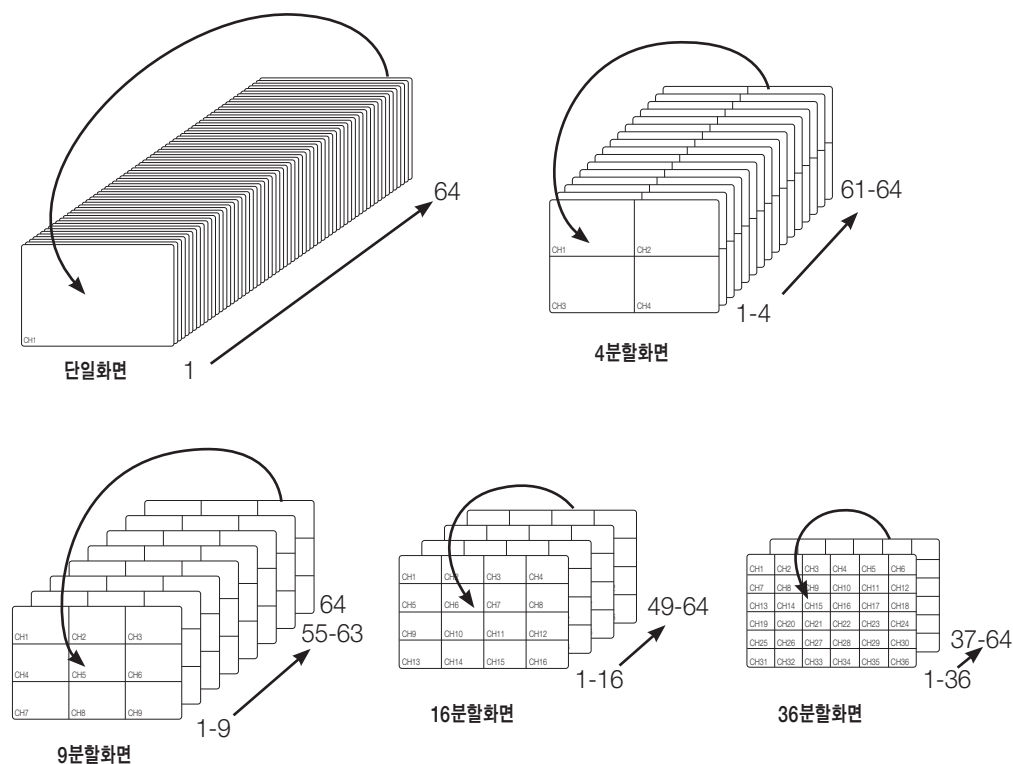


■ 채널 변환 시 네트워크 환경에 따라 영상이 늦게 나올 수 있습니다.

이전/다음 채널로 이동하려면


<  >, <  > 버튼을 클릭하세요.

현재 분할화면 상태에서 연결된 디바이스의 이전/다음 화면으로 이동합니다

- 이전 : 이전 화면으로 역순으로 전환합니다.
- 다음 : 다음 화면으로 순차적으로 전환합니다.
- 16분할 화면 모드에서 <  > 버튼을 누르면:
16분할(CH 1~16) 모드 16분할(CH 49~64) 모드 16분할(CH 33~48) 모드 16분할(CH 17~32) 모드 자동전환

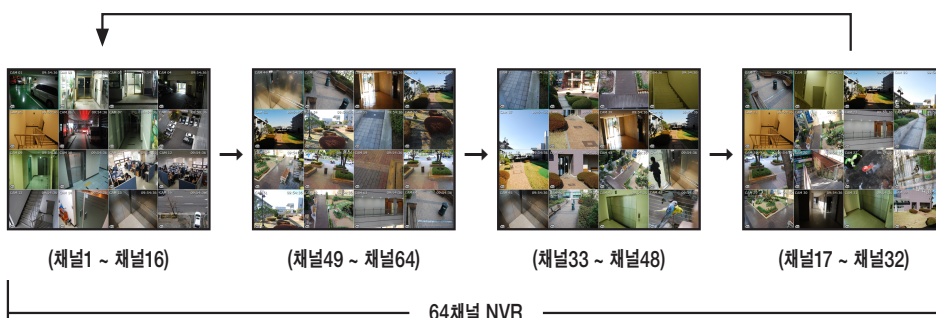


- 16분할 화면 모드에서 <  > 버튼을 누르면:
16분할(CH 1~16) 모드 16분할(CH 17~32) 모드 16분할(CH 33~48) 모드 16분할(CH 49~64) 모드 자동전환

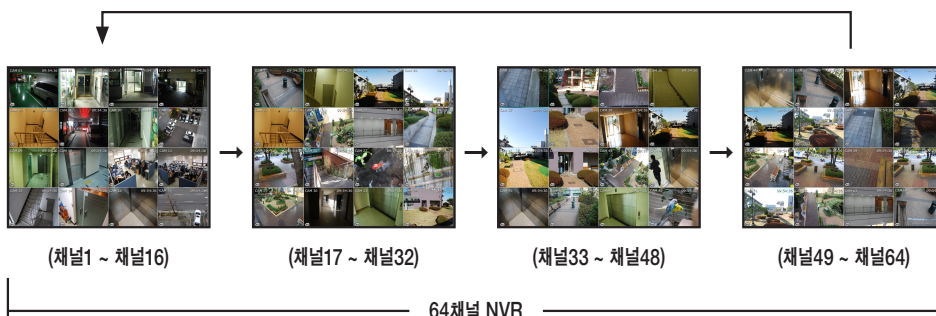

자동전환을 실행하려면

1. <  > 버튼을 클릭하세요.
시퀀스 간격 설정 창이 팝업됩니다.
2. 전환 간격을 입력하세요.
3. <확인> 버튼을 클릭하세요.

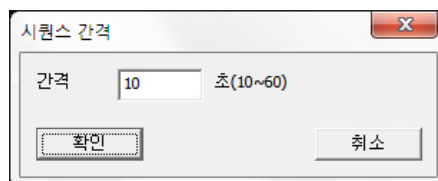


라이브 뷰어

캡처를 하려면

1. <  > 버튼을 클릭하세요.
캡처의 저장 경로를 선택하는 팝업창이 나타납니다.
2. 경로를 선택하고 파일이름을 지정한 후 <저장(S)> 버튼을 클릭하세요.
3. 선택된 카메라의 영상을 .bmp, .jpg 또는 .png파일로 저장합니다.




- Windows Vista/7에서 관리자 모드가 아닐 경우 캡처파일 저장 시 .bmp, .jpg 또는 .png로 저장하는데 제한이 있을 수 있습니다.

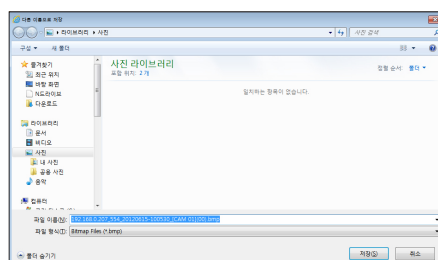


인쇄를 하려면

1. <  > 버튼을 클릭하세요.
2. 현재 선택된 카메라의 영상을 웹뷰어를 실행하고 있는 PC와 연결된 프린터로 출력합니다.

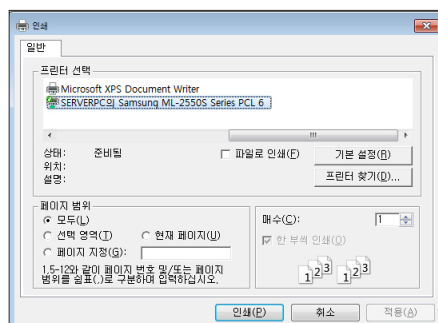

AVI 저장을 하려면

1. <  > 버튼을 클릭하세요.
녹화의 저장 경로와 녹화 용량을 선택할 수 있는 "AVI Setup" 창이 나타납니다.
2. 경로를 선택하고 최대 녹화 용량을 입력하고 <확인> 버튼을 클릭하세요.
선택된 채널의 영상을 .avi 파일로 저장합니다.
 - 영상 재생 시 무료 동영상 재생기를 이용하면 쉽게 재생이 가능합니다. (예: GOM, KMPlayer 등)
 - AVI 저장 후 Windows Media Player 재생 시 코덱을 설치하세요.
 - 단, 해당 재생기의 코덱에 따라 재생이 안 될 수도 있습니다.
녹화를 위해서는 최소한 1GB의 여유공간이 필요합니다.

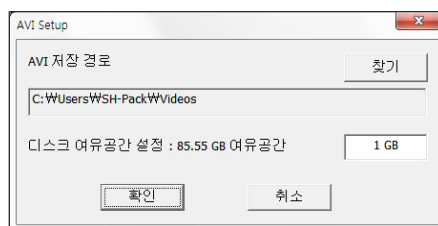


- 웹뷰어에서 녹화중인 경우에는 분할화면 선택 버튼과 이전/다음 화면 변경, 자동전환 기능이 제한됩니다.
- Windows 7/Vista에서 관리자 모드가 아닐 경우 AVI 저장 시 저장 폴더를 변경하는데 제한이 있을 수 있습니다.

연결중인 네트워크 카메라 제어하기

PTZ 제어하기

연결한 네트워크 카메라가 PTZ 카메라일 경우 영상에 <PTZ> 아이콘을 표시하고, 해당 카메라 채널을 선택하면 PTZ 탭이 활성화되고 PTZ 제어를 할 수 있습니다.

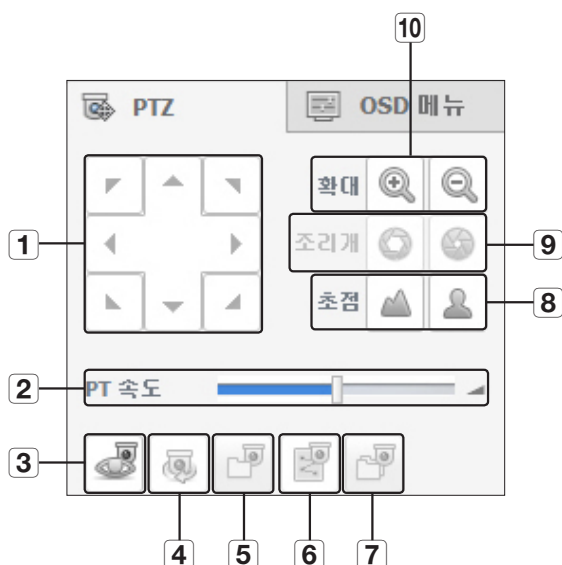

명칭		기능 설명
1	방향 조정	카메라의 방향을 조정합니다.
2	PT 속도	PAN, TILT 반응 속도를 조절합니다.
3	프리셋	카메라가 이동할 프리셋 위치를 설정하고, 원하는 프리셋을 선택하면 설정된 위치로 이동합니다.
4	스윙	카메라가 설정된 시작점 종료점 사이를 왕복합니다.
5	그룹	프리셋, 패턴, 오토팬을 조합하여 선택한 경로로 움직입니다.
6	트레이스	카메라가 설정된 경로를 따라 움직입니다.
7	투어	여러 개의 그룹을 조합하여 설정한 경로로 움직입니다.
8	초점	카메라 이미지의 초점을 조정합니다.
9	조리개	카메라의 조리개를 조정하여 카메라의 밝기를 조절합니다.
10	확대	카메라의 줌을 조정하여 이미지를 확대하거나 축소합니다.

라오 | 브 뷰어

프리셋을 설정하려면

1.  버튼을 클릭하면 “**프리셋**” 창이 나타납니다.
2.  > 클릭하여 설정할 프리셋 번호를 선택하세요.
3. 프리셋 이름을 입력하세요.
4. 방향키를 이용해 카메라가 향할 지점으로 방향을 조정하세요.
5. **<녹화>** 버튼을 클릭하세요.

프리셋을 실행하려면

1. <  > 버튼을 클릭하면 “프리셋” 창이 나타납니다.
2. 목록에서 실행할 프리셋을 클릭하세요.
설정한 위치로 카메라 렌즈가 이동합니다.



스윙(오토팬), 그룹(스캔), 트레이스(패턴), 투어를 실행하려면


각 기능 실행 방법은 프리셋 실행 방법과 동일합니다. 자세한 사용 방법은 해당 카메라의 사용 설명서를 참조하세요.



- 카메라의 성능에 따라 일부 기능만 사용 가능할 수 있습니다.

OSD 메뉴 제어하기

연결한 네트워크 카메라가 OSD 메뉴를 지원하는 카메라일 경우 <  >을 눌러 카메라의 메뉴 화면에 진입하여 설정을 변경할 수 있습니다.

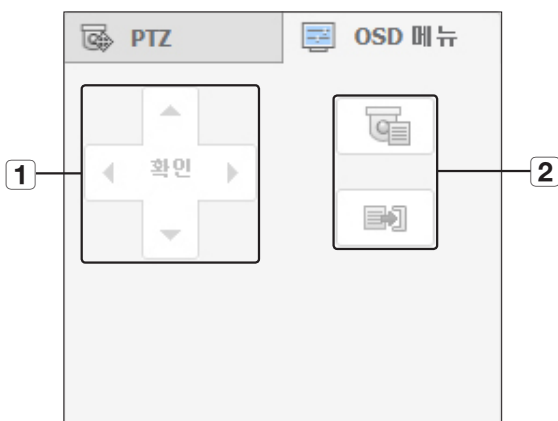

명칭		기능 설명
1	방향 조정	원하는 메뉴로 이동할 수 있습니다.
	확인	원하는 항목을 선택합니다.
2	카메라 메뉴 / 나가기	카메라 OSD 메뉴 설정 화면의 사용 / 정지를 선택할 수 있습니다.



- 카메라 OSD 메뉴의 자세한 사항은 해당 카메라의 사용 설명서를 참조하세요.

라이브 뷰어

라이브 현황 확인하기

라이브 화면에서 <라이브 현황> 버튼을 클릭하면 각 채널에 연결된 카메라의 상태와 전송 정보를 확인할 수 있습니다.

- 접속 : 등록된 카메라의 접속 상태를 확인합니다.
- IP : 카메라의 IP 주소를 확인합니다.
- 코덱 : 카메라 전송 프로파일을 확인합니다.
- 해상도 : 카메라의 프로파일 해상도를 확인합니다.
- 전송율 : 카메라의 프로파일 전송율을 확인합니다.
- 전송화질 : 카메라의 프로파일 전송 영상의 화질을 확인합니다.

채널	모형	종류	IP	코덱	해상도	전송율	전송화질
1	960x320	동영상/인쇄/인쇄	192.168.0.109	H.264	640x480	30	10
2	-	-	-	-	-	-	-
3	-	-	-	-	-	-	-
4	-	-	-	-	-	-	-
5	-	-	-	-	-	-	-
6	-	-	-	-	-	-	-
7	-	-	-	-	-	-	-
8	-	-	-	-	-	-	-
9	-	-	-	-	-	-	-
10	-	-	-	-	-	-	-
11	-	-	-	-	-	-	-
12	-	-	-	-	-	-	-
13	-	-	-	-	-	-	-
14	-	-	-	-	-	-	-
15	-	-	-	-	-	-	-
16	-	-	-	-	-	-	-
17	-	-	-	-	-	-	-
18	-	-	-	-	-	-	-
19	-	-	-	-	-	-	-
20	-	-	-	-	-	-	-
21	-	-	-	-	-	-	-
22	-	-	-	-	-	-	-
23	-	-	-	-	-	-	-

녹화 현황 확인하기

라이브 화면에서 <녹화 현황>을 선택하면 채널 별로 영상방식, 녹화유형, 입력 / 녹화 프레임 수, 허용 / 입력 / 녹화 데이터량을 확인할 수 있습니다.

- 영상방식 : 채널 별로 설정 된 비디오 프로파일을 보여줍니다.
- 녹화 유형 : 녹화 시 적용한 녹화 유형을 보여줍니다.
녹화 유형은 <녹화설정>에서 설정할 수 있습니다.
- 프레임(fps) : 채널 별로 입력 / 녹화 프레임 수를 보여줍니다.
- 데이터(Mbps)
 - 허용 / 입력 / 녹화 : 채널 별로 허용 / 입력 / 녹화 데이터량을 보여줍니다.
 - 입력 / 허용 : 카메라에서 실제로 들어오는 데이터량과 사용자가 설정한 허용 데이터량의 비율을 보여줍니다.
- 현재 : 현재 들어오고 있는 데이터에 대한 녹화현황 정보를 보여줍니다.
- 최대 : 설정된 녹화 타입정보에서 일반 녹화와 이벤트 녹화중 가장 큰 데이터에 대한 녹화정보를 보여줍니다.
- 갱신 : 녹화 정보를 다시 불러옵니다.
- 녹화가능 (일수/시간) : 녹화 시 녹화 가능한 날짜와 시간을 보여줍니다.

녹화 현황

영상 복호화모드 (해상도) 6.4 / 500.0 Mbps

유한 저장

영상

화면

공간

채널	영상방식	녹화 유형	프레임(fps)		데이터(Mbps)				
			입력	녹화	입력	녹화	입력	출력	
1	Profile2	NORMAL	KEY	1.0	1.0	1.5	0.4	0.4	25
2	-	-	-	-	1.5	-	-	-	-
3	-	-	-	-	1.5	-	-	-	-
4	-	-	-	-	1.5	-	-	-	-
5	-	-	-	-	1.5	-	-	-	-
6	-	-	-	-	1.5	-	-	-	-
7	-	-	-	-	1.5	-	-	-	-
8	-	-	-	-	1.5	-	-	-	-
9	-	-	-	-	1.5	-	-	-	-
10	-	-	-	-	1.5	-	-	-	-
11	-	-	-	-	1.5	-	-	-	-
12	-	-	-	-	1.5	-	-	-	-
13	-	-	-	-	1.5	-	-	-	-
14	-	-	-	-	1.5	-	-	-	-
15	-	-	-	-	1.5	-	-	-	-
16	-	-	-	-	1.5	-	-	-	-
17	-	-	-	-	1.5	-	-	-	-
18	-	-	-	-	1.5	-	-	-	-
19	-	-	-	-	1.5	-	-	-	-
20	-	-	-	-	1.5	-	-	-	-
21	-	-	-	-	1.5	-	-	-	-
22	-	-	-	-	1.5	-	-	-	-
23	-	-	-	-	1.5	-	-	-	-

오버샘플 : OFF

HDD 저장용 공간 : 900 GB

녹화기간 (동수시간) : 205 일 / 22 시간

HDD 전체 용량 : 995 GB

녹화기간 (동수시간) : 205 일 / 11 시간

화면

검색 뷰어

검색 뷰어

NVR을 원격으로 연결하여 NVR에 저장된 녹화 영상을 검색하고 재생할 수 있습니다.

검색 뷰어 화면 구성



명칭		기능 설명
1	메뉴 선택	각 메뉴를 클릭하면 해당 메뉴 화면으로 전환합니다.
2	주소, 명칭, 시간	접속하고 있는 NVR의 IP와 모델명, 시간 등을 표시합니다.
3	음향	각 채널과 연결된 음향을 ON/OFF 설정합니다.
4	분할 모드 선택	분할 화면 타입을 선택하고, 영상창에 나오는 채널을 선택합니다.
5	캡처	선택한 채널의 현재 영상을 지정한 경로에 저장합니다.
	인쇄	선택한 채널의 현재 영상을 지정한 프린터를 통해 인쇄합니다.
	AVI 저장	영상 재생 상태에서 재생 중인 영상을 AVI 파일로 지정한 경로에 녹화하고 정지합니다.
	NVR 수동 녹화	NVR 녹화를 실행하고 정지합니다.
6	달력	비디오가 녹화되어 있는 날짜는 파란색으로 표시하고 현재 날짜는 빨간색 박스로 표시합니다. 파란색으로 표시된 날짜를 클릭하면 녹화된 비디오 정보가 타임 라인에 나타납니다.

검색 뷰어

명칭		기능 설명
7	중복된 자료	녹화된 비디오 데이터를 표시 및 확대, 축소하고 중복된 자료가 존재할 경우 선택하여 재생합니다.
8	재생 조정	재생 중인 영상의 속도 및 재생 위치를 조정합니다.
9	녹화 색상	마우스 커서를 대면 각 녹화 데이터의 타입에 따라 표시되는 색상을 보여줍니다.
10	영상창	검색 결과를 선택하면 해당 데이터의 재생 화면을 보여줍니다.
11	종료	접속하고 있는 NVR을 원격으로 종료합니다. 종료 확인창이 팝업됩니다.
12	로그아웃	로그아웃을 실행합니다.
13	아이디	접속한 사용자 아이디를 표시합니다.

날짜로 검색하려면

달력을 이용해 검색 날짜를 선택할 수 있습니다.

1. < << > 또는 < >> >를 클릭해 검색할 년도를 선택하세요.
2. < < > 또는 < > >를 클릭해 검색할 월을 선택하세요.
데이터가 있는 날짜는 파란색으로 표시하고 현재 날짜는 빨간색 박스로 표시합니다.
3. 달력에서 검색할 날짜를 클릭하세요.
해당일의 검색된 데이터의 첫 영상을 영상창에 표시하고 타임 라인에 데이터를 표시합니다.
4. 오늘 날짜를 검색하려면 <오늘>을 클릭하세요.
오늘 날짜가 바로 선택됩니다.

현재 녹화 상태에 따른 색상 정보

각 녹화 데이터의 타입에 따라 표시되는 색상을 보여줍니다.

■ 일반 녹화	■ 비디오 분석
■ 예약	■ 오디오 감지
■ 센서	■ DST
■ 모션	




- 동일한 시간대에 녹화 타입이 2가지 이상 혼합된 경우, 우선 순위가 높은 녹화 타입만 표시됩니다.
(우선순위: 오디오 감지 > 비디오 분석 > 모션 > 센서 > 예약 > 일반 녹화)

타임 라인을 조정하려면

검색한 자료가 중복될 경우 원하는 자료를 선택하고 재생 위치를 이동하고 타임 라인을 확대, 축소할 수 있습니다.

1. 중복된 자료가 존재할 경우 검색할 자료의 번호를 선택하세요.
중복된 자료가 있을 경우에만 나타나며, 가장 최근 데이터부터 <0>순으로 표시됩니다.
2. 타임 라인에서 원하는 재생 위치를 클릭하세요.
재생 시작 위치가 이동됩니다.
3. <+>, <->를 클릭해 시간 표시 배율을 확대 또는 축소하세요.
4. 확대상태에서 이전, 이후 타임 라인을 보려면 <◀>, <▶>를 클릭해 타임 라인의 왼쪽, 오른쪽으로 이동하세요.

재생 버튼 명칭 및 기능

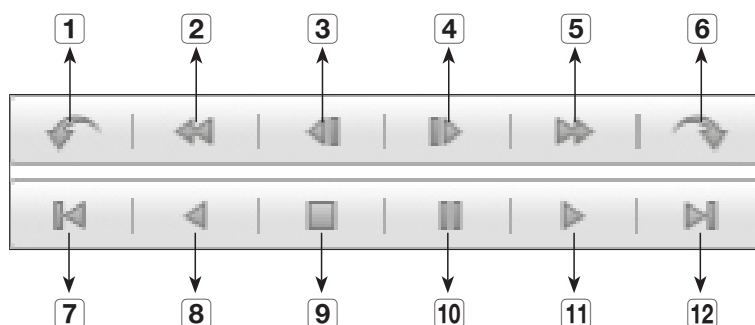

명칭	기능 설명
1 10분 뒤로	재생 시점으로부터 10분 전으로 이동합니다.
2 역방향 고배속 재생	역방향으로 2배속씩 증가하여 64배속까지 재생합니다.
3 1초 뒤로	재생 시점으로부터 1초 전으로 이동합니다.
4 1초 앞으로	재생 시점으로부터 1초 앞으로 이동합니다.
5 정방향 고배속 재생	정방향으로 2배속씩 증가하여 64배속까지 재생합니다.
6 10분 앞으로	재생 시점으로부터 10분 앞으로 이동합니다.
7 처음검색	해당 타임라인의 녹화 시작 지점으로 이동합니다.
8 역방향 재생	역방향으로 재생합니다.

검색 뷰어

명칭		기능 설명
9	정지	재생을 정지합니다. 정지 후 다시 시작하면 녹화 시작 지점에서 재생을 시작합니다.
10	화면정지	재생을 일시 정지합니다. 일시 정지 후 다시 시작하면 정지한 시점에서 재생을 시작합니다.
11	재생	정방향으로 재생합니다.
12	최근검색	해당 타임라인의 녹화 종료 지점으로 이동합니다.

메뉴 설정

설정

네트워크 상에서 원격으로 NVR의 설정을 할 수 있습니다.
NVR 관련 설정을 하려면 <설정>을 클릭하세요.

설정 화면 구성



명칭		기능 설명
1	메뉴 선택	각 메뉴를 클릭하면 해당 메뉴 화면으로 전환합니다.
2	상위 메뉴	설정을 하거나 기존 설정을 변경할 항목의 상위 항목을 선택합니다.
3	하위 메뉴	선택한 상위 메뉴에 대한 하위 메뉴 중 설정할 항목을 선택합니다.
4	상세 메뉴	변경할 항목의 입력란을 클릭하여 원하는 설정으로 입력합니다.
5	확인	변경한 설정을 적용합니다.
	취소	변경한 설정을 적용하지 않고 변경 전 값으로 복귀합니다.
6	종료	접속하고 있는 NVR을 원격으로 종료합니다. 종료 확인창이 팝업됩니다.
7	로그아웃	로그아웃을 실행합니다.
8	아이디	접속한 사용자 아이디를 표시합니다.

메뉴 설정

시스템환경 설정

날짜/시간/언어, 권한 관리, 시스템 관리, 로그 정보를 설정할 수 있습니다.

날짜/시간/언어

날짜/시간/언어 설정하기

현재 날짜와 시간 그리고 시간과 관련된 설정을 확인 또는 변경하거나 화면에 표시되는 언어를 설정할 수 있습니다.



- 날짜 : 화면에 표시되는 날짜를 설정합니다.
- 시간 : 화면에 표시되는 시간을 설정합니다.
- 시간대 : 표준시(GMT)를 기준으로 NVR을 설치한 거주 지역의 시간대를 설정합니다.
 - GMT(Greenwich Mean Time)란 세계 표준시입니다.
- 시간동기화 : 시간서버와 동기화 여부를 설정합니다.
<설정> 버튼을 클릭하면 시간 동기화 설정 화면이 나타납니다.
<시간서버>를 사용하면 NVR의 현재 시각이 <시간서버>에서 지정된 서버에 의해 주기적으로 맞춰집니다.
이 경우, 수동으로 시간정보를 변경할 수 없습니다.
 - 동기화 : 시간서버와 시간 동기화 사용여부를 선택합니다.
 - 시간서버 : 시간 서버로 사용할 서버의 IP나 URL주소를 입력합니다.
 - 마지막 동기화 시간 : 현재 설정된 시간서버로부터 가장 최근에 받은 시각을 나타냅니다.
 - 서버로 동작 : <사용>을 선택하면 본 NVR이 다른 NVR 또는 네트워크 카메라들의 시간서버가 됩니다.




- 시간동기화 우측에 시간동기화 사용여부를 표시합니다.

- 화면 표시 : 날짜와 시간의 표시 방식을 선택합니다.
- DST : 시작과 끝 기간을 설정하여 일광절약 기간을 정하면 설정된 기간 동안 그 지역의 표준시보다 한 시간 앞당긴 시간으로 설정됩니다.
- 언어 : 웹뷰어에 표시할 언어를 선택합니다.
영어, 불어, 독일어, 스페인어, 이탈리아어, 중국어, 러시아어, 한국어, 폴란드어, 일본어, 네덜란드어, 포르투갈어, 터키어, 체코어, 덴마크어, 스웨덴어, 태국어, 루마니아어, 세르비아어, 크로아티아어, 헝가리어, 그리스어, 핀란드어, 노르웨이어가 지원됩니다.


휴일 설정하기

사용자의 상황에 맞게 원하는 날짜를 휴일로 지정할 수 있습니다.
<녹화예약>이나 <알람출력예약> 설정에도 동일하게 휴일로 적용됩니다.

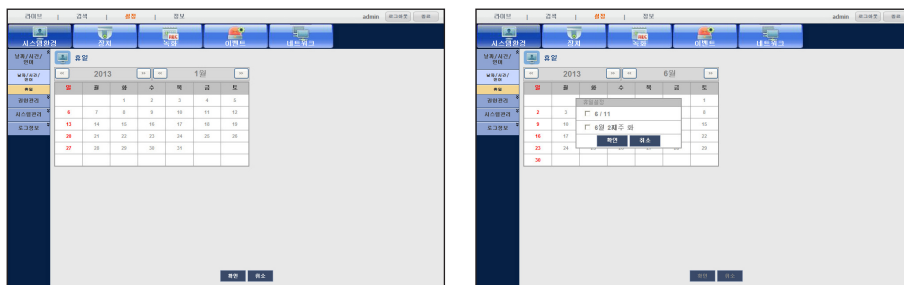

- 예) 6월 11일을 선택하고 <6/11>만 체크 표시하면 매년 6월 11일이 휴일로, <6/11>과 <6월 2째 주 화>를 모두 체크 표시하면 매년 6월 11일과 6월 2째 주 화요일이 모두 휴일로 설정됩니다.
- 휴일로 설정된 날짜는 노란색으로 표시됩니다.

날짜를 선택하려면

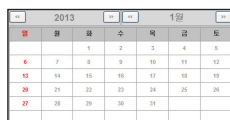


1. <<< > 또는 <>>> >를 클릭해 검색할 년도를 선택하세요.
2. <<< > 또는 <>>> >를 클릭해 검색할 월을 선택하세요.

권한관리

NVR의 특정기능이나 설정 권한을 각 사용자에게 차별적으로 부여할 수 있습니다.

관리자 설정하기

관리자의 ID와 비밀번호를 설정하거나 변경할 수 있습니다.
관리자는 모든 메뉴 항목과 기능을 설정하거나 사용할 수 있습니다.

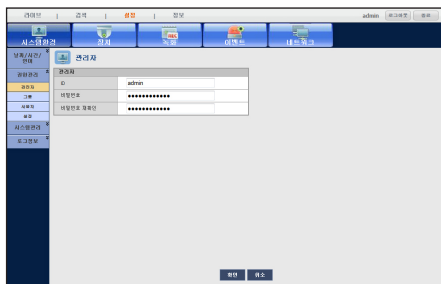

메뉴 설정



- ID : 관리자 ID를 변경합니다.
- 비밀번호 : 변경할 비밀번호를 입력합니다.



- 최초 관리자 ID는 “admin”이며, 비밀번호는 최초 로그인 시 설정해야 합니다. (관리자 접속의 초기 비밀번호는 “4321”입니다.)
- ID는 대소문자 영문과 숫자를 입력할 수 있습니다.
- 비밀번호는 <\>와 <">를 제외한 영문과 특수 기호를 입력할 수 있습니다.
- 안전하게 개인정보를 보호하고, 개인정보도용 피해를 예방하기 위해 3개월 마다 주기적으로 비밀번호를 변경하세요. 부주의한 비밀번호 관리로 인한 보안 및 기타 문제의 책임은 사용자에게 있으므로 각별히 주의하세요.

그룹 설정하기


그룹을 만들거나 각 그룹에 대한 권한을 설정할 수 있습니다.
각 그룹의 사용자는 <사용자> 항목에서 등록할 수 있습니다.

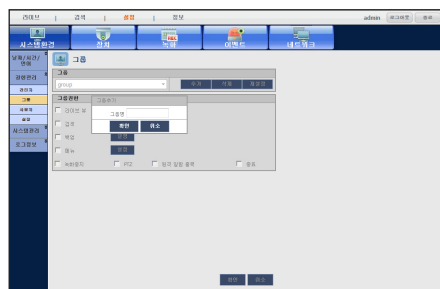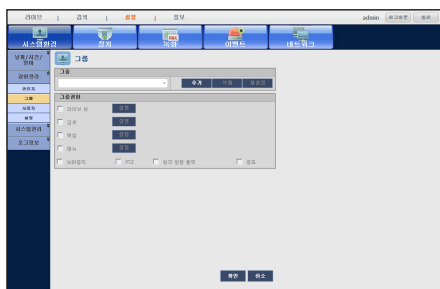

- 추가, 삭제, 재설정 : 그룹을 추가, 삭제하거나 그룹 이름이나 권한을 변경합니다.
각 <추가>와 <재설정> 버튼을 클릭하면 그룹명 입력창이 팝업됩니다.
그룹 추가는 최대 10개까지 가능합니다.
 - 추가 : 등록할 그룹 이름을 입력하세요.
NVR을 처음으로 시작하면 관리자만 존재하므로 추가 이외의 버튼이 비활성됩니다.
 - 삭제 : 이미 등록된 사용자 그룹을 삭제합니다. 삭제할 경우 해당 그룹의 사용자가 모두 삭제됩니다.
 - 재설정 : 이미 등록된 그룹 이름을 변경합니다.
- 그룹권한 : 각 그룹이 접근할 수 있는 권한을 설정합니다.
각 그룹의 사용자들은 체크 표시된 항목만 접근할 수 있습니다.

그룹권한을 설정하려면

그룹에 속한 사용자들의 각 메뉴 접근 권한을 채널별로 설정할 수 있습니다.


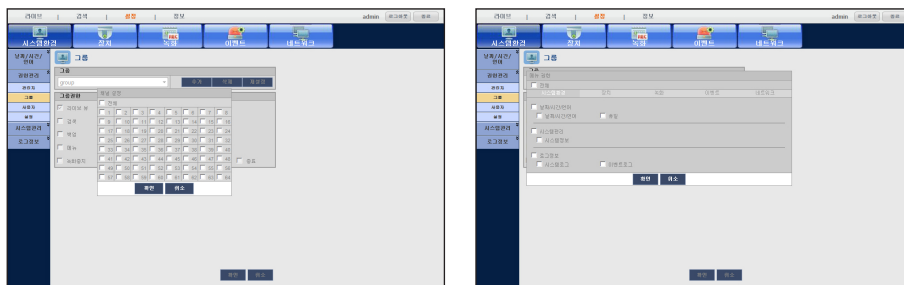


1. 그룹의 권한을 설정할 메뉴를 선택하세요.
권한이 설정된 메뉴는 해당 그룹의 사용자가 로그인시 라이브 메뉴에 나타납니다.
 - 라이브 뷰 : 라이브 화면에 접근할 수 있는 권한을 채널별로 설정할 수 있습니다.
체크 박스를 선택하면 “**채널 설정**” 창이 팝업됩니다. 라이브 뷰를 보여줄 채널의 체크 박스를 클릭하여 선택합니다.
 - 검색 : 검색 메뉴에 접근할 수 있는 권한을 채널별로 설정할 수 있습니다.
체크 박스를 선택하면 “**채널 설정**” 창이 팝업됩니다. 검색이 가능한 채널의 체크 박스를 클릭하여 선택합니다.
 - 백업 : 백업 메뉴에 접근할 수 있는 권한을 채널별로 설정할 수 있습니다.
체크 박스를 선택하면 “**채널 설정**” 창이 팝업됩니다. 백업할 채널의 체크 박스를 클릭하여 선택합니다.
단, 웹뷰어 자체적으로 백업 기능을 지원하지 않습니다.
 - 메뉴 : 접근 가능한 설정 메뉴를 선택하여 설정할 수 있습니다. 그룹의 사용자는 설정된 메뉴에만 접근할 수 있습니다. 메뉴를 선택하면 메뉴 권한설정 화면이 나타납니다.
 - 녹화 중지, PTZ, 원격 알람 출력, 종료 : 그룹에게 주어질 권한 메뉴를 선택하면 각 기능의 사용 권한이 주어집니다.
2. <확인>을 클릭하세요.
그룹의 사용자에게 체크하여 선택한 항목에 접근할 권한이 주어집니다.

메뉴 설정

사용자 설정하기



사용자를 추가하고, 등록된 사용자 정보를 편집할 수 있습니다.

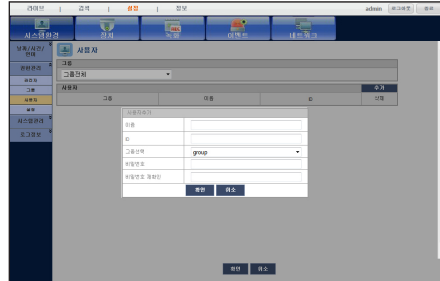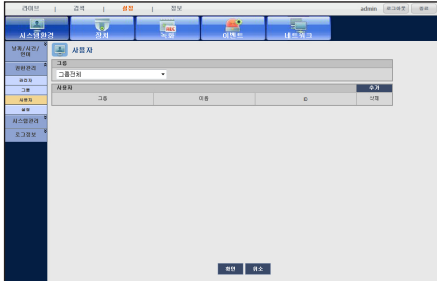

사용자를 등록하려면

1. 그룹을 선택하세요.
사용자를 등록하려면 사용자가 속할 그룹을 먼저 등록해야 합니다. (54쪽)
2. 이름, ID, 비밀번호를 입력하세요.
3. <확인>을 클릭하세요.
등록된 사용자 정보가 목록에 표시됩니다.

사용자 정보를 편집, 삭제하려면

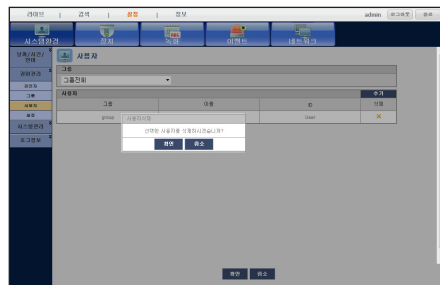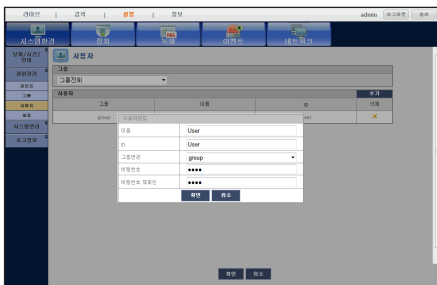


1. 목록에 표시된 사용자 정보 중 아무 항목이나 선택하세요.
2. 변경할 내용을 입력하고 <확인>을 클릭하세요.
3. 삭제하려면 목록에 표시된 삭제 버튼을 클릭하세요.
4. 삭제 확인창이 나타나면 <확인>을 클릭하세요.

권한 설정하기

일반 사용자 전체에 대한 접근제한을 설정할 수 있습니다.

접근제한된 항목은 로그인 후에만 설정할 수 있습니다.

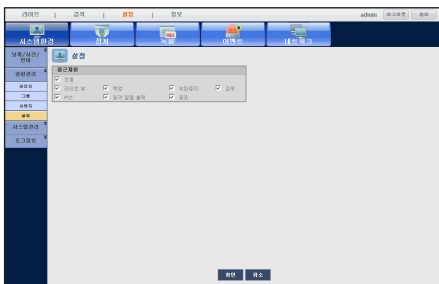

- 접근제한 : 사용가능한 메뉴에 대하여 모든 사용자를 대상으로 접근제한을 설정할 수 있습니다.
 - 체크(☑) : 접근 제한
 - 체크없음(☐) : 접근 가능
 - <접근제한>에서 설정을 해제할 경우(☐) <그룹권한> 설정과 관계없이 모든 사용자가 해당 설정에 접근할 수 있습니다.
 - <접근제한>에서 설정을 할 경우(☑) <그룹권한> 설정에서 허용된 사용자만이 해당 설정에 접근할 수 있습니다.



사용자 권한이 제한된 경우 사용 방법

추가된 그룹의 모든 권한을 제한할 경우 그룹에 속한 사용자는 최소화된 메뉴에만 접근 가능하며, 사용자 본인의 비밀번호만 변경할 수 있습니다.

모든 권한이 제한되었을 경우 라이브 뷰어 화면에서 접근 가능한 메뉴 버튼만 활성화됩니다.

권한이 제한된 사용자가 비밀번호를 변경하려면

메뉴 접근이 제한된 그룹의 사용자 아이디로 로그인 할 경우 사용자 본인의 비밀번호만 변경할 수 있습니다.

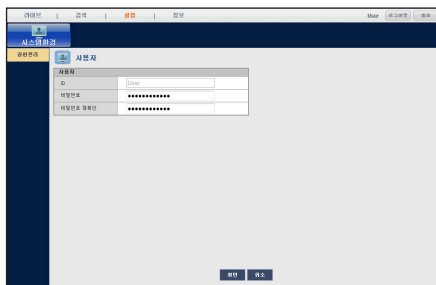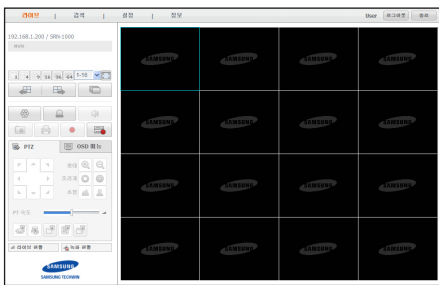

1. 로그인 하세요.
2. <설정>을 클릭하세요.
권한관리 설정 화면이 나타납니다.
3. 변경할 비밀번호를 입력하세요.
4. <확인>을 클릭하세요.
사용자의 비밀번호가 변경됩니다.

메뉴 설정

시스템관리

현재 시스템의 버전을 확인하고 새로운 버전으로 업데이트 하거나 설정 초기화 등을 실행할 수 있습니다.


시스템 정보 확인하기

시스템의 현재 버전과 맥 주소를 확인하고 업그레이드할 수 있습니다.
각 설정치는 사용자 임의로 변경할 수 없습니다.



- 소프트웨어 버전 : 현재 소프트웨어의 버전 정보를 확인할 수 있습니다.
- 소프트웨어 업그레이드 : 검색된 NVR의 소프트웨어를 최신 버전으로 업그레이드합니다.
- 서버 업그레이드 : 서버에 업그레이드 가능한 파일이 업데이트 될 경우 소프트웨어를 최신 버전으로 업그레이드합니다.
- 마이컴 버전 : 내부 마이컴 버전을 표시합니다.
- Mac 주소 1/ 2 : 시스템 Mac 주소를 표시합니다.
- 장치 이름 : 네트워크 뷰어에서 NVR에 연결할 경우 표시되는 이름입니다.


소프트웨어 업그레이드를 하려면

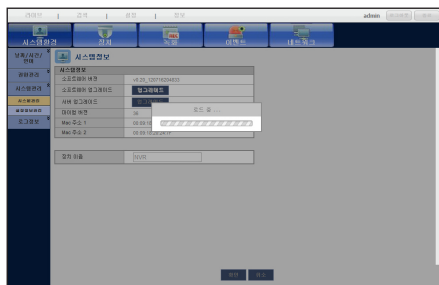

- 업그레이드할 소프트웨어를 준비하세요.
 - 서버 업그레이드의 경우, 현재 NVR이 서버와 네트워크로 연결되어 있어야 합니다.
네트워크에 신규 펌웨어가 업데이트 될 경우 라이브 화면에 펌웨어 파일 여부를 알려주는 아이콘이 표시됩니다. (35쪽)
 - Proxy 서버를 통하는 경우에는 접속 제한으로 인해 업그레이드가 불가능할 수 있습니다.
 - <시스템환경>에서 <시스템관리>를 선택하세요.
 - <업그레이드>를 선택하세요.
 - 준비된 소프트웨어를 선택하고 확인을 누르세요.
 - 업그레이드는 <시스템정보>의 <소프트웨어 버전>보다 <소프트웨어 업그레이드>의 <버전>이 같거나 높을 경우에 업그레이드가 가능합니다.
 - 업그레이드가 진행되면서 단계적으로 화면이 바뀝니다.
 - 업그레이드가 완료되면 자동으로 재부팅됩니다.
재부팅될 때까지 시스템의 전원을 끄거나 네트워크 연결을 끊지 마세요.
-  ■ “실패확인” 창이 나타나면, 3번부터 재시도하세요.
지속적으로 실패할 경우 서비스 센터에 문의하세요.

설정정보관리하기

NVR에 설정된 정보를 저장매체를 통하여 다른 NVR에 동일하게 적용할 수 있습니다.

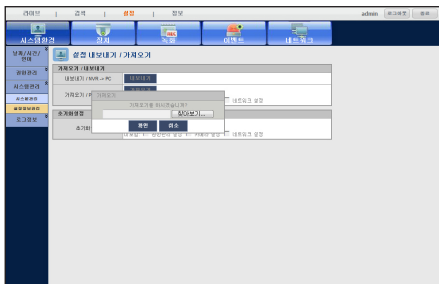

메뉴 설정

- 내보내기 : NVR에 설정된 정보를 저장 매체로 저장합니다.
- 가져오기 : 저장매체에 저장된 설정 정보를 NVR에 적용합니다.
 - 가져올 시스템 설정 항목의 체크박스를 체크하여 선택합니다.
선택된 설정 항목을 제외한 항목만 NVR에 적용합니다.
- 초기화 설정 : NVR의 설정 상태를 초기 상태로 변경할 수 있습니다.
시스템 설정 항목의 체크박스를 체크하여 선택하면 선택 항목을 제외한 항목만 초기화됩니다.
<초기화> 버튼을 클릭하면, “초기화 설정” 확인 창이 나타납니다. <확인>을 클릭하면 선택 항목이 초기화됩니다.

로그정보

시스템, 이벤트에 관련된 기록정보를 확인할 수 있습니다.

시스템 로그 확인하기

시스템 로그에 기록되는 데이터는 시스템시작, 시스템 종료, 메뉴설정 변경 등 시스템 관련 로그 내용과 실행된 날짜 및 시간을 표시합니다.

일련번호	로그명	발생시간
17	공부 시작	2015.08.18 19:24:08
18	주동자제동	2015.08.18 19:25:15
19	주동자제동	2015.08.18 19:26:00
20	주동자제동	2015.08.18 19:26:30
21	주동자제동	2015.08.18 19:27:00
22	주동자제동	2015.08.18 19:27:30
23	주동자제동	2015.08.18 19:28:00
24	주동자제동	2015.08.18 19:28:30
25	주동자제동	2015.08.18 19:29:00
26	주동자제동	2015.08.18 19:29:30
27	주동자제동	2015.08.18 19:30:00
28	주동자제동	2015.08.18 19:30:30
29	주동자제동	2015.08.18 19:31:00
30	주동자제동	2015.08.18 19:31:30

- 검색일 : 달력 버튼을 클릭하여 원하는 검색 날짜를 바로 선택합니다.
- 처음페이지 : 검색한 목록의 처음 페이지로 이동합니다.
- 마지막페이지 : 검색한 목록의 마지막 페이지로 이동합니다.
- 채널 : 전체 검색을 하려면 <모든 채널>을 특정한 채널만 검색하려면 검색할 채널을 선택합니다.
- 종류 : 로그 정보가 많을 경우 원하는 로그 형식만을 선택하여 필요한 내용만 쉽게 검색할 수 있습니다.
- 내보내기 : 로그 정보를 텍스트 형태로 내보내기할 수 있습니다.
- <←> : 원하는 페이지 번호를 입력한 후 <←> 버튼을 누르면 해당 페이지로 이동할 수 있습니다.

이벤트 로그 확인하기

알람, 카메라 이벤트, 영상 손실과 같은 기록된 이벤트를 검색할 수 있습니다. 이벤트 로그와 관련된 내용과 실행된 날짜 및 시간을 표시합니다.



- 검색일 : 달력 버튼을 클릭하여 원하는 검색 날짜를 바로 선택합니다.
- 처음페이지 : 검색한 목록의 처음 페이지로 이동합니다.
- 마지막페이지 : 검색한 목록의 마지막 페이지로 이동합니다.
- 채널 : 전체 검색을 하려면 <모든 채널>을 특정만 채널만 검색하려면 검색할 채널을 선택합니다.
- 종류 : 로그 정보가 많을 경우 원하는 로그 형식만을 선택하여 필요한 내용만 쉽게 검색할 수 있습니다.
- <←> : 원하는 페이지 번호를 입력한 후 <←> 버튼을 누르면 해당 페이지로 이동할 수 있습니다.


장치 설정

카메라, 저장매체에 관련된 내용을 설정할 수 있습니다.

카메라

카메라 등록하기

각 채널별로 네트워크 카메라를 등록하고 연결할 수 있습니다.

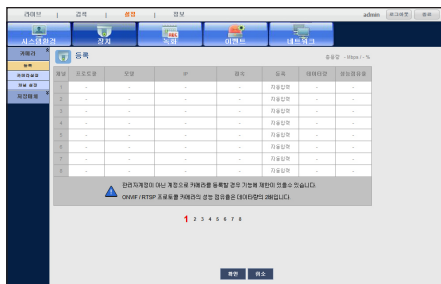

- 프로토콜 : 등록된 네트워크 카메라의 프로토콜 정보를 보여줍니다.
- 모델 : 카메라 모델명을 보여줍니다.
- IP : 네트워크 카메라의 IP 주소를 보여줍니다.

메뉴 설정

- 접속 : 카메라 접속 상태를 보여줍니다.
- 등록 : 카메라 기본 등록 버튼입니다.
입력 전에는 <자동입력>으로 표시되고, 입력 후에는 버튼명이 <삭제>로 변경됩니다.
- 데이터량 : 해당 채널에서 수신하는 데이터 총량을 표시합니다.
- 성능점유율 : 해당 데이터량을 수신을 위해 필요한 성능 점유율을 표시합니다.
RTSP, ONVIF 프로토콜로 등록된 카메라는 데이터량의 두 배의 성능을 점유합니다.




■ NVR이 초기값으로 설정된 경우 카메라 연결이 되지 않을 수 있으므로 먼저 네트워크 환경을 설정한 뒤 등록을 시작하세요.
네트워크 설정 방법은 “네트워크 설정”을 참조하세요. (83쪽)

네트워크 카메라를 자동 검색하여 등록하려면



1. <설정> 메뉴를 클릭하세요.
2. <장치>-<카메라>-<등록> 메뉴를 클릭하세요.
3. 장치 등록 창에서 <자동입력>을 클릭하세요.
“카메라 자동 추가” 창이 나타나고 네트워크 상에 존재하는 등록 가능한 카메라를 목록에 표시합니다.
■ <갱신> 버튼을 누르면 네트워크 상에 연결된 카메라의 변동 사항을 알 수 있습니다.
4. 목록 중 등록할 카메라의 체크박스를 클릭하여 선택하세요.
5. 선택한 카메라의 <ID>와 <비밀번호>를 입력하세요.
6. [등록] 버튼을 클릭하세요.
■ 여러대의 카메라를 선택하고 일괄 등록 시 동일한 ID와 비밀번호로 설정된 카메라만 등록됩니다.
7. “접속테스트”확인 창이 뜨면 등록 상태를 확인하고 <확인> 버튼을 클릭하세요.
“카메라 자동 추가”창이 닫히고 등록된 카메라를 목록에 표시합니다.
8. 등록을 완료하려면 <확인> 버튼을 클릭하세요.
■ <성능점유율>이 100%를 초과하는 경우 더 이상 카메라 등록이 불가능합니다.

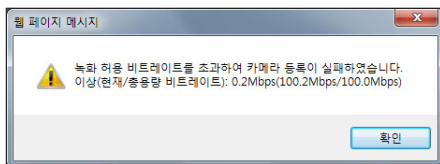



- 카메라 등록을 할 때 등록 테스트 시 입력되는 데이터량으로 녹화설정 허용비 트레이트에 자동으로 할당됩니다.
- 카메라 등록 저장 시 “**녹화 설정**”의 일반/이벤트 녹화 항목이 <모든장면녹화>로 설정됩니다. “**녹화 설정**”을 참조하세요. (77쪽)
- 등록 시 할당되는 비트레이트 정보는 10초간 측정되는 디폴트 프로파일의 평균 측정값으로 사용됩니다.
- 등록된 카메라를 다시 다른 카메라로 변경할때는 허용비트레이트는 변경되지 않습니다.
- 메가 픽셀 카메라는 비디오 영상 데이터가 큰 관계로 동시 모니터링 개수와 비디오 설정을 PC 성능에 맞게 조정해야 합니다. 아래는 웹뷰어 권장 PC 사양으로 H.264 영상 모니터링 시 설정 가이드입니다.
 - 메가픽셀 카메라를 16채널 동시 모니터링 하는 경우, 카메라의 설정이 1280x1024 해상도에 5120Kbps(CBR)로 설정되어 있으면 개별 카메라의 최대 프레임레이트는 10fps로 설정하시길 권장합니다.
 - 메가픽셀 카메라를 16채널 (1280x1024, 2560Kbps(CBR))과 4CIF 카메라 16채널을 동시 모니터링 하는 경우 개별 카메라의 최대 프레임 레이트는 5fps로 설정하시길 권장합니다.

메뉴 설정

네트워크 카메라를 수동 검색하여 등록하려면



1. “카메라 자동 추가” 창 왼쪽 하단의 <수동 추가>를 클릭하세요.

2. 수동 검색 창이 나타납니다.

3. 프로토콜을 선택합니다.

선택하는 프로토콜에 따라 입력 항목이 달라집니다.

- Samsung : (주)한화테크윈의 네트워크 카메라에서 채용한 내부 네트워크 프로토콜을 따릅니다.

- ONVIF : ONVIF 프로토콜을 지원하는 카메라를 지칭합니다. 카메라 리스트에 표시되지 않는 카메라를 연결할 경우 <ONVIF>를 선택합니다.



■ ONVIF 카메라의 시간과 NVR의 시간차이는 2분이 아닐 경우, 연결할 수 없습니다. 이 경우, ONVIF 카메라의 시간을 바꾸거나, 카메라와 NVR 모두 NTP 서버로 시간 동기화를 하거나(Timezone이 같은 경우), NVR을 NTP 서버로 활용하는 방법이 있습니다.

- RTSP : 실시간 스트림 전송을 위한 "Real Time Streaming Protocol (RTSP)" 프로토콜인 RFC 2326 문서를 따릅니다.

4. <Samsung> 프로토콜을 선택했을 경우 나타나는 각 항목을 선택합니다.

- 모델 : 카메라 모델을 선택합니다.

- Samsung Network Camera/Encoder : (주)한화테크윈의 SVNP 프로토콜을 지원하는 카메라/엔코더를 지칭합니다. 카메라 리스트에 표시되지 않는 카메라를 연결할 경우에는 삼성 네트워크 카메라/엔코더를 선택합니다.

- 단 모델 리스트에 있는 카메라일 경우에는 정확히 카메라 모델명을 선택해야 하며 일부 카메라일 경우 지원하지 않는 모델이 있습니다.

- 주소타입 : 카메라의 접속 주소 형식을 선택합니다.

- 연결된 모델에 따라 지원하는 주소타입이 다를 수 있습니다.

- 고정 : 카메라의 IP 주소를 직접 입력하는 경우에 사용합니다.

- iPOLiS DDNS : 카메라가 iPOLiS DDNS(www.samsungipolis.com) 서버에 등록되어 있을 경우에 사용할 수 있으며, 등록된 도메인을 DDNS ID에 입력합니다.

- 예) <http://www.samsungipolis.com/snb5000> 일 경우 iPOLiS DDNS에 snb5000 입력

- MAC (Samsung) : 카메라가 MAC 주소 기반의 DDNS를 지원할 경우에 사용할 수 있습니다.

- URL : URL로 입력하는 경우에 사용합니다.



■ 카메라에서 지원하는 DDNS 사양은 각 카메라의 메뉴얼에서 확인할 수 있습니다.

- IP : 카메라의 IP 주소를 입력합니다.
- 디바이스포트 : 카메라의 디바이스 포트를 입력합니다.
- HTTP 포트 : 카메라의 HTTP 포트를 입력합니다.
- ID : 등록할 카메라의 아이디를 입력합니다.
- 비밀번호 : 등록할 카메라 아이디의 비밀번호를 입력하세요.

5. 프로토콜을 <ONVIF> 또는 <RTSP>로 선택했을 경우 나타나는 각 항목을 입력합니다.



- 접속주소 / RTSP 접속주소 : ONVIF 또는 RTSP를 지원하는 카메라의 RTSP 접속 주소를 입력합니다. 자세한 RTSP 주소의 접속 주소는 각 카메라의 메뉴얼을 참조하세요.
- ID : ONVIF 또는 RTSP로 접속할 접속 ID를 입력합니다.
- 비밀번호 : ONVIF 또는 RTSP 프로토콜 접속 비밀번호를 입력합니다.
- 상세정보 : 클릭하면 모드 선택 메뉴를 하단에 표시합니다.
- 모드 : RTSP 연결시 네트워크 카메라에서 지원하는 모드를 선택합니다.
 - TCP : 네트워크 카메라와의 연결이 RTP over TCP로 동작합니다.
 - UDP : 네트워크 카메라와의 연결이 RTP over UDP로 동작합니다.
 - HTTP : 네트워크 카메라와의 연결이 RTP over TCP(HTTP)로 동작합니다.

6. <등록> 버튼을 클릭하면 선택된 카메라가 등록됩니다.

카메라 등록 실패 내용을 확인하려면

카메라의 등록이 실패할 경우 실패 이유가 표시됩니다.

- **알려지지 않은 이유로 접속 실패하였습니다.** : 알 수 없는 연결 상태로 인한 카메라 등록이 실패하였을 경우에 해당 메시지가 보여집니다.
- **접속 성공하였습니다.** : 카메라 등록이 성공적으로 이루어졌을 경우에 해당 메시지가 보여집니다.
- **모델정보가 잘못 지정 되었습니다. 올바른 모델정보를 입력하시기 바랍니다.** : 카메라 등록 시 모델 정보가 틀린 경우 해당 메시지가 보여집니다.
- **인증이 실패하였습니다.** : 카메라 등록 시 아이디 혹은 패스워드가 틀린 경우 해당 메시지가 보여집니다.
- **최대 접속자수 제한으로 접속 실패하였습니다.** : 카메라에 등록시 최대 접속자 수를 초과할 경우 해당 메시지가 보여집니다.
- **잘못된 HTTP 포트 정보로 접속이 실패하였습니다.** : 카메라의 HTTP 포트가 틀린 경우 해당 메시지가 보여집니다.
- **접속이 실패하였습니다. 확인 할 수 없는 접속상태입니다.** : 카메라 연결 중 알 수 없는 오류로 인해서 연결이 실패하였을 경우에 해당 메시지가 보여집니다.
- **사용자 모델 변경** : 카메라 등록 시 모델을 <Samsung Network Camera/Encoder>로 하면 등록 성공 시에 카메라로부터 직접 이름을 불러오지만, 등록에 실패한 경우 사용자가 직접 카메라의 이름을 넣을 수 있습니다.


메뉴 설정

카메라 등록 프로파일을 변경하려면

카메라를 처음으로 등록하면 기본 프로파일인 H.264, MPEG4, MJPEG 순으로 임시 등록됩니다. 프로파일을 변경하려면 “네트워크 카메라 녹화 프로파일 설정하기” (78쪽) 또는 “라이브 전송” (90쪽) 에서 직접 변경할 수 있습니다.


- NVR의 경우 녹화 프로파일, 네트워크 프로파일을 각각 다르게 설정할 경우 한 카메라에서 2가지 스트림이 나올 수 있습니다.
- 카메라의 경우 하나의 프로파일을 내보낼 때는 프레임을 보장할 수있으나 여러 프로파일이 나갈 경우 전송하는 프레임은 보장할 수 없습니다. 즉 2개의 프로파일을 30fps로 보낼때 설정이 30fps로 되어있어도 20fps로 보내줄 수 있습니다.

등록한 카메라 내용을 수정하려면

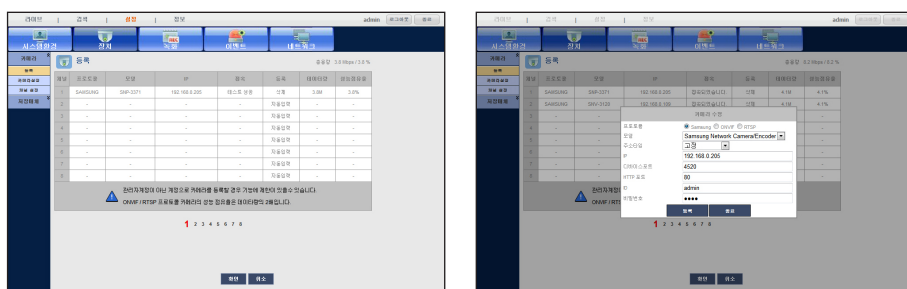

1. 카메라 목록 중 내용을 수정할 카메라를 클릭하세요.
2. “카메라 수정” 창이 나타나면 수정할 항목의 내용을 선택 후 수정하세요.
3. 수정이 완료되면 <등록> 버튼을 클릭하세요.

등록한 카메라를 삭제하려면

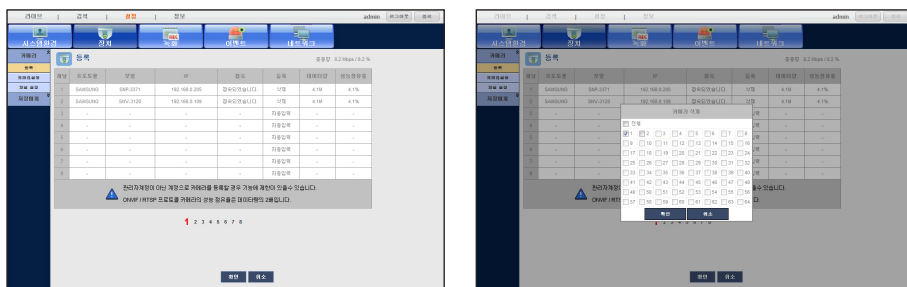

1. 카메라 목록 중 삭제할 카메라 항목에서 <삭제>를 클릭하세요.
2. “카메라 삭제” 창이 나타나면 삭제할 카메라의 체크 박스를 클릭하여 선택하세요. <전체>를 선택하면 전체 카메라를 삭제할 수 있습니다.
3. 선택을 완료하고 <확인> 버튼을 클릭하세요.

- 등록된 카메라 삭제 시 “녹화설정”의 일반/이벤트 녹화 및 허용비트레이트는 다시 초기값으로 설정됩니다.

카메라 설정하기

채널별로 등록된 네트워크 카메라의 영상 설정을 변경할 수 있습니다.



- 카메라 선택 : 영상 전송 관련 설정을 변경할 카메라 채널을 선택합니다.
- 영상방식 : 접속된 카메라 설정의 영상 프로파일을 보여줍니다.
- 코덱 : 선택된 프로파일의 코덱을 변경할 수 없습니다.
- 해상도 : 선택된 프로파일의 해상도를 변경할 수 있습니다.
- 전송율 : 선택된 프로파일의 전송율을 변경할 수 있습니다.
- 전송화질 : 선택된 프로파일의 전송 영상의 화질을 변경할 수 있습니다.
- 비트레이트 제어 : 선택된 프로파일의 전송 영상의 비트레이트를 변경할 수 있습니다.
- 추가 : 카메라 프로파일을 추가합니다. 추가 버튼을 클릭하면 추가 창이 나타납니다.
정보를 입력하고 <확인> 버튼을 클릭하면 목록에 추가됩니다.
- 변경 : 선택한 프로파일의 내용을 변경합니다.
프로파일을 선택하고 <확인> 버튼을 클릭하면 변경 화면이 나타납니다.
- 삭제 : 선택한 프로파일을 목록에서 삭제합니다.




- 모델별로 특정 프로파일의 설정값을 변경할 경우 전송율 설정범위가 변경될 수 있습니다.
예) 1번째 프로파일의 전송율을 30fps로 설정한 경우 2번째 프로파일의 설정 범위가 15fps로 변경될 수 있습니다.
- 코덱, 해상도, 전송율, 전송화질 이외의 메뉴는 네트워크 카메라의 설정 메뉴에서 설정할 수 있습니다.
- 현재 사용하고 있는 프로파일의 설정을 변경할 경우 일정시간 동안 녹화나 라이브 화면의 끊김이 발생할 수 있습니다.
- 카메라 설정 페이지에서 변경된 사항은 바로 적용이 되지만 외부에서 카메라 웹페이지를 통해 설정을 변경하는 경우 최대 3분이 걸립니다.

메뉴 설정

채널 설정하기

채널별 영상과 관련된 설정을 할 수 있습니다.

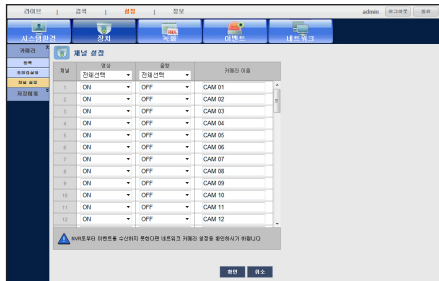

• 영상

- <ON/OFF> : 선택한 채널의 카메라 영상을 ON/OFF 할 수 있습니다.
- <Covert> : 선택 채널의 모든 정보를 표시하지 않고, 빈 화면만 표시되지만 녹화는 됩니다.



- 영상이 <Covert>로 설정된 채널은 음향 출력을 하지 않습니다.
단, 음향이 <ON>으로 설정되면, 라이브에서 음향 출력을 하지 않더라도 음향 녹화는 실행합니다.

• 음향

- <ON>으로 설정될 경우 라이브 화면에서 음향을 ON/OFF 할 수 있습니다.
- <OFF>로 설정될 경우 라이브 화면에서 음향이 꺼지고 저장되지 않습니다.

• 카메라 이름 : 카메라 이름을 입력할 수 있습니다.


- 공백포함 최대 15자까지 입력 가능합니다.

저장매체

저장 장치와 관련된 정보를 확인할 수 있습니다.

장치 확인하기

저장 장치를 확인하고, 사용량, 사용 형태와 저장 장치의 상태 등을 확인할 수 있습니다.
연결 가능한 저장 장치는 HDD 입니다.

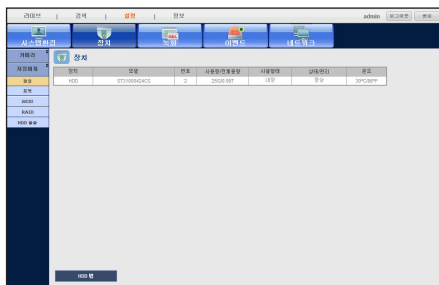

- 번호 : 내장된 HDD의 지정번호를 확인할 수 있습니다.
 - HDD 번호에 따른 위치를 파악하려면 <HDD 맵>을 참조하세요.
- 사용량/전체용량 : 저장 장치의 사용량과 전체용량을 표시합니다.
- 사용형태 : 저장 장치의 사용용도를 지정합니다.
 - eSATA HDD는 확장용도로 선택이 가능합니다




- 확장용도로서 eSATA HDD가 사용되고 있을 경우 eSATA 를 제거하면 시스템이 재부팅 될 수 있습니다.

- 상태/관리 : 저장 장치의 상태를 표시합니다.
- 온도 : NVR에 장착된 HDD의 온도를 확인할 수 있습니다.
- HDD 맵 : 내부에 장착된 HDD의 번호에 따른 위치를 파악할 수 있습니다.
 - 수리 시 또는 HDD 추가 장착 시 참조하세요.

포맷 하기

저장 장치의 포맷을 실행할 수 있습니다.

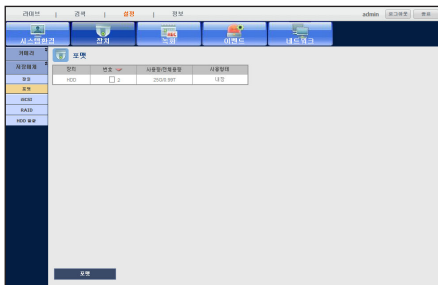

- 번호 : 포맷할 장치의 체크박스를 체크하여 선택합니다.
- 사용량/전체용량 : 저장 장치의 사용량과 전체용량을 표시합니다.
- 사용형태 : 저장 장치의 사용용도를 표시합니다.
- 포맷 : 장치를 선택하고 버튼을 누르면 포맷 확인창이 나타납니다.
<확인> 버튼을 누르면 선택된 저장 장치를 포맷합니다.




- 포맷할 경우 저장된 녹화 정보가 모두 삭제되므로 주의하세요.
- 포맷을 진행하는 동안에는 녹화가 되지 않으므로 주의하세요.
- 포맷 진행 시 완료될 때까지 포맷하는 장치를 제거하지 마세요.

메뉴 설정

iSCSI 연결하기

iSCSI 장치를 NVR과 연결할 경우 iSCSI 장치를 검색하고 연결 및 해제할 수 있습니다.

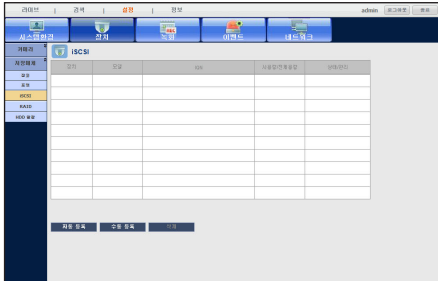


- IQN (iSCSI Qualified Name) : iSCSI 프로토콜의 포맷에 맞게 지어진 iSCSI의 이름을 표시합니다.
- 사용량/전체용량 : iSCSI 장치의 사용량과 전체용량을 표시합니다.
- 상태/관리 : iSCSI 장치의 상태를 표시합니다.

지원 제품 목록

Promise Technology vessRAID 1740i 1ea

iSCSI 장치 자동으로 등록하기

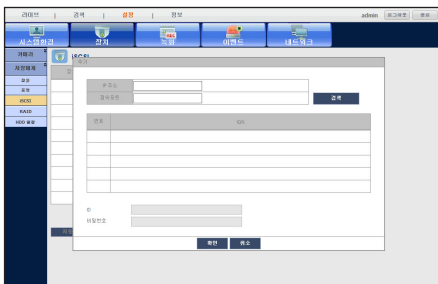


1. iSCSI 창에서 <자동 등록> 버튼을 클릭하세요.
2. 자동 추가 창에서 IP 주소와 접속포트를 입력하고 <검색> 버튼을 클릭하세요.
3. IQN 목록에서 추가할 장치를 클릭하세요.
4. ID와 비밀번호를 입력 후 <확인> 버튼을 클릭하세요.

iSCSI 장치 수동으로 등록하기



1. iSCSI 창에서 <수동 등록> 버튼을 클릭하세요.
2. 수동 추가 창에서 IP 주소, 접속포트, ID, 비밀번호를 입력하고 <확인> 버튼을 클릭하세요.

iSCSI 장치 등록 해제하기

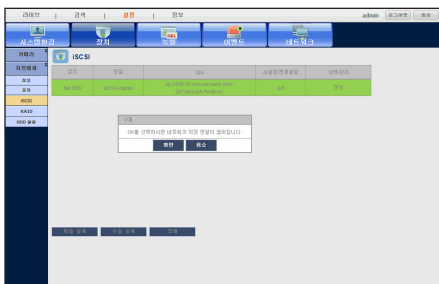

1. IQN에서 삭제할 iSCSI 장치를 선택하세요.
2. <삭제> 버튼을 클릭하면 삭제 창이 뜹니다.
3. <확인> 버튼을 클릭하면 iSCSI 장치가 목록에서 삭제됩니다.



- iSCSI 장비는 네트워크 포트2를 전용으로 사용하세요.
- 허브를 사용해 NVR과 iSCSI 장비를 연결 할 경우 GIGA 허브를 사용해야 하며 정상적인 데이터 저장을 위해서 독립적인 네트워크 망을 사용하세요.
- iSCSI 장비에서 하나의 논리 드라이브에 16TB 이상으로 설정할 수 없습니다.
- NVR 이 호환하는 iSCSI 장비인 vessRAID 에서 CHAP 인증을 사용할 때 iSCSI Manual Add 기능을 통해 iSCSI 를 연결해야만 합니다.
- 여러 대의 NVR 에서 하나의 iSCSI 장비에 접속하게 되면 문제가 발생할 수 있습니다.
- NVR 과 iSCSI 장비가 연결되어 있는 상태에서 iSCSI 장비의 설정값을 바꾸게 될 경우에는 문제가 발생할 수 있습니다.


메뉴 설정

RAID 모드 설정하기

RAID(Redundant Array of Independent Disks) 모드를 설정하면 시스템의 HDD가 손상되는 일이 발생하더라도 데이터를 안전하게 복구할 수 있습니다. 본 NVR에서 지원하는 RAID Level5는 RAID Array를 구성하는 HDD 중 한 개의 HDD 고장에 대해서만 동작 및 데이터 복구를 할 수 있습니다.




- 내장 HDD가 4개 ~ 8개가 장착되어 있을 경우 RAID 모드를 설정할 수 있습니다.

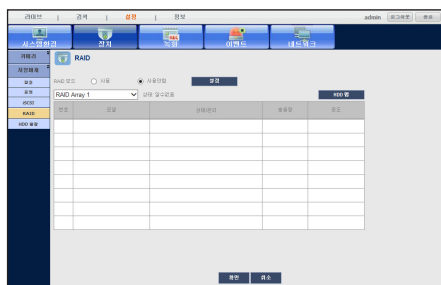

- 상태 : RAID array의 동작 상태를 표시합니다.
 - Active : RAID array가 정상적으로 동작하고 있음을 표시합니다.
 - Degraded : RAID Array를 구성하는 HDD가 고장일 때 표시됩니다. Degraded 상태에서 다른 HDD가 추가로 고장이 나면 RAID array를 사용하거나 복구할 수 없습니다. 즉시, HDD를 교체하고 복구를 진행하세요.
 - HDD 교체 및 RAID Array 복구 방법은 “**RAID Array 복구하기**”를 참조하세요. (74쪽)
 - Recover : RAID array를 복구 중임을 표시합니다. Recover 상태에서 다른 HDD가 추가로 고장이 나면 RAID array를 사용하거나 복구할 수 없습니다.
 - Fail : RAID array를 사용하거나 복구할 수 없음을 표시합니다.
- 상태/관리 : RAID array를 구성하는 HDD의 상태를 표시합니다.
 - Active : HDD가 정상 동작 중임을 표시합니다.
 - Faulty : HDD가 고장이 발생했음을 표시합니다. RAID array 복구를 위해서 HDD 교체가 필요합니다.
 - Removed : HDD가 고장이 발생하여 인식이 되지 않음을 표시합니다. RAID array 복구를 위해서 HDD 교체가 필요합니다.
 - Rebuild : HDD가 복구 중임을 표시합니다.
 - HotStandby : 고장난 HDD가 발생하면 복구를 위해서 전원인가 상태로 대기중인 HDD를 표시합니다.
- 총용량 : RAID array를 구성하는 HDD의 총용량을 표시합니다.
- 온도 : RAID array를 구성하는 HDD의 온도를 확인할 수 있습니다.

RAID 모드 설정하기

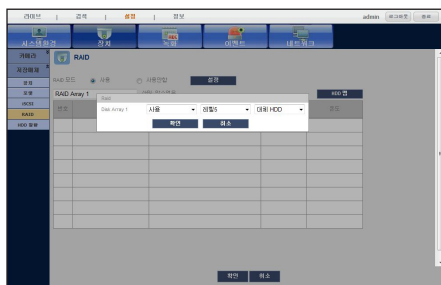

1. <사용>이나 <설정> 버튼을 클릭하세요.
 2. RAID 설정 창에서 Disk Array의 설정 항목을 선택 후 <OK> 버튼을 클릭하세요.
 - Use : RAID 모드의 사용할지 여부를 선택할 수 있습니다.
 - Level5 : NVR이 지원하는 RAID 타입을 보여줍니다. 본 NVR은 RAID Level 5만을 지원합니다.
 - Hot Standby : Hot Standby를 사용할지 여부를 선택할 수 있습니다.
 - Hot Standby는 HDD의 고장이 발생하였을 때 Hot Standby를 설정해 놓은 HDD에 즉각적인 복구를 수행하게 하여 복구가 지연되어 발생할 수 있는 데이터의 손실을 최소화하고자 하는 기능입니다.
 3. RAID를 구성할 HDD 목록이 나타납니다. RAID 화면에서 <확인>을 클릭하세요.
 4. 데이터 삭제 및 시스템 재부팅 메시지 창이 나타나고, <확인> 버튼을 클릭하면 RAID 모드 설정을 위해 시스템이 재부팅됩니다.
 5. RAID 구성이 완료되면 <설정> - <저장매체> - <장치> - <RAID>에서 구성을 확인하세요
 - RAID 모드 설정 시, 녹화용량은 100Mbps에서 64Mbps로 제한됩니다.
 - RAID 구성 시 하나의 RAID Array의 사용 가능한 용량은 (가장 작은 HDD 크기) x (전체 HDD 수 - 1)가 됩니다. 단, Hot Standby를 설정할 경우, (가장 작은 HDD 크기) x (전체 HDD 수 - 2)가 사용 가능한 용량이 됩니다.
 - 다른 용량의 HDD를 사용할 경우 가장 작은 용량의 HDD로 RAID Array가 구성됩니다.
 - RAID 구성 시 Hot Standby 사용을 권장합니다.
 - HDD에 문제가 있을 경우 부팅 시간이 오래 소요될 수 있습니다.
- ! ■ RAID 모드로 설정 또는 해제, 변경을 하면 기존의 데이터가 삭제됩니다. 이전 데이터를 보관해야 할 경우 먼저 백업을 실행하세요.

메뉴 설정

RAID Array 복구하기



1. <상태/관리>에 Faulty/Removed가 나타난 HDD의 번호가 확인되면 HDD 맵에서 교체해야 할 HDD의 위치를 확인하세요.
2. 웹뷰어에서 NVR의 시스템을 종료하세요.
3. NVR에서 고장난 HDD를 제거하고 새로운 HDD로 교체하세요.
4. NVR을 재부팅하고 <설정> - <저장매체> - <장치> - <RAID>에서 복구 진행 상태가 보여집니다.



- admin 계정으로만 RAID 구성 및 취소가 가능합니다.
- 기존과 동일한 모델의 HDD로 또는 동일한 제조사의 동일한 용량의 HDD로 교체하세요.
- RAID array 구성을 위해 사용하는 HDD는 추천 HDD중 동일한 모델의 HDD를 사용하세요. 부득이한 경우, 추천 HDD중 동일 제조사의 동일 용량의 HDD를 사용하세요.
- RAID array 사용 중 전원차탈이 발생하면 RAID array 상태에 문제가 발생할 수 있으니 주의하세요. 전원 안정성을 위해 UPS의 사용을 권장합니다.
- RAID 설정 상태에서 RAID 미지원 펌웨어로 다운그레이드시 RAID array가 해제되고, 모든 데이터가 삭제됩니다. 펌웨어 다운그레이드 시 필히 해당 펌웨어의 RAID 지원 여부를 확인하세요.

HDD 알람 설정하기

HDD 불량에 대한 점검알람출력단자, 교체알람출력단자, iSCSI점검알람출력단자, 알람시간 등을 설정할 수 있습니다.



- 점검알람출력단자 : 점검 상태일 경우 지정한 알람 출력 단자로 신호가 출력됩니다.
- 교체알람출력단자 : 교체 상태일 경우 지정한 알람 출력 단자로 신호가 출력됩니다.
- iSCSI점검알람출력단자 : iSCSI 장치와의 연결이 끊어졌을 경우 지정한 알람 출력 단자로 신호가 출력됩니다.
- 알람시간 : 알람 신호 출력과 경고음이 지속되는 시간을 선택할 수 있습니다.
 - 점검 알람, 교체 알람 신호가 선택한 알람 출력 단자(1, 2, 3, 4)로 각각 출력됩니다.
 - <BEEP>를 선택할 경우 경고음이 들립니다.
 - <전체>를 선택할 경우 후면의 알람 출력과 경고음 설정이 동시에 됩니다.



- <점검> 상태의 경우 작동은 하고 있으나, 부분적인 문제가 있어 점검이 필요합니다.
라이브 화면에 (점검)이 나타납니다.
- <교체> 상태의 경우 HDD를 더이상 사용할 수 없으므로 HDD를 교체해야 합니다.
라이브 화면에 (교체)이 나타납니다.

메뉴 설정

녹화 설정

녹화예약이나 이벤트 발생시 녹화시간 등 녹화와 관련된 설정을 할 수 있습니다.

녹화예약


일정한 날짜나 시간에 예약을 설정하면 해당 시간에 녹화가 실행됩니다.

- 채널 : 녹화예약할 채널을 선택합니다.
- 전체 : 일~휴일, 0시~23시까지 전체 영역이 동일한 녹화 설정으로 예약 선택됩니다.
- 전체 적용 : <전체 적용>을 선택하면 “전체 적용” 확인창이 나타납니다.
<확인>을 선택하면 설정된 내용이 모든 채널에 적용됩니다.



■ 이벤트 발생 시 녹화 및 녹화예약의 경우 정시에 녹화를 보장하기 위하여 3초정도 먼저 녹화가 진행됩니다.

녹화 설정 색상

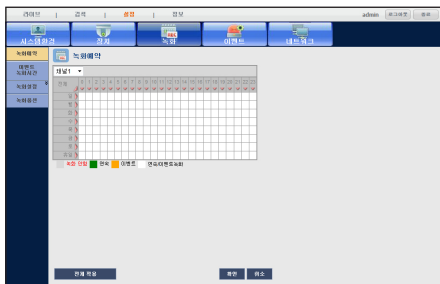

색상	명칭	기능설명
색 없음	녹화 안함	예약, 이벤트 녹화를 하지 않습니다.
연두색	연속	예약 녹화만 합니다.
주황색	이벤트	이벤트 녹화만 합니다.
흰색	연속/이벤트녹화	예약, 이벤트 녹화를 모두 합니다.


설정할 셀을 더블 클릭하면 <녹화 안함>-<연속>-<이벤트>-<연속/이벤트녹화> 순서로 변경됩니다.

녹화 예약 시간을 설정하려면

1. 시간 설정 셀 아래에 있는 녹화 종류 중 예약할 녹화 종류를 클릭하여 선택하세요.
선택한 종류의 글자가 빨간색으로 바뀝니다.
2. 예약을 설정할 셀을 클릭하거나 영역을 드래그하세요.
3. 예약을 완료하고 적용하려면 <확인> 버튼을 클릭하세요.

이벤트녹화시간

이벤트가 발생할 경우 이벤트 발생 어느 시점부터 녹화를 할지 또는 종료할지를 설정할 수 있습니다.

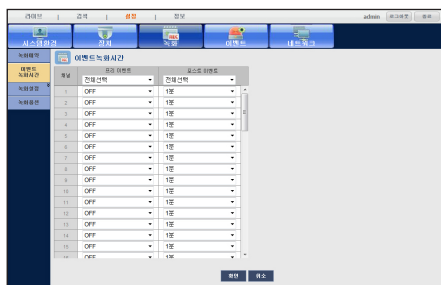

- 프리 이벤트 : 이벤트가 발생했을 경우 설정된 시간 전부터 녹화가 시작됩니다.
5초로 설정하면 이벤트 발생 5초 전부터 녹화가 시작됩니다.
- 포스트 이벤트 : 이벤트가 발생했을 경우 설정된 시간 후까지 녹화가 실행됩니다.
5초로 설정하면 이벤트 종료 5초 후까지 녹화됩니다.



- 영상의 해상도가 4CIF 보다 크면 프리이벤트 녹화 시간만큼 녹화되지 않을 수 있습니다.
영상 데이터가 커질수록 최대 프리이벤트 녹화 시간은 줄어듭니다.

녹화설정

채널별로 이벤트 발생 시나 일반 녹화 시의 해상도와 녹화 장수를 설정할 수 있습니다.

채널별로 모든장면녹화 / 주요장면녹화의 프레임 수와 데이터양을 확인할 수 있고 사용자가 직접 허용 데이터양을 입력할 수 있습니다.

NVR 녹화설정하기



- 일반녹화, 이벤트 : 일반녹화 시 또는 이벤트 녹화 시 녹화 방법을 설정합니다.
 - 모든장면녹화 : 카메라로부터 오는 모든 프레임을 저장합니다.
 - 주요장면녹화 : 카메라로부터 오는 주요 프레임만 저장합니다.
일반적으로 1초에 1장 또는 2장 정도로 녹화되며 카메라의 설정에 따라 달라집니다.

메뉴 설정

- OFF : 녹화를 하지 않습니다.


- 모든장면녹화 : 모든장면녹화의 데이터양을 보여줍니다.
- 주요장면녹화 : 주요장면녹화의 데이터양을 보여줍니다.
- 허용치 : 채널별 입력 허용 데이터양을 설정합니다.
- 음향 : 카메라에서 입력되는 음향 녹화 여부를 선택합니다.
-  : 각 채널의 녹화 현황 정보를 보여줍니다.
-  : 각 채널의 녹화 설정 정보를 갱신합니다.



■ 채널별 입력 데이터양이 설정된 허용 데이터양을 넘게 되면 다른 기능에 영향을 줄 수 있어, <모든장면녹화>를 선택하여도 일부 채널에서 <주요장면녹화>만 녹화하게 됩니다. 주요장면만 녹화할 경우 제한 녹화 아이콘을 라이브 화면 상단에 출력하고 라이브 화면에서 제한 녹화 팝업이 발생합니다.
<  > 버튼을 누를 경우 제한 녹화 아이콘이 사라지게 되며, 설정이나 검색 메뉴에 진입한 후 라이브 화면으로 재진입할 때 주요장면만 녹화할 경우 다시 제한 녹화 아이콘과 제한녹화 팝업이 발생합니다.

■ 녹화 설정 리스트에 노란색 글자로 표시되는 채널은 해당 카메라의 설정된 프로파일이 정상적으로 적용되지 못하고 다른 프로파일로 나오고 있음을 의미합니다.
노란색으로 표시된 채널의 정보를 보면 현재 적용중인 프로파일을 볼 수 있습니다.

네트워크 카메라 녹화 프로파일 설정하기

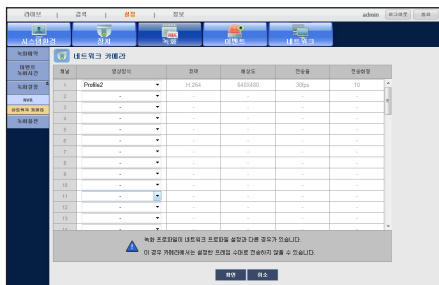

각 채널에 연결된 네트워크 카메라의 녹화를 실행할 비디오 프로파일을 설정할 수 있습니다.



■ 카메라가 지원하는 프로파일내에서 설정할 수 있습니다.
■ 녹화 프로파일 설정과 네트워크 프로파일 설정이 다를 경우 카메라에서 설정된 프레임 수대로 녹화되지 않을 수 있습니다.

- 영상방식 : 접속된 카메라의 녹화 프로파일을 선택할 수 있습니다.
- 코덱 : 선택된 녹화 프로파일의 코덱을 보여줍니다.
- 해상도 : 선택된 녹화 프로파일의 해상도를 보여줍니다.
- 전송율 : 선택된 녹화 프로파일의 전송율을 보여줍니다.
- 전송화질 : 선택된 녹화 프로파일의 전송 영상의 화질을 보여줍니다.

녹화옵션

HDD 저장 용량이 가득 찼을 경우 녹화를 지속할 것인지 덮어쓸지를 설정할 수 있습니다.



- HDD반복녹화 : HDD 반복 녹화 방법을 선택합니다.
 - 덮어쓰기 : HDD가 다 차더라도 기존에 기록된 데이터를 덮어쓰면서 녹화를 계속 진행합니다.
 - 정지 : 선택할 경우 HDD 저장용량이 다 차면 녹화가 정지됩니다.
- HDD녹화끝 경고음 : HDD 녹화 종료방식을 <정지>로 선택하면 버튼이 활성화되며, HDD 녹화 종료 시 경보음 출력 여부를 선택합니다.
체크 표시를 하면 HDD 용량이 가득 찼 경우 경고음이 발생하고 녹화가 정지됩니다.
- 자동삭제 : 체크 표시를 하면 기간 선택란이 활성화되며, 자동 삭제기간을 설정하면, 현재 시간으로부터 선택된 기간까지의 과거 녹화된 데이터만 검색이 가능하고 이외의 데이터는 자동 삭제됩니다.



- 설정 완료 후 <확인>을 누르면 바로 자동삭제를 실행하므로 해당 기간 이전의 자료가 모두 삭제됩니다. 이전 자료를 보관해야할 경우 먼저 백업을 실행하세요.

메뉴 설정


이벤트 설정

센서감지, 카메라 이벤트, 영상손실감지 이벤트가 발생하였을 경우 녹화와 관련된 설정을 할 수 있습니다.

센서감지


센서의 동작 조건과 연동되는 카메라의 선택, 알람 출력 방법, 시간 등을 설정할 수 있습니다.

NVR 센서감지 설정하기

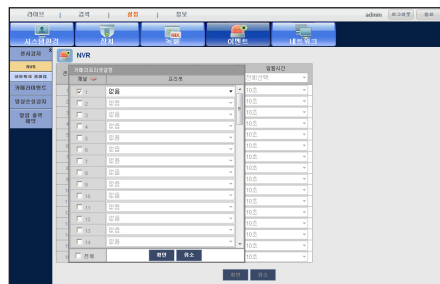

- 센서동작모드 : 센서가 동작할 모드를 설정합니다.
 - <N.O(Normal Open)> : 센서가 항상 열려 있습니다. 센서가 닫혀있을 때 알람이 작동합니다.
 - <N.C(Normal Close)> : 센서가 항상 닫혀 있습니다. 센서가 열리면 알람이 작동합니다.
- 카메라 : 센서와 연결될 채널을 선택합니다.
카메라 항목을 선택하면, “카메라프리셋설정” 화면이 나타납니다.
연결할 채널을 선택하고 프리셋을 설정하세요.
 - 프리셋 설정은 PTZ 모드에서 설정할 수 있습니다.
- 알람출력 : 알람 출력 방법을 선택합니다.
 - 알람 출력 방법은 “HDD 알람 설정하기”를 참조하세요. (75쪽)
- 알람시간 : 알람출력이 지속되는 시간을 설정합니다.

네트워크 카메라 센서감지 설정하기

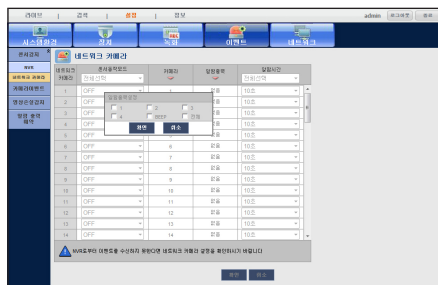

- **센서동작모드** : 각 채널에 연결된 네트워크 카메라의 센서 동작 여부를 설정합니다.
- **카메라** : 센서와 연결된 채널을 선택합니다.
카메라 항목을 선택하면 “**카메라프리셋설정**” 화면이 나타납니다.
연결할 채널을 선택하고 프리셋을 설정하세요.
 - 프리셋 설정은 PTZ 모드에서 설정할 수 있습니다.
- **알람출력** : 알람 출력 방법을 선택합니다.
 - 알람 출력 방법은 “**HDD 알람 설정하기**”을 참조하세요. (75쪽)
- **알람시간** : 알람출력이 지속되는 시간을 설정합니다.



- 연결된 네트워크 카메라에 알람 입/출력 설정이 되어 있고 네트워크 카메라에 알람 출력이 발생할 경우 NVR에서 알람 출력을 실행합니다.

카메라이벤트

카메라에서 보내주는 이벤트(모션감지, 비디오 분석 이벤트, 오디오 이벤트)의 실행 여부와 알람출력 방법, 알람 시간을 설정할 수 있습니다.



- **모드** : 카메라 이벤트 감지 여부를 선택합니다.
- **알람출력** : 알람출력 방법을 선택합니다.
 - 알람 출력 방법은 “**HDD 알람 설정하기**”을 참조하세요. (75쪽)
- **알람시간** : 알람출력이 지속되는 시간을 설정합니다.



- 연결된 네트워크 카메라에 이벤트 감지 설정이 되어 있는 상태에서 이벤트가 발생한 경우에만 NVR에서 알람 출력이 됩니다.

메뉴 설정

영상손실감지



카메라와 연결이 끊어지거나, 네트워크 연결이 불안하여 영상이 손실될 경우 알람을 발생시켜 사용자에게 알릴 수 있도록 설정할 수 있습니다.



- 영상 손실 상태 : 영상 손실 감지 작동 여부를 선택합니다.
- 알람출력 : 알람 출력 방법을 선택합니다.
 - 알람 출력 방법은 “HDD 알람 설정하기”를 참조하세요. (75쪽)
- 알람시간 : 알람 신호 출력과 경고음이 지속되는 시간을 설정합니다.

알람 출력 예약

알람 출력을 발생시키는 조건과 작동시간을 예약할 수 있습니다.

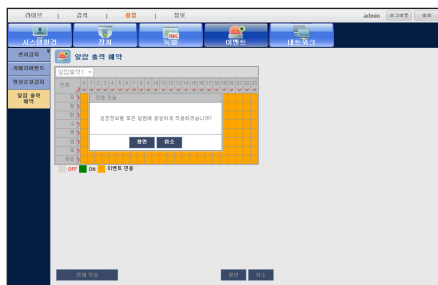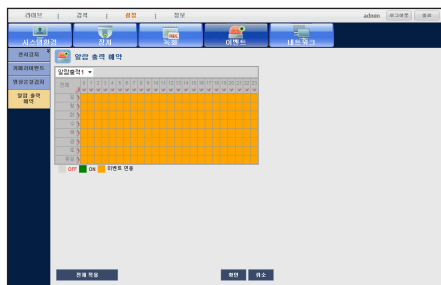

- 알람출력 : 설정할 알람 출력을 선택할 수 있습니다.
 - 알람 출력 방법은 “HDD 알람 설정하기”를 참조하세요. (75쪽)
 - <ON> : 녹색으로 표시되며, 예약된 시간에 항상 알람이 출력됩니다.
 - <OFF> : 색이 표시되지 않으며, 이벤트가 발생하더라도 알람이 출력되지 않습니다.
 - <이벤트 연동> : 주황색으로 표시되며, 이벤트가 발생한 경우에만 알람이 출력됩니다.
- 전체 적용 : 예약된 설정을 모든 알람에 적용합니다.
 - 시간 설정 방법은 “녹화 예약 시간을 설정하려면”을 참조하세요. (76쪽)



- 예약된 시간에 알람이 출력될 경우 예약을 해지해야만 알람이 멈춥니다.

네트워크 설정

사용자가 원격지에서 네트워크로 연결하여 라이브 영상을 감시하고 발생한 이벤트 정보를 메일을 통해 제공 받을 수 있는 기능을 제공합니다. 이와 같은 네트워크 기능을 사용하기 위한 설정을 할 수 있습니다.

인터페이스

네트워크 접속 경로와 프로토콜을 설정할 수 있습니다.

네트워크1/네트워크2 접속 설정하기

네트워크 접속방식과 접속환경을 설정합니다.



- IP 타입 : 네트워크 접속형태를 선택합니다.
- 네트워크1 / 네트워크2 대역폭 : 전송할 수 있는 최대 업로드 데이터량을 입력합니다.
접속모드 설정 값에 따라 확인 후 입력하세요.
네트워크 재 전송량은 네트워크 1, 2를 합쳐서 최대 64M입니다. 초기값은 네트워크1이 최대로 전송하도록 설정되어 있습니다.
- ☒
 - 네트워크1과 네트워크2가 동일한 대역의 IP 주소로 설정되어있으나 물리적으로 다른 망에 연결된 경우, 네트워크1만 접속이 가능하게 됩니다.
 - 네트워크1과 네트워크2가 동일한 대역의 고정 IP 주소로 설정되어있을 경우, 한 개의 이더넷 포트만 망에 연결되어 있더라도, 네트워크1과 네트워크2가 모두 접속이 가능하게됩니다.
- IP 주소, 서브넷 마스크, 게이트웨이, DNS
 - <고정>의 경우 : IP 주소, 서브넷 마스크, 게이트웨이, DNS를 직접 입력할 수 있습니다.
 - <DHCP>의 경우 : IP 주소, 서브넷 마스크, 게이트웨이 값이 자동으로 설정됩니다.
 - <PPPoE>의 경우 : IP 주소, 서브넷 마스크, 게이트웨이 값이 자동으로 설정됩니다.
- ID, 비밀번호 : 접속모드를 PPPoE로 설정한 경우 PPPoE에 등록된 “ID”와 “비밀번호”를 입력합니다.
- ☒
 - <DHCP>와 <PPPoE>의 DNS 값은 <직접입력>으로 선택될 경우만 직접 입력할 수 있습니다.
 - 라이브 뷰어에서 수신되는 데이터량은 설정된 재전송량에 요청된 채널마다 분배되어서 전송되는 양으로 제한됩니다. 이는 라이브에서 영상을 수신할 때 실제 설정된 전송량보다 적을 수 있습니다. 영상을 좀 더 부드럽게 보기 위해서는 송신되는 전송량을 높은 다음 단위화면 혹은 낮은 채널 분할에서 영상을 볼 수 있습니다.

메뉴 설정

공유기를 사용하지 않을 경우 네트워크 연결 설정하기




• 고정 설정 모드

- 인터넷 연결 방식 : 고정 IP PPPoE 및 전용선으로 연결하거나, 랜 환경에서 NVR과 원격 사용자를 연결할 수 있습니다.
- NVR 네트워크 설정 방법 : 연결된 NVR의 <네트워크> 메뉴의 <인터페이스>를 <고정>으로 설정하세요.
 - 고정 IP, 서브넷 마스크, 게이트웨이는 네트워크 관리자에게 문의하세요.

• DHCP 설정 모드

- 인터넷 연결 방식 : 케이블 모뎀에 NVR을 직접 연결하거나, DHCP 방식의 PPPoE 모뎀에 NVR을 직접 연결 또는 광랜에 NVR을 직접 연결할 수 있습니다.
- NVR 네트워크 설정 방법 : <네트워크> 메뉴의 <인터페이스>를 <DHCP>로 설정하세요.
 - 최대 1분 이내에 IP 할당에 실패할 경우 이전에 설정된 고정 IP로 재설정합니다.

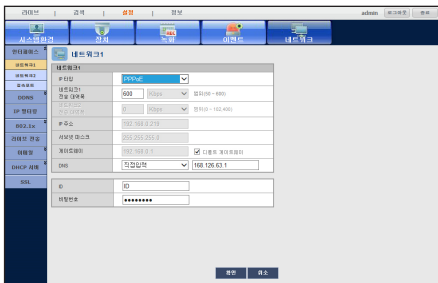

• PPPoE

- 인터넷 연결 방식 : PPPoE 모뎀이 NVR과 직접 연결되고, PPPoE 접속 시 ID와 비밀번호가 사용될 경우입니다.
- NVR 네트워크 설정 방법 : 연결된 NVR의 <네트워크> 메뉴의 <인터페이스>를 <PPPoE>로 설정하세요.
 - PPPoE <ID>, <비밀번호>는 PPPoE에 입력해야 하는 ID와 비밀번호입니다.
ID와 비밀번호를 모를 경우 PPPoE 제공 업체에 문의하세요.

공유기를 사용할 경우 네트워크 연결 설정하기



- NVR의 고정 IP와의 충돌을 피하기 위하여 아래와 같은 사항을 확인하세요.

• NVR 고정 IP로 설정하기

- 인터넷 연결 방식 : PPPoE/Cable 모뎀을 연결한 IP 공유기에 NVR을 연결하거나, 로컬 네트워크(LAN) 환경에서 IP 공유기에 NVR을 연결할 수 있습니다.

• NVR 네트워크 설정하기

1. 연결된 NVR의 <네트워크> 메뉴의 <인터페이스>를 <고정>으로 설정하세요.
2. IP가 IP 공유기에서 제공하는 고정 IP 대역인지를 확인하세요.
IP, 서브넷 마스크, 게이트웨이 : 네트워크 관리자에게 문의하세요.
 - IP가 IP 공유기에서 제공하는 고정 IP 대역인지 확인하세요.



- DHCP 서버의 시작 주소(192.168.0.100)와 끝 주소(192.168.0.200)가 설정되어 있다면, 그 외의 주소 (192.168.0.2 ~ 192.168.0.99 또는 192.168.0.201 ~ 192.168.0.254)로 설정해야 합니다.

3. 서브넷 마스크, 게이트웨이가 IP 공유기에서 제공하는 값과 동일한지 확인하세요.

• 공유기 DHCP IP 주소 설정하기

1. IP 공유기의 설정 메뉴에 접속하기 위해서는 IP 공유기에 연결되어 있는 로컬 PC의 인터넷 브라우저에서 IP 공유기 접속 주소를 입력하세요. (예 : http://192.168.1.1)
2. 이때 먼저 로컬 PC의 윈도우 네트워크 설정을 다음의 예와 같이 지정하세요.
예) IP : 192.168.1.2
서브넷 마스크 : 255.255.255.0
게이트웨이 : 192.168.1.1
 - IP 공유기 주소로 접속하면, 암호를 묻는 창이 뜨게 됩니다. User Name에는 아무것도 입력하지 않고, 비밀번호에 “admin”을 입력하고 <확인>을 누르면, IP 공유기의 설정페이지가 나오게 됩니다.
 - 공유기의 DHCP 설정 관련 메뉴에 들어가서, DHCP 서버 모드로 선택하신 후, 시작 주소와 끝 주소를 입력하세요.
시작 주소(192.168.0.100)와 끝 주소(192.168.0.200)으로 입력하세요.



- 위 사항은 공유기 종류에 따라 다를 수 있습니다.

메뉴 설정

접속포트 설정하기



- 프로토콜 타입 : 프로토콜 타입을 TCP와 UDP 중 선택하세요.
 - UDP로 설정할 경우 UDP 포트, Unicast/Multicast 선택이 활성화됩니다.
 - TCP로 설정할 경우 디바이스포트 선택이 활성화됩니다.
- 디바이스포트 : 연결 가능한 포트값을 입력하세요. 초기 포트는 <554>입니다.
 - TCP : UDP에 비해 안정성이 높지만 속도는 느리므로, 인터넷 환경에서 사용하는 것을 권장합니다.
- UDP 포트 : <8000~8159>가 초기 포트이며, 그 범위는 160 단위로 감소, 증가합니다.
 - UDP : TCP보다 안정성면에서는 떨어지지만 속도는 빠르므로, 로컬 네트워크 환경(LAN)에서 사용하는 것을 권장합니다.
- Unicast/Multicast : Unicast, Multicast 중 선택합니다.
 - Multicast로 설정할 경우 멀티캐스트 IP 주소와 멀티캐스트 TTL이 활성화됩니다.
 - Unicast : 각 접속자마다 개별적인 데이터를 전송 (UDP, TCP) 합니다.
 - Multicast : 네트워크에 추가 트래픽 없이 다수 접속자가 데이터 수신 가능 (UDP 모드만 제공) 합니다.
- 멀티캐스트 IP 주소 : 사용자가 직접 입력합니다.
- 멀티캐스트 TTL : 0~255 범위 중 선택하세요. 멀티캐스트 TTL 초기값은 <5>입니다.
- HTTP 포트 : 웹뷰어용 포트 번호를 입력하세요. 초기 포트는 <80>입니다.
- SSL보내기 : SSL 보내기 여부를 선택합니다.

DDNS


원격 사용자가 네트워크 연결 시 DDNS 사용 여부와 연결할 사이트를 설정할 수 있습니다.



- DDNS 사이트 : DDNS 사용 여부와, 사용시 등록된 사이트를 선택합니다.
- 호스트이름 : DDNS 사이트에 등록된 호스트이름을 입력합니다.
- 사용자이름 : DDNS 사이트 사용자이름을 입력합니다.
- 비밀번호 : DDNS 사이트에 등록된 사용자의 비밀번호를 입력합니다.



- <OFF>를 선택할 경우 입력란이 비활성화 됩니다.
- <samsungipolis.com>를 선택할 경우 서버 이름란이 비활성화 됩니다.

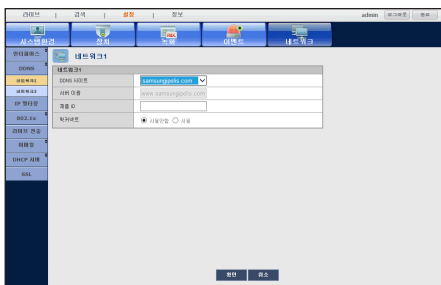

- 퀵커넥트 : <DDNS 사이트>를 <samsungipolis.com>로 선택할 경우 나타납니다. 기능을 사용하려면 NVR을 UPnP 라우터와 연결하고 <사용>으로 선택하세요.



- 퀵커넥트 설정 진행 중 취소를 할 경우 자동으로 <사용안함>으로 저장됩니다.

퀵커넥트 연결 상태를 확인하려면

퀵커넥트 연결 시 상태바와 함께 진행 사항에 대한 메시지가 뜹니다.

- **Quick Connect 성공** : 접속 성공에 대한 메시지입니다.
- **네트워크 설정을 확인해주세요** : 네트워크 설정이 잘못된 경우 발생합니다. 네트워크 설정을 확인하세요.
- **라우터의 UPnP 기능을 활성화해주세요** : 라우터에서 UPnP 기능을 활성화해야하는 경우의 메시지입니다.
- **라우터를 찾지 못했습니다** : 라우터를 찾지 못한 경우 발생합니다. 라우터 설정을 확인하세요.
- **라우터를 재시작해주세요** : 라우터를 재시작해야 하는 경우에 발생합니다.
- **다른 기기가 포트를 사용중입니다** : 다른 포트로 설정해주세요.

메뉴 설정

DDNS 설정하기

Dynamic DNS(Domain Name System)란 뜻입니다.

DNS(Domain Name System)란 사용자가 쉽게 기억할 수 있는 문자로 구성된 도메인 이름(예 : www.google.com)을 숫자로 구성된 IP 주소(64.233.189.104)로 연결해주는 서비스입니다.

DDNS(Dynamic DNS)란 사용자가 기억하는 도메인 이름을 유동 IP 환경에서 IP 주소가 변경될 경우에도 연결 가능하도록 DDNS Server에 도메인 이름과 변경된 IP 주소를 등록해주는 서비스입니다.

• NVR에서 DDNS 설정하기

연결된 NVR의 <접속포트> 메뉴의 <프로토콜 타입> 메뉴를 아래와 같이 설정하세요.

예) 프로토콜 타입 : TCP
디바이스포트 : 554 ~ 557
DDNS 사이트 : iPOLiS

• 공유기의 DDNS 설정하기

연결된 공유기의 사용설명서를 참조하여 네트워크 전송 프로토콜 설정 관련 메뉴를 선택하세요.

• 공유기의 UPnP 설정하기

연결된 공유기의 사용설명서를 참조하여 UPnP 기능을 활성화하세요.



■ 공유기(라우터)로 DDNS를 연결하는 사용자의 경우 HTTPS 사용시 443포트로 포트 포워딩 해야합니다.

IP 필터링

특정 IP에 대해서 접속을 허가 또는 거부 하도록 IP 목록을 작성할 수 있습니다.



• 필터링 타입 :

- 거부 : 거부를 선택할 경우 필터링에 등록된 IP의 접근을 제한합니다.
- 허용 : 허용을 선택할 경우 등록된 IP의 접근만 허용합니다.

• 사용 : IP 필터링을 사용할 IP의 체크박스를 선택합니다.

• IP 주소 : 필터링할 IP 주소를 입력합니다.

• 필터링 범위 : IP 주소 및 Prefix를 입력하면 차단 또는 허용되는 IP 주소의 범위가 나타납니다.




■ 카메라의 IP가 거부 항목에 포함되어 있거나 허가 항목에 포함되어 있지 않을 경우 카메라로의 접속이 차단됩니다.

802.1x

네트워크 연결시 802.1x 프로토콜 사용 여부를 선택하고 인증서를 설치할 수 있습니다.

802.1x는 서버와 클라이언트간의 인증 시스템으로서, 송수신 네트워크 데이터의 해킹이나 바이러스, 정보 유출에 대하여 보장받기 위한 기능입니다.

이를 사용함으로써 인증되지 않은 클라이언트로부터의 접속을 차단하고, 인증된 사용자에게만 통신을 허가하여, 보안기능을 한층 강화시킬 수 있습니다.

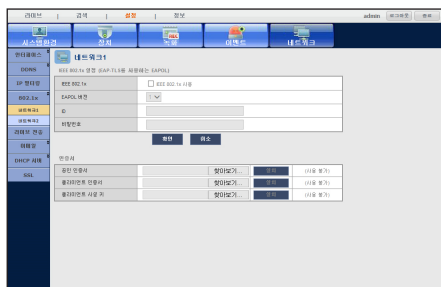

- IEEE 802.1x : 802.1x 프로토콜 사용 여부를 선택합니다.
 - EAPOL 버전 : 프로토콜로 사용할 EAPOL 사용 버전을 선택합니다.
 - 일부 스위치 허브의 경우 버전 <2>로 했을 때, 통신이 안 될 수 있습니다. 기본적으로 버전 <1>을 선택하세요.
 - ID : RADIUS 서버관리자가 제공한 아이디를 입력합니다.
 - 입력한 아이디와 클라이언트 인증서의 아이디가 일치하지 않을 경우, 정상적으로 처리되지 않습니다.
 - 비밀번호 : RADIUS 서버관리자가 제공한 비밀번호를 입력합니다.
 - 입력한 비밀번호와 클라이언트 사설 키의 비밀번호가 일치하지 않을 경우, 정상적으로 처리되지 않습니다.
 - 공인 인증서 : 공개키가 포함된 공인 인증서인 경우 선택합니다.
 - 클라이언트 인증서 : 클라이언트 인증 키가 포함된 공인 인증서일 경우 선택합니다.
 - 클라이언트 사설 키 : 클라이언트 사설 키가 포함된 공인 인증서일 경우 선택합니다.
- 
 - 802.1x 환경을 구축을 하기 위해, 관리자는 RADIUS 서버를 사용해야 합니다.
또한, 서버와 연결되는 스위치 허브는 802.1x를 지원하는 장치만 가능합니다.
 - RADIUS 서버, 스위치 허브, NVR 장치의 시간이 일치하지 않을 경우, 통신이 안 될 수 있습니다.
 - 클라이언트 사설 키에 암호가 걸려있을 경우, 서버관리자에게 아이디와 비밀번호를 확인해야 합니다.
아이디와 비밀번호는 각각 최대 30 글자씩 지원합니다. (단, 영문, 숫자, 특수문자("-", "_", ".") 3가지)만 지원합니다.
암호가 걸려있지 않은 파일을 사용할 경우는, 비밀번호 입력과 상관없이 동작 가능합니다.
 - NVR 장치의 802.1x 지원 프로토콜은 EAP-TLS 입니다.
 - 인증서 3개 모두 설치되어야 802.1x가 사용 가능합니다.

메뉴 설정

라이브 전송

각 채널의 라이브 화면을 네트워크로 전송하는 프로파일을 설정할 수 있습니다.



- 영상방식 : 접속된 카메라의 네트워크 프로파일을 선택할 수 있습니다.
- 코덱 : 선택된 네트워크 프로파일의 코덱을 보여줍니다.
- 해상도 : 선택된 네트워크 프로파일의 해상도를 보여줍니다.
- 전송율 : 선택된 네트워크 프로파일의 전송율을 보여줍니다.
- 전송화질 : 선택된 네트워크 프로파일의 전송 영상의 화질을 보여줍니다.



■ 네트워크 프로파일 설정과 녹화 프로파일 설정이 다를 경우 카메라에서 설정된 프레임 수대로 전송되지 않을 수 있습니다.

이메일

NVR에 등록된 사용자에게 일정한 시간 간격으로 또는 이벤트가 발생했을 경우에 메일을 발송할 수 있습니다.

SMTP 설정하기

SMTP 메일 서버를 설정합니다.



- 서버 주소 : 연결할 서버를 입력하세요.
- 접속포트 : 접속포트를 선택합니다.

- 인증사용 : SMTP 서비스 사용자가 인증을 사용할 경우 체크 표시를 합니다.
사용자 설정란이 활성화됩니다.
- ID : SMTP 서버에 접속 시 인증할 사용자를 입력합니다.
- 비밀번호 : SMTP 서버 사용자 인증 비밀번호를 입력합니다.
- 전송 보안 : <선택안함>과 <TLS (가능한 경우)> 중 선택합니다.
- 송신자 주소 : 메일을 보내는 주소를 입력합니다.
- 이메일 테스트 : 서버 설정에 대한 테스트를 실행합니다.

이벤트 설정하기

사용자에게 발송될 이벤트의 전송 간격과 종류를 설정할 수 있습니다.



- 이벤트 전송 간격 : 이벤트 전송 간격을 설정합니다.
 - 이벤트가 지속적으로 발생하더라도 메일이 계속 발송되지 않고 설정된 시간 간격으로 발송됩니다.
 - 초 단위 설정시 이미지 전송되지 않습니다.
- 이벤트 발신 여부 : 이벤트 발생 시 메일을 발송할 이벤트 종류를 선택합니다.
선택된 이벤트가 발생하면 해당 이벤트의 수신자 권한이 주어진 그룹에게 메일이 발송됩니다.

그룹 설정하기

메일이 발송될 그룹을 설정하고 그룹별로 권한을 부여할 수 있습니다.
NVR 사용자 그룹과는 별도로 이메일 수신자를 <수신자> 항목에서 등록할 수 있습니다.



메뉴 설정

- 그룹 : 이벤트 발생 시 이메일을 수신할 수신자 그룹을 설정합니다.
 - 추가 : 버튼을 클릭하면 그룹 추가 이름 입력창이 나타납니다. 이름을 입력하고 <확인>을 누르면 그룹을 추가할 수 있습니다.
 - 삭제 : 선택한 그룹을 삭제합니다.
 - 재설정 : 이미 존재하는 그룹의 수신자 권한을 재설정할 수 있습니다.
- 수신자 권한 : 수신 그룹의 권한을 설정합니다.

수신자 설정하기

설정된 그룹에 사용자를 추가하거나 삭제하고 그룹을 변경할 수 있습니다.




- 메일을 수신할 수신자 그룹을 선택합니다.
 - <그룹> 항목에서 먼저 그룹이 추가되어야 그룹 목록에 나타납니다.
 - 추가 : 수신자의 이름, 이메일, 그룹을 선택할 수 있습니다.
 - <그룹> 항목에서 그룹이 생성되어야 수신자를 추가할 수 있습니다.

DHCP 서버

내장된 DHCP 서버를 설정하여 네트워크에 연결되어 있는 네트워크 카메라에 IP 주소를 할당할 수 있습니다.

네트워크 설정하기

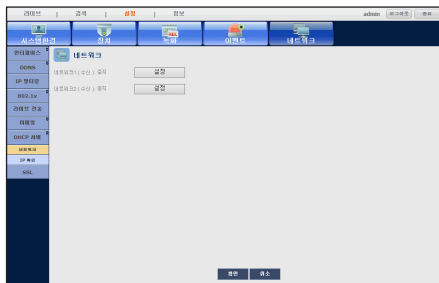


- 네트워크 1/2 : <설정>을 선택하여, 서버로 동작하는 IP 범위와 시간을 설정할 수 있습니다.

DHCP 서버를 설정하려면

1. DHCP 서버 설정창에서 <설정> 버튼을 클릭하세요.
2. <상태>를 <실행>으로 선택하세요.
3. <IP 범위>에서 시작과 끝 IP 주소를 입력하세요.
4. <IP 임대 시간>을 입력하세요.
5. <확인>을 선택하세요.
입력한 IP 범위가 해당 네트워크의 DHCP 서버 주소로 설정됩니다.

IP 확인하기

현재 DHCP 서버를 통해 할당 되어진 IP, Mac, 연결된 네트워크 포트 정보를 확인할 수 있습니다.

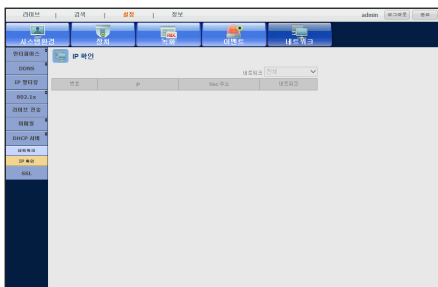

- 네트워크 : IP 등의 정보를 확인할 네트워크 포트를 선택합니다.

SSL

보안 연결 시스템을 선택하거나 공공 증명서를 설치할 수 있습니다.



- 보안 연결 시스템 : 보안 연결 시스템 방식을 선택할 수 있습니다.
 - HTTP (보안 연결을 사용하지 않습니다.)
 - HTTPS (고유 증명서를 사용한 보안 연결)
 - HTTPS (공공 증명서를 사용한 보안 연결)
- 공공 증명서 설치 : 설치할 공공 증명서를 스캔하여 등록할 수 있습니다.
증명서를 설치하려면 증명 기관에서 발행한 증명서 파일, 암호 파일을 설치해야 합니다.
 - <HTTPS (공공 증명서를 사용한 보안 연결)> 항목은 등록된 공공 증명서가 있을 경우만 선택할 수 있습니다.
 - 공용기(라우터)로 DDNS를 연결하는 사용자의 경우 HTTPS 사용시 443포트로 포트 포워딩 해야합니다.



부록

제품 사양

항목		세부 설명
디스플레이		
네트워크 카메라	입력 채널	최대 64CH
	입력 대역폭	100Mbps
	해상도	CIF ~ 5M
	프로토콜	Onvif(Samsung, Axis, Sony, Panasonic), Samsung
라이브	로컬 디스플레이	N/A
	웹	1 / 4 / 9 / 16 / 36 / 64 Sequence
성능		
OS	임베디드	리눅스
녹화	압축방식	H.264, MPEG-4, MJPEG
	녹화 대역폭	100Mbps
	해상도	CIF ~ 5M
	타입	일반, 스케줄, 이벤트 (프리 / 포스트)
	이벤트 트리거	센서, 영상 손실, 카메라 이벤트(영상분석, 움직임 감지, 오디오 감지)
	이벤트 동작	이메일, PTZ 프리셋, 알람, 부저
재생	검색 모드	날짜/시간, 이벤트
	동시재생	4채널
	해상도	CIF ~ 5M
	재생 제어	빨리 앞으로 감기 / 빨리 뒤로 감기, 한 단계 앞으로 / 한 단계 뒤로
저장	내장	1TB SATA HDD (HDD 슬롯 8개) ※ 3TB 지원 가능
	외부	e-SATA(2포트), iSCSI 스토리지 (최대 32TB)
백업	파일 백업 (웹뷰어를 통해)	JPEG, AVI (웹뷰어)
	기능	단일 채널 재생, 날짜-시간/제목 표시
알람	입력 / 출력	입력 16 / 출력 4
오디오	입력	64 채널 (네트워크)
	압축	G.711, G.726




항목		세부 설명
코넥터	이더넷	2 RJ-45, 10/100/1000 Base-T
	eSATA	2개
네트워크		
인터페이스		RJ-45, Gigabit Ethernet x2
프로토콜		TCP/IP, UDP/IP, RTP(UDP), RTP(TCP), RTSP, NTP, HTTP, DHCP, PPPoE, SMTP, ICMP, IGMP, ARP, DNS, DDNS, uPnP, ONVIF
DDNS		Samsung iPOLiS DDNS
전송 대역폭		64Mbps
최대 원격 사용자		검색(3) / 라이브 유니캐스트(10) / 라이브 멀티캐스트(20)
최대 원격 채널		최대 160CH
IP		IPv4
보안		사용자 액세스 로그 IP 필터링 802.1x
웹뷰어	언어 (24개)	영어, 불어, 독일어, 스페인어, 이탈리아어, 중국어, 한국어, 러시아어, 일본어, 스웨덴어, 덴마크어, 포르투갈어, 체코어, 폴란드어, 터키어, 루마니아어, 세르비아어, 네덜란드어, 크로아티아어, 헝가리어, 그리스어, 핀란드어, 노르웨이어, 태국어
	OS	지원 OS : Windows XP(서비스 팩 2 or above), Vista, 7, 8 지원 브라우저 : MS 인터넷 익스플로러 7.x, 8.x, 9.x, 10.x (Windows 7, 8 64bit 환경에서는 인터넷 익스플로러 x86)
뷰어 소프트웨어		NET-i Viewer, Smart Viewer, Web viewer, iPolis Mobile
스마트폰	지원 타입	Android, iOS
	프로토콜	RTP, RTSP, HTTP, CGI
	최대 원격 사용자	라이브(10명), 재생(1명)
기능		
카메라 설정	등록	자동, 수동
	설정 항목	IP 주소, 프로파일 선택
PTZ	제어	웹뷰어를 통해 제어
	프리셋	255 프리셋

부록

항목		세부 설명
시스템		
로그	로그 리스트	시스템 로그, 이벤트 로그 최대 각 20,000개
동작 환경		
동작온도		+0°C to +40°C
동작습도		20% ~ 85%
전원		
사용전원		100 to 240 VAC $\pm 10\%$; 50/60 Hz, 4~1.5A
소비전력		HDD 1개 : 45W(MAX), 35W(Normal) RAID(HDD 8개) : 180W(MAX), 55W(Normal)
외관		
색상 / 재질		검정 / 메탈
크기 (WxHxD) H (다리 미포함)		W440.0 x H88.0 x D426.8 mm (W17.32 x H3.46 x D16.80 inch)
중량		6.2 Kg (HDDx1)
규격		
승인	안전	NRTL
	EMC	CE, FCC, Gost-R, CCC, KCC

외관도

단위 : mm (inches)

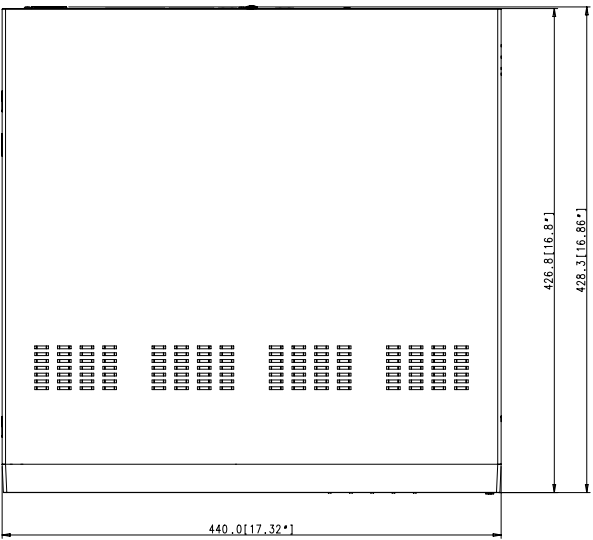

부록

초기 상태

시스템을 초기화 하려면 “**시스템 관리 > 설정정보관리 > 초기화설정**”에서 <초기화> 버튼을 누르세요.

네트워크 정보 및 설정치를 공장 출하시의 상태로 원상회복 시킵니다.

- 최초 관리자 ID는 “**admin**”이며, 비밀번호는 최초 로그인 시 설정해야 합니다. (관리자 접속의 초기 비밀번호는 “**4321**”입니다.)
- 안전하게 개인정보를 보호하고, 개인정보도용 피해를 예방하기 위해 3개월 마다 주기적으로 비밀번호를 변경하세요.
부주의한 비밀번호 관리로 인한 보안 및 기타 문제의 책임은 사용자에게 있으므로 각별히 주의하세요.

구분	세부 항목			공장 설정치
시스템 환경	날짜/시간/언어	날짜/시간/언어	날짜	년-월-일
			시간	24 시간
			시간대	GMT
			시간동기화	OFF
			DST	OFF
			언어	영어
	권한관리	관리자	ID	admin
		그룹	그룹	없음
			그룹 권한	
		사용자	그룹	그룹 전체
	시스템 관리	설정	접근 제한	백업/녹화중지/검색/PTZ/ 원격 알람 출력/종료
		시스템 정보	장치이름	NVR
장치	카메라	채널설정	영상	ON
			음향	OFF
			카메라 이름	CAM 01 ~ CAM 64
	저장매체	HDD 알람	점검알람출력단자	BEEP
			알람시간	Continuous
			교체알람출력단자	BEEP
			알람 시간	Continuous
녹화	녹화예약	CH01~CH64	연속/이벤트 녹화	
	이벤트 녹화시간	프리 이벤트		OFF
		포스트 이벤트		1분
	녹화설정	NVR	일반녹화	OFF
			이벤트	OFF
			허용치	0
			음향	OFF
	녹화 옵션		HDD반복녹화	덮어쓰기
			HDD녹화끝 경보음	OFF
			자동삭제	OFF(180일)

구분	세부 항목			공장 설정치
이벤트	센서감지	NVR	센서동작모드	OFF
			카메라	Camera No.
			알람출력	없음
			알람시간	10 초
		네트워크 카메라	센서동작모드	OFF
			카메라	Camera No.
			알람출력	없음
			알람시간	10 초
	카메라 이벤트		모드	OFF
			알람출력	없음
			알람시간	10 초
	영상 손실 감지		영상 손실 상태	OFF
			알람출력	없음
			알람시간	10 초
	알람 출력 예약			알람출력 1 (이벤트 연동)
네트워크	인터페이스	네트워크1	IP 타입	고정
			네트워크1 전송 대역폭	65536(kbps)
			IP 주소	192.168.1.200
			서브넷 마스크	255.255.255.0
			게이트웨이	192.168.1.1
			DNS	168.126.63.1
		네트워크2	IP 타입	고정
			네트워크2 전송 대역폭	0(kbps)
			IP 주소	192.168.2.200
			서브넷 마스크	255.255.255.0
			게이트웨이	192.168.2.1
			DNS	168.126.63.1
		접속포트	프로토콜 타입	TCP
			디바이스 포트	554~557
			UDP 포트	8000~8159
			Unicast/Multicast	Unicast
			멀티캐스트 IP 주소	224.126.63.1
			멀티캐스트 TTL	5
	HTTP 포트	80		
SSL보내기	OFF			

부록

구분	세부 항목			공장 설정치
네트워크	DDNS	네트워크1	DDNS 사이트	OFF
		네트워크2	DDNS 사이트	OFF
	IP 필터링		필터링 타입	거부
			사용	OFF
			IP 주소	0.0.0.0
			Prefix	32
	802.1x	네트워크1	IEEE 802.1x	OFF
			EAPOL 버전	1
			공인 인증서	사용불가
			클라이언트 인증서	사용불가
			클라이언트 사설 키	사용불가
		네트워크2	IEEE 802.1x	OFF
			EAPOL 버전	1
			공인 인증서	사용불가
			클라이언트 인증서	사용불가
			클라이언트 사설 키	사용불가
	이메일	SMTP	서버 주소	
			접속포트	25
			인증사용	OFF
			전송보안	선택안함
		이벤트	이벤트 전송 간격	5 min
			이벤트 발신여부	OFF
		그룹	그룹	OFF
			수신자 권한	OFF
	DHCP 서버	네트워크 1	상태	정지
			IP 범위	0,0,0,0 ~ 0,0,0,0
			IP 임대 시간	86400
		네트워크 2	상태	정지
			IP 범위	0,0,0,0 ~ 0,0,0,0
			IP 임대 시간	86400
	SSL		보안 연결 시스템	HTTP(보안 연결을 사용하지 않습니다.)

문제 해결(FAQ)

문제점 및 증상	해결 방법
시스템 전원이 켜지지 않으며 시스템 전면부에 있는 LED도 전혀 동작하지 않습니다.	• 시스템의 전원이 정상적으로 연결되어 있는지 확인하세요. • 입력되어 있는 전원 전압을 확인하세요. • 위와 같은 확인 절차 후에도 전원이 켜지지 않을 경우에는 파워서플라이를 점검 또는 교체하세요. • 세트 내부의 케이블 연결상태를 확인하세요. (SMPS, FRONT)
영상은 입력되어 있는 상태이나 일부 채널이 영상은 출력되지 않습니다.	• 카메라의 전원을 확인하세요. • 카메라의 웹뷰어에 접속하여 영상 출력을 확인하세요. • 시스템의 네트워크 포트의 연결 상태를 확인하고, 네트워크 설정이 올바르게 되어 있는지 확인하세요. • 네트워크에 연결된 허브를 Giga bit 지원 제품으로 교체하세요. 연결된 허브의 사양에 따라 영상 출력을 할 수 있습니다. • 웹뷰어의 <설정> 탭에서 <네트워크> 항목을 확인하세요. 네트워크 대역폭 설정이 지나치게 낮게 되어있으면 영상 출력이 원활하지 않을 수 있습니다.
라이브 뷰어에서 녹화 버튼을 눌러도 REC LED가 점등되지 않으며, 녹화도 되지 않습니다.	• HDD에 녹화할 공간이 없는지 확인하세요. • 메뉴에 녹화 모드설정에서 모드가 ON으로 되어있는지 확인하세요.
달력 검색 시 시작으로 커서가 가지 않습니다.	• 재생을 원하는 채널과 날짜에 체크 표시가 되어있는지 확인하세요. 채널과 날짜를 둘다 선택 하여야 시작으로 재생을 시작할 수 있습니다.
알람 발생 후 웹뷰어의 <📺> 버튼을 눌러서 해제시키려하는데 계속해서 알람이 발생하여 해제시킬 수가 없습니다.	• 웹뷰어의 <설정> 탭에서 <이벤트> 항목을 수정하세요. 1) 경보음 해제 시 : 이벤트 녹화모드 - 알람 (카메라 이벤트/영상 손실) - 알람출력을 소거 시킵니다. 2) 이벤트 해제 시 : 이벤트 녹화모드 - 알람 (카메라 이벤트/영상 손실) - 모드를 Off 시킵니다.
라이브 화면에서 PTZ 조작 시 아무런 반응이 없습니다.	• 등록된 카메라가 PTZ 동작을 지원하는지 확인하세요
카메라가 연결되지 않거나 PC에서 본체 접속이 되지 않습니다.	• 네트워크 케이블이 연결되어 있는지 확인하세요. • <네트워크> - <인터페이스> 설정이 되어 있는지 확인하세요. • 컴퓨터 또는 카메라의 IP 설정 확인하세요. • Ping Test를 시도해보세요. • 같은 IP 를 사용하는 다른 장치가 주변에 있는지 확인하세요.
라이브 화면에서 영상이 너무 밝거나 어둡습니다.	• 등록된 카메라의 설정을 확인하세요.

부록

문제점 및 증상	해결 방법
NVR에 외장형 HDD를 여러개 연결한 뒤, 메뉴에서 연결시 물리적으로 연결한 개수만큼 NVR에서 외장 하드 디스크가 인식이 되지 않습니다.	여러개의 외장형 HDD를 인식하는데는 시간이 필요합니다. 잠시 뒤에 다시 시도해보고, 재차 시도에도 계속 물리적으로 연결된 개수만큼 NVR에서 인식하지 못하면 HDD의 문제일 가능성이 높습니다. 다른 HDD로 시도하세요.
검색 모드에서 타임바가 표시되지 않습니다.	타임라인은 일반모드와 확대모드로 전환이 가능합니다. 확대모드인 경우 현재 표시되고 있는 시간내에 타임바가 위치하지 않을 수 있습니다. 일반모드로 전환하거나 좌우 이동 버튼을 클릭하시어 타임바의 위치를 탐색하세요.
“NO HDD” 아이콘과 여러 메시지 팝업창이 나타납니다.	HDD 연결 상태를 확인하세요. 연결 상태에 문제가 없을 경우에도 이와 같은 현상이 계속 발생하면 가까운 서비스센터를 방문하여 HDD를 점검해 보세요.
부팅 후에도 전면부의 LED(ALARM, REC)가 계속 깜빡입니다.	NO HDD나 HDD FAIL, 팬 에러 발생 시 전면부의 LED가 계속 깜빡입니다. - 연결 후 라이브의 좌측상단에 해당 Fail에 대한 내용을 아이콘으로 확인할 수 있습니다.
HDD 추가 설치후 추가한 내용이 NVR에서 보이지 않습니다.	추가 설정한 HDD가 호환성 리스트에서 지원하는 HDD가 맞는지 확인하세요. 이를 위한 호환성 리스트는 본 NVR 제품을 구입한 거래처에 문의하세요.
외장 저장장치(eSATA HDD)를 NVR에 연결한 후 연결 결과가 보이지 않습니다.	연결한 외장 저장장치가 호환성 리스트에서 지원하는 저장장치가 맞는지 확인하세요. 이를 위한 호환성 리스트는 본 NVR 제품을 구입한 거래처에 문의하세요.
WebViewer의 전체화면 모드에서 ESC 키를 눌러도 일반 분할화면 모드로 변경이 안됩니다.	ALT+TAB 키를 눌러 ‘ACTIVE MOVIE’를 선택한 후 다시 ESC 키를 누르면 일반 분할화면 모드로 변경됩니다.
기본검색, 공유기를 사용할 경우에 대한 네트워크 설정이 어렵습니다.	- 자세한 설명은 사용 설명서를 참조하세요. - 간편한 동작사양을 바로 확인하려면 간편 설명서를 참조하세요.
비밀번호가 생각나지 않습니다.	NVR 설치 담당자에게 문의하세요.

문제점 및 증상	해결 방법
카메라에 설정되어 보내주는 프레임 수와 녹화된 프레임 수가 일치되지 않습니다.	• 하나의 카메라에서 다수의 프로파일을 접속하여 사용할 경우 설정된 프레임 레이트보다 적게 서비스될 수 있습니다. 접속된 카메라에서 가능한 동일 프로파일로 하나의 스트림을 받을 수 있도록 설정하세요. - 즉, 녹화 프로파일과 네트워크 프로파일을 동일하게 적용하면 설정한 대로 녹화가 가능합니다. - 또한, 카메라에서 보내주는 비트레이트 보다 녹화/녹화설정의 허용 비트레이트를 더 높게 설정하세요.
녹화가 되지 않습니다.	• 라이브에서 영상이 들어오지 않으면, 녹화가 되지 않으므로 영상이 보이는지 먼저 확인하세요. • 녹화설정이 제대로 되지 않은 경우에 녹화가 되지 않을 수도 있습니다. 1) 웹뷰어 라이브탭에서 <  > 아이콘을 누르면 바로 녹화를 실행합니다. 2) 예약녹화 : 메뉴-녹화-녹화예약 메뉴에서 원하는 시간에 녹화설정을 하면 해당 시간에 녹화를 실행합니다. - <연속> 녹화 : 설정한 시간에 무조건 녹화를 실행합니다. - <이벤트> 녹화 : 이벤트 발생 시(알람, 움직임 감지, 영상 손실)에만 녹화를 실행합니다. 이벤트가 없는 경우에는 녹화가 되지 않습니다. - <연속/이벤트> 녹화 : 이벤트가 없을 경우에는 연속으로 녹화가 되고, 이벤트 발생시에는 이벤트로 녹화를 실행합니다.
녹화한 영상의 화질이 좋지 않습니다.	• 메뉴-녹화-화질/해상도 설정에서 해상도와 녹화화질 설정을 높이세요. 1) 해상도 : 녹화할 때의 녹화 사이즈를 큰 사이즈로 설정하세요. CIF로 녹화된 경우 작은 사이즈에서 확대해서 보기 때문에 화질이 떨어집니다. 2) 녹화화질 : 녹화화질의 레벨을 높게 설정하세요. • 해상도와 녹화화질을 높일 경우, 데이터의 크기도 커지므로 하드디스크 용량이 빨리 차게 됩니다. 덮어쓰기를 설정했을 경우 기존에 기록된 데이터를 덮어쓰는 주기가 짧아질 수 있습니다.

OPEN SOURCE LICENSE NOTIFICATION ON THE PRODUCT

The software included in this product contains copyrighted software that is licensed under the GPL/LGPL. You may obtain the complete Corresponding Source code from us for a period of three years after our last shipment of this product by sending email to help.cctv@samsung.com

If you want to obtain the complete Corresponding Source code in the physical medium such as CD-ROM, the cost of physically performing source distribution might be charged.

- GPL Software : linux kernel, uboot, Sysvinit, iconv, busybox-1.18.4 (<http://www.busybox.net/>), cdrtools (<http://cdrecord.berlios.de/private/cdrecord.html>), ntp (<http://www.ntp.org/>)
dvd+rw-tools (<http://fy.chalmers.se/~appro/linux/DVD+RW/>), wget (<http://www.gnu.org/software/wget/>)
msmtp-1.4.21 (<http://msmtp.sourceforge.net/>), parted (<http://www.gnu.org/software/parted/>)
wpa_supplicant (http://hostap.epitest.fi/wpa_supplicant/), xfsprogs (<http://oss.sgi.com/projects/xfs/>)
bash-2.05b (<ftp://ftp.gnu.org/gnu/bash/>), minicom-2.1 (<http://alioth.debian.org/projects/minicom/>)
dosfstools-3.0.0 (<http://www.daniel-baumann.ch/software/dosfstools/>)
inetutils-1.4.0 (<http://www.gnu.org/software/inetutils/>), lm_sensors-3.3.2 (<http://lm-sensors.org/>)
smartmontools-5.37 (<http://sourceforge.net/apps/trac/smartmontools/wiki>)
- LGPL Software : glibc-2.8 (<http://ftp.gnu.org/gnu/libc/>), vmstat
ffmpeg (<http://ffmpeg.org/>), Live555 (<http://www.live555.com/>)
- BSD2.0: miniUpnp-1.5 (<http://miniupnp.free.fr/>), lighttpd-1.4.22 (<http://www.lighttpd.net/>)
- Zlib/libpng License: tinyxml-2.6.2 (<http://www.grinninglizard.com/tinyxml/>)
- MIT License: curl-7.21.0 (<http://curl.haxx.se/>)
- OpenSSL License: openssl-0.9.8 (<http://www.openssl.org/>)
- Boost Software License: Boost-1.43.0 (<http://www.boost.org/>)
- PHP 3.01 License: php-5.3.2 (<http://www.php.net/>)

Acknowledgement

This product includes software developed by the ffmpeg project that was modified.

This product includes software developed by the live555 project that was modified.

GNU GENERAL PUBLIC LICENSE

Version 2, June 1991

Copyright (C) 1989, 1991 Free Software Foundation, Inc.

51 Franklin Street, Fifth Floor, Boston, MA 02110-1301, USA

Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.

Preamble

The licenses for most software are designed to take away your freedom to share and change it. By contrast, the GNU General Public License is intended to guarantee your freedom to share and change free software to make sure the software is free for all its users. This General Public License applies to most of the Free Software Foundation's software and to any other program whose authors commit to using it. (Some other Free Software Foundation software is covered by the GNU Lesser General Public License instead.) You can apply it to your programs, too.

When we speak of free software, we are referring to freedom, not price. Our General Public Licenses are designed to make sure that you have the freedom to distribute copies of free software (and charge for this service if you wish), that you receive source code or can get it if you want it, that you can change the software or use pieces of it in new free programs; and that you know you can do these things.

To protect your rights, we need to make restrictions that forbid anyone to deny you these rights or to ask you to surrender the rights. These restrictions translate to certain responsibilities for you if you distribute copies of the software, or if you modify it.

For example, if you distribute copies of such a program, whether gratis or for a fee, you must give the recipients all the rights that you have. You must make sure that they, too, receive or can get the source code. And you must show them these terms so they know their rights.

We protect your rights with two steps:

(1) copyright the software, and (2) offer you this license which gives you legal permission to copy, distribute and/or modify the software.

Also, for each author's protection and ours, we want to make certain that everyone understands that there is no warranty for this free software. If the software is modified by someone else and passed on, we want its recipients to know that what they have is not the original, so that any problems introduced by others will not reflect on the original authors' reputations.

Finally, any free program is threatened constantly by software patents. We wish to avoid the danger that redistributors of a free program will individually obtain patent licenses, in effect making the program proprietary. To prevent this, we have made it clear that any patent must be licensed for everyone's free use or not licensed at all. The precise terms and conditions for copying, distribution and modification follow.

TERMS AND CONDITIONS FOR COPYING, DISTRIBUTION AND MODIFICATION

Version 2, June 1991

Copyright (C) 1989, 1991 Free Software Foundation, Inc.

51 Franklin S

0. This License applies to any program or other work which contains a notice placed by the copyright holder saying it may be distributed under the terms of this General Public License. The "Program", below, refers to any such program or work, and a "work based on the Program" means either the Program or any derivative work under copyright law: that is to say, a work containing the Program or a portion of it, either verbatim or with modifications and/or translated into another language. (Hereinafter, translation is included without limitation in the term "modification".) Each licensee is addressed as "you".

Activities other than copying, distribution and modification are not covered by this License; they are outside its scope. The act of running the Program is not restricted, and the output from the Program is covered only if its contents constitute a work based on the Program (independent of having been made by running the Program). Whether that is true depends on what the Program does.

1. You may copy and distribute verbatim copies of the Program's source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice and disclaimer of warranty; keep intact all the notices that refer to this License and to the absence of any warranty; and give any other recipients of the Program a copy of this License along with the Program.

You may charge a fee for the physical act of transferring a copy, and you may at your option offer warranty protection in exchange for a fee.

2. You may modify your copy or copies of the Program or any portion of it, thus forming a work based on the Program, and copy and distribute such modifications or work under the terms of Section 1 above, provided that you also meet all of these conditions:

- a) You must cause the modified files to carry prominent notices stating that you changed the files and the date of any change.
- b) You must cause any work that you distribute or publish, that in whole or in part contains or is derived from the Program or any part thereof, to be licensed as a whole at no charge to all third parties under the terms of this License.
- c) If the modified program normally reads commands interactively when run, you must cause it, when started running for such interactive use in the most ordinary way, to print or display an announcement including an appropriate copyright notice and a notice that there is no warranty (or else, saying that you provide a warranty) and that users may redistribute the program under these conditions, and telling the user how to view a copy of this License. (Exception: if the Program itself is interactive but does not normally print such an announcement, your work based on the Program is not required to print an announcement.)

These requirements apply to the modified work as a whole. If identifiable sections of that work are not derived from the Program, and can be reasonably considered independent and separate works in themselves, then this License, and its terms, do not apply to those sections when you distribute them as separate works. But when you distribute the same sections as part of a whole which is a work based on the Program, the distribution of the whole must be on the terms of this License, whose permissions for other licensees extend to the entire whole, and thus to each and every part regardless of who wrote it.

Thus, it is not the intent of this section to claim rights or contest your rights to work written entirely by you; rather, the intent is to exercise the right to control the distribution of derivative or collective works based on the Program.

In addition, mere aggregation of another work not based on the Program with the Program (or with a work based on the Program) on a volume of a storage or distribution medium does not bring the other work under the scope of this License.

3. You may copy and distribute the Program (or a work based on it, under Section 2) in object code or executable form under the terms of Sections 1 and 2 above provided that you also do one of the following:

- a) Accompany it with the complete corresponding machine-readable source code, which must be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,
- b) Accompany it with a written offer, valid for at least three years, to give any third party, for a charge no more than your cost of physically performing source distribution, a complete machine-readable copy of the corresponding source code, to be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,
- c) Accompany it with the information you received as to the offer to distribute corresponding source code. (This alternative is allowed only for noncommercial distribution and only if you received the program in object code or executable form with such an offer, in accord with Subsection b above.)

The source code for a work means the preferred form of the work for making modifications to it. For an executable work, complete source code means all the source code for all modules it contains, plus any associated interface definition files, plus the scripts used to control compilation and installation of the executable. However, as a special exception, the source code distributed need not include anything that is normally distributed (in either source or binary form) with the major components (compiler, kernel, and so on) of the operating system on which the executable runs, unless that component itself accompanies the executable.

If distribution of executable or object code is made by offering access to copy from a designated place, then offering equivalent access to copy the source code from the same place counts as distribution of the

source code, even though third parties are not compelled to copy the source along with the object code.

4. You may not copy, modify, sublicense, or distribute the Program except as expressly provided under this License. Any attempt otherwise to copy, modify, sublicense or distribute the Program is void, and will automatically terminate your rights under this License. However, parties who have received copies, or rights, from you under this License will not have their licenses terminated so long as such parties remain in full compliance.

5. You are not required to accept this License, since you have not signed it. However, nothing else grants you permission to modify or distribute the Program or its derivative works. These actions are prohibited by law if you do not accept this License. Therefore, by modifying or distributing the Program (or any work based on the Program), you indicate your acceptance of this License to do so, and all its terms and conditions for copying, distributing or modifying the Program or works based on it.

6. Each time you redistribute the Program (or any work based on the Program), the recipient automatically receives a license from the original licensor to copy, distribute or modify the Program subject to these terms and conditions. You may not impose any further restrictions on the recipients' exercise of the rights granted herein. You are not responsible for enforcing compliance by third parties to this License.

7. If, as a consequence of a court judgment or allegation of patent infringement or for any other reason (not limited to patent issues), conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If you cannot distribute so as to satisfy simultaneously your obligations under this License and any other pertinent obligations, then as a consequence you may not distribute the Program at all. For example, if a patent license would not permit royalty-free redistribution of the Program by all those who receive copies directly or indirectly through you, then the only way you could satisfy both it and this License would be to refrain entirely from distribution of the Program.

If any portion of this section is held invalid or unenforceable under any particular circumstance, the balance of the section is intended to apply and the section as a whole is intended to apply in other circumstances.

It is not the purpose of this section to induce you to infringe any patents or other property right claims or to contest validity of any such claims; this section has the sole purpose of protecting the integrity of the free software distribution system, which is implemented by public license practices. Many people have made generous contributions to the wide range of software distributed through that system in reliance on consistent application of that system; it is up to the author/donor to decide if he or she is willing to distribute software through any other system and a licensee cannot impose that choice.

This section is intended to make thoroughly clear what is believed to be a consequence of the rest of this License.

8. If the distribution and/or use of the Program is restricted in certain countries either by patents or by copyrighted interfaces, the original copyright holder who places the Program under this License may add an explicit geographical distribution limitation excluding those countries, so that distribution is permitted only in or among countries not thus excluded. In such case, this License incorporates the limitation as if written in the body of this License.

9. The Free Software Foundation may publish revised and/or new versions of the General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns.

Each version is given a distinguishing version number. If the Program specifies a version number of this License which applies to it and "any later version", you have the option of following the terms and conditions either of that version or of any later version published by the Free Software Foundation. If the Program does not specify a version number of this License, you may choose any version ever published by the Free Software Foundation.

10. If you wish to incorporate parts of the Program into other free programs whose distribution conditions are different, write to the author to ask for permission. For software which is copyrighted by the Free Software Foundation, write to the Free Software Foundation; we sometimes make exceptions for this. Our decision will be guided by the two goals of preserving the free status of all derivatives of our free software and of promoting the sharing and reuse of software generally.

NO WARRANTY

11. BECAUSE THE PROGRAM IS LICENSED FREE OF CHARGE, THERE IS NO WARRANTY FOR THE PROGRAM, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE PROGRAM "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE PROGRAM IS WITH YOU. SHOULD THE PROGRAM PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.

12. IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MAY MODIFY AND/OR REDISTRIBUTE THE PROGRAM AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PROGRAM (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE PROGRAM TO OPERATE WITH ANY OTHER PROGRAMS), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

END OF TERMS AND CONDITIONS

How to Apply These Terms to Your New Programs

If you develop a new program, and you want it to be of the greatest possible use to the public, the best way to achieve this is to make it free software which everyone can redistribute and change under these terms.

To do so, attach the following notices to the program. It is safest to attach them to the start of each source file to most effectively convey the exclusion of warranty; and each file should have at least the "copyright" line and a pointer to where the full notice is found.

one line to give the program's name and an idea of what it does.

Copyright (C) yyyy name of author

This program is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.

This program is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with this program; if not, write to the Free Software Foundation, Inc., 51 Franklin Street, Fifth Floor, Boston, MA 02110-1301, USA.

Also add information on how to contact you by electronic and paper mail. If the program is interactive, make it output a short notice like this when it starts in an interactive mode:

Gnomovision version 69, Copyright (C) year name of author Gnomovision comes with ABSOLUTELY NO WARRANTY; for details type 'show w'. This is free software, and you are welcome to redistribute it under certain conditions; type 'show c' for details.

The hypothetical commands 'show w' and 'show c' should show the appropriate parts of the General Public License. Of course, the commands you use may be called something other than 'show w' and 'show c'; they could even be mouse-clicks or menu items--whatever suits your program.

You should also get your employer (if you work as a programmer) or your school, if any, to sign a "copyright disclaimer" for the program, if necessary. Here is a sample; alter the names:

Yoyodyne, Inc., hereby disclaims all copyright interest in the program 'Gnomovision' (which makes passes at compilers) written by James Hacker.

signature of Ty Coon, 1 April 1989 Ty Coon, President of Vice This General Public License does not permit incorporating your program into proprietary programs. If your program is a subroutine library, you may consider it more useful to permit linking proprietary applications with the library. If this is what you want to do, use the GNU Lesser General Public License instead of this License.

GNU GENERAL PUBLIC LICENSE

Version 3, 29 June 2007

Copyright © 2007 Free Software Foundation, Inc. <<http://fsf.org/>>

Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.

Preamble

The GNU General Public License is a free, copyleft license for software and other kinds of works.

The licenses for most software and other practical works are designed to take away your freedom to share and change the works. By contrast, the GNU General Public License is intended to guarantee your freedom to share and change all versions of a program--to make sure it remains free software for all its users. We, the Free Software Foundation, use the GNU General Public License for most of our software; it applies also to any other work released this way by its authors. You can apply it to your programs, too.

When we speak of free software, we are referring to freedom, not price. Our General Public Licenses are designed to make sure that you have the freedom to distribute copies of free software (and charge for them if you wish), that you receive source code or can get it if you want it, that you can change the software or use pieces of it in new free programs, and that you know you can do these things.

To protect your rights, we need to prevent others from denying you these rights or asking you to surrender the rights. Therefore, you have certain responsibilities if you distribute copies of the software, or if you modify it: responsibilities to respect the freedom of others.

For example, if you distribute copies of such a program, whether gratis or for a fee, you must pass on to the recipients the same freedoms that you received. You must make sure that they, too, receive or can get the source code. And you must show them these terms so they know their rights.

Developers that use the GNU GPL protect your rights with two steps: (1) assert copyright on the software, and (2) offer you this License giving you legal permission to copy, distribute and/or modify it.

For the developers' and authors' protection, the GPL clearly explains that there is no warranty for this free software. For both users' and authors' sake, the GPL requires that modified versions be marked as changed, so that their problems will not be attributed erroneously to authors of previous versions.

Some devices are designed to deny users access to install or run modified versions of the software inside them, although the manufacturer can do so. This is fundamentally incompatible with the aim of protecting users' freedom to change the software. The systematic pattern of such abuse occurs in the area of products for individuals to use, which is precisely where it is most unacceptable. Therefore, we have designed this version of the GPL to prohibit the practice for those products. If such problems arise substantially in other domains, we stand ready to extend this provision to those domains in future versions of the GPL, as needed to protect the freedom of users.

Finally, every program is threatened constantly by software patents. States should not allow patents to restrict development and use of software on general-purpose computers, but in those that do, we wish to avoid the special danger that patents applied to a free program could make it effectively proprietary. To prevent this, the GPL assures that patents cannot be used to render the program non-free.

The precise terms and conditions for copying, distribution and modification follow.

TERMS AND CONDITIONS

0. Definitions.

"This License" refers to version 3 of the GNU General Public License.

"Copyright" also means copyright-like laws that apply to other kinds of works, such as semiconductor masks.

"The Program" refers to any copyrightable work licensed under this License. Each licensee is addressed as "you". "Licensees" and "recipients" may be individuals or organizations.

To "modify" a work means to copy from or adapt all or part of the work in a fashion requiring copyright permission, other than the making of an exact copy. The resulting work is called a "modified version" of the earlier work or a work "based on" the earlier work.

A "covered work" means either the unmodified Program or a work based on the Program.

To "propagate" a work means to do anything with it that, without permission, would make you directly or secondarily liable for infringement under applicable copyright law, except executing it on a computer or modifying a private copy. Propagation includes copying, distribution (with or without modification), making available to the public, and in some countries other activities as well.

To "convey" a work means any kind of propagation that enables other parties to make or receive copies. Mere interaction with a user through a computer network, with no transfer of a copy, is not conveying.

An interactive user interface displays "Appropriate Legal Notices" to the extent that it includes a convenient and prominently visible feature that (1) displays an appropriate copyright notice, and (2) tells the user that there is no warranty for the work (except to the extent that warranties are provided), that licensees may convey the work under this License, and how to view a copy of this License. If the interface presents a list of user commands or options, such as a menu, a prominent item in the list meets this criterion.

1. Source Code.

The "source code" for a work means the preferred form of the work for making modifications to it. "Object code" means any non-source form of a work.

A "Standard Interface" means an interface that either is an official standard defined by a recognized standards body, or, in the case of interfaces specified for a particular programming language, one that is widely used among developers working in that language.

The "System Libraries" of an executable work include anything, other than the work as a whole, that (a) is included in the normal form of packaging a Major Component, but which is not part of that Major Component, and (b) serves only to enable use of the work with that Major Component, or to implement a Standard Interface for which an implementation is available to the public in source code form. A "Major Component", in this context, means a major essential component (kernel, window system, and so on) of the specific operating system (if any) on which the executable work runs, or a compiler used to produce the work, or an object code interpreter used to run it.

The "Corresponding Source" for a work in object code form means all the source code needed to generate, install, and (for an executable work) run the object code and to modify the work, including scripts to control those activities. However, it does not include the work's System Libraries, or general-purpose tools or generally available free programs which are used unmodified in performing those activities but which are not part of the work. For example, Corresponding Source includes interface definition files associated with source files for the work, and the source code for shared libraries and dynamically linked subprograms that the work is specifically designed to require, such as by intimate data communication or control flow between those subprograms and other parts of the work.

The Corresponding Source need not include anything that users can regenerate automatically from other parts of the Corresponding Source.

The Corresponding Source for a work in source code form is that same work.

2. Basic Permissions.

All rights granted under this License are granted for the term of copyright on the Program, and are irrevocable provided the stated conditions are met. This License explicitly affirms your unlimited permission to run the unmodified Program. The output from running a covered work is covered by this License only if the output, given its content, constitutes a covered work. This License acknowledges your rights of fair use or other equivalent, as provided by copyright law.

You may make, run and propagate covered works that you do not convey, without conditions so long as your license otherwise remains in force. You may convey covered works to others for the sole purpose of having them make modifications exclusively for you, or provide you with facilities for running those works, provided that you comply with the terms of this License in conveying all material for which you do not control copyright. Those thus making or running the covered works for you must do so exclusively on your behalf, under your direction and control, on terms that prohibit them from making any copies of your copyrighted material outside their relationship with you.

Conveying under any other circumstances is permitted solely under the conditions stated below. Sublicensing is not allowed; section 10 makes it unnecessary.

3. Protecting Users' Legal Rights From Anti-Circumvention Law.

No covered work shall be deemed part of an effective technological measure under any applicable law fulfilling obligations under article 11 of the WIPO copyright treaty adopted on 20 December 1996, or similar laws prohibiting or restricting circumvention of such measures.

When you convey a covered work, you waive any legal power to forbid circumvention of technological measures to the extent such circumvention is effected by exercising rights under this License with respect to the covered work, and you disclaim any intention to limit operation or modification of the work as a means of enforcing, against the work's users, your or third parties' legal rights to forbid circumvention of technological measures.

4. Conveying Verbatim Copies.

You may convey verbatim copies of the Program's source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice; keep intact all notices stating that this License and any non-permissive terms added in accord with section 7 apply to the code; keep intact all notices of the absence of any warranty; and give all recipients a copy of this License along with the Program.

You may charge any price or no price for each copy that you convey, and you may offer support or warranty protection for a fee.

5. Conveying Modified Source Versions.

You may convey a work based on the Program, or the modifications to produce it from the Program, in the form of source code under the terms of section 4, provided that you also meet all of these conditions:

- The work must carry prominent notices stating that you modified it, and giving a relevant date.
- The work must carry prominent notices stating that it is released under this License and any conditions added under section 7. This requirement modifies the requirement in section 4 to "keep intact all notices".
- You must license the entire work, as a whole, under this License to anyone who comes into possession of a copy. This License will therefore apply, along with any applicable section 7 additional terms, to the whole of the work, and all its parts, regardless of how they are packaged. This License gives no permission to license the work in any other way, but it does not invalidate such permission if you have separately received it.

- d) If the work has interactive user interfaces, each must display Appropriate Legal Notices; however, if the Program has interactive interfaces that do not display Appropriate Legal Notices, your work need not make them do so.

A compilation of a covered work with other separate and independent works, which are not by their nature extensions of the covered work, and which are not combined with it such as to form a larger program, in or on a volume of a storage or distribution medium, is called an "aggregate" if the compilation and its resulting copyright are not used to limit the access or legal rights of the compilation's users beyond what the individual works permit. Inclusion of a covered work in an aggregate does not cause this License to apply to the other parts of the aggregate.

6. Conveying Non-Source Forms.

You may convey a covered work in object code form under the terms of sections 4 and 5, provided that you also convey the machine-readable Corresponding Source under the terms of this License, in one of these ways:

- a) Convey the object code in, or embodied in, a physical product (including a physical distribution medium), accompanied by the Corresponding Source fixed on a durable physical medium customarily used for software interchange.
- b) Convey the object code in, or embodied in, a physical product (including a physical distribution medium), accompanied by a written offer, valid for at least three years and valid for as long as you offer spare parts or customer support for that product model, to give anyone who possesses the object code either (1) a copy of the Corresponding Source for all the software in the product that is covered by this License, on a durable physical medium customarily used for software interchange, for a price no more than your reasonable cost of physically performing this conveying of source, or (2) access to copy the Corresponding Source from a network server at no charge.
- c) Convey individual copies of the object code with a copy of the written offer to provide the Corresponding Source. This alternative is allowed only occasionally and noncommercially, and only if you received the object code with such an offer, in accord with subsection 6b.
- d) Convey the object code by offering access from a designated place (gratis or for a charge), and offer equivalent access to the Corresponding Source in the same way through the same place at no further charge. You need not require recipients to copy the Corresponding Source along with the object code. If the place to copy the object code is a network server, the Corresponding Source may be on a different server (operated by you or a third party) that supports equivalent copying facilities, provided you maintain clear directions next to the object code saying where to find the Corresponding Source. Regardless of what server hosts the Corresponding Source, you remain obligated to ensure that it is available for as long as needed to satisfy these requirements.
- e) Convey the object code using peer-to-peer transmission, provided you inform other peers where the object code and Corresponding Source of the work are being offered to the general public at no charge under subsection 6d.

A separable portion of the object code, whose source code is excluded from the Corresponding Source as a System Library, need not be included in conveying the object code work.

A "User Product" is either (1) a "consumer product", which means any tangible personal property which is normally used for personal, family, or household purposes, or (2) anything designed or sold for incorporation into a dwelling. In determining whether a product is a consumer product, doubtful cases shall be resolved in favor of coverage. For a particular product received by a particular user, "normally used" refers to a typical or common use of that class of product, regardless of the status of the particular user or of the way in which the particular user actually uses, or expects or is expected to use, the product. A product is a consumer product regardless of whether the product has substantial commercial, industrial or non-consumer uses, unless such uses represent the only significant mode of use of the product.

"Installation Information" for a User Product means any methods, procedures, authorization keys, or other information required to install and execute modified versions of a covered work in that User Product from a modified version of its Corresponding Source. The information must suffice to ensure that the continued functioning of the modified object code is in no case prevented or interfered with solely because modification has been made.

If you convey an object code work under this section in, or with, or specifically for use in, a User Product, and the conveying occurs as part of a transaction in which the right of possession and use of the User Product is transferred to the recipient in perpetuity or for a fixed term (regardless of how the transaction is characterized), the Corresponding Source conveyed under this section must be accompanied by the Installation Information. But this requirement does not apply if neither you nor any third party retains the ability to install modified object code on the User Product (for example, the work has been installed in ROM).

The requirement to provide Installation Information does not include a requirement to continue to provide support service, warranty, or updates for a work that has been modified or installed by the recipient, or for the User Product in which it has been modified or installed. Access to a network may be denied when the modification itself materially and adversely affects the operation of the network or violates the rules and protocols for communication across the network.

Corresponding Source conveyed, and Installation Information provided, in accord with this section must be in a format that is publicly documented (and with an implementation available to the public in source code form), and must require no special password or key for unpacking, reading or copying.

7. Additional Terms.

"Additional permissions" are terms that supplement the terms of this License by making exceptions from one or more of its conditions. Additional permissions that are applicable to the entire Program shall be treated as though they were included in this License, to the extent that they are valid under applicable law. If additional permissions apply only to part of the Program, that part may be used separately under those permissions, but the entire Program remains governed by this License without regard to the additional permissions.

When you convey a copy of a covered work, you may at your option remove any additional permissions from that copy, or from any part of it. (Additional permissions may be written to require their own removal in certain cases when you modify the work.) You may place additional permissions on material, added by you to a covered work, for which you have or can give appropriate copyright permission.

Notwithstanding any other provision of this License, for material you add to a covered work, you may (if authorized by the copyright holders of that material) supplement the terms of this License with terms:

- a) Disclaiming warranty or limiting liability differently from the terms of sections 15 and 16 of this License; or
- b) Requiring preservation of specified reasonable legal notices or author attributions in that material or in the Appropriate Legal Notices displayed by works containing it; or
- c) Prohibiting misrepresentation of the origin of that material, or requiring that modified versions of such material be marked in reasonable ways as different from the original version; or
- d) Limiting the use for publicity purposes of names of licensors or authors of the material; or
- e) Declining to grant rights under trademark law for use of some trade names, trademarks, or service marks; or
- f) Requiring indemnification of licensors and authors of that material by anyone who conveys the material (or modified versions of it) with contractual assumptions of liability to the recipient, for any liability that these contractual assumptions directly impose on those licensors and authors.

All other non-permissive additional terms are considered "further restrictions" within the meaning of section 10. If the Program as you received it, or any part of it, contains a notice stating that it is governed by this License along with a term that is a further restriction, you may remove that term. If a license document contains a further restriction but permits relicensing or conveying under this License, you may add to a covered work material governed by the terms of that license document, provided that the further restriction does not survive such relicensing or conveying.

If you add terms to a covered work in accord with this section, you must place, in the relevant source files, a statement of the additional terms that apply to those files, or a notice indicating where to find the applicable terms.

Additional terms, permissive or non-permissive, may be stated in the form of a separately written license, or stated as exceptions; the above requirements apply either way.

8. Termination.

You may not propagate or modify a covered work except as expressly provided under this License. Any attempt otherwise to propagate or modify it is void, and will automatically terminate your rights under this License (including any patent licenses granted under the third paragraph of section 11).

However, if you cease all violation of this License, then your license from a particular copyright holder is reinstated (a) provisionally, unless and until the copyright holder explicitly and finally terminates your license, and (b) permanently, if the copyright holder fails to notify you of the violation by some reasonable means prior to 60 days after the cessation.

Moreover, your license from a particular copyright holder is reinstated permanently if the copyright holder notifies you of the violation by some reasonable means, this is the first time you have received notice of violation of this License (for any work) from that copyright holder, and you cure the violation prior to 30 days after your receipt of the notice.

Termination of your rights under this section does not terminate the licenses of parties who have received copies or rights from you under this License. If your rights have been terminated and not permanently reinstated, you do not qualify to receive new licenses for the same material under section 10.

9. Acceptance Not Required for Having Copies.

You are not required to accept this License in order to receive or run a copy of the Program. Ancillary propagation of a covered work occurring solely as a consequence of using peer-to-peer transmission to receive a copy likewise does not require acceptance. However, nothing other than this License grants you permission to propagate or modify any covered work. These actions infringe copyright if you do not accept this License. Therefore, by modifying or propagating a covered work, you indicate your acceptance of this License to do so.

10. Automatic Licensing of Downstream Recipients.

Each time you convey a covered work, the recipient automatically receives a license from the original licensors, to run, modify and propagate that work, subject to this License. You are not responsible for enforcing compliance by third parties with this License.

An "entity transaction" is a transaction transferring control of an organization, or substantially all assets of one, or subdividing an organization, or merging organizations. If propagation of a covered work results from an entity transaction, each party to that transaction who receives a copy of the work also receives whatever licenses to the work the party's predecessor in interest had or could give under the previous paragraph, plus a right to possession of the Corresponding Source of the work from the predecessor in interest, if the predecessor has it or can get it with reasonable efforts.

You may not impose any further restrictions on the exercise of the rights granted or affirmed under this License. For example, you may not impose a license fee, royalty, or other charge for exercise of rights granted under this License, and you may not initiate litigation (including a cross-claim or counterclaim in a lawsuit) alleging that any patent claim is infringed by making, using, selling, offering for sale, or importing the Program or any portion of it.

11. Patents.

A "contributor" is a copyright holder who authorizes use under this License of the Program or a work on which the Program is based. The work thus licensed is called the contributor's "contributor version".

A contributor's "essential patent claims" are all patent claims owned or controlled by the contributor, whether already acquired or hereafter acquired, that would be infringed by some manner, permitted by this License, of making, using, or selling its contributor version, but do not include claims that would be infringed only as a consequence of further modification of the contributor version. For purposes of this definition, "control" includes the right to grant patent sublicenses in a manner consistent with the requirements of this License.

Each contributor grants you a non-exclusive, worldwide, royalty-free patent license under the contributor's essential patent claims, to make, use, sell, offer for sale, import and otherwise run, modify and propagate the contents of its contributor version.

In the following three paragraphs, a "patent license" is any express agreement or commitment, however denominated, not to enforce a patent (such as an express permission to practice a patent or covenant not to sue for patent infringement). To "grant" such a patent license to a party means to make such an agreement or commitment not to enforce a patent against the party.

If you convey a covered work, knowingly relying on a patent license, and the Corresponding Source of the work is not available for anyone to copy, free of charge and under the terms of this License, through a publicly available network server or other readily accessible means, then you must either (1) cause the Corresponding Source to be so available, or (2) arrange to deprive yourself of the benefit of the patent license for this particular work, or (3) arrange, in a manner consistent with the requirements of this License, to extend the patent license to downstream recipients. "Knowingly relying" means you have actual knowledge that, but for the patent license, your conveying the covered work in a country, or your recipient's use of the covered work in a country, would infringe one or more identifiable patents in that country that you have reason to believe are valid.

If, pursuant to or in connection with a single transaction or arrangement, you convey, or propagate by procuring conveyance of, a covered work, and grant a patent license to some of the parties receiving the covered work authorizing them to use, propagate, modify or convey a specific copy of the covered work, then the patent license you grant is automatically extended to all recipients of the covered work and works based on it.

A patent license is "discriminatory" if it does not include within the scope of its coverage, prohibits the exercise of, or is conditioned on the non-exercise of one or more of the rights that are specifically granted under this License. You may not convey a covered work if you are a party to an arrangement with a third party that is in the business of distributing software, under which you make payment to the third party based on the extent of your activity of conveying the work, and under which the third party grants, to any of the parties who would receive the covered work from you, a discriminatory patent license (a) in connection with copies of the covered work conveyed by you (or copies made from those copies), or (b) primarily for and in connection with specific products or compilations that contain the covered work, unless you entered into that arrangement, or that patent license was granted, prior to 28 March 2007.

Nothing in this License shall be construed as excluding or limiting any implied license or other defenses to infringement that may otherwise be available to you under applicable patent law.

12. No Surrender of Others' Freedom.

If conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If you cannot convey a covered work so as to satisfy simultaneously your obligations under this License and any other pertinent obligations, then as a consequence you may not convey it at all. For example, if you agree to terms that obligate you to collect a royalty for further conveying from those to whom you convey the Program, the only way you could satisfy both those terms and this License would be to refrain entirely from conveying the Program.

13. Use with the GNU Affero General Public License.

Notwithstanding any other provision of this License, you have permission to link or combine any covered work with a work licensed under version 3 of the GNU Affero General Public License into a single combined work, and to convey the resulting work. The terms of this License will continue to apply to the part which is the covered work, but the special requirements of the GNU Affero General Public License, section 13, concerning interaction through a network will apply to the combination as such.

14. Revised Versions of this License.

The Free Software Foundation may publish revised and/or new versions of the GNU General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns.

Each version is given a distinguishing version number. If the Program specifies that a certain numbered version of the GNU General Public License "or any later version" applies to it, you have the option of following the terms and conditions either of that numbered version or of any later version published by the Free Software Foundation. If the Program does not specify a version number of the GNU General Public License, you may choose any version ever published by the Free Software Foundation.

If the Program specifies that a proxy can decide which future versions of the GNU General Public License can be used, that proxy's public statement of acceptance of a version permanently authorizes you to choose that version for the Program.

Later license versions may give you additional or different permissions. However, no additional obligations are imposed on any author or copyright holder as a result of your choosing to follow a later version.

15. Disclaimer of Warranty.

THERE IS NO WARRANTY FOR THE PROGRAM, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE PROGRAM "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE PROGRAM IS WITH YOU. SHOULD THE PROGRAM PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.

16. Limitation of Liability.

IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MODIFIES AND/OR CONVEYS THE PROGRAM AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PROGRAM (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE PROGRAM TO OPERATE WITH ANY OTHER PROGRAMS), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

17. Interpretation of Sections 15 and 16.

If the disclaimer of warranty and limitation of liability provided above cannot be given local legal effect according to their terms, reviewing courts shall apply local law that most closely approximates an absolute waiver of all civil liability in connection with the Program, unless a warranty or assumption of liability accompanies a copy of the Program in return for a fee.

END OF TERMS AND CONDITIONS

GNU LESSER GENERAL PUBLIC LICENSE

Version 2.1, February 1999

Copyright (C) 1991, 1999 Free Software Foundation, Inc.

51 Franklin Street, Fifth Floor, Boston, MA 02110-1301 USA

Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.

[This is the first released version of the Lesser GPL.

It also counts as the successor of the GNU Library Public License, version 2, hence the version number 2.1.]

Preamble

The licenses for most software are designed to take away your freedom to share and change it. By contrast, the GNU General Public Licenses are intended to guarantee your freedom to share and change free software to make sure the software is free for all its users.

This license, the Lesser General Public License, applies to some specially designated software packages--typically libraries--of the Free Software Foundation and other authors who decide to use it. You can use it too, but we suggest you first think carefully about whether this license or the ordinary General Public License is the better strategy to use in any particular case, based on the explanations below.

When we speak of free software, we are referring to freedom of use, not price. Our General Public Licenses are designed to make sure that you have the freedom to distribute copies of free software (and charge for this service if you wish); that you receive source code or can get it if you want it; that you can change the software and use pieces of it in new free programs; and that you are informed that you can do these things.

To protect your rights, we need to make restrictions that forbid distributors to deny you these rights or to ask you to surrender these rights. These restrictions translate to certain responsibilities for you if you distribute copies of the library or if you modify it.

For example, if you distribute copies of the library, whether gratis or for a fee, you must give the recipients all the rights that we gave you. You must make sure that they, too, receive or can get the source code. If you link other code with the library, you must provide complete object files to the recipients, so that they can relink them with the library after making changes to the library and recompiling it. And you must show them these terms so they know their rights.

We protect your rights with a two-step method: (1) we copyright the library, and (2) we offer you this license, which gives you legal permission to copy, distribute and/or modify the library.

To protect each distributor, we want to make it very clear that there is no warranty for the free library. Also, if the library is modified by someone else and passed on, the recipients should know that what they have is not the original version, so that the original author's reputation will not be affected by problems that might be introduced by others.

Finally, software patents pose a constant threat to the existence of any free program. We wish to make sure that a company cannot effectively restrict the users of a free program by obtaining a restrictive license from a patent holder. Therefore, we insist that any patent license obtained for a version of the library must be consistent with the full freedom of use specified in this license.

Most GNU software, including some libraries, is covered by the ordinary GNU General Public License. This license, the GNU Lesser General Public License, applies to certain designated libraries, and is quite different from the ordinary General Public License. We use this license for certain libraries in order to permit linking those libraries into non-free programs.

When a program is linked with a library, whether statically or using a shared library, the combination of the two is legally speaking a combined work, a derivative of the original library. The ordinary General Public License therefore permits such linking only if the entire combination fits its criteria of freedom. The Lesser General Public License permits more lax criteria for linking other code with the library.

We call this license the “Lesser” General Public License because it does Less to protect the user’s freedom than the ordinary General Public License. It also provides other free software developers Less of an advantage over competing non-free programs. These disadvantages are the reason we use the ordinary General Public License for many libraries. However, the Lesser license provides advantages in certain special circumstances.

For example, on rare occasions, there may be a special need to encourage the widest possible use of a certain library, so that it becomes a de-facto standard. To achieve this, non-free programs must be allowed to use the library. A more frequent case is that a free library does the same job as widely used non-free libraries. In this case, there is little to gain by limiting the free library to free software only, so we use the Lesser General Public License.

In other cases, permission to use a particular library in non-free programs enables a greater number of people to use a large body of free software. For example, permission to use the GNU C Library in non-free programs enables many more people to use the whole GNU operating system, as well as its variant, the GNU/Linux operating system.

Although the Lesser General Public License is Less protective of the users’ freedom, it does ensure that the user of a program that is linked with the Library has the freedom and the wherewithal to run that program using a modified version of the Library.

The precise terms and conditions for copying, distribution and modification follow. Pay close attention to the difference between a “work based on the library” and a “work that uses the library”. The former contains code derived from the library, whereas the latter must be combined with the library in order to run.

TERMS AND CONDITIONS FOR COPYING, DISTRIBUTION AND MODIFICATION

0. This License Agreement applies to any software library or other program which contains a notice placed by the copyright holder or other authorized party saying it may be distributed under the terms of this Lesser General Public License (also called “this License”). Each licensee is addressed as “you”.

A “library” means a collection of software functions and/or data prepared so as to be conveniently linked with application programs (which use some of those functions and data) to form executables.

The “Library”, below, refers to any such software library or work which has been distributed under these terms. A “work based on the Library” means either the Library or any derivative work under copyright law: that is to say, a work containing the Library or a portion of it, either verbatim or with modifications and/or translated straightforwardly into another language. (Hereinafter, translation is included without limitation in the term “modification”.)

“Source code” for a work means the preferred form of the work for making modifications to it. For a library, complete source code means all the source code for all modules it contains, plus any associated interface definition files, plus the scripts used to control compilation and installation of the library.

Activities other than copying, distribution and modification are not covered by this License; they are outside its scope. The act of running a program using the Library is not restricted, and output from such a program is covered only if its contents constitute a work based on the Library (independent of the use of the Library in a tool for writing it). Whether that is true depends on what the Library does and what the program that uses the Library does.

1. You may copy and distribute verbatim copies of the Library’s complete source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice and disclaimer of warranty; keep intact all the notices that refer to this License and to the absence of any warranty; and distribute a copy of this License along with the Library.

You may charge a fee for the physical act of transferring a copy, and you may at your option offer warranty protection in exchange for a fee.

2. You may modify your copy or copies of the Library or any portion of it, thus forming a work based on the Library, and copy and distribute such modifications or work under the terms of Section 1 above, provided that you also meet all of these conditions:

- a) The modified work must itself be a software library.
- b) You must cause the files modified to carry prominent notices stating that you changed the files and the date of any change.
- c) You must cause the whole of the work to be licensed at no charge to all third parties under the terms of this License.
- d) If a facility in the modified Library refers to a function or a table of data to be supplied by an application program that uses the facility, other than as an argument passed when the facility is invoked, then you must make a good faith effort to ensure that, in the event an application does not supply such function or table, the facility still operates, and performs whatever part of its purpose remains meaningful.

(For example, a function in a library to compute square roots has a purpose that is entirely well-defined independent of the application. Therefore, Subsection 2d requires that any application-supplied function or table used by this function must be optional: if the application does not supply it, the square root function must still compute square roots.)

These requirements apply to the modified work as a whole. If identifiable sections of that work are not derived from the Library, and can be reasonably considered independent and separate works in themselves, then this License, and its terms, do not apply to those sections when you distribute them as separate works. But when you distribute the same sections as part of a whole which is a work based on the Library, the distribution of the whole must be on the terms of this License, whose permissions for other licensees extend to the entire whole, and thus to each and every part regardless of who wrote it.

Thus, it is not the intent of this section to claim rights or contest your rights to work written entirely by you; rather, the intent is to exercise the right to control the distribution of derivative or collective works based on the Library.

In addition, mere aggregation of another work not based on the Library with the Library (or with a work based on the Library) on a volume of a storage or distribution medium does not bring the other work under the scope of this License.

3. You may opt to apply the terms of the ordinary GNU General Public License instead of this License to a given copy of the Library. To do this, you must alter all the notices that refer to this License, so that they refer to the ordinary GNU General Public License, version 2, instead of to this License. (If a newer version than version 2 of the ordinary GNU General Public License has appeared, then you can specify that version instead if you wish.) Do not make any other change in these notices.

Once this change is made in a given copy, it is irreversible for that copy, so the ordinary GNU General Public License applies to all subsequent copies and derivative works made from that copy.

This option is useful when you wish to copy part of the code of the Library into a program that is not a library.

4. You may copy and distribute the Library (or a portion or derivative of it, under Section 2) in object code or executable form under the terms of Sections 1 and 2 above provided that you accompany it with the complete corresponding machine-readable source code, which must be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange.

If distribution of object code is made by offering access to copy from a designated place, then offering equivalent access to copy the source code from the same place satisfies the requirement to distribute the source code, even though third parties are not compelled to copy the source along with the object code.

5. A program that contains no derivative of any portion of the Library, but is designed to work with the Library by being compiled or linked with it, is called a “work that uses the Library”. Such a work, in isolation, is not a derivative work of the Library, and therefore falls outside the scope of this License.

However, linking a “work that uses the Library” with the Library creates an executable that is a derivative of the Library (because it contains portions of the Library), rather than a “work that uses the library”. The executable is therefore covered by this License. Section 6 states terms for distribution of such executables.

When a “work that uses the Library” uses material from a header file that is part of the Library, the object code for the work may be a derivative work of the Library even though the source code is not. Whether this is true is especially significant if the work can be linked without the Library, or if the work is itself a library. The threshold for this to be true is not precisely defined by law.

If such an object file uses only numerical parameters, data structure layouts and accessors, and small macros and small inline functions (ten lines or less in length), then the use of the object file is unrestricted, regardless of whether it is legally a derivative work. (Executables containing this object code plus portions of the Library will still fall under Section 6.)

Otherwise, if the work is a derivative of the Library, you may distribute the object code for the work under the terms of Section 6. Any executables containing that work also fall under Section 6, whether or not they are linked directly with the Library itself.

6. As an exception to the Sections above, you may also combine or link a "work that uses the Library" with the Library to produce a work containing portions of the Library, and distribute that work under terms of your choice, provided that the terms permit modification of the work for the customer's own use and reverse engineering for debugging such modifications.

You must give prominent notice with each copy of the work that the Library is used in it and that the Library and its use are covered by this License. You must supply a copy of this License. If the work during execution displays copyright notices, you must include the copyright notice for the Library among them, as well as a reference directing the user to the copy of this License. Also, you must do one of these things:

- a) Accompany the work with the complete corresponding machine-readable source code for the Library including whatever changes were used in the work (which must be distributed under Sections 1 and 2 above); and, if the work is an executable linked with the Library, with the complete machine readable "work that uses the Library", as object code and/or source code, so that the user can modify the Library and then relink to produce a modified executable containing the modified Library. (It is understood that the user who changes the contents of definitions files in the Library will not necessarily be able to recompile the application to use the modified definitions.)
- b) Use a suitable shared library mechanism for linking with the Library. A suitable mechanism is one that (1) uses at run time a copy of the library already present on the user's computer system, rather than copying library functions into the executable, and (2) will operate properly with a modified version of the library, if the user installs one, as long as the modified version is interface-compatible with the version that the work was made with.
- c) Accompany the work with a written offer, valid for at least three years, to give the same user the materials specified in Subsection 6a, above, for a charge no more than the cost of performing this distribution.
- d) If distribution of the work is made by offering access to copy from a designated place, offer equivalent access to copy the above specified materials from the same place.
- e) Verify that the user has already received a copy of these materials or that you have already sent this user a copy.

For an executable, the required form of the "work that uses the Library" must include any data and utility programs needed for reproducing the executable from it. However, as a special exception, the materials to be distributed need not include anything that is normally distributed (in either source or binary form) with the major components (compiler, kernel, and so on) of the operating system on which the executable runs, unless that component itself accompanies the executable.

It may happen that this requirement contradicts the license restrictions of other proprietary libraries that do not normally accompany the operating system. Such a contradiction means you cannot use both them and the Library together in an executable that you distribute.

7. You may place library facilities that are a work based on the Library side-by-side in a single library together with other library facilities not covered by this License, and distribute such a combined library, provided that the separate distribution of the work based on the Library and of the other library facilities is otherwise permitted, and provided that you do these two things:

- a) Accompany the combined library with a copy of the same work based on the Library, uncombined with any other library facilities. This must be distributed under the terms of the Sections above.
- b) Give prominent notice with the combined library of the fact that part of it is a work based on the Library, and explaining where to find the accompanying uncombined form of the same work.

8. You may not copy, modify, sublicense, link with, or distribute the Library except as expressly provided under this License. Any attempt otherwise to copy, modify, sublicense, link with, or distribute the Library is void, and will automatically terminate your rights under this License. However, parties who have received copies, or rights, from you under this License will not have their licenses terminated so long as such parties remain in full compliance.

9. You are not required to accept this License, since you have not signed it. However, nothing else grants you permission to modify or distribute the Library or its derivative works. These actions are prohibited by law if you do not accept this License. Therefore, by modifying or distributing the Library (or any work based on the Library), you indicate your acceptance of this License to do so, and all its terms and conditions for copying, distributing or modifying the Library or works based on it.

10. Each time you redistribute the Library (or any work based on the Library), the recipient automatically receives a license from the original licensor to copy, distribute, link with or modify the Library subject to these terms and conditions. You may not impose any further restrictions on the recipients' exercise of the rights granted herein. You are not responsible for enforcing compliance by third parties with this License.

11. If, as a consequence of a court judgment or allegation of patent infringement or for any other reason (not limited to patent issues), conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If you cannot distribute so as to satisfy simultaneously your obligations under this License and any other pertinent obligations, then as a consequence you may not distribute the Library at all. For example, if a patent license would not permit royalty free redistribution of the Library by all those who receive copies directly or indirectly through you, then the only way you could satisfy both it and this License would be to refrain entirely from distribution of the Library.

If any portion of this section is held invalid or unenforceable under any particular circumstance, the balance of the section is intended to apply, and the section as a whole is intended to apply in other circumstances.

It is not the purpose of this section to induce you to infringe any patents or other property right claims or to contest validity of any such claims; this section has the sole purpose of protecting the integrity of the free software distribution system which is implemented by public license practices. Many people have made generous contributions to the wide range of software distributed through that system in reliance on consistent application of that system; it is up to the author/donor to decide if he or she is willing to distribute software through any other system and a licensee cannot impose that choice.

This section is intended to make thoroughly clear what is believed to be a consequence of the rest of this License.

12. If the distribution and/or use of the Library is restricted in certain countries either by patents or by copyrighted interfaces, the original copyright holder who places the Library under this License may add an explicit geographical distribution limitation excluding those countries, so that distribution is permitted only in or among countries not thus excluded. In such case, this License incorporates the limitation as if written in the body of this License.

13. The Free Software Foundation may publish revised and/or new versions of the Lesser General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns.

Each version is given a distinguishing version number. If the Library specifies a version number of this License which applies to it and "any later version", you have the option of following the terms and conditions either of that version or of any later version published by the Free Software Foundation. If the Library does not specify a license version number, you may choose any version ever published by the Free Software Foundation.

14. If you wish to incorporate parts of the Library into other free programs whose distribution conditions are incompatible with these, write to the author to ask for permission. For software which is copyrighted by the Free Software Foundation, write to the Free Software Foundation; we sometimes make exceptions for this. Our decision will be guided by the two goals of preserving the free status of all derivatives of our free software and of promoting the sharing and reuse of software generally.

NO WARRANTY

15. BECAUSE THE LIBRARY IS LICENSED FREE OF CHARGE, THERE IS NO WARRANTY FOR THE LIBRARY, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE LIBRARY "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE LIBRARY IS WITH YOU. SHOULD THE LIBRARY PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.

16. IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MAY MODIFY AND/OR REDISTRIBUTE THE LIBRARY AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE LIBRARY (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE LIBRARY TO OPERATE WITH ANY OTHER SOFTWARE), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

END OF TERMS AND CONDITIONS

How to Apply These Terms to Your New Libraries

If you develop a new library, and you want it to be of the greatest possible use to the public, we recommend making it free software that everyone can redistribute and change. You can do so by permitting redistribution under these terms (or, alternatively, under the terms of the ordinary General Public License).

To apply these terms, attach the following notices to the library. It is safest to attach them to the start of each source file to most effectively convey the exclusion of warranty; and each file should have at least the "copyright" line and a pointer to where the full notice is found. one line to give the library's name and an idea of what it does.

Copyright (C) year name of author

This library is free software; you can redistribute it and/or modify it under the terms of the GNU Lesser General Public License as published by the Free Software Foundation; either version 2.1 of the License, or (at your option) any later version.

This library is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU Lesser General Public License for more details.

You should have received a copy of the GNU Lesser General Public License along with this library; if not, write to the Free Software Foundation, Inc., 51 Franklin Street, Fifth Floor, Boston, MA 02110-1301 USA Also add information on how to contact you by electronic and paper mail.

You should also get your employer (if you work as a programmer) or your school, if any, to sign a "copyright disclaimer" for the library, if necessary. Here is a sample; alter the names:

Yoyodyne, Inc., hereby disclaims all copyright interest in the library 'Frob' (a library for tweaking knobs) written by James Random Hacker.

signature of Ty Coon, 1 April 1990 Ty Coon, President of Vice.

OpenSSL LICENSE

Copyright (c) 1998-2006 The OpenSSL Project. All rights reserved. Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. All advertising materials mentioning features or use of this software must display the following acknowledgment: "This product includes software developed by the OpenSSL Project for use in the OpenSSL Toolkit. (<http://www.openssl.org/>)"
4. The names "OpenSSL Toolkit" and "OpenSSL Project" must not be used to endorse or promote products derived from this software without prior written permission. For written permission, please contact openssl-core@openssl.org.
5. Products derived from this software may not be called "OpenSSL." nor may "OpenSSL" appear in their names without prior written permission of the OpenSSL Project.
6. Redistributions of any form whatsoever must retain the following acknowledgment: "This product includes software developed by the OpenSSL Project for use in the OpenSSL Toolkit (<http://www.openssl.org/>)"

THIS SOFTWARE IS PROVIDED BY THE OpenSSL PROJECT "AS IS" AND ANY EXPRESSED OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE OpenSSL PROJECT OR ITS CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE. This product includes cryptographic software written by Eric Young (ey@cryptsoft.com). This product includes software written by Tim Hudson (tjh@cryptsoft.com).

Original SSLeay License

Copyright (C) 1995-1998 Eric Young (ey@cryptsoft.com) All rights reserved. This package is an SSL implementation written by Eric Young (ey@cryptsoft.com). The implementation was written so as to conform with Netscapes SSL. This library is free for commercial and non-commercial use as long as the following conditions are adhered to. The following conditions apply to all code found in this distribution, be it the RC4, RSA, lhash, DES, etc., code; not just the SSL code. The SSL documentation included with this distribution is covered by the same copyright terms except that the holder is Tim Hudson (tjh@cryptsoft.com).

Copyright remains Eric Young's, and as such any Copyright notices in the code are not to be removed.

If this package is used in a product, Eric Young should be given attribution as the author of the parts of the library used. This can be in the form of a textual message at program startup or in documentation (online or textual) provided with the package. Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. All advertising materials mentioning features or use of this software must display the following acknowledgement: "This product includes cryptographic software written by Eric Young (ey@cryptsoft.com)" The word 'cryptographic' can be left out if the routines from the library being used are not cryptographic related :-).

4. If you include any Windows specific code (or a derivative thereof) from the apps directory (application code) you must include an acknowledgement: "This product includes software written by Tim Hudson (tjh@cryptsoft.com)"

THIS SOFTWARE IS PROVIDED BY ERIC YOUNG "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE. The licence and distribution terms for any publically available version or derivative of this code cannot be changed. i.e. this code cannot simply be copied and put under another distribution licence [including the GNU Public Licence].

Copyright (c) 2004, Kneschke, incremental

All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met :

- Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- Neither the name of the 'incremental' nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED.

IN NO EVENT SHALL THE COPYRIGHT OWNER OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Copyright (c) 2005-2009, Thomas BERNARD

All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- * Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- * Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- * The name of the author may not be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED.

IN NO EVENT SHALL THE COPYRIGHT OWNER OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Zlib/libpng License

This product uses software program which is distributed under the zlib license.

TinyXML License Agreement

copyright (c) 2000-2006 Lee Thomason (www.grinninglizard.com)

This software is provided 'as-is', without any express or implied warranty. In no event will the authors be held liable for any damages arising from the use of this software.

Permission is granted to anyone to use this software for any purpose, including commercial applications, and to alter it and redistribute it freely, subject to the following restrictions:

1. The origin of this software must not be misrepresented; you must not claim that you wrote the original software. If you use this software in a product, an acknowledgment in the product documentation would be appreciated but is not required.
2. Altered source versions must be plainly marked as such, and must not be misrepresented as being the original software.
3. This notice may not be removed or altered from any source distribution.

MIT License

COPYRIGHT AND PERMISSION NOTICE

Copyright (c) 1996 - 2010, Daniel Stenberg, <daniel@haxx.se>.

All rights reserved.

Permission to use, copy, modify, and distribute this software for any purpose with or without fee is hereby granted, provided that the above copyright notice and this permission notice appear in all copies.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT OF THIRD PARTY RIGHTS. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

Except as contained in this notice, the name of a copyright holder shall not be used in advertising or otherwise to promote the sale, use or other dealings in this Software without prior written authorization of the copyright holder.

Boost Software License

Boost Software License - Version 1.0 - August 17th, 2003

Permission is hereby granted, free of charge, to any person or organization obtaining a copy of the software and accompanying documentation covered by this license (the "Software") to use, reproduce, display, distribute, execute, and transmit the Software, and to prepare derivative works of the Software, and to permit third-parties to whom the Software is furnished to do so, all subject to the following:

The copyright notices in the Software and this entire statement, including the above license grant, this restriction and the following disclaimer, must be included in all copies of the Software, in whole or in part, and all derivative works of the Software, unless such copies or derivative works are solely in the form of machine-executable object code generated by a source language processor.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, TITLE AND NON-INFRINGEMENT. IN NO EVENT SHALL THE COPYRIGHT HOLDERS OR ANYONE DISTRIBUTING THE SOFTWARE BE LIABLE FOR ANY DAMAGES OR OTHER LIABILITY, WHETHER IN CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

The PHP Group can be contacted via Email at group@php.net.

For more information on the PHP Group and the PHP project, please see [<http://www.php.net>](http://www.php.net).

PHP includes the Zend Engine, freely available at [<http://www.zend.com>](http://www.zend.com).

PHP License

The PHP License, version 3.01

Copyright (c) 1999 - 2012 The PHP Group. All rights reserved.

Redistribution and use in source and binary forms, with or without modification, is permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. The name "PHP" must not be used to endorse or promote products derived from this software without prior written permission. For written permission, please contact group@php.net.
4. Products derived from this software may not be called "PHP", nor may "PHP" appear in their name, without prior written permission from group@php.net. You may indicate that your software works in conjunction with PHP by saying "Foo for PHP" instead of calling it "PHP Foo" or "phpfoo"
5. The PHP Group may publish revised and/or new versions of the license from time to time. Each version will be given a distinguishing version number.
Once covered code has been published under a particular version of the license, you may always continue to use it under the terms of that version. You may also choose to use such covered code under the terms of any subsequent version of the license published by the PHP Group. No one other than the PHP Group has the right to modify the terms applicable to covered code created under this License.
6. Redistributions of any form whatsoever must retain the following acknowledgment:
"This product includes PHP software, freely available from [<http://www.php.net/software/>](http://www.php.net/software/)".

THIS SOFTWARE IS PROVIDED BY THE PHP DEVELOPMENT TEAM "AS IS" AND ANY EXPRESSED OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE PHP DEVELOPMENT TEAM OR ITS CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

This software consists of voluntary contributions made by many individuals on behalf of the PHP Group.

서비스 요청하시기 전에 꼭 알아 두세요

다음과 같은 사항에 대하여 서비스 요청 시 유상서비스로 처리될 수 있습니다.

[1] 고객 주의사항

- 보안 시스템 및 제품의 이상 유무를 정기적으로(매일) 점검하여 사용하시기 바랍니다.
- 본 제품은 감시 보조장비로 도난(재산피해), 화재, 천재지변 등으로 인해 발생한 물적/인적 피해에 대해서는 제조사에서 책임지지 않습니다.
- A/S는 당사 해당 제품(단품)에 대해서만 가능합니다.
설치문제로 인한 불량은 설치 전문 업체 및 유지 보수업체를 통해 처리하셔야 합니다.
- 제품 사용 설명서에 포함되지 않는 기능이나, 타사 소매판물 등에서 잘못 기재된 기능은 당사에서 책임을 질 수 없습니다.
- 서비스 요청 시 제품에 저장된 중요한 데이터는 서비스를 받는 동안 손실될 수 있으므로, 반드시 백업을 받아 두시기 바랍니다. 수리과정에서 손실될 경우 당사에서 책임을 질 수 없습니다.

[2] 제품 사용설명서로 서비스 요청한 경우

- 사용환경에 따른 신호 점검, 전원 점검, 네트워크 환경 문제 등의 서비스 요청 시
- 제품과 관련된 타기기의 설치, 설명 요청 시

[3] 단순 분해조립, 간단조정, S/W 업그레이드 등으로 서비스 요청한 경우

- 제품 안에 이물이 투입되어 문제가 발생하여 서비스를 요청시
- 제품 간단조정이나 분해하지 않고 처리하는 경우
- 제품고장 요인이 아닌 S/W 업그레이드 요청 시

[4] 그 밖의 경우

- 제품에서 사용되는 소모품(기록매체 등)의 관리 소홀로 인한 고장이나 사용설명 서비스 요청 시
(소모품 문제에 대한 사용설명 및 서비스 요청은 해당업체에 문의하여 주십시오)
- 품질이 좋지 않은 기록매체 사용에 따른 고장이나 사용설명 서비스 요청 시
- 제품이 비정상적인 환경에서 사용하거나 설치되어 문제가 발생한 경우

상기와 같은 유형의 서비스를 받으실 경우에는 소정의 수수료가 부과될 수 있으므로,
서비스 신청전 전문상담원 (☎1588-5772)을 통하여 보다 양질의 서비스를 받으시길 권장 드립니다.

품 질 보 증 서

제 품 명	삼성 네트워크 비디오 레코더	보 증 기 간
모 델 명	SRN-1000	구 입 후 3 년
구 입 일 자	년 월 일	
보 증 기 간	년 월 일 까지	

고객주소	성 명	
	연락처	
판매점주소(상호)	성 명	
	연락처	

- ※ 제품 판매시 공란의 내용을 필히 기입하여 주십시오.
- ※ 단, 소모품 중 HDD와 어댑터의 보증 기간은 2년입니다.

◀ 서비스를 받으실 때 ▶

사용설명서를 한번 더 읽어주십시오.
고장이라 생각되면 서비스를 요청하기 전에 반드시 사용설명서를 한번 더 읽어 주십시오.
사용미숙 등으로 인한 고장현상이 있으므로 사용설명서의 취급법과 주의사항 등을 보시면
고객여러분의 손으로도 간단히 해결되는 경우가 있습니다.

서비스를 요청하시는 방법은?
요청하실 때는 고장상태를 정확히 알려 주십시오.
이때 보증서를 함께 제시하시면 보증서에 기재된 내용에 따라 유상, 무상수리의 구분이 됩니다.

한화테크윈(주) Security Solution 사업본부

서울특별시 중구 청계천로 86 한화빌딩 13층 한화테크윈(주) Security Solution 사업본부
영 업 TEL: 02-729-5406~5411/ FAX: 02-729-5880 A/S TEL: 1588-5772
대구영업소 TEL: 053-742-3098
부산영업소 TEL: 051-640-8233

- 아래 사항에 따른 고장은 유상 처리됩니다.
- 1) 사용자 취급 부주의에 의한 고장
 - 2) 정격전원외의 전원 연결시
 - 3) 사용자 임의로 분해, 수리한 경우
 - 4) 자연재해에 의한 고장 (화재, 홍수, 해일 등)
 - 5) 소모품 교체시

한 화 테 크 윈 주 식 회 사



한화테크윈(주) Security Solution 사업본부

서울특별시 중구 청계천로 86 한화빌딩 13층 한화테크윈(주) Security Solution 사업본부

영 업 TEL : 02-729-5406~5411/ FAX : 02-729-5880 A/S TEL : 1588-5772

대구영업소 TEL: 053-742-3098

부산영업소 TEL : 051-640-8233

<http://www.hanwhatechwin.co.kr>

<http://cctv.hanwhatechwin.co.kr>

<http://ipolis.hanwhatechwin.co.kr>