


PVM Bracket

SBM-1032CMB




Package

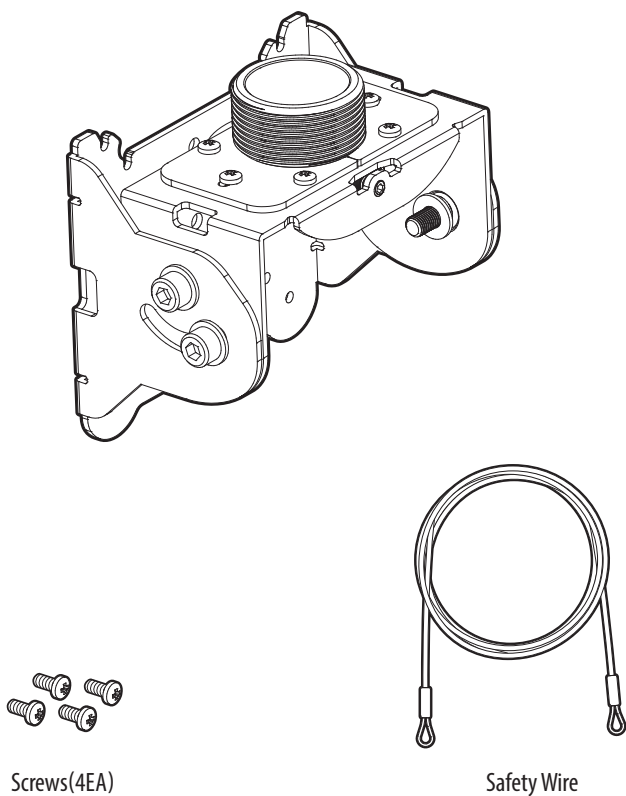


Installation Precautions

- Make sure that the installation place can endure at least 4 times of the total weight of the PVM, Bracket and Ceiling Mount.
- Be sure to secure the Safety Wire to avoid a product fall.
- This Bracket can be also connected to 1 1/2" PF screw-thread pipe as well as to the Ceiling Mount.


Installation

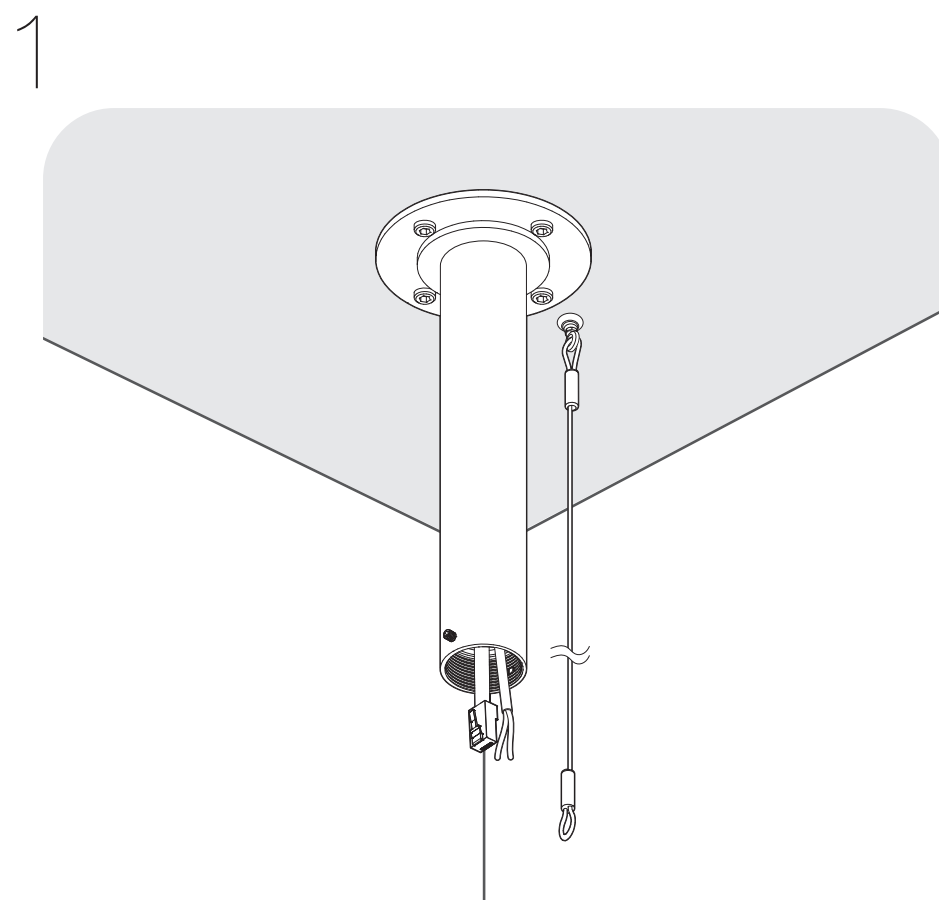


2

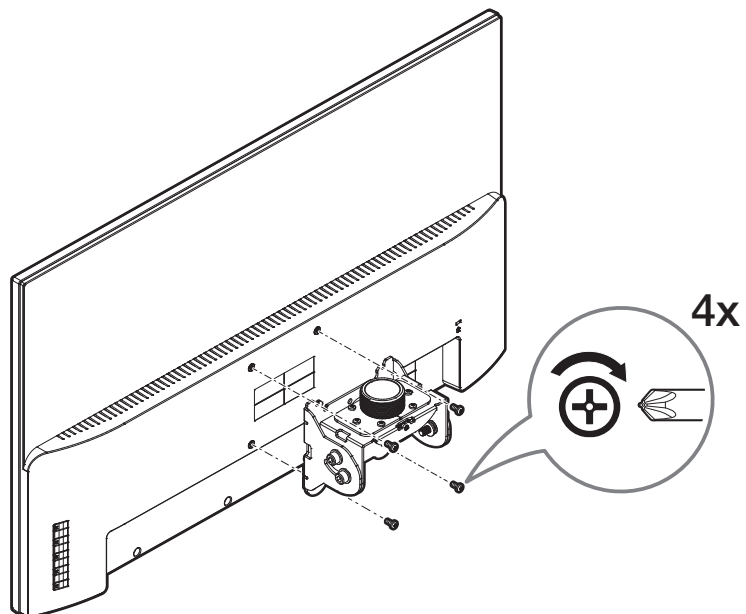


5

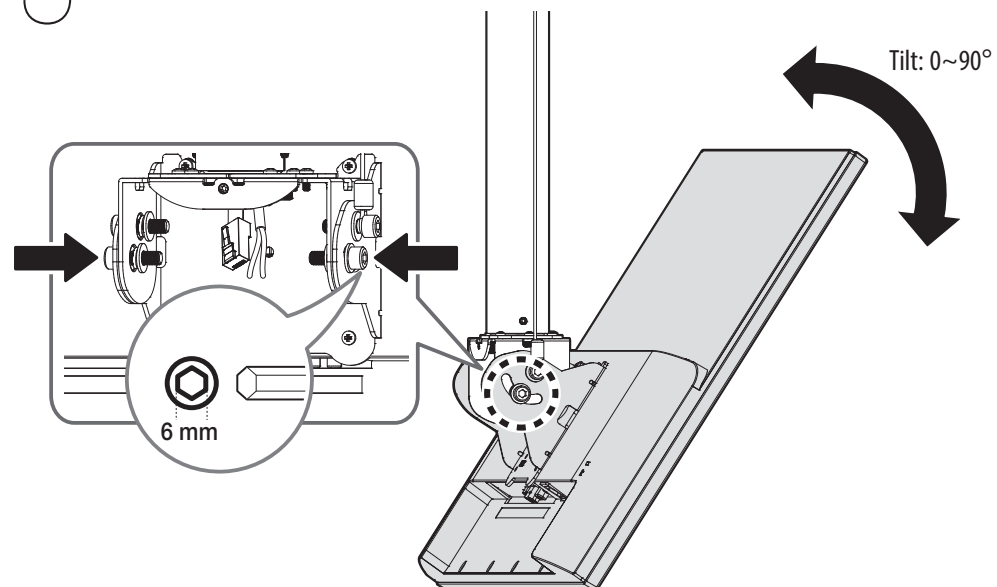


3

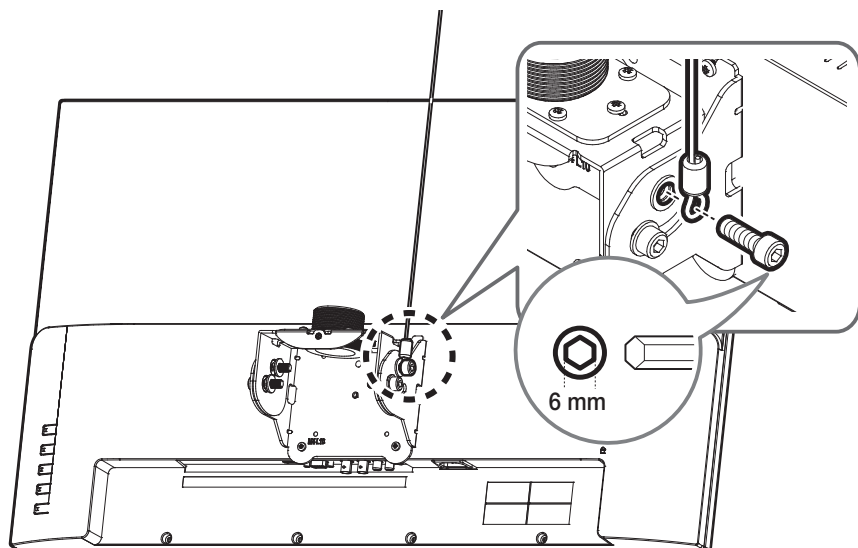

6

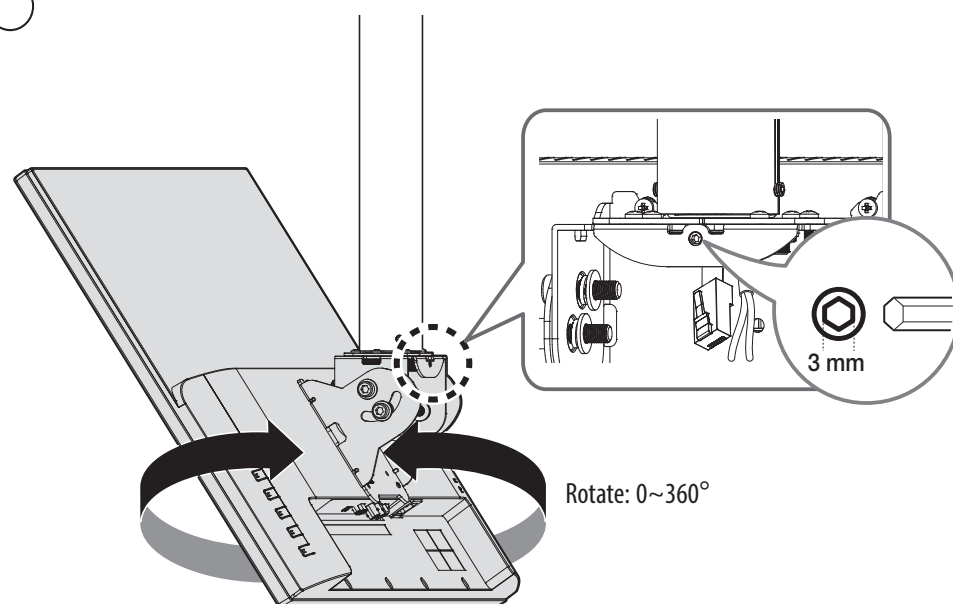

4

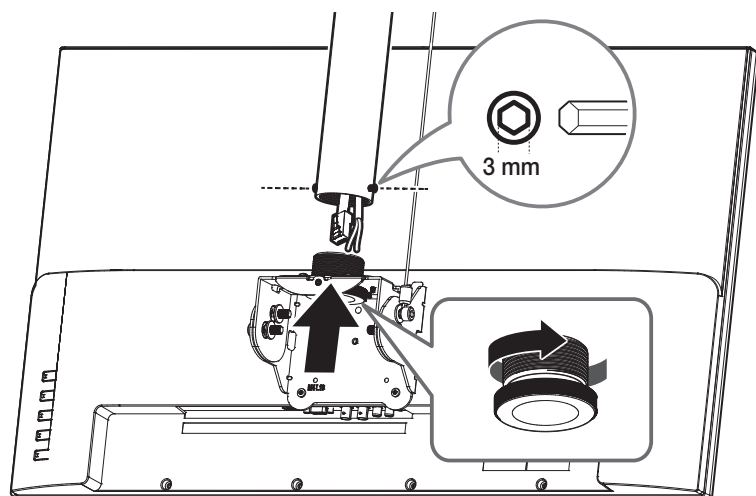

7

