

SAMSUNG




Thermal Night Vision Camera SCB-9050/9051

User Guide

Before installing and operating this product,
please read this manual thoroughly.

ENGLISH

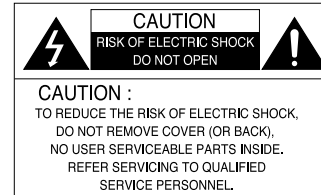

The lightning flash with an arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

This equipment has been tested and found to comply with limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications.

Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

WARNING - Changes or modifications not expressly approved by the manufacturer could void the user’s authority to operate the equipment.


WARNING - To prevent electric shock and risk of fire hazards:

- ◆ Do NOT use power sources other than that specified.
- ◆ Do NOT expose this appliance to rain or moisture.

This installation should be made by a qualified service person and should conform to all local codes.

• Features	5
• Warnings & Cautions	6
• Warnings	7
• Cautions	8
• Overview	9
• External Part Names	10
■ Names of external camera parts	10
■ Names of internal camera parts	10
■ Assembly/Adjustment Methods	11
• Installing the Camera	12
■ Inputting Power	12
■ Startup	12
■ Calibration (NUC)	13
■ Monitor/Communications Connection	13
■ Monitoring Guidelines	14
■ Storage	15
• Interface	15
• Operating the Camera	18
■ Function Menu Configuration	18
■ Main Menu	19
■ Function Settings Methods	20
· BRIGHTNESS	21
· CONTRAST	21
· RANGE	22
· NUC (Calibration)	22
· NUC MODE (Calibration Mode)	23
· IMAGE ADJ	24
· SPECIAL (Environment Settings Mode)	25
· SAVE	27
· EXIT (Close Menu)	28
• Specifications	29
• Troubleshooting	30
• Dimension	31

The SCB-9050/9051 Thermal Night Vision Camera is a contactless monitoring device capable of measuring the surface temperatures of all target areas, and displaying the resulting data via temperature distribution images (thermal images). Because the SCB-9050/9051 is equipped with a two-dimensional uncooled thermal sensor (microbolometer) incorporating the latest technology, neither sensor cooling nor sensor maintenance are required. In addition, its sensor boasts long wavelength sensitivity (detecting infrared radiation with wavelengths between 8-14 μm from targets and background), allowing it to produce high resolution thermal images with minimal impact from sunlight, even during outdoor daytime monitoring in clear weather.

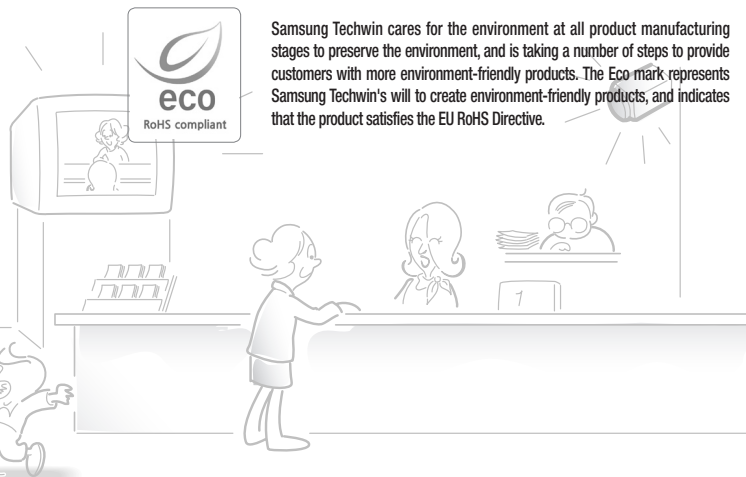

Samsung Techwin cares for the environment at all product manufacturing stages to preserve the environment, and is taking a number of steps to provide customers with more environment-friendly products. The Eco mark represents Samsung Techwin's will to create environment-friendly products, and indicates that the product satisfies the EU RoHS Directive.

Warnings & Cautions

The following points are presented in order to promote customer safety and prevent property damage. After reading this information, be sure to use the product in the correct manner.

- * Please direct any product inquiries towards the merchandiser from which the device was purchased. Be aware that if service is carried out, customers are responsible for any costs pertaining to the use of expensive ladders or other equipment.
- * Ensure that the power plug is disconnected around times in which electrical storms are experienced. (This prevents fire and product failure)
- * This product is an auxiliary device that is used as part of a monitoring system. Samsung Techwin will not be held liable in cases when personal or property damage is caused due to theft, fire, or other unavoidable occurrences.

Explanation of Warnings/Cautions/Displays

	There is a risk of death or serious injury if the designated instructions are not adhered to.
	The action is forbidden.
	Disassembly is forbidden.
	There is a risk of personal injury or property damage if the designated instructions are not adhered to.



Correct Disposal of This Product (Waste Electrical & Electronic Equipment)

(Applicable in the European Union and other European countries with separate collection systems)


This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.


Warnings

Refrain from installing the product yourself.

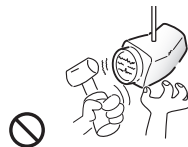


Both technical expertise and experience are required in order to install the product. A fire or electric shock could result if a customer installs the product by themselves. Contact your sales agent for all matters pertaining to installation.

Always install a lightning rod when setting the product up independently outdoors.

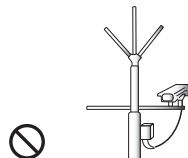

Failure to obey this warning could result in product failure, electric shock, or fire.

Do not touch the power plug with wet hands.

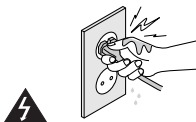

Failure to obey this warning could result in an electric shock.

Stop using the product if smoke is emitted from the camera or an abnormal amount of heat is produced.



Failure to obey this warning could result in a fire.

Do not install the product in an insecure mounting location.



Failure to obey this warning could result in the product falling off.

Do not disassemble the product or insert foreign objects.



Failure to obey this warning could result in a product failure or fire.

Cautions

Do not install the product in very hot or very cold locations.



Using the product in an area with very hot (55°C or higher) or cold (-30°C or lower) temperatures could result in product failure, or a reduction in image quality. Ensure proper ventilation when installing the product in particularly hot locations.

Do not drop the product, or subject it to strong impacts or vibrations.



Failure to obey this caution could result in product failure.

Position the camera so that it is not facing towards the sun or any other bright light source.




Failure to obey this caution could result in the microbolometer being damaged beyond repair.

Do not touch the camera lens with your hands or fingers.



The lens is the most important part of the camera. Ensure the lens is kept free of fingerprints, etc.


Overview

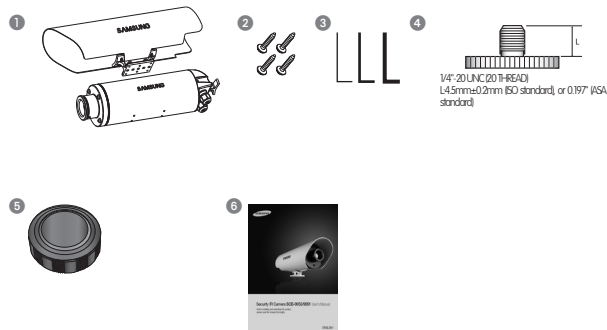

- 1 SCB-9050/9051, camera sun shield
- 2 Screws for fastening camera (4×M3XL12)
- 3 L-type hexagon wrenches (3: 1.5 mm/2.5 mm/3.0 mm)
- 4 Bolts for fastening camera (2)
- 5 Lens cap
- 6 User Guide

External Part Names

Names of external camera parts

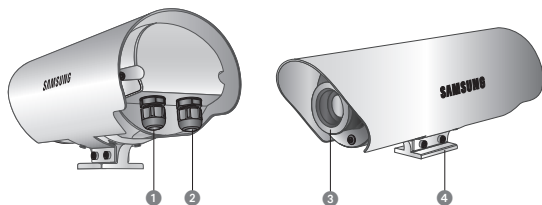


- ① Video signal/communications (RS485) cable
- ② Power cable (AC 24 V, 50/60 Hz)
- ③ Lens (SCB-9050 : 14mm, SCB-9051 : 50mm)
- ④ Support platform for fastening camera

Names of internal camera parts



Front

Rear

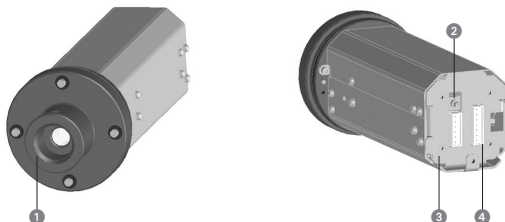

- ① Lens (SCB-9050 : 14mm, SCB-9051 : 50mm)
- ② Key SW
- ③ Key SW terminal block
- ④ IF terminal block

Assembly/Adjustment Methods

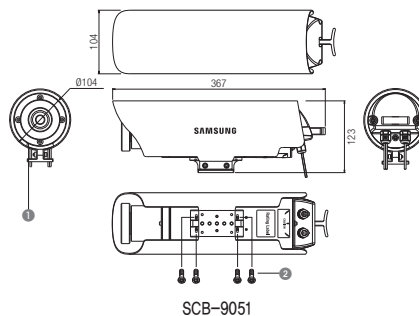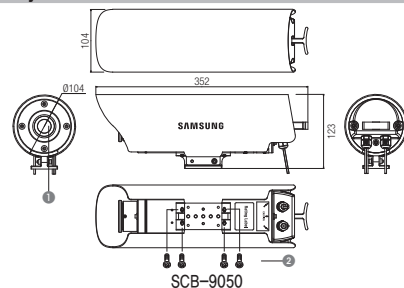

- ① A screw to fix the focus is located on the bottom of the lens.




Notes

- Do not adjust the focus after purchasing this product, because it will have been set to the optimum position. Incorrectly adjusting the focus will hinder the camera's performance.
- ② A sun shield is provided with this camera to allow for outdoor installation. Using the bolts and hexagon wrenches included in this package, fasten the camera unit and sun shield firmly in place. (Do not use excessive force during assembly.)

Installing the Camera

Inputting Power

1. Remove the lens cap.
2. Engage the power. (Use the adapter provided with this product.)
3. The rated input voltage for this product is AC 24 V, 50/60 Hz.
 - This device is not fitted with a power switch. The device must be provided with power to turn it
 - After checking the label on the cable on the right side of the camera, connect the output cable of the provided adapter.

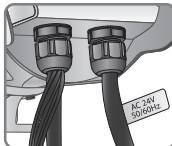

When the resistance value of copper wire is at [20°C(68°F)]

Copper wire size (AWG)	#24(0.22 ²)	#22(0.33 ²)	#20(0.52 ²)	#18(0.83 ²)
Resistance (Ω/m)	0.078	0.050	0.030	0.018
Voltage Drop (V/m)	0.028	0.018	0.011	0.006

* Deviations may occur depending on the type of power cable shown in the chart above, and on the wiring manufacturer.

Notes

- A 22-18 gauge power wire is recommended for this camera.
- Voltage reinforcement will occur based on the length of the power wire. If the adapter output wire is too long, camera performance may suffer.

Startup

1. The START screen will appear after the power has been turned on.
2. After completion of initialization, thermal images will be displayed. (approx. ten seconds after engaging the power)



The sensor will not operate properly immediately after the power is turned on, or when switching between HIGH and LOW ranges. As a result, thermal images will not display consistently for several seconds. Menu controls can be used to save values to be applied at subsequent start-up of the SCB-9050/9051. (If values are not saved, then the last saved settings will be applied.)

Calibration (NUC MODE)


This device will perform a calibration necessary for imaging (NUC) after the internal shutter closes.

During NUC, the screen will freeze momentarily. Please note that this is not a malfunction.


Monitor/Communications Connection

■ Connecting the Monitor

Connect the video output terminal on the rear of this product to the monitor.

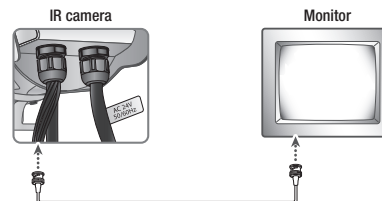

- Refer to the owner's manual for each device. Connection methods employed may differ depending on the monitors and peripheral devices used.
- Before connecting devices, ensure their power is turned off.
- Adjust the 75Ω/Hi-Z conversion switch for each device based on the following illustration. Select "Hi-Z" for intermediate video receivers and "75Ω" for end equipment.

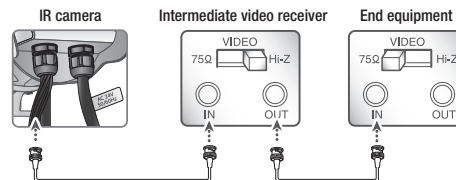

Installing the Camera

■ RS485 Communications Controls

Using RS485 communications, function settings menus can be adjusted using the Samsung Techwin DVR or System controller.

(1) Controlling menus using a PC

Using an RS485 converter, connect the camera's RS485 control terminal to a serial cable.

Example) PC serial board (COM1) → serial cable → RS485 converter → camera RS485 control terminal

(2) Controlling menus using a DVR system controller

Connect an RS485 cable (TRX+, TRX-) to an RS485 control board connection terminal capable of connecting to the DVR system controller.

External communications cable	RS485 control terminal
(+) CONNECTION TERMINAL (TRX+)	485+
(-) CONNECTION TERMINAL (TRX-)	485-



Notes

Communications Settings Default Values (camera default values at the time of shipment)

- Please use Samsung Techwin Protocol or Pelco-D Protocol when controlling the camera with a separate controller.

Monitoring Guidelines

After thermal images appear, the camera will begin to monitor its range of coverage.

1. Do not adjust the focus if there is no particular point of focus to monitor.
2. For an in-depth explanation of the controls used with the SCB-9050/9051, refer to the section detailing how the camera is operated on page 16.

During monitoring, the SCB-9050/9051 will capture heat sources and display the resulting images on the monitor.

1. If the subject environment experiences a dramatic change in temperature during monitoring, be sure to set NUC MODE to either an INTERVAL of 10 MIN or less, or an AMB of 1.0°C or lower.
2. Please be aware that because this is an infrared camera, reflections not visible to the naked eye may still be displayed. Images reflected off glass or mirrors located in front of the camera may become visible.

3. Always carry out an NUC whenever sunlight or high temperature objects are within the field of view.
4. When the camera is used continuously for a long period of time, pay attention to the buildup of dirt on the lens. A dirty lens may result in phenomena such as shortened detection distances.
5. Even if the same item is being monitored, changes in environmental conditions such as rain and fog will affect detection distance. While operating the camera be aware of how such changes may influence detection distance.

Storage

Attach the lens cap before storing this device.

Ensure that the storage area is kept within the allowable temperature range listed in this device's product specifications. Do not place this device in a location where condensation may occur.





Interface

Interface

A user interface terminal block is attached to the inside of this device.

After making adjustments to the internal terminal block, ensure that the back cover is properly attached.

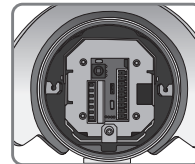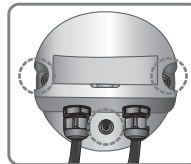


Notes

- Leakage may occur if the back cover is not properly attached.

Interface

■ Rear Terminal Placement

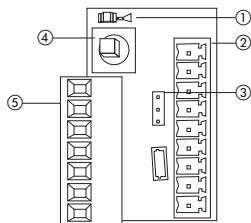

① POWER LED

- Power ON : Lit
- Abnormality/Warning : Flashing

② Terminal Block A

PIN	Name	Explanation
1	R+	RS485+ Communications Non-inverting input/output
2	R-	RS485- Communications Inverting input/output
3	D-	RS485- Communications Inverting input/output
4	D+	RS485+ Transmission Non-inverting input/output
5	G	Ground
6	Video	Composite video signal Impedance : 75 Ω
7	G	Ground
8	POW+	Power input AC +24 V
9	POW-	Power input DC AC -24 V

③ RS485 Terminator SW

- Terminator ON : 1-2
- Terminator OFF : 2-3

④ Multi Direction S/W : same connector as Terminal Block B

⑤ Terminal Block B

PIN	Name	Explanation
1	*UP	KEY UP contact input (Active LOW)
2	*DOWN	KEY DOWN contact input (Active LOW)
3	*LEFT	KEY LEFT contact input (Active LOW)
4	*RIGHT	KEY RIGHT contact input (Active LOW)
5	*SET	KEY SET contact input (Active LOW)
6	GND	GND
7	MD	Terminal used when product is shipped from the factory.

■ Connector specifications and signals

<Function Chart>

Function	Explanation	Notes
RS485 I/F (R+/-, D-/+)	Operates the RS485 I/F. Because full-duplex communication is supported, this function is used to update F/W. Standard users should utilize the same cables as those employed at the time of shipment. Shipment status : R+,D+ => TRX+ R-,D- => TRX-	Communication terminator settings: - Default value: ON - If multiple cameras are installed : Turn only the camera measuring the furthest distance ON, and the remaining cameras OFF.
Video output (Video)	Acts as a composite video signal output.	Switch between NTSC/PAL using the menu.
Power supply (POW+/-)	Provides power.	AC 24 V, 50/60 Hz
KEY contact output	Operates menu controls. (Has the same connection as the circuit board KEY.)	This output is provided for adjustment purposes. For that reason, please refrain from extending the controls to several meters or longer. (For remote control operation, use RS485 I/F.)
LED	Notifies users using the LED display whether the power is ON/OFF, and whether a device abnormality or warning has occurred.	Power ON : Lighting Device Abnormality/Warning : Flashing
KEY controls	Enables operation of the menu controls.	Used to make adjustments.



Notes

- Before supplying a terminal block with power, verify that the wiring has been properly connected.

Operating the Camera

Function Menu Configuration

Function	Explanation
BRIGHTNESS	AUTO / MANUAL (level ranging from 1-10)
CONTRAST	AUTO / MANUAL (level ranging from 1-10)
RANGE	AUTO / L/H
NUC	NUC
NUC MODE	INTERVAL / AMB / MANUAL INTERVAL 0H 1MIN-24H 0MIN AMB 0.1°C-10.0°C
IMAGE ADJ	3D-DNR OFF/L/M/H SHARPNESS 0-5 D-ZOOM OFF/X2/X4 POLARITY BW/WB COLOR MONO/COLOR1/COLOR2 ISOTHERM ON/OFF L_RANGE -40°C~+150°C R_RANGE 0°C~+560°C
SPECIAL	TV SYSTEM NTSC/PAL LANGUAGE ENGLISH / KOREAN / JAPANESE COMM ADJ CAMERA ID 0-255 BAUD RATE 4800/9600/19,200/38,400 UART MODE BIT/PARITY/STOPBIT 8-O-1 8-N-1 8-E-1 RET PKT ON/OFF CAMERA ID ON/OFF TEMP DISP ON/OFF TEMP UNIT C/F TEMP ADJ RESET
SAVE	SAVE
EXIT	EXIT

Main Menu

MAIN SETUP	BRIGHTNESS	AUTO	MANUAL	LEVEL	RETURN
	CONTRAST	AUTO	MANUAL	LEVEL	RETURN
	RANGE	AUTO	LOW	HIGH	
	NUC				
	NUC MODE	INTERVAL	H MIN	AMB	AMB
		RETURN		RETURN	MANUAL
	IMAGE ADJ	3D-DNR	L	M	H
		SHARPNESS	0-5		OFF
		D-ZOOM	×2	×4	OFF
		POLARITY	BW	WB	
		COLOR	MONO	COLOR1	COLOR2
			ON		OFF
		ISOTHERM	L RANGE TH		
			H RANGE TH		
	RETURN				
	SPECIAL SETUP	TV SYSTEM	NTSC	PAL	
		LANGUAGE	ENGLISH		
		COMM ADJ	CAMERA ID		
			BAUDRATE		
			UART MODE		
			RET PKT		
			DISPLAY ID		
			RETURN		
		TEMP ADJ	TEMP DISP		
			TEMP UNIT		
		RESET			
		RETURN			
	SAVE				
	EXIT				

Operating the Camera

Function Settings Methods

Function settings may be adjusted using the internal switches after removing the rear cover. (Refer to "5. Interface" for directions on how to remove the rear cover.)


UP button : Move the menu cursor up.

RIGHT button : Increase (+) the settings value of the selected item.


DOWN Key : Move the menu cursor down.

LEFT button : Decrease (-) the settings value of the selected item.


SET button : If a "←" icon is displayed: Move to a screen where you can select settings values (move down a level)
If a "→" icon is not displayed: Execute or adjust the selected item

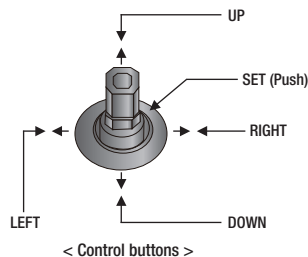


Press the SET button to display the MAIN SETUP menu screen. The MAIN SETUP menu uses a tree structure. When you select a function, a sub menu will appear.

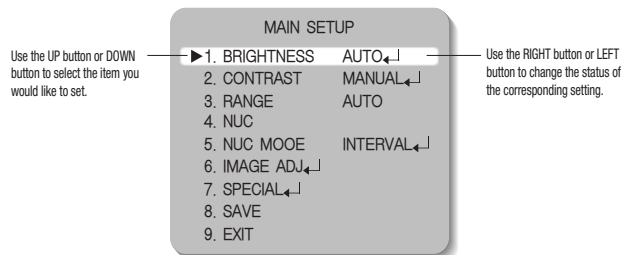


BRIGHTNESS




1. Press the SET button while the cursor is aligned with "1. BRIGHTNESS" to display the BRIGHTNESS sub menu shown below. Press the LEFT button or RIGHT button while the cursor is aligned with "1. MANUAL" to switch the BRIGHTNESS AUTO ADJUST setting from : ON ⇒ OFF ⇒ ON.
Press the LEFT button or RIGHT button while the cursor is aligned with "MANUAL" to adjust the BRIGHTNESS over ten different levels: 1 ⇒ 2 ⇒ 3 ⇒ 4 ⇒ 5 ⇒ 6 ⇒ 7 ⇒ 8 ⇒ 9 ⇒ 10 ⇒
1. Select "2. RETURN" to confirm the current setting and go back to the MAIN SETUP menu screen. (Default value : AUTO ON)

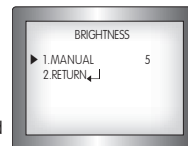

CONTRAST



2. Press the SET button while the cursor is aligned with "2. CONTRAST" to display the following sub menu. Press the LEFT button or RIGHT button while the cursor is aligned with "AUTO" to switch the CONTRAST AUTO ADJUST setting from : ON ⇒ OFF ⇒ ON.

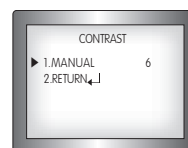

Operating the Camera

Press the LEFT button or RIGHT button while the cursor is aligned with "MANUAL" to adjust the CONTRAST over ten different levels: 1 ⇒ 2 ⇒ 3 ⇒ 4 ⇒ 5 ⇒ 6 ⇒ 7 ⇒ 8 ⇒ 9 ⇒ 10 ⇒ 1. Select "2. RETURN" to confirm the current setting and go back to the MAIN SETUP menu screen. (Default value: 6)


* In order for the CONTRAST AUTO setting to be enabled, the BRIGHTNESS AUTO setting must already be turned on.

Accordingly, if AUTO cannot be set to "ON", enable the BRIGHTNESS AUTO setting and then turn on the CONTRAST AUTO setting.

RANGE


Use this option to switch between an L Range and H Range settings. Select "AUTO" to allow the settings to automatically change between L Range and H Range based on the surrounding temperature. Choose "L" to keep the temperature range at L Range regardless of the surrounding temperature. In the same way, select "H" to always have the temperature range set at H Range.

3. Press the LEFT button or RIGHT button while the cursor is aligned with "3. RANGE" to switch the RANGE setting from : AUTO ⇒ L ⇒ H ⇒ AUTO. (Default value: AUTO)

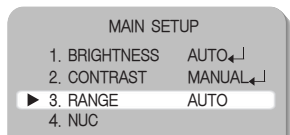


NUC (Calibration)

4. Press the SET button while the cursor is aligned with "4. NUC" to calibrate. Screen operations will then be temporarily suspended.

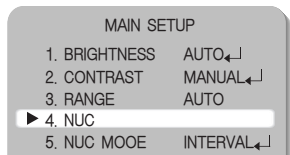

NUC MODE (Calibration Mode)

NUC(Non-uniformity Correction) is a menu calibrating all pixel's characteristics to get better image. Select an NUC operation mode. If you choose "MANUAL", the user is to perform NUC manually, instead of having the device conduct calibration automatically.

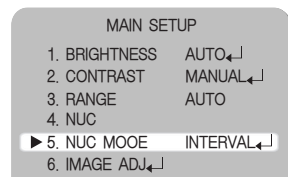


5. Press the SET button while the cursor is aligned with "5. NUC MODE" to display the following NUC MODE sub menu. Press the LEFT button or RIGHT button while the cursor is aligned with "5.NUC MODE" to switch from: INTERVAL ⇒ AMB ⇒ MANUAL ⇒ INTERVAL. Press the SET button again to adjust the sub menu. Select "2. RETURN" to confirm the current setting and go back to the MAIN SETUP menu screen. (Default value: INTERVAL)

- INTERVAL : An NUC will be performed at the specified INTERVAL.
- AMB : An NUC will only be performed when a temperature change meeting the set temperature (0.1°C-10.0°C) is detected by the internal temperature sensor.
- MANUAL : An NUC will not be performed.

IMAGE ADJ


Use this menu to adjust images. After you select this option, the following sub menu will appear.

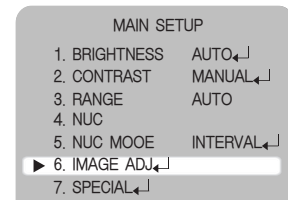

Operating the Camera


3D-DNR (Noise Reduction) :

Press the LEFT button or the RIGHT button to limit the amount of noise produced. (Default value: M)

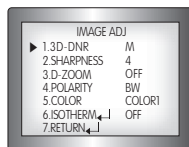


SHARPNESS (Edge Emphasis) :

Use this option to use image processing to emphasize edges. Press the LEFT button or RIGHT button while the cursor is aligned with "2. SHARPNESS" to switch the SHARPNESS setting from 0-5. Select "5. RETURN" to confirm the current setting and go back to the MAIN SETUP menu screen. (Default value: 4)

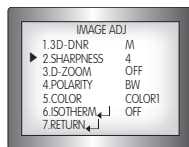

ZOOM (Digital Zoom Settings) :

Press the LEFT button or RIGHT button while the cursor is aligned with "3. D-ZOOM" to switch the zoom setting from: OFF $\Rightarrow$ X2 (times two) $\Rightarrow$ X4 (times four) $\Rightarrow$ OFF. Select "5. RETURN" to confirm the current setting and go back to the MAIN SETUP menu screen. (Default value: OFF)

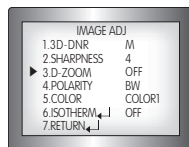

POLARITY :

Use this option to set the black/white properties of images. When "BW" is selected, high temperature areas will be shown in white, while low temperature areas will be displayed in black. If "WB" is chosen, black and white will be displayed in the opposite way as BW. Press the LEFT button or RIGHT button while the cursor is aligned with "4. POLARITY" to switch the black/white inversion setting from: BW $\Rightarrow$ WB $\Rightarrow$ BW. Select "7. RETURN" to confirm the current setting and go back to the MAIN SETUP menu screen. (Default value: BW)



COLOR :

Use this option to set the color of images. When "COLOR1" is selected, high temperature areas will be shown in red, while low temperature areas will be displayed in blue. If COLOR2 chosen, high temperature areas will be shown in yellow, while low temperature areas will be displayed in blue. When "MONO" is selected, high temperature areas will be shown in white, while low temperature areas will be displayed in black.

ISOTHERM :

ISOTHERM can apply colors to the area whose temperature range over "L RANGE TH" or "H RANGE TH" in the screen.


L RANGE TH : Minimum temperature in the ISOTHERM's area when RANGE is L.

H RANGE TH : Minimum temperature in the ISOTHERM's area when RANGE is H.

RETURN Confirm the current setting and go back to the IMAGE ADJ sub menu screen.

SPECIAL (Environment Settings Mode)


Use this menu to adjust environment settings items related to areas such as screen display, video output, and communications. Press the SET button while the cursor is aligned with "7.SPECIAL" to display the following sub menu.

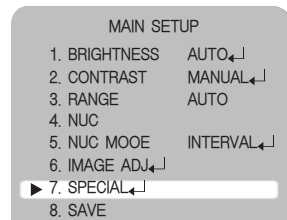

Operating the Camera


TV SYSTEM (Video Output Setting) :

Use this option to adjust the video output setting. Press the LEFT button or RIGHT button while the cursor is aligned with "1. TV SYSTEM" to switch the TV SYSTEM setting from: NTSC ⇒ PAL ⇒ NTSC. Select "6. RETURN" to confirm the current setting and go back to the MAIN SETUP menu screen. (Default value: NTSC)

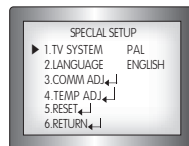

COMM ADJ (Communication Settings mode) :

Use this menu to adjust communication settings. Press the SET button while the cursor is aligned with "3. COMM ADJ" in the SPECIAL SETUP menu to display the following sub menu.

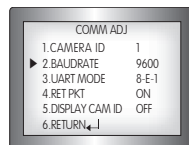

- CAMERA ID (Camera ID Settings) :

Use this option to adjust CAMERA ID settings. Press the LEFT button or RIGHT button while the cursor is aligned with "1. CAMERA ID" to adjust the CAMERA ID setting to a value from 0-255. The adjusted value will become valid when the setting is saved. Select "6. RETURN" to go back to the SPECIAL SETUP menu screen. (Default value: 0)

- BAUD RATE (Communications Speed Settings Mode) :

Use this option to change the BAUD RATE to one of four settings: 38,400 bps, 19,200 bps, 9600 bps, 4800 bps. Press the LEFT button or RIGHT button while the cursor is aligned with "2. BAUD RATE" to switch the BAUD RATE setting from: 4800 ⇒ 9600 ⇒ 19,200 ⇒ 38,400 ⇒ 4800. Select "6. RETURN" to confirm the current setting and go back to the SPECIAL SETUP menu screen. (Default value: 9600 bps)

- UART MODE (Parity Settings Mode) :

Use this option to adjust parity settings. Press the LEFT button or RIGHT button while the cursor is aligned with "3. UART MODE" to switch the UART MODE setting from: 8-E-1 ⇒ 8-O-1 ⇒ 8-N-1 ⇒ 8-E-1. Please note that both the bit length (8) and the stop bit (1) are fixed. Select "6. RETURN" to confirm the current setting and go back to the SPECIAL SETUP menu screen. (Default value: 8-E-1)

- RET PKT (Return Packet Setting) :

Use this option to adjust the return packet (returned using the same status as the data entered) setting. Press the LEFT button or RIGHT button while the cursor is aligned with "4. RET PKT" to switch the RET PKT setting from: ON ⇒ OFF ⇒ ON. Select "6. RETURN" to confirm the current setting and go back to the SPECIAL SETUP menu screen. (Default value: ON)

- Camera ID (ID Display Setting) :

Use this option to adjust the display setting of the currently set Camera ID (appears on the top left of the screen).

Press the LEFT button or RIGHT button while the cursor is aligned with "5. DISPLAY ID" to switch the CAMERA ID display setting from: ON ⇒ OFF ⇒ ON. Select "6. RETURN" to confirm the current setting and go back to the SPECIAL SETUP menu screen. (Default value: OFF)

TEMP ADJ :

Use this option to change the temperature unit. Press the button while the cursor is aligned with "4. TEMP ADJ" to change temperature display on/off and temperature unit °C/°F.



Notes

- Don't use SCB-9050/9051 to detect anything. Measurement error is $\pm 15^{\circ}\text{C}$ for objects that have $0\sim 100^{\circ}\text{C}$.

RESET (Reset) :

Use this option to restore each item to its default setting.

Press the SET button while the cursor is aligned with "5. RESET" to restore each item to its factory default setting. Please note, however, that neither TV SYSTEM nor COMM ADJ can be changed. Select "6. RETURN" to go back to the SPECIAL SETUP menu screen.

SAVE

Use this option to save device settings and establish the basic settings which will be used the next time you start up the device. Press the SET button while the cursor is aligned with "8. SAVE" to record your current settings to the internal memory. If you exit without saving, the MAIN SETUP menu will close without any values being updated.

MAIN SETUP

1. BRIGHTNESS AUTO↵
2. CONTRAST MANUAL↵
3. RANGE AUTO
4. NUC
5. NUC MOOE INTERVAL↵
6. IMAGE ADJ↵
7. SPECIAL↵
- ▶ 8. SAVE
9. EXIT

Operating the Camera




Notes

- Do not disengage the power while settings are being saved.

- ① After switching BRIGHTNESS and/or CONTRAST to MANUAL and saving your changes, images may not be displayed the next time you restart the device. To render images in such a case, set BRIGHTNESS and/or CONTRAST to "AUTO" or readjust the MANUAL setting.
- ② If you save after changing the RS485 communications CAMERA ID, the ID will then be set/stored. If the CAMERA ID was set incorrectly, exit without saving.

EXIT (Close Menu)

Press the SET button while the cursor is aligned with "9. EXIT" to close the MAIN SETUP menu.

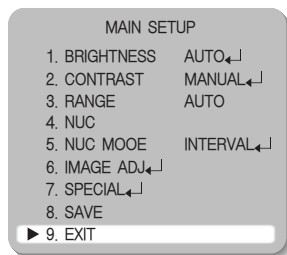

Specifications

* Although the infrared sensor has been built using high-precision technology, please understand that there may be times when pixels may be lost, or remain stuck/flashing. Also, be aware that continuously monitoring a high temperature object beyond a certain period of time may produce an afterimage.

* In cases where the product installation site experiences a sudden change in temperature (dropping by 15°C or more), the camera's focus will become blurred with regards to subjects located within three meters.

Item	SCB-9050	SCB-9051
Detector	320(H)×240(H) Uncooled VOX Microbolometer	
Sensor Pitch	23.5μm × 23.5μm	
Measured wavelength range	8 ~ 14μm	
Video ratio (Sensor)	NTSC : 30 fps / PAL : 25 fps	
Video output	CVBS : 1.0VP-P, 75Ω composite	
Lens	F1.4, f=14mm	F1.4, f=50mm
Focus Range	0.5m ~ ∞ (Factory default : 3m~∞, Pan Focus)	27m ~ ∞, Pan Focus
Viewing angle(H x V)	30° x 22.8°	9.2° x 6.9°
IFOV (Instantaneous field of view)	1.68mrad	0.47 mrad
Digital zoom	2x ~ 4x	
Noise reduction function	3D-DNR (4step : Low/Medium/High/Off)	
Polarity function	BW(Black & White) / WB(White & Black)	
Detecting temperature	Auto / Manual(2step) Low(-40~150), High(0~540)	
Communications specifications	RS-485	
Protocol	Samsung Techwin, Pelco-D	
Dustproof/waterproof protection rating	IP66	
Operating temperature	-30°C ~ 55°C	
Storage temperature	-40°C ~ 70°C	
Input voltage	24V AC, 50/60Hz	
Electricity consumption	10.5W (Operating Heater 22W)	
Outer diameter size	104(W)×123(H)×352(D) mm	104(W)×123(H)×367(D) mm
Weight (Camera)	2.2Kg	
Image Processing	AGC & DDE	
NETD	80mK	Low range : 80mK, High range : 300mK

Troubleshooting



Check the points listed below if the product appears to be malfunctioning. If the problem continues, please contact the sales agent from whom the product was purchased.

- **If nothing can be seen onscreen :**
 - Verify that the power source is connected properly, and that the device is receiving power.
 - Verify that the video signal wire is connected properly.
- **If screen images do not appear clearly :**
 - Wipe the lens with a clean cloth or brush to remove any dust that may be present.
 - Adjust the status of the monitor.
 - Change the position or angle of the camera if a large amount of bright light is displayed onscreen.
- **If the screen is too dark :**
 - Adjust the status of the monitor.
 - Verify that intermediate processing can be performed properly between systems.
- **If the camera is operating abnormally, or its surface is very hot, causing black lines to appear onscreen :**
 - Verify that the power voltage received by the camera conforms to the proper rating. Also, confirm whether performance is affected by the time of day.
- **If RS485 communications cannot be carried out :**
 - Verify the polarity of the RS485 communications terminal and the arrangement of the cables.
 - Verify the RS485 communications settings.

* RS485 Communication Settings Default Values

Item	Camera No.	Communications Speed	Communications Mode	Data Reception
Default Value	1	9600	8-EVEN -1	In use

Dimension

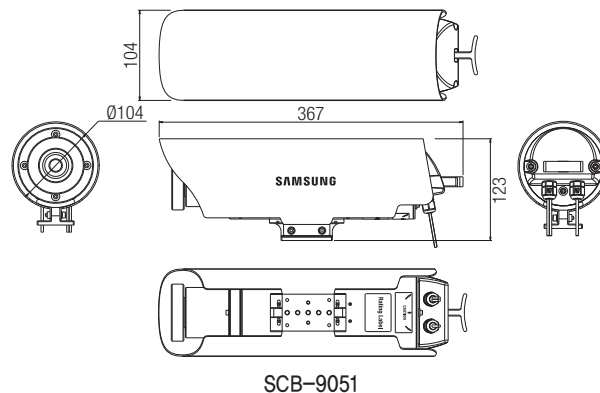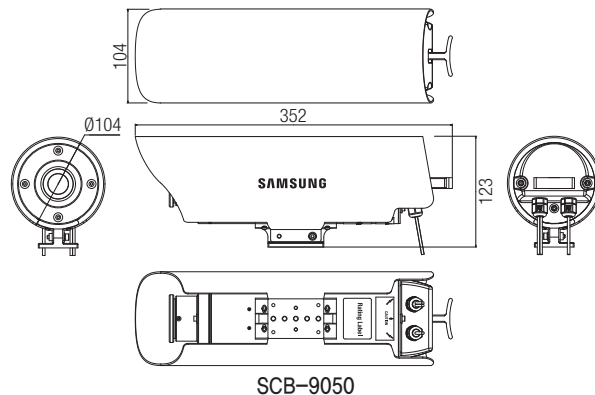

DECLARATION OF CONFORMITY

Application of Council Directive(s)	2004 / 108 / EC
Manufacturer's Name	SAMSUNG TECHWIN CO., LTD
Manufacturer's Address	SAMSUNG TECHWIN CO., LTD 42, SUNGJU-DONG CHANGWON-CITY, KYUNGNAM, KOREA, 641-716
European Representative Name	
European Representative Address	
Equipment Type/Environment	Thermal Night Vision Camera
Model Name	SCB-9050/9051
Beginning Serial NO.	C5BY6V3Z300001X
Year of Manufacture	2010.03.23
Conformance to	EN 55022 : 2006 EN 50130-4 : 2003

We, the undersigned, hereby declare that the equipment specified above conforms to the above Directive(s).

Manufacturer	SAMSUNG TECHWIN CO., LTD	Legal Representative in Europe
Signature	<i>BonJeng Gu</i>	Signature
Full Name	BONJENG GU	Full Name
Position	QUALITY CONTROL MANAGER	Position
Place	CHANGWON, KOREA	Place
Date	2010. 03. 23	Date

MEMO

MEMO

MEMO

SAMSUNG TECHWIN

The Samsung logo, consisting of the word "SAMSUNG" in a bold, sans-serif font, enclosed within a black, horizontally-oriented oval.

SALES NETWORK

• **SAMSUNG TECHWIN CO., LTD.**

Samsungtechwin R&D Center, 701, Sampyeong-dong, Bundang-gu, Seongnam-si, Gyeonggi-do, Korea, 463-400
TEL : +82-70-7147-8740-60 FAX : +82-31-8018-3745

• **SAMSUNG TECHWIN AMERICA Inc.**

1480 Charles Willard St, Carson, CA 90746, UNITED STATES
Tol Free : +1-877-213-1222 FAX : +1-310-632-2195
www.samsungcctvusa.com

• **SAMSUNG TECHWIN EUROPE LTD.**

Samsung House, 1000 Hillswood Drive, Hillswood Business
Park Chertsey, Surrey, UNITED KINGDOM KT16 0PS
TEL : +44-1932-45-5300 FAX : +44-1932-45-5325

www.samsungtechwin.com
www.samsungsecurity.com

P/No. : Z6806-0961-01C
VAN 10. 03