

SAMSUNG TECHWIN

网络摄像机

用户手册

SNP-6200/SNP-6200H



网络摄像机

用户手册

版权

©2013 Samsung Techwin Co., Ltd. 版权所有。

商标

 SAMSUNG TECHWIN 是 Samsung Techwin Co., Ltd. 的注册徽标。

本产品的名称是 Samsung Techwin Co., Ltd. 的注册商标。

本手册中提及的其他商标属其相应公司的注册商标。

限制

Samsung Techwin Co., Ltd. 保留本文档的版权。在任何情况下, 未经 Samsung Techwin 正式批准, 不得复制、发行或更改本文档的一部分或全部。

免责声明

Samsung Techwin 尽力验证本文档中内容的完整性和正确性, 但不能提供正式保证。

使用本文档及所产生的结果完全由用户自行负责。

Samsung Techwin 保留更改本文档的内容而不提前通知的权利。

- ❖ 设计和规格可能会随时更改, 恕不提前通知。
- ❖ 默认密码可能会向黑客线程公开, 因此建议您在安装产品之后更改该密码。
请注意, 未更改密码导致的安全和其他相关问题, 用户自己承担责任。

概述

重要的安全说明

1. 请阅读这些说明。
2. 请您妥善保存这些说明。
3. 请您遵守所有的操作说明。
4. 请您注意所有的警告说明。
5. 请您不要在水源附近运行本机器。
6. 请您用干布清洁本机器。
7. 请您不要堵塞通风口，在装入机器时，请您注意制造商的说明。
8. 请您不要将此机器放置在热源附近，如散热器，炉子或其它发热设备。
9. 请您绝对不要移去双线插头或有接地插头的安全装置，双线插头有两个不同宽度的插塞接点，接地插头有两个插塞接点和第三个接地接点。较宽的插塞接点或附加的接地接点是用来确保您的安全的，如果随同供货的插头规格不适合您的插座，请您委托电工更换适当的插座。
10. 请您正确铺设电源线，使其不会被踩踏和尖角损坏。请您尤其注意插头处，加长电缆和电线延伸到机器处是必须的具备充分的保护。
11. 请您使用制造商推荐的附加设备或配件。
12. 仅可使用厂商指定或随设备出售的运载车、支脚、三脚架、支架或工作台。
使用运载车时，请小心避免在移动运载车/设备组合时翻覆。
13. 在雷雨天气或长时间不用的情况下，请拔下本设备的插头。
14. 请您委托具备资格的售后服务人员进行保养工作。出现以下情况时，有必要进行保养，例如当机器被损坏时（如电线或插头损坏），有物体或液体进入到机器内部时机器受到雨淋或潮湿后，机器运行不正常或摔落在地上时。



概述

警告

为防止火灾或电击等引起的破坏,不要把产品暴露于水中或潮湿处。请勿穿过设备上的通风栅格或其他开口插入任何金属物体。

请勿将设备放置于滴水或溅水的地方,且勿将装有水的物体(如花瓶)放在设备上。

为了避免造成人身伤害,必须按照安装说明牢固地把本设备固定在墙壁/天花板上。

注意

	注意 不要擅自拆装机器, 避免电击	
注意: 为避免触电危险,不得取下机器后盖。 机器内部没有用户可修理的部件。 修理工作只允许由具备资格的人员进行		

图形符号说明



等边三角形内带箭头的闪电符号用于警告用户:产品机壳内存在“危险电压”,其电压量足以对人员构成电击危险。



等边三角形内的感叹号用于警告用户:产品附带的文字中包含重要的操作和维护(维修)说明。

电池

电池(安装的电池组或电池)不得暴露在过多的热量下(如阳光、火焰或类似物体)。

注意

如更换的电池类型不正确, 可能发生爆炸。

按照说明妥当处理废旧电池。

这些维修说明仅供合格的维修人员使用。

为减少电击的危险, 除了操作说明中所描述的之外, 请勿执行其他任何维修工作, 除非您合格这么做。

产品的 BNC 输出端子是为了方便安装而提供的, 建议不要将它用于监视。如果保持连接 BNC 电缆, 则闪光的风险可能会导致损坏产品或使产品功能异常。

请将输入电源仅用于一部摄像机, 并且不能连接其他设备。

ITE 只能连接到 PoE 网络, 无需路由到外部工厂。

产品内有害物质信息

部件名称	有毒有害物质元素					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 Cr (VI)	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
印制电路板组件	×	○	○	○	○	○
金属部品	×	○	○	○	○	○
电缆	×	○	○	○	○	○
塑料部品	○	○	○	○	○	○

○: 部品中有毒有害物质含量在〈含量标准〉的标准值内。

×: 部品中有毒有害物质含量超出〈含量标准〉的标准值。

本表格表明机器内部含有有害物质, 数据是根据部件类型, 由部件制作商提供并在三星内部验证后做成的。

某些部品包含的有害物质, 按照现在的技术基准不能替代, 三星一直在为改善此项而努力。

概述

请仔细阅读以下建议的安全预防措施。

- 请勿将本设备放置于不平的表面上。
- 请勿将本设备放置在传导物体附近。
- 请勿自行维修本设备。
- 请勿安装在任何磁源附近。
- 请勿堵塞任何通风口。
- 请勿在产品上放置任何重物。
- 不要让摄像机受到放射线照射。

用户手册是如何使用产品的指导书。

书中所用符号的含义如下。

- 参考 : 用于提供产品用法的帮助信息
- 注意 : 如果不遵照说明是否有可能对物品和人员造成任何损害
- ※ 在使用物品之前请阅读本手册以保证安全, 并将它保存在安全的地方。

目录

概述	3	3 重要的安全说明
		9 产品特色
		9 推荐 PC 技术规格
		10 推荐 SD/SDHC 记忆卡 技术规格
		10 附带提供的物品
		14 简图 (SNP-6200H)
安装与连接	16	18 DIP 开关设置 (SNP-6200H)
		28 安装
		40 插入/拔出 SD 记忆卡
		41 记忆卡信息 (不含)
网络连接和设置	42	42 将摄像头与局域网直接连接
		43 将摄像机直接连接至基于 DHCP 的 xDSL/有线电视网调制解调器
		44 直接将摄像机连接到 PPPoE 调制解调器
		45 将摄像头与使用 PPPoE/Cable 调制解调器的宽带路由器连接
		46 在 IP Installer 中使用的按钮
		47 静态 IP 设置
		50 动态 IP 设置
		50 路由器端口设置
		52 从共享的本地 PC 连接到摄像机
		52 从远程 PC 通过互联网连接到摄像机
WEB 查看器	53	53 连接到摄像机
		54 登录
		54 安装 ActiveX
		55 安装 Silverlight Runtime
		57 使用现场屏幕
		60 播放录制的视频

概述

设置屏幕

64

- 64 设置
- 64 音频与视频设置
- 81 网络设置
- 88 事件设置
- 98 系统设置

附录

102

- 102 规格
- 106 产品视图
- 108 故障排除
- 110 Open source license notification on the product

产品特色

- **全高清视频质量**

- **多流**

本网络摄像机可以同时使用不同的 CODEC、采用不同的分辨率和质量来显示视频。

- **基于 Web 浏览器的监视**

使用互联网 Web 浏览器在本地网络环境中显示图像。

- **警报**

如果发生事件，则会将与事件相关的视频传送至用户指定的 FTP/电子邮件或保存到 SD 存储卡，或者将事件信号发送至 警报输出端口。

- **移动探测**

从摄像机的视频输入检测移动。

- **智能视频分析**

分析视频以从摄像机的视频输入检测指定条件的逻辑事件。

- **自动检测断开的网络**

检测网络断开连接，检测到便触发事件。

- **符合 ONVIF**

本产品支持 ONVIF。

有关详细信息，请参阅 www.onvif.org。



Driving network video through global standardization

推荐 PC 技术规格

- CPU: Intel Core 2 Duo 2.6GHz 或更高
- 操作系统: Microsoft Windows 7/VISTA/XP SP3、Apple MAC OS
- 分辨率: 1280X1024 像素或更高
- RAM: 2GB 或更大
- 网络浏览器: Firefox、Google Chrome、*Apple Safari、Windows Internet Explorer 9.0 (32 位) / 8.0 (32 位) / 7.0 (32 位)
 - 既不支持测试版，也不支持开发者版，仅支持在公司官方网站发布的正式版本。
 - 若需要使用IPv6功能，建议使用 Windows 7操作系统。
 - 对于 Mac OSX，仅支持 Safari 浏览器。
- 显存: 256MB 或更大



- 如果显卡的驱动程序未正确安装或不是最新版本，则视频可能无法正确播放。
- 对于至少涉及 2 个监视器的多监视系统，播放性能可能会下降，具体视系统而定。
- 建议您在多浏览器环境中使用 Intel Core 2 Duo 2.93GHz 或更高档的处理器。





概述




推荐 SD/SDHC 记忆卡 技术规格

- 4GB ~ 32GB
- 对您的摄像头，我们建议您使用以下厂商制造的存储卡：
SD/SDHC 存储卡：Sandisk, Transcend
- 建议您使用至少为类别 6 速度的存储卡。

附带提供的物品

请检查产品包装内是否已包括摄像机和所有附件。

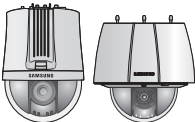
外观	项目名称	数量	说明	型号名称
	摄像机	1		SNP-6200/ SNP-6200H
	用户手册/ Installer 软件 CD, CMS 软件 DVD	2		
	用户手册	1		
	保修卡	1		
	BNC 电缆	1	用于测试摄像机至便携式显示设备的连接	

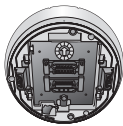外观	项目名称	数量	说明	型号名称
	安装基座	1	用于安装室内或者天花板支架上	SNP-6200
	自攻螺钉	3	用于墙壁或天花板上的安装	
	安装模板	1	产品安装指南	
	六角螺钉	3	用于将安装基座安装在摄像机上	SNP-6200H
	L 型扳手	1	用于在将安装基座连接至摄像机之后固定基座。	
	安装基座	1	用于安装在室外支架上	

概述


简图 (SNP-6200)

外观

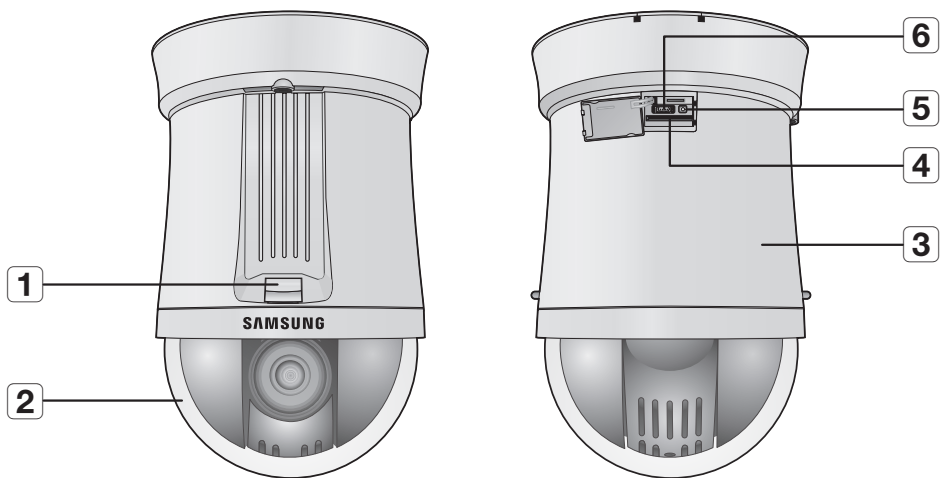


项目	说明
1 解锁按钮	在将摄像机安装在安装基座时使用。
2 圆顶盖	用于保护镜头和设备的圆顶盖。
3 主设备	保护内置 PTZ 机械，避免阳光直射。
4 SD 内存卡槽	用于 SD 内存卡的卡槽。
5 重置按钮	按住此按钮约 5 秒钟会将所有摄像机设置重置为出厂默认值。
6 维修端口 (A/S 端口)	此项仅用于维修，并非供用户使用。

安装基座的底部视图

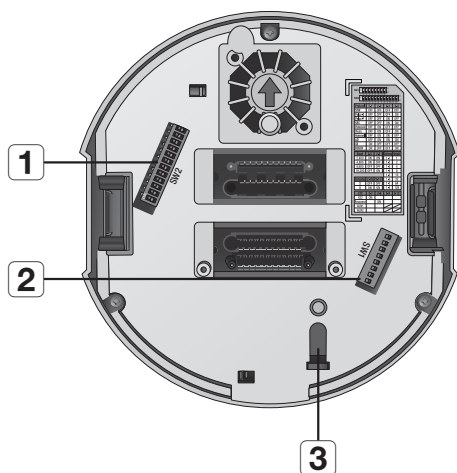

安装基座的内视图

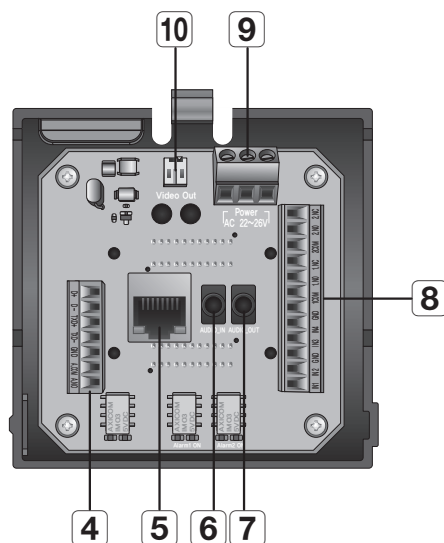


项目	说明
1 通信设置开关	设置传输速率和协议。
2 ID 设置开关	指定摄像机 ID。
3 安全索钩	用于防止产品意外掉下来的电线钩。
4 通信和 AUX 端口	用于 RS-485 通信。
5 网络连接	用于连接 PoE+ 或 LAN 电缆。
6 音频输入端口	用于连接音频输入线。（不支持单声道内插插头。）
7 音频输出端口	用于连接音频输出线。（不支持单声道内插插头。）
8 警报 I/O 端口	用于连接警报 I/O 线。
9 用于连接警报 I/O 线。	用于连接电源。
10 视频输出端口	模拟视频输出端口。（用于安装）

概述


简图 (SNP-6200H)

外观

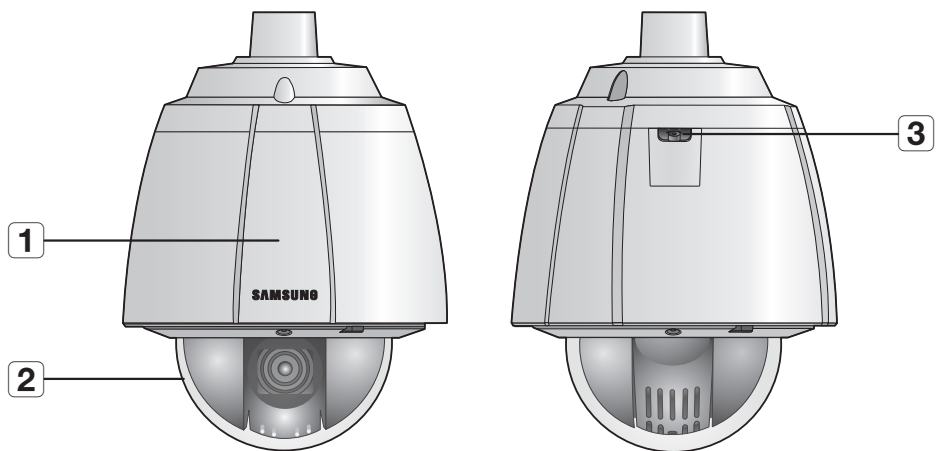


项目	说明
1 主设备	保护内置 PTZ 机械，避免阳光直射、飘雨或外部碰撞。
2 圆顶盖	用于保护镜头和设备的圆顶盖。
3 安全索钩	用于防止产品意外掉下来的电线钩。

安装基座的底部视图

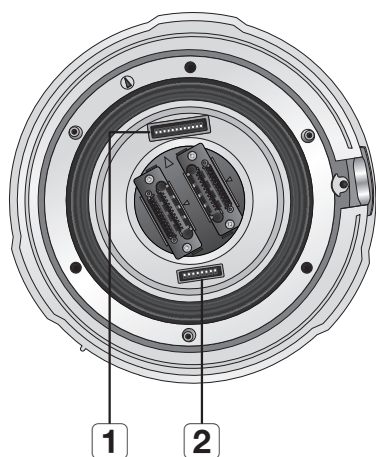

安装基座的内视图

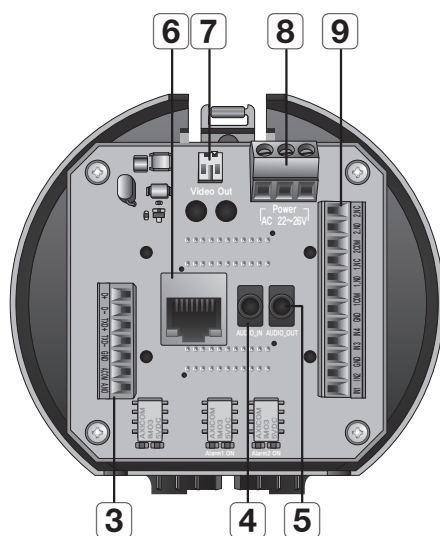


项目	说明
1 通信设置开关	设置传输速率和协议。
2 ID 设置开关	指定摄像机 ID。
3 通信和 AUX 端口	用于 RS-485 通信。
4 音频输入端口	用于连接音频输入线。(不支持单声道内插插头。)
5 音频输出端口	用于连接音频输出线。(不支持单声道内插插头。)
6 网络连接	用于连接 PoE+ 或 LAN 电缆。
7 视频输出端口	模拟视频输出端口。(用于安装)
8 电源端口	用于连接电源。
9 警报 I/O 端口	用于连接警报 I/O 线。

安装与连接

■ 摄像机接线接口板

对于摄像机接线，请参阅下图。

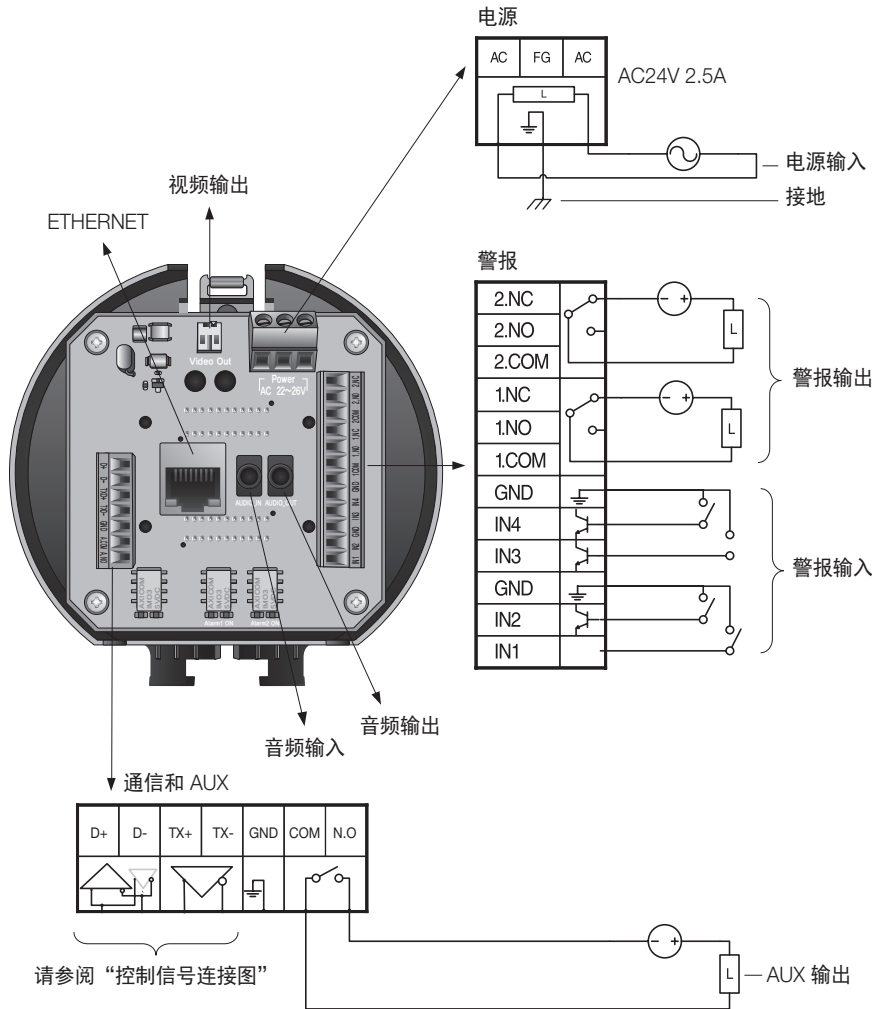


控制信号连接

- RS-485 通信



- RS-422 通信

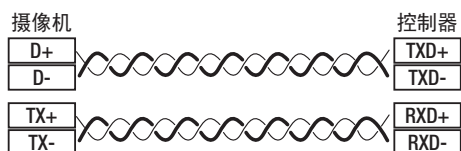

- 警报和 AUX 输出的最大功率容量是 30VDC/2A、125VAC/0.5A 和 250VAC/0.25A。
- 连接警报输入和输出电缆时，请务必分别将一根电缆连接至一个端子。
- 要连接超过摄像机容量的产品，请使用额外的继电器设备。
- 不正确地将电源接头和 GND 连接到 NC/NO 和 COM 端口可能会导致短路，从而导致发生火灾和损坏摄像机。

安装与连接


DIP 开关设置 (SNP-6200H)

如何设置协议和 ID DIP 开关

可以使用通信和 ID DIP 开关，来控制摄像机系统的各种设置。
在安装产品之前，请根据安装环境设置 DIP 开关。

1. 根据安装环境设置开关。有关更详细的设置信息，请参阅下一页上的表。
2. 如果未完全打开/关闭开关，摄像机可能会功能异常；在完成设置之前，请仔细检查开关。

通信协议 DIP 开关 (SW2)

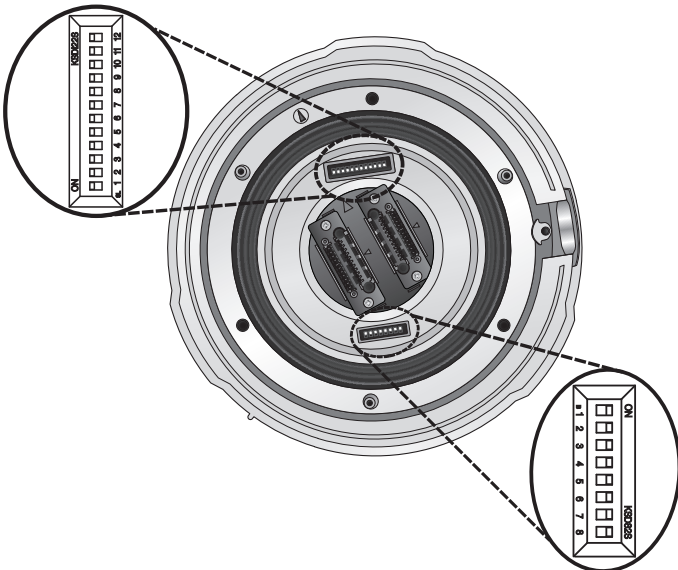

摄像机 ID DIP 开关 (SW1)

通信协议 DIP 开关设置 (SW2)



SW2 引脚编号	用途
1~4	协议设置
5~6	波特率设置
7	传输方法 (RS-485/422) 设置
8	响应模式设置
9	保留
10~11	终端设置
12	保留

• 协议设置

选择摄像机的通信协议。

编号	协议	SW2-#1	SW2-#2	SW2-#3	SW2-#4
1	Samsung (默认值)	OFF	OFF	OFF	OFF
2	Pelco-D	OFF	OFF	OFF	ON
3	Pelco-D	OFF	OFF	ON	OFF
4	Samsung Elec.	OFF	OFF	ON	ON
5	Panasonic	OFF	ON	OFF	OFF
6	Vicon	OFF	ON	OFF	ON
7	Honeywell	OFF	ON	ON	OFF
8	AD	OFF	ON	ON	ON
9	GE	ON	OFF	OFF	OFF
10	BOSCH	ON	OFF	OFF	ON
11	保留	ON	OFF	ON	OFF
12	保留	ON	OFF	ON	ON
13	保留	ON	ON	OFF	OFF
14	保留	ON	ON	OFF	ON
15	保留	ON	ON	ON	OFF
16	保留	ON	ON	ON	ON

安装与连接

• 波特率设置

选择所选通信协议的传输速度。

编号	波特率 (BPS)	SW2-#5	SW2-#6
1	2400	ON	ON
2	4800	ON	OFF
3	9600 (默认值)	OFF	OFF
4	19200	OFF	ON

• 通信方法设置

选择摄像机的通信方法。

	功能	ON	OFF
SW2-#7	传输模式开关	RS-422 (4 线)	RS-485 (2 线)

• 通信响应设置

选择摄像机和控制器的通信响应方法： 响应或无响应。

	功能	ON	OFF
SW2-#8	响应模式开关	响应	无响应

• 终端设置

为了防止摄像机和控制器之间的通信信号减弱，必须通过终端设置来设置线路末端的项目。


Termination	10	11
Not Terminated	OFF	OFF
Terminated	ON	ON



- 默认值是在每个设置表上加阴影。
- 要将第三方控制器与本产品配合使用，请与售后服务人员或技术部门联系。

摄像机 ID DIP 开关设置 (SW1)

要设置摄像机 ID，请参阅下面的“摄像机 ID 图”。

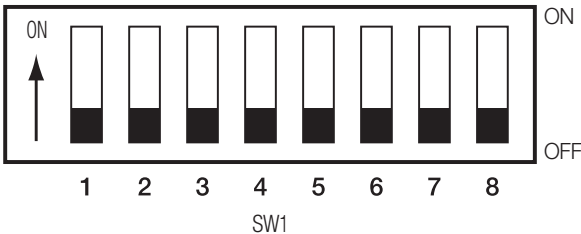

• 摄像机 ID 图

ID	SW1-#1	SW1-#2	SW1-#3	SW1-#4	SW1-#5	SW1-#6	SW1-#7	SW1-#8
1	ON/OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
2	OFF	ON	OFF	OFF	OFF	OFF	OFF	OFF
3	ON	ON	OFF	OFF	OFF	OFF	OFF	OFF
4	OFF	OFF	ON	OFF	OFF	OFF	OFF	OFF
5	ON	OFF	ON	OFF	OFF	OFF	OFF	OFF
6	OFF	ON	ON	OFF	OFF	OFF	OFF	OFF
7	ON	ON	ON	OFF	OFF	OFF	OFF	OFF
8	OFF	OFF	OFF	ON	OFF	OFF	OFF	OFF
9	ON	OFF	OFF	ON	OFF	OFF	OFF	OFF
10	OFF	ON	OFF	ON	OFF	OFF	OFF	OFF
11	ON	ON	OFF	ON	OFF	OFF	OFF	OFF
12	OFF	OFF	ON	ON	OFF	OFF	OFF	OFF
13	ON	OFF	ON	ON	OFF	OFF	OFF	OFF
14	OFF	ON	ON	ON	OFF	OFF	OFF	OFF
15	ON	ON	ON	ON	OFF	OFF	OFF	OFF
16	OFF	OFF	OFF	OFF	ON	OFF	OFF	OFF
17	ON	OFF	OFF	OFF	ON	OFF	OFF	OFF
18	OFF	ON	OFF	OFF	ON	OFF	OFF	OFF
19	ON	ON	OFF	OFF	ON	OFF	OFF	OFF
20	OFF	OFF	ON	OFF	ON	OFF	OFF	OFF
21	ON	OFF	ON	OFF	ON	OFF	OFF	OFF
22	OFF	ON	ON	OFF	ON	OFF	OFF	OFF
23	ON	ON	ON	OFF	ON	OFF	OFF	OFF
24	OFF	OFF	OFF	ON	ON	OFF	OFF	OFF
25	ON	OFF	OFF	ON	ON	OFF	OFF	OFF
26	OFF	ON	OFF	ON	ON	OFF	OFF	OFF
27	ON	ON	OFF	ON	ON	OFF	OFF	OFF
28	OFF	OFF	ON	ON	ON	OFF	OFF	OFF
29	ON	OFF	ON	ON	ON	OFF	OFF	OFF
30	OFF	ON	ON	ON	ON	OFF	OFF	OFF
31	ON	ON	ON	ON	ON	OFF	OFF	OFF
32	OFF	OFF	OFF	OFF	OFF	ON	OFF	OFF
33	ON	OFF	OFF	OFF	OFF	ON	OFF	OFF
34	OFF	ON	OFF	OFF	OFF	ON	OFF	OFF
35	ON	ON	OFF	OFF	OFF	ON	OFF	OFF

安装与连接

ID	SW1-#1	SW1-#2	SW1-#3	SW1-#4	SW1-#5	SW1-#6	SW1-#7	SW1-#8
36	OFF	OFF	ON	OFF	OFF	ON	OFF	OFF
37	ON	OFF	ON	OFF	OFF	ON	OFF	OFF
38	OFF	ON	ON	OFF	OFF	ON	OFF	OFF
39	ON	ON	ON	OFF	OFF	ON	OFF	OFF
40	OFF	OFF	OFF	ON	OFF	ON	OFF	OFF
41	ON	OFF	OFF	ON	OFF	ON	OFF	OFF
42	OFF	ON	OFF	ON	OFF	ON	OFF	OFF
43	ON	ON	OFF	ON	OFF	ON	OFF	OFF
44	OFF	OFF	ON	ON	OFF	ON	OFF	OFF
45	ON	OFF	ON	ON	OFF	ON	OFF	OFF
46	OFF	ON	ON	ON	OFF	ON	OFF	OFF
47	ON	ON	ON	ON	OFF	ON	OFF	OFF
48	OFF	OFF	OFF	OFF	ON	ON	OFF	OFF
49	ON	OFF	OFF	OFF	ON	ON	OFF	OFF
50	OFF	ON	OFF	OFF	ON	ON	OFF	OFF
51	ON	ON	OFF	OFF	ON	ON	OFF	OFF
52	OFF	OFF	ON	OFF	ON	ON	OFF	OFF
53	ON	OFF	ON	OFF	ON	ON	OFF	OFF
54	OFF	ON	ON	OFF	ON	ON	OFF	OFF
55	ON	ON	ON	OFF	ON	ON	OFF	OFF
56	OFF	OFF	OFF	ON	ON	ON	OFF	OFF
57	ON	OFF	OFF	ON	ON	ON	OFF	OFF
58	OFF	ON	OFF	ON	ON	ON	OFF	OFF
59	ON	ON	OFF	ON	ON	ON	OFF	OFF
60	OFF	OFF	ON	ON	ON	ON	OFF	OFF
61	ON	OFF	ON	ON	ON	ON	OFF	OFF
62	OFF	ON	ON	ON	ON	ON	OFF	OFF
63	ON	ON	ON	ON	ON	ON	OFF	OFF
64	OFF	OFF	OFF	OFF	OFF	OFF	ON	OFF
65	ON	OFF	OFF	OFF	OFF	OFF	ON	OFF
66	OFF	ON	OFF	OFF	OFF	OFF	ON	OFF
67	ON	ON	OFF	OFF	OFF	OFF	ON	OFF
68	OFF	OFF	ON	OFF	OFF	OFF	ON	OFF
69	ON	OFF	ON	OFF	OFF	OFF	ON	OFF
70	OFF	ON	ON	OFF	OFF	OFF	ON	OFF
71	ON	ON	ON	OFF	OFF	OFF	ON	OFF
72	OFF	OFF	OFF	ON	OFF	OFF	ON	OFF

ID	SW1-#1	SW1-#2	SW1-#3	SW1-#4	SW1-#5	SW1-#6	SW1-#7	SW1-#8
73	ON	OFF	OFF	ON	OFF	OFF	ON	OFF
74	OFF	ON	OFF	ON	OFF	OFF	ON	OFF
75	ON	ON	OFF	ON	OFF	OFF	ON	OFF
76	OFF	OFF	ON	ON	OFF	OFF	ON	OFF
77	ON	OFF	ON	ON	OFF	OFF	ON	OFF
78	OFF	ON	ON	ON	OFF	OFF	ON	OFF
79	ON	ON	ON	ON	OFF	OFF	ON	OFF
80	OFF	OFF	OFF	OFF	ON	OFF	ON	OFF
81	ON	OFF	OFF	OFF	ON	OFF	ON	OFF
82	OFF	ON	OFF	OFF	ON	OFF	ON	OFF
83	ON	ON	OFF	OFF	ON	OFF	ON	OFF
84	OFF	OFF	ON	OFF	ON	OFF	ON	OFF
85	ON	OFF	ON	OFF	ON	OFF	ON	OFF
86	OFF	ON	ON	OFF	ON	OFF	ON	OFF
87	ON	ON	ON	OFF	ON	OFF	ON	OFF
88	OFF	OFF	OFF	ON	ON	OFF	ON	OFF
89	ON	OFF	OFF	ON	ON	OFF	ON	OFF
90	OFF	ON	OFF	ON	ON	OFF	ON	OFF
91	ON	ON	OFF	ON	ON	OFF	ON	OFF
92	OFF	OFF	ON	ON	ON	OFF	ON	OFF
93	ON	OFF	ON	ON	ON	OFF	ON	OFF
94	OFF	ON	ON	ON	ON	OFF	ON	OFF
95	ON	ON	ON	ON	ON	OFF	ON	OFF
96	OFF	OFF	OFF	OFF	OFF	ON	ON	OFF
97	ON	OFF	OFF	OFF	OFF	ON	ON	OFF
98	OFF	ON	OFF	OFF	OFF	ON	ON	OFF
99	ON	ON	OFF	OFF	OFF	ON	ON	OFF
100	OFF	OFF	ON	OFF	OFF	ON	ON	OFF
101	ON	OFF	ON	OFF	OFF	ON	ON	OFF
102	OFF	ON	ON	OFF	OFF	ON	ON	OFF
103	ON	ON	ON	OFF	OFF	ON	ON	OFF
104	OFF	OFF	OFF	ON	OFF	ON	ON	OFF
105	ON	OFF	OFF	ON	OFF	ON	ON	OFF
106	OFF	ON	OFF	ON	OFF	ON	ON	OFF
107	ON	ON	OFF	ON	OFF	ON	ON	OFF
108	OFF	OFF	ON	ON	OFF	ON	ON	OFF
109	ON	OFF	ON	ON	OFF	ON	ON	OFF

安装与连接

ID	SW1-#1	SW1-#2	SW1-#3	SW1-#4	SW1-#5	SW1-#6	SW1-#7	SW1-#8
110	OFF	ON	ON	ON	OFF	ON	ON	OFF
111	ON	ON	ON	ON	OFF	ON	ON	OFF
112	OFF	OFF	OFF	OFF	ON	ON	ON	OFF
113	ON	OFF	OFF	OFF	ON	ON	ON	OFF
114	OFF	ON	OFF	OFF	ON	ON	ON	OFF
115	ON	ON	OFF	OFF	ON	ON	ON	OFF
116	OFF	OFF	ON	OFF	ON	ON	ON	OFF
117	ON	OFF	ON	OFF	ON	ON	ON	OFF
118	OFF	ON	ON	OFF	ON	ON	ON	OFF
119	ON	ON	ON	OFF	ON	ON	ON	OFF
120	OFF	OFF	OFF	ON	ON	ON	ON	OFF
121	ON	OFF	OFF	ON	ON	ON	ON	OFF
122	OFF	ON	OFF	ON	ON	ON	ON	OFF
123	ON	ON	OFF	ON	ON	ON	ON	OFF
124	OFF	OFF	ON	ON	ON	ON	ON	OFF
125	ON	OFF	ON	ON	ON	ON	ON	OFF
126	OFF	ON	ON	ON	ON	ON	ON	OFF
127	ON	ON	ON	ON	ON	ON	ON	OFF
128	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON
129	ON	OFF	OFF	OFF	OFF	OFF	OFF	ON
130	OFF	ON	OFF	OFF	OFF	OFF	OFF	ON
131	ON	ON	OFF	OFF	OFF	OFF	OFF	ON
132	OFF	OFF	ON	OFF	OFF	OFF	OFF	ON
133	ON	OFF	ON	OFF	OFF	OFF	OFF	ON
134	OFF	ON	ON	OFF	OFF	OFF	OFF	ON
135	ON	ON	ON	OFF	OFF	OFF	OFF	ON
136	OFF	OFF	OFF	ON	OFF	OFF	OFF	ON
137	ON	OFF	OFF	ON	OFF	OFF	OFF	ON
138	OFF	ON	OFF	ON	OFF	OFF	OFF	ON
139	ON	ON	OFF	ON	OFF	OFF	OFF	ON
140	OFF	OFF	ON	ON	OFF	OFF	OFF	ON
141	ON	OFF	ON	ON	OFF	OFF	OFF	ON
142	OFF	ON	ON	ON	OFF	OFF	OFF	ON
143	ON	ON	ON	ON	OFF	OFF	OFF	ON
144	OFF	OFF	OFF	OFF	ON	OFF	OFF	ON
145	ON	OFF	OFF	OFF	ON	OFF	OFF	ON
146	OFF	ON	OFF	OFF	ON	OFF	OFF	ON

ID	SW1-#1	SW1-#2	SW1-#3	SW1-#4	SW1-#5	SW1-#6	SW1-#7	SW1-#8
147	ON	ON	OFF	OFF	ON	OFF	OFF	ON
148	OFF	OFF	ON	OFF	ON	OFF	OFF	ON
149	ON	OFF	ON	OFF	ON	OFF	OFF	ON
150	OFF	ON	ON	OFF	ON	OFF	OFF	ON
151	ON	ON	ON	OFF	ON	OFF	OFF	ON
152	OFF	OFF	OFF	ON	ON	OFF	OFF	ON
153	ON	OFF	OFF	ON	ON	OFF	OFF	ON
154	OFF	ON	OFF	ON	ON	OFF	OFF	ON
155	ON	ON	OFF	ON	ON	OFF	OFF	ON
156	OFF	OFF	ON	ON	ON	OFF	OFF	ON
157	ON	OFF	ON	ON	ON	OFF	OFF	ON
158	OFF	ON	ON	ON	ON	OFF	OFF	ON
159	ON	ON	ON	ON	ON	OFF	OFF	ON
160	OFF	OFF	OFF	OFF	OFF	ON	OFF	ON
161	ON	OFF	OFF	OFF	OFF	ON	OFF	ON
162	OFF	ON	OFF	OFF	OFF	ON	OFF	ON
163	ON	ON	OFF	OFF	OFF	ON	OFF	ON
164	OFF	OFF	ON	OFF	OFF	ON	OFF	ON
165	ON	OFF	ON	OFF	OFF	ON	OFF	ON
166	OFF	ON	ON	OFF	OFF	ON	OFF	ON
167	ON	ON	ON	OFF	OFF	ON	OFF	ON
168	OFF	OFF	OFF	ON	OFF	ON	OFF	ON
169	ON	OFF	OFF	ON	OFF	ON	OFF	ON
170	OFF	ON	OFF	ON	OFF	ON	OFF	ON
171	ON	ON	OFF	ON	OFF	ON	OFF	ON
172	OFF	OFF	ON	ON	OFF	ON	OFF	ON
173	ON	OFF	ON	ON	OFF	ON	OFF	ON
174	OFF	ON	ON	ON	OFF	ON	OFF	ON
175	ON	ON	ON	ON	OFF	ON	OFF	ON
176	OFF	OFF	OFF	OFF	ON	ON	OFF	ON
177	ON	OFF	OFF	OFF	ON	ON	OFF	ON
178	OFF	ON	OFF	OFF	ON	ON	OFF	ON
179	ON	ON	OFF	OFF	ON	ON	OFF	ON
180	OFF	OFF	ON	OFF	ON	ON	OFF	ON
181	ON	OFF	ON	OFF	ON	ON	OFF	ON
182	OFF	ON	ON	OFF	ON	ON	OFF	ON
183	ON	ON	ON	OFF	ON	ON	OFF	ON

安装与连接

ID	SW1-#1	SW1-#2	SW1-#3	SW1-#4	SW1-#5	SW1-#6	SW1-#7	SW1-#8
184	OFF	OFF	OFF	ON	ON	ON	OFF	ON
185	ON	OFF	OFF	ON	ON	ON	OFF	ON
186	OFF	ON	OFF	ON	ON	ON	OFF	ON
187	ON	ON	OFF	ON	ON	ON	OFF	ON
188	OFF	OFF	ON	ON	ON	ON	OFF	ON
189	ON	OFF	ON	ON	ON	ON	OFF	ON
190	OFF	ON	ON	ON	ON	ON	OFF	ON
191	ON	ON	ON	ON	ON	ON	OFF	ON
192	OFF	OFF	OFF	OFF	OFF	OFF	ON	ON
193	ON	OFF	OFF	OFF	OFF	OFF	ON	ON
194	OFF	ON	OFF	OFF	OFF	OFF	ON	ON
195	ON	ON	OFF	OFF	OFF	OFF	ON	ON
196	OFF	OFF	ON	OFF	OFF	OFF	ON	ON
197	ON	OFF	ON	OFF	OFF	OFF	ON	ON
198	OFF	ON	ON	OFF	OFF	OFF	ON	ON
199	ON	ON	ON	OFF	OFF	OFF	ON	ON
200	OFF	OFF	OFF	ON	OFF	OFF	ON	ON
201	ON	OFF	OFF	ON	OFF	OFF	ON	ON
202	OFF	ON	OFF	ON	OFF	OFF	ON	ON
203	ON	ON	OFF	ON	OFF	OFF	ON	ON
204	OFF	OFF	ON	ON	OFF	OFF	ON	ON
205	ON	OFF	ON	ON	OFF	OFF	ON	ON
206	OFF	ON	ON	ON	OFF	OFF	ON	ON
207	ON	ON	ON	ON	OFF	OFF	ON	ON
208	OFF	OFF	OFF	OFF	ON	OFF	ON	ON
209	ON	OFF	OFF	OFF	ON	OFF	ON	ON
210	OFF	ON	OFF	OFF	ON	OFF	ON	ON
211	ON	ON	OFF	OFF	ON	OFF	ON	ON
212	OFF	OFF	ON	OFF	ON	OFF	ON	ON
213	ON	OFF	ON	OFF	ON	OFF	ON	ON
214	OFF	ON	ON	OFF	ON	OFF	ON	ON
215	ON	ON	ON	OFF	ON	OFF	ON	ON
216	OFF	OFF	OFF	ON	ON	OFF	ON	ON
217	ON	OFF	OFF	ON	ON	OFF	ON	ON
218	OFF	ON	OFF	ON	ON	OFF	ON	ON
219	ON	ON	OFF	ON	ON	OFF	ON	ON
220	OFF	OFF	ON	ON	ON	OFF	ON	ON


ID	SW1-#1	SW1-#2	SW1-#3	SW1-#4	SW1-#5	SW1-#6	SW1-#7	SW1-#8
221	ON	OFF	ON	ON	ON	OFF	ON	ON
222	OFF	ON	ON	ON	ON	OFF	ON	ON
223	ON	ON	ON	ON	ON	OFF	ON	ON
224	OFF	OFF	OFF	OFF	OFF	ON	ON	ON
225	ON	OFF	OFF	OFF	OFF	ON	ON	ON
226	OFF	ON	OFF	OFF	OFF	ON	ON	ON
227	ON	ON	OFF	OFF	OFF	ON	ON	ON
228	OFF	OFF	ON	OFF	OFF	ON	ON	ON
229	ON	OFF	ON	OFF	OFF	ON	ON	ON
230	OFF	ON	ON	OFF	OFF	ON	ON	ON
231	ON	ON	ON	OFF	OFF	ON	ON	ON
232	OFF	OFF	OFF	ON	OFF	ON	ON	ON
233	ON	OFF	OFF	ON	OFF	ON	ON	ON
234	OFF	ON	OFF	ON	OFF	ON	ON	ON
235	ON	ON	OFF	ON	OFF	ON	ON	ON
236	OFF	OFF	ON	ON	OFF	ON	ON	ON
237	ON	OFF	ON	ON	OFF	ON	ON	ON
238	OFF	ON	ON	ON	OFF	ON	ON	ON
239	ON	ON	ON	ON	OFF	ON	ON	ON
240	OFF	OFF	OFF	OFF	ON	ON	ON	ON
241	ON	OFF	OFF	OFF	ON	ON	ON	ON
242	OFF	ON	OFF	OFF	ON	ON	ON	ON
243	ON	ON	OFF	OFF	ON	ON	ON	ON
244	OFF	OFF	ON	OFF	ON	ON	ON	ON
245	ON	OFF	ON	OFF	ON	ON	ON	ON
246	OFF	ON	ON	OFF	ON	ON	ON	ON
247	ON	ON	ON	OFF	ON	ON	ON	ON
248	OFF	OFF	OFF	ON	ON	ON	ON	ON
249	ON	OFF	OFF	ON	ON	ON	ON	ON
250	OFF	ON	OFF	ON	ON	ON	ON	ON
251	ON	ON	OFF	ON	ON	ON	ON	ON
252	OFF	OFF	ON	ON	ON	ON	ON	ON
253	ON	OFF	ON	ON	ON	ON	ON	ON
254	OFF	ON	ON	ON	ON	ON	ON	ON
255	ON	ON	ON	ON	ON	ON	ON	ON

安装与连接

安装

准备适配器和电线

- 将摄像机连接至电源适配器。然后，将适配器电源线插入到墙壁电源插座。

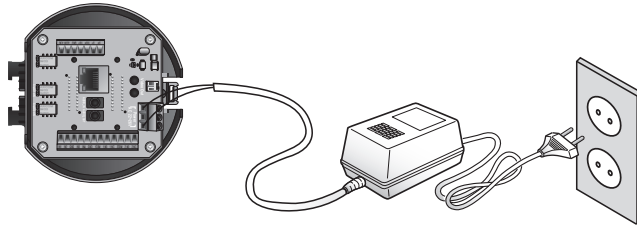

在连接之前，检查额定电压和电流。

额定功率	允许的输入电压	电流消耗
AC 24V	AC 22V~26V	2.5 A

- 如果同时供应 PoE+ 和 AC 24 V 电源，设备会采用先接通的电源。
 - 首选使用单个电源，即 PoE+ 和 AC 24 V 之一。
- 如果连接至提供 PoE+ 电源的交换机设备，则您不需要供应 AC 24V 电源。
- 请确保 PoE 设备符合 PoE+ (IEEE 802.3at) 规格。
 - 如果连接至符合 IEEE 802.3af 标准的 PoE 设备，请针对交换机设备设置“不使用 PoE”。有关交换机设备的更多信息，请参阅制造商的手册。
- PoE 交换机型号（用于各个通道）和 PoE 连接时间可能因制造商不同而异。


[20°C (68°F)] 时铜线的电阻

铜线电量表 (AWG)	#24(0.22mm ²)	#22(0.33mm ²)	#20(0.52mm ²)	#18(0.83mm ²)
电阻 (Ω/m)	0.078	0.050	0.030	0.018
电压降 (V/m)	0.028	0.018	0.011	0.006
建议距离 (m)	少于 20	少于 30	少于 30	少于 30

- 如上表中所示，您可能会遇到电压下降，具体视电线长度而定。如果您使用极长的线来连接摄像机，则摄像机可能无法正常工作。
 - 摄像机工作电压：AC 24V±10%
 - 上图中的电压降测量值可能会因铜线的类型和制造商而异。

通信电缆

对于与控制器通信的摄像机，需要 RS-485/422 通信线。

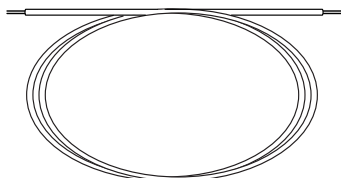

- 建议使用长度在 30m 或以内的电线来进行连接。
- 摄像机不附带提供通信电缆。

连接安装监视器

使用电缆连接摄像机背面的视频输出端子和安装摄像机的视频输入端子。



- 接线会因监视器类型和外围设备而异；请参阅每个设备的用户手册。
- 连接监视器与摄像机时，请确保它们已关闭。

- 本产品是一款网络摄像机，可通过网络传送视频；视频输出端子用于在安装时设置摄像机的成像范围。
- 将该端子用于监控可能会导致视频质量降低等问题。

安装与连接

准备和安装摄像机支架

有关支架和机盒的安装指南，请参阅支架或机盒随附的安装手册。

■ 可用的支架型号

型号	项目	SNP-6200	SNP-6200H
SHP-3700H	室外机盒	是	-
SHP-3700F	天花板安装机盒		
SBP-300HM1	悬挂式安装适配器		
SBP-300WM1	墙上安装适配器		是
SBP-300WM			
SBP-300CM	天花板安装适配器		
SBP-300LM	胸墙安装适配器		
SBP-300KM	角落安装适配器		
SBP-300PM	柱式安装适配器		




■ 有关每个支架（未捆绑提供）外观的信息，请参阅“可选的安装附件”。（第 37 页）

通过水平面附著安装

- ❌ 不能将 SNP-6200H 安装在墙壁或天花板的水平面上。

■ 粘贴模板和安装安装基座


1. 将提供的模板贴在天花板上。根据模板，在天花板中钻 88mm 的孔并将电线穿过该孔。
2. 如图中所示安装安装基座。
3. 在安装露出的支架时，请打开支架底部的铰链门，如图中所示。按住铰链门上的旋钮可以将门打开。

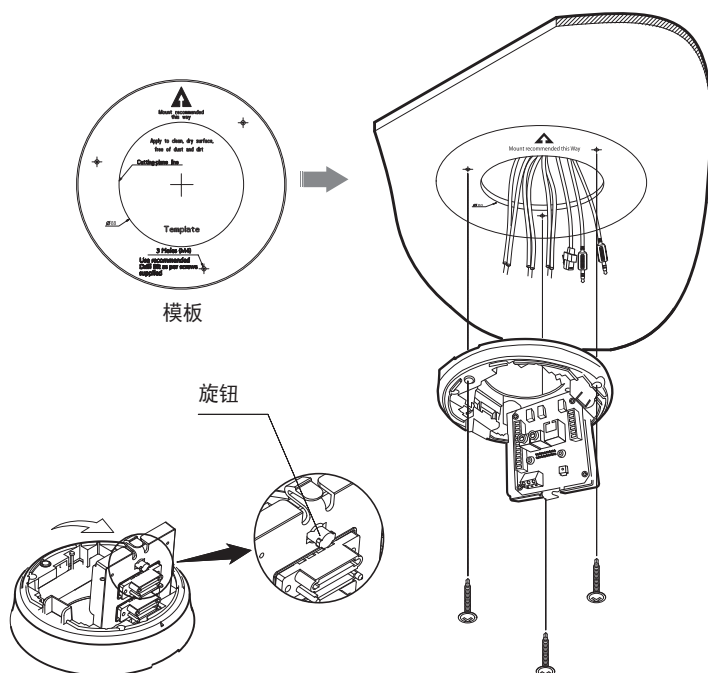

■ 连接端子线

1. 将电线连接至铰链门上的接线端。
请参阅“摄像机接线接口板”。（第 16 页）
2. 接线完成后，关闭铰链门。


- ⚠ 在安装完成之前，不要将摄像机连接到电源插座。
在安装过程中供电可能会导致火灾或损坏产品。

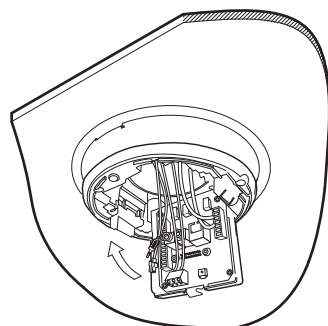

安装与连接


■ 开关 配置摄像机 DIP 开关

用于通信和 ID 协议的 DIP 开关位于摄像机底部。

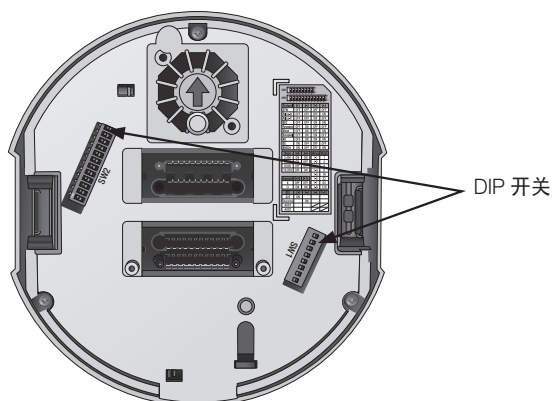

■ 连接摄像机安全索和安装摄像机


1. 首先，如左图所示，从基座中拉出安全电缆，然后将它钩在底座上。安全电缆收在基座内。
 - 要将摄像机安装到安装适配器上，请参阅图中所示的对准导轨标记。
2. 按照图片中所示的对准导轨标记，谨慎地将摄像机安装至安装适配器。

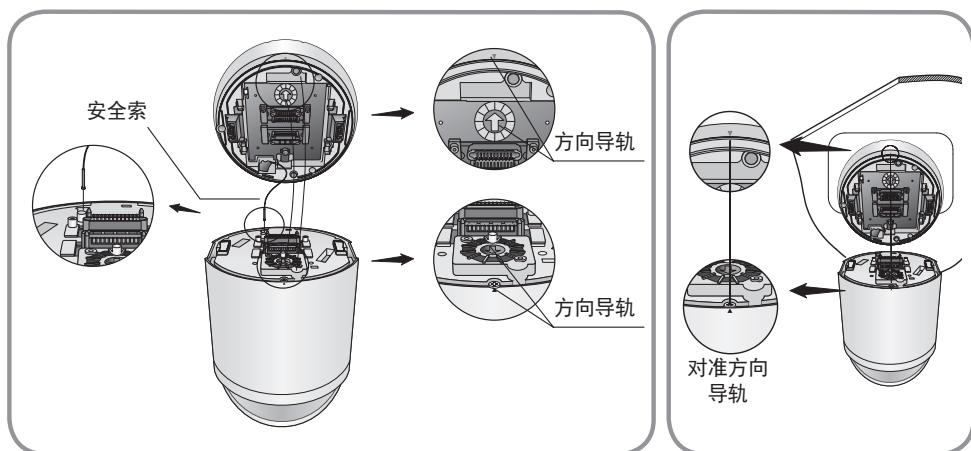

- ! ■ 确保将摄像机的安全索钩住安装适配器，然后开始工作。否则，摄像机跌落可能让您受到严重伤害。

- 要安装或拆下摄像机，请参阅图片。

- 安装摄像机：握住摄像机，并将它推入安装适配器中，如图中所示。
推摄像机，直到听到“咔嗒”声为止。
- 拆下摄像机：要拆下摄像机，请在推起摄像机上的解锁按钮的同时，向下拉摄像机。

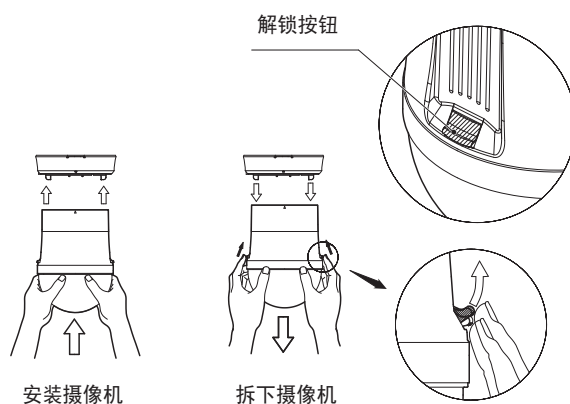


安装与连接

通过墙上安装适配器安装

■ 固定安装基座和支架


1. 顺时针旋转支架以固定基座。

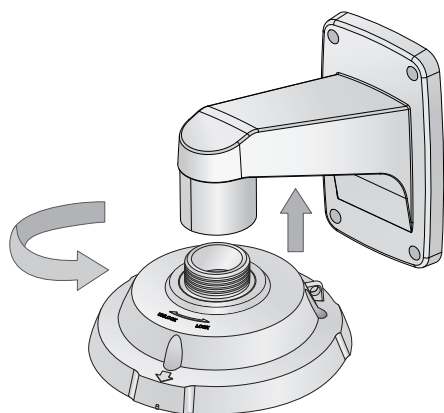


2. 如下图所示，轻按然后提起安装基座底部铰接的门的手柄。
请参阅第 16 页上的“**摄像机接线接口板**”，连接电线。




- 在安装完成之前，不要将摄像机连接到电源插座。在安装过程中供电可能会导致火灾或损坏产品。

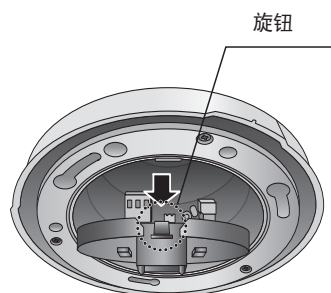


3. 将摄像机安全索连接至安装基座。

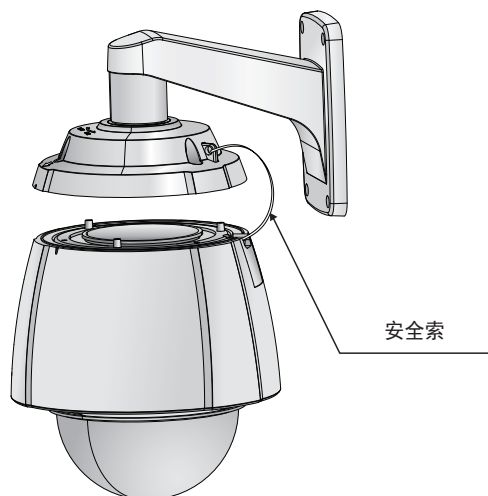


4. 装配摄像机和安装基座
通过对准安装方向导轨装配安装基座和摄像机。

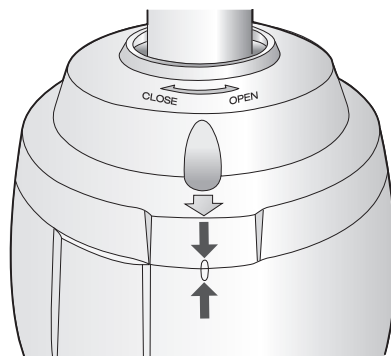

5. 固定摄像机
逆时针旋转摄像机框架，直到摄像机框架上的突起部分与安装基座完美匹配。

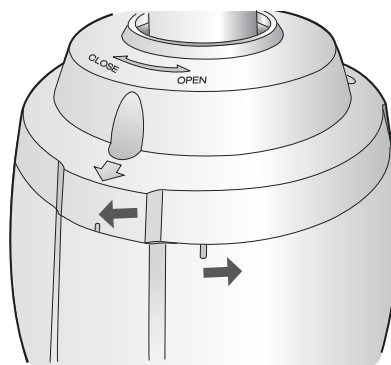

6. 固定摄像机和安装基座
如下图所示，使用 3 颗六角螺钉固定安装基座和摄像机。

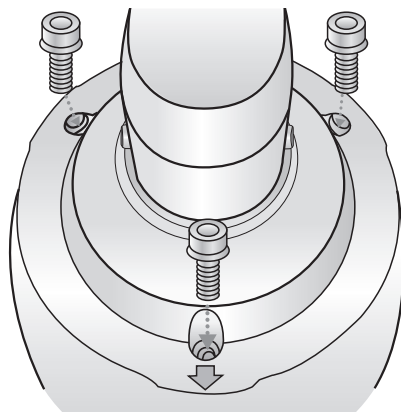

安装与连接


防水注意事项

本产品为室内装置。如安装在室外，请使用室外保护罩防水。

■ 通过合并室外保护罩和墙上安装适配器，将装置安装在墙壁上

1. 将墙上安装适配器安装在垂直墙壁上。如底座安装在倾斜墙壁上，湿气可能通过外部电缆渗入室外保护罩中。
2. 用足够的四氟乙烯塑料带进行装配，包裹住保护罩的螺丝部分。
3. 取下顶盖并将它固定到保护罩边框时，确保垫圈未从顶盖上松脱。
4. 安装墙上安装适配器进行防水，并在墙壁与墙上安装适配器之间及其周围区域涂上硅密封胶进行密封。


! ■ 安装面不平时请特别注意，确保采取正确的密封措施。

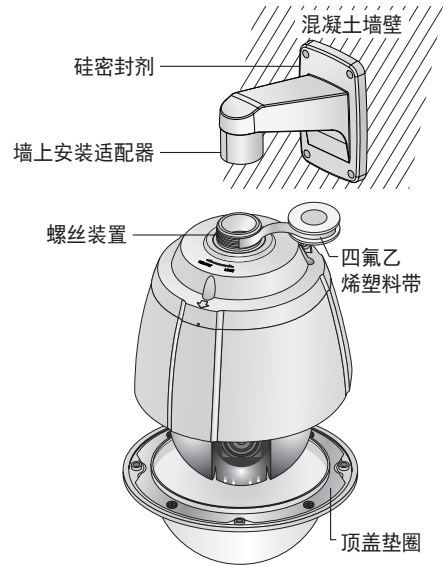

■ 通过合并室外保护罩和天花板安装适配器，安装在墙壁上

1. 用足够的四氟乙烯塑料带进行装配，包裹住保护罩的螺丝部分。
2. 取下顶盖并将它固定到保护罩边框时，确保垫圈不会从顶盖上松脱。
3. 安装天花板安装适配器进行防水，并在墙壁与天花板安装适配器之间及其周围区域涂上硅密封胶进行密封。

! ■ 安装面不平时请特别注意，确保采取正确的密封措施。

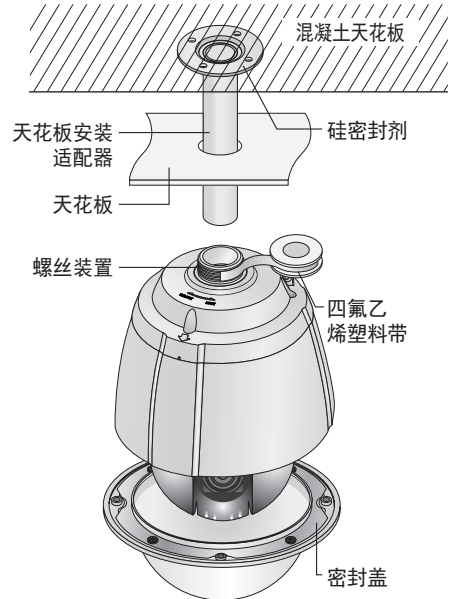


可选的安装附件


为了方便安装，您可以购买可选的附件。

1. 如果将摄像机安装在墙壁上

- 墙上安装适配器 (SBP-300WM1)

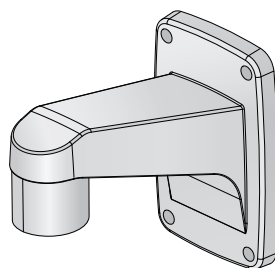


- 墙上安装适配器 (SBP-300WM)

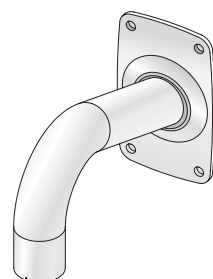

2. 如果将摄像机安装在天花板上


- 天花板安装适配器 (SBP-300CM)

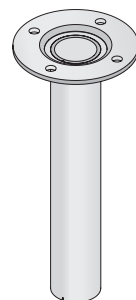

安装与连接


3. 如果将墙上安装适配器 (SBP-300WM/SBP-300WM1) 安装在长度至少为 80 mm 的圆柱上

- 柱式安装适配器 (SBP-300PM)

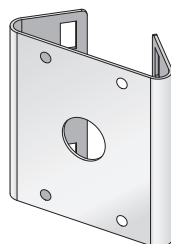


4. 如果将墙上安装适配器 (SBP-300WM /SBP-300WM1) 安装在墙角

- 角落安装适配器 (SBP-300KM)

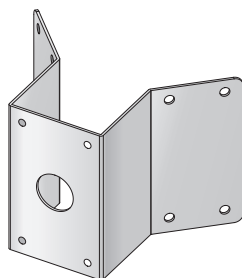


5. 如果安装在屋顶

- 胸墙安装适配器 (SBP-300LM)

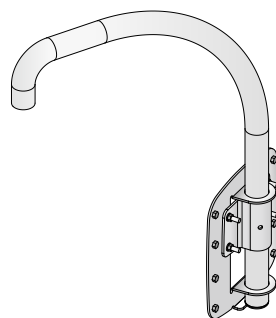


6. 如果将 SNP-6200 安装在室外

- 室外机盒 (SHP-3700H)

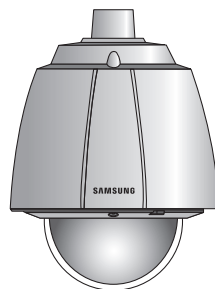


7. 如果将 SNP-6200 作为内嵌组件安装在天花板上

- 圆顶摄像机的平齐安装室内机盒 (SHP-3700F)

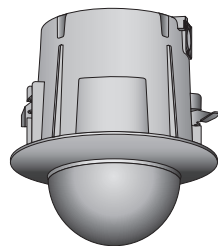

8. 如果将 SNP-6200 安装在墙上安装适配器或天花板安装适配器中

- 悬挂式安装适配器 (SBP-300HM1)

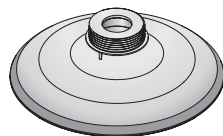


安装与连接

插入/拔出 SD 记忆卡


- ❗ 先从摄像机拔下电源线，然后再插入 SD 存储卡。

插入 SD 记忆卡

1. 打开摄像机背面的盖子。(SNP-6200)

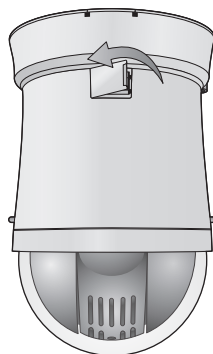


通过使用提供的螺丝起子逆时针旋转 4 颗螺钉将其松开，然后揭开圆顶盖。(SNP-6200H)

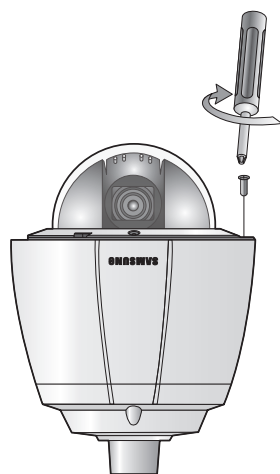

2. 请按图中所示箭头方向推 SD 存储卡。

- ❗ 请勿在 SD 内存卡翻转时用力插入。否则，可能会损坏 SD 内存卡。

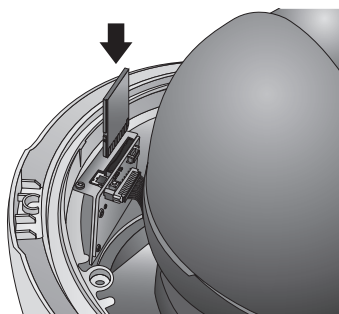


拔出 SD 记忆卡

轻轻地按压记忆卡露在外面的一端，依图示的方式从插槽中弹出记忆卡。



- 过度用力按压 SD 记忆卡可能会导致卡不可控制地从插槽中弹出。
- 要关闭摄像机或取出 SD 内存卡，将<录制>从<SD 录制>设置为<关>，并按[应用 ()]。 (第 89 页)
- 如果关闭摄像机或取出 SD 内存卡，并且其中包含来自产品的数据，则数据可能丢失或受损。

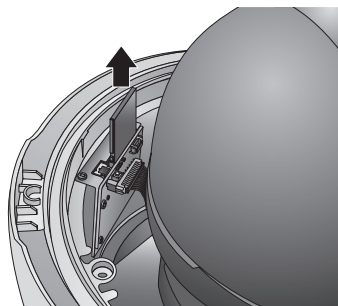

记忆卡信息(不含)

什么是记忆卡？

记忆卡是一种外部数据储存设备，它的开发为使用数字设备进行录制和共享音频、视频和文本数据提供了崭新的方式。

选择一款适合您的记忆卡

您的摄像头支持 SD/SDHC 记忆卡。

根据记忆卡的型号和制作材料不同，您可能会遇到兼容性的问题。

对您的摄像头，我们建议您使用以下厂商制造的记忆卡：

SD/SDHC 记忆卡：Sandisk, Transcend

建立将 4GB ~ 32GB 的存储卡与本摄像机配合使用。

回放性能可能受记忆卡速度的影响，因此，请使用高速记忆卡。

建议您使用至少为类别 6 速度的存储卡。

记忆卡的使用

SD 和 SDHC 记忆卡有一个能够禁止写入的开关。

将开关拨到锁定位置能够保证记忆卡中的数据不会因意外删除，但同时，您也无法向其中写入数据。


网络连接和设置

可根据您的网络配置来设置网络的设定。

将摄像头与局域网直接连接


连接局域网内的本地 PC 和摄像头

1. 启动本地 PC 上的网络浏览器。
2. 在浏览器的地址栏中输入 IP 地址。

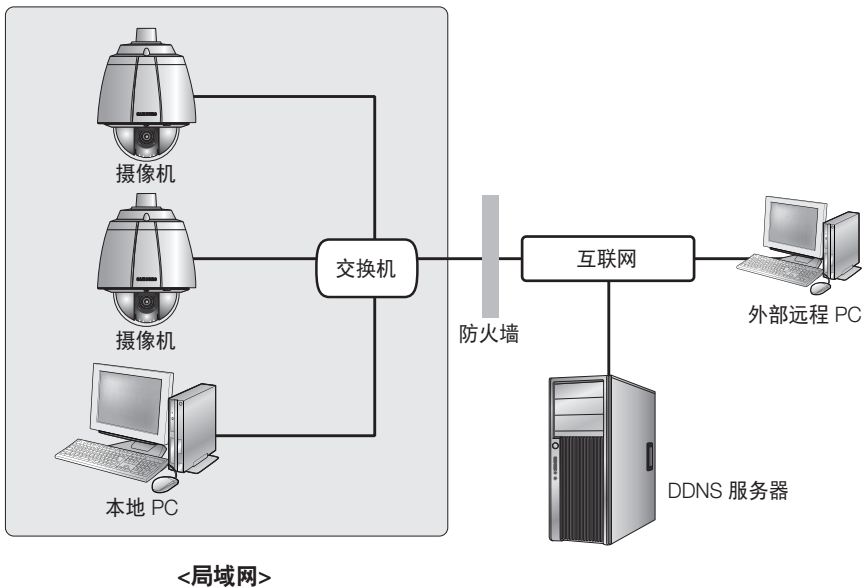

- 在正确设置防火墙或端口转发前，局域网外部的远程互联网 PC 可能无法连接安装于内部网的摄像头。在此情况下，联系网络管理员解决问题。
- 根据出厂默认值，会自动从 DHCP 服务器分配 IP 地址。如果没有可用的 DHCP 服务器，则会将 IP 地址设置为 192.168.1.100。要更改 IP 地址，请使用 IP Installer。有关 IP Installer 使用的详细信息，请参阅“静态 IP 设置”。(第 47 页)

将摄像机直接连接至基于 DHCP 的 XDSL/有线电视网调制解调器

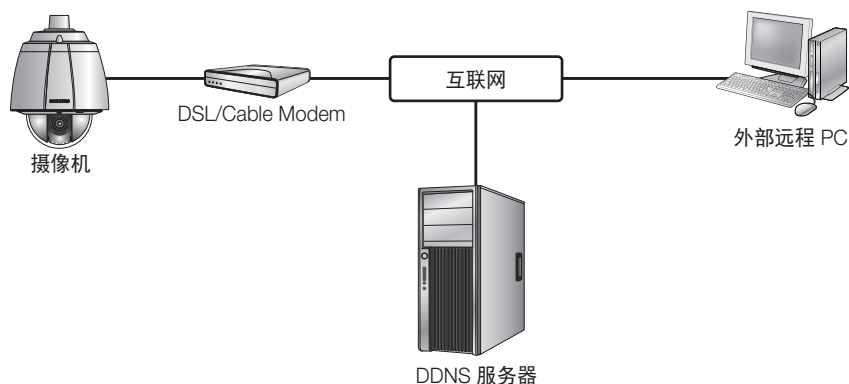


1. 使用交叉 LAN 电缆将网络电缆直接连接至您的 PC。
2. 运行 IP Installer 并更改摄像机的 IP 地址，以便可以使用桌面上的 Web 浏览器连接至互联网。
3. 使用互联网浏览器连接至 Web Viewer。
4. 移至 [设置] 页面。
5. 移至 [网络] – [DDNS] 并配置 DDNS 设置。
6. 移至 [网络] – [接口]，并将网络类型设置为 [DHCP]。
7. 将摄像机（已从您的 PC 上拔下）直接连接至调制解调器。
8. 重新启动摄像机。



- 有关注册 DDNS 设置，请参阅“注册 DDNS”。（第 83 页）
- 有关配置 DDNS 设置，请参阅“DDNS”。（第 82 页）
- 有关设置网络类型，请参阅“接口”。（第 81 页）

网络连接和设置

直接将摄像机连接到 PPPoE 调制解调器

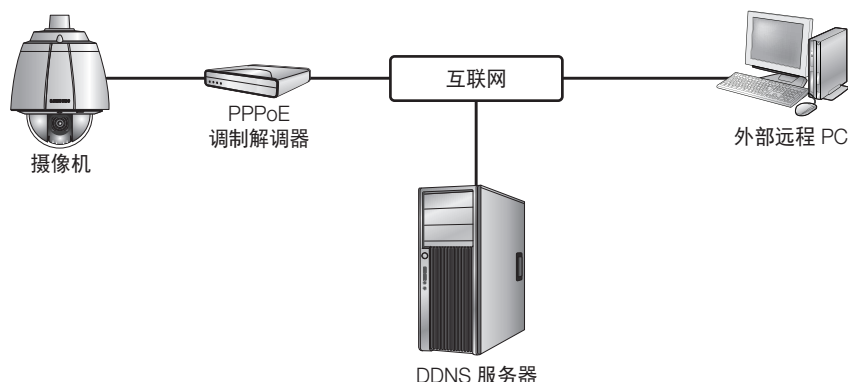


1. 使用交叉 LAN 电缆将网络电缆直接连接至您的 PC。
2. 运行 IP Installer 并更改摄像机的 IP 地址，以便可以使用桌面上的 Web 浏览器连接至互联网。
3. 使用互联网浏览器连接至 Web Viewer。
4. 移至 [设置] 页面。
5. 移至 [网络] – [DDNS] 并配置 DDNS 设置。
6. 移至 [网络] – [接口]，并将网络类型设置为 [PPPoE]。
7. 将摄像机（已从您的 PC 上拔下）直接连接至调制解调器。
8. 重新启动摄像机。



- 有关注册 DDNS 设置，请参阅“注册 DDNS”。（第 83 页）
- 有关配置 DDNS 设置，请参阅“DDNS”。（第 82 页）
- 有关设置网络类型，请参阅“接口”。（第 81 页）

将摄像头与使用 PPPoE/CABLE 调制解调器的宽带路由器连接

适用于小型网络环境，如家庭、SOHO 以及普通的商店。

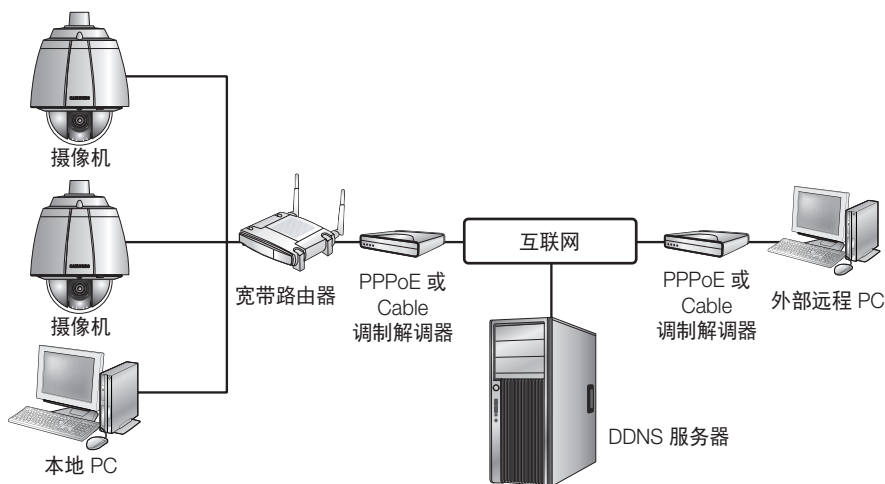

配置连接到宽带路由器

在配置连接到宽带路由器的本地 PC 的网络设置时，遵循以下说明。

- 选择：<网上邻居> → <属性> → <本地连接> → <属性> → <常规> → <Internet 协议 (TCP/IP)> → <属性> → <自动获得 IP 地址> 或 <使用下面的 IP 地址>。
- 若您选择的是 <使用下面的 IP 地址>，遵照以下说明操作：

例1) 若宽带路由器的地址 (LAN IP) 为 192.168.1.1

IP 地址：192.168.1.100
子网掩码：255.255.255.0
默认网关：192.168.1.1

例2) 若宽带路由器的地址 (LAN IP) 为 192.168.0.1

IP 地址：192.168.0.100
子网掩码：255.255.255.0
默认网关：192.168.0.1

例3) 若宽带路由器的地址 (LAN IP) 为 192.168.xxx.1


IP 地址：192.168.xxx.100
子网掩码：255.255.255.0
默认网关：192.168.xxx.1



- 关于宽带路由器的地址，请参见产品文档。
- 如需宽带路由器的正向端口的更多信息，请参阅“路由器端口设置”。(第 50 页)

网络连接和设置

在 IP INSTALLER 中使用的按钮

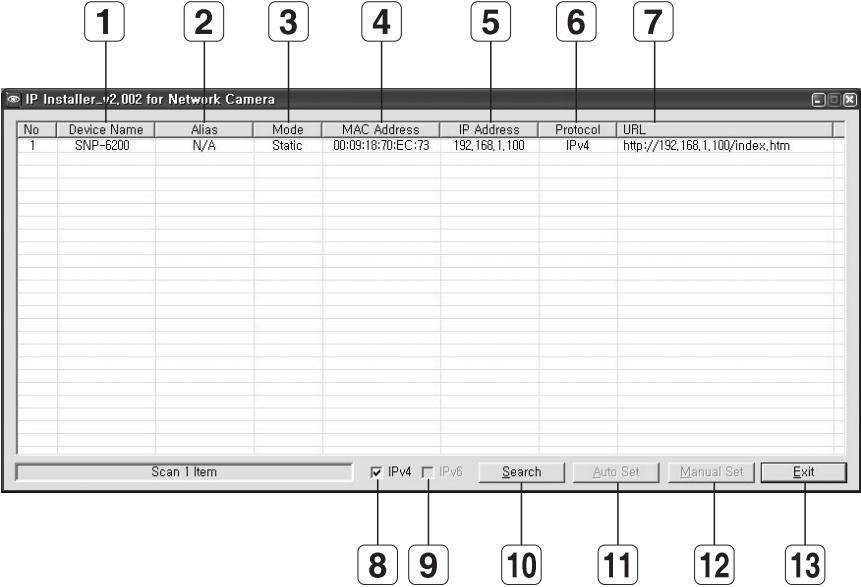

项目	说明
1 Device Name	已连接摄像机的型号名称。 单击此列可以按型号名称对列表进行排序。 但是，如果在搜索时单击将会停止搜索。
2 Alias	此功能当前不可用。
3 Mode	对当前网络连接状态显示 <Static>，<Dynamic> 和 <PPPoE>。
4 MAC(Ethernet) Address	已连接摄像机的以太网地址。 单击此列可以按以太网对列表进行排序。 但是，如果在搜索时单击将会停止搜索。
5 IP Address	IP 地址。 单击此列可以按 IP 地址对列表进行排序。 但是，如果在搜索时单击将会停止搜索。
6 Protocol	摄像机的网络设置。 出厂默认设置为 “IPv4”。 使用 IPv6 设置的摄像机将显示 “IPv6”。

项目	说明
7 URL	DDNS URL 地址可以从外部互联网访问。 但是，如果 DDNS 注册失败，此按钮将被摄像机的 <IP Address> 代替。
8 IPv4	扫描使用 IPv4 设置的摄像机。
9 IPv6	扫描使用 IPv6 设置的摄像机。 只能在符合 IPv6 的环境中激活。
10 Search	扫描当前连接到网络的摄像机。 但是，如果没有选取 IPv4 也没有选取 IPv6，该按钮将呈灰色。
11 Auto Set	IP Installer 自动配置网络设置。
12 Manual Set	手动配置网络设置。
13 Exit	退出 IP Installer 程序。



- 对于 IP Installer，请仅使用在安装 CD 中提供的版本，或者最新版本（如果可以获得）。
可以从 Samsung 网站 (www.samsungcctv.com) 下载最新版本。

静态 IP 设置


手动网络设置

运行 <IP Installer_v2.XX.exe> 以显示摄像机搜索列表。
在初始启动时，[Auto Set] 和 [Manual Set] 将呈灰色



- 对于以 IPv6 设置为基础的摄像机，这些按钮将呈灰色，因为摄像机不支持此功能。

- 从搜索列表中选择一个摄像机。
在摄像机的标签上检查摄像机的 MAC 地址。
将激活 [Auto Set] 和 [Manual Set] 按钮。
- 单击 [Manual Set]。
Manual Setting 对话框将会出现。
将显示摄像机的 <IP Address>、<Subnet Mask>、
<Gateway>、<HTTP Port> 和 <VNP Port> 默认值。

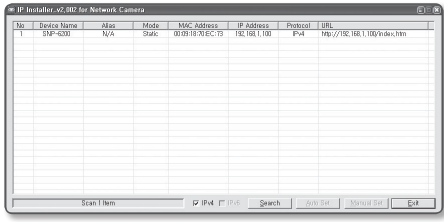

网络连接和设置

3. 在 <Address> 窗格中，提供必需的信息。

- MAC (Ethernet) Address：印在摄像机标签上的 MAC 地址会自动显示，不需要用户设置。



- 只有在未选中 DHCP 复选框的情况下，才能配置静态 IP 设置。

The 'Manual Setting' dialog box contains the following fields:

- Address**: DHCP (unchecked)
- MAC Address**: 000000000000
- IP Address**: 192 . 168 . 1 . 100
- Subnet Mask**: 255 . 255 . 255 . 0
- Gateway**: 192 . 168 . 1 . 1
- Password**: (empty field)
- Port**: HTTP Port (80), VNP Port (4520)
- Buttons**: OK, Cancel

如果不使用宽带路由器

若要设置 <IP Address>、<子网掩码> 和 <Gateway>，请联系网络管理员。

4. 在 <Port> 窗格中，提供必需的信息。

- HTTP Port：用于使用互联网浏览器访问摄像机，默认值为 80。
- VNP Port：用于控制视频信号传输，默认值为 4520。

5. 输入密码。

输入用来访问摄像机的“admin”帐户的密码。
默认密码为“4321”。

The 'Manual Setting' dialog box contains the following fields:

- Address**: DHCP (unchecked)
- MAC Address**: 000000000000
- IP Address**: 192 . 168 . 1 . 100
- Subnet Mask**: 255 . 255 . 255 . 0
- Gateway**: 192 . 168 . 1 . 1
- Password**: (empty field)
- Port**: HTTP Port (80), VNP Port (4520)
- Buttons**: OK, Cancel



- 默认密码可能会向黑客线程公开，因此建议您在安装产品之后更改密码。请注意，不更改密码导致的安全和其他相关问题，用户自己承担责任。
- 如果您要更改密码，请参考用户设置的“管理员密码更改”。(第 99 页)

6. 单击 [OK]。

将完成手动网络设置。

如果使用宽带路由器

- IP Address：输入宽带路由器提供的 IP 范围内的地址。

例) 192.168.1.2~254,
192.168.0.2~254,
192.168.XXX.2~254

- Subnet Mask：宽带路由器的 <子网掩码> 将是摄像机的 <子网掩码>。
- Gateway：宽带路由器的 <本地 IP 地址> 将是摄像机的 <Gateway>。



- 设置可能因连接的宽带路由器型号而异。有关详细信息，请参阅适用路由器的用户手册。
- 如需宽带路由器的正向端口的更多信息，请参阅“路由器端口设置”。(第 50 页)

The 'Wireless-G 设置' interface shows the following configuration options:

- Internet 设置**: Internet 连接类型 (自动配置 - DHCP)
- 可选设置 (一些 IP 设置)**:
 - 路由器名称: Router_1
 - 主机名: (empty)
 - 域名: (empty)
 - MTU: 手动
 - 尺寸: 1400
- 网络设置**:
 - 路由器 IP: 本地 IP 地址 (192 . 168 . 1 . 1), 子网掩码 (255 . 255 . 255 . 0)

如果宽带路由器连接了多个摄像机
彼此清楚地配置 IP 相关设置和端口相关设置。
例)

类别		摄像机 1	摄像机 2
IP 相关设置	IP Address	192.168.1.100	192.168.1.101
	Subnet Mask	255.255.255.0	255.255.255.0
	Gateway	192.168.1.1	192.168.1.1
端口相关设置	HTTP Port	8080	8081
	VNP Port	4520	4521



- 如果 <HTTP Port> 设置为除 80 以外的值，您必须在互联网浏览器的地址栏中提供 <Port> 号，才能访问摄像机。
例) http://IP address: HTTP Port
http://192.168.1.100:8080

自动网络设置

运行 <IP Installer_v2.XX.exe> 以显示摄像机搜索列表。
在初始启动时，[Auto Set] 和 [Manual Set] 将呈灰色。

- 对于以 IPv6 设置为基础的摄像机，这些按钮将呈灰色，因为摄像机不支持此功能。

- 从搜索列表中选择一个摄像机。
在摄像机的标签上检查摄像机的 MAC 地址。
将激活 [Auto Set] 和 [Manual Set] 按钮。
- 单击 [Auto Set]。
Auto Setting 对话框将会出现。
将自动设置 <IP Address>、<Subnet Mask> 和 <Gateway>。
- 输入密码。
输入用来访问摄像机的“admin”帐户的密码。
默认密码为“4321”。
 - 默认密码可能会向黑客线程公开，因此建议您在安装产品之后更改密码。
请注意，不更改密码导致的安全和其他相关问题，用户自己承担责任。
 - 如果您要更改密码，请参考用户设置的“管理员密码更改”。(第 99 页)
- 单击 [OK]。
将完成自动网络设置。

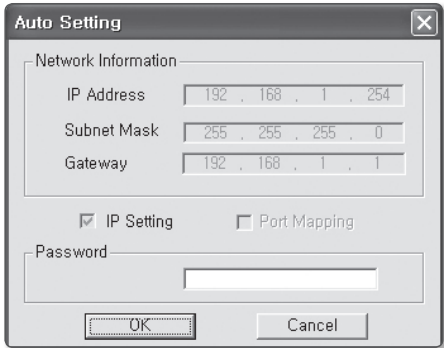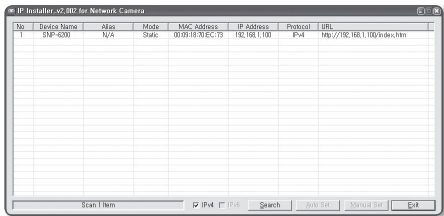

网络连接和设置



动态 IP 设置

动态 IP 环境设置

- 动态 IP 环境示例
 - 如果连接了摄像机的宽带路由器由 DHCP 服务器分配了 IP 地址
 - 如果使用 DHCP 协议将摄像机直接连接至调制解调器
 - 如果 IP 由内部 DHCP 服务器通过 LAN 分配

检查动态 IP

1. 在用户的本地计算机上运行 IP Installer。
分配了 <Dynamic IP> 地址的摄像机将会显示在列表中。
2. 从搜索结果中选择摄像机。
3. 单击 [Manual Set] 按钮，然后检查摄像机的
<Dynamic IP> 地址。
如果取消选择 <DHCP>，您即可将 IP 更改为
<Static>。

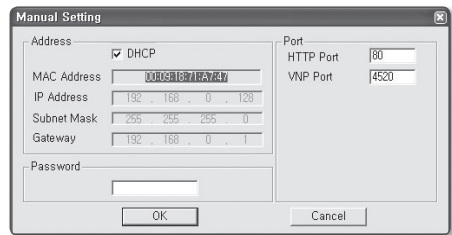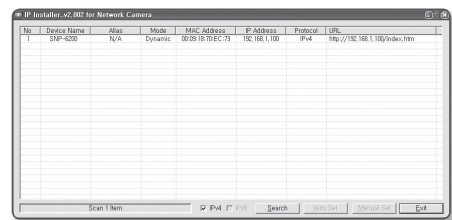


路由器端口设置

如果您安装了连接摄像机的宽带路由器，就必须设置在宽带路由器上前移的端口范围，以便远程 PC 可以其中的摄像机。

手动端口设置

1. 从宽带路由器的 Setup 菜单中，选择
<Applications & Gaming> - <Port Range Forward>。
对于第三方宽带路由器端口范围前移设置，请参阅该宽带路由器的用户手册。
2. 对连接到宽带路由器的每个摄像机选择 <TCP> 和 <UDP Port>。
宽带路由器的每个端口号都应该与在摄像机的 Web Viewer 菜单的 <设置> - <网络> - <端口> 中指定的端口号相符。
3. 完成后，单击 [Save Settings]。
将保存设置。

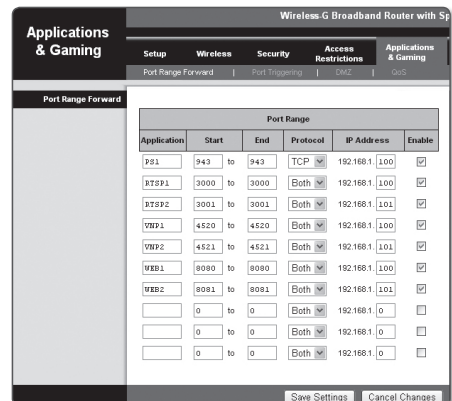

- 
- 以上样本说明基于 CISCO 的宽带路由器。
 - 设置可能因连接的宽带路由器型号而异。
有关详细信息，请参阅适用路由器的用户手册。


设置多个网络摄像机的端口范围前移

当多个网络摄像机连接到一个宽带路由器设备时，您应将路由器的 TCP 943 端口前移到所连接摄像机的 TCP 943 端口。

- 
- 如果您没有正确设置路由器的 TCP 943 端口，则无法从摄像机的网页上获得任何视频流。

- TCP 943 端口是摄像机的 Silverlight 策略服务器端口。
- 您可通过配置网页在宽带路由器设备上设置 正向端口的规则。
- 您无法更改摄像机的 Silverlight 策略服务器端口。
- 您可通过其配置网页更改摄像机的端口，但不可更改策略服务器端口。

当摄像机 1 和摄像机 2 连接至同一路由器时：

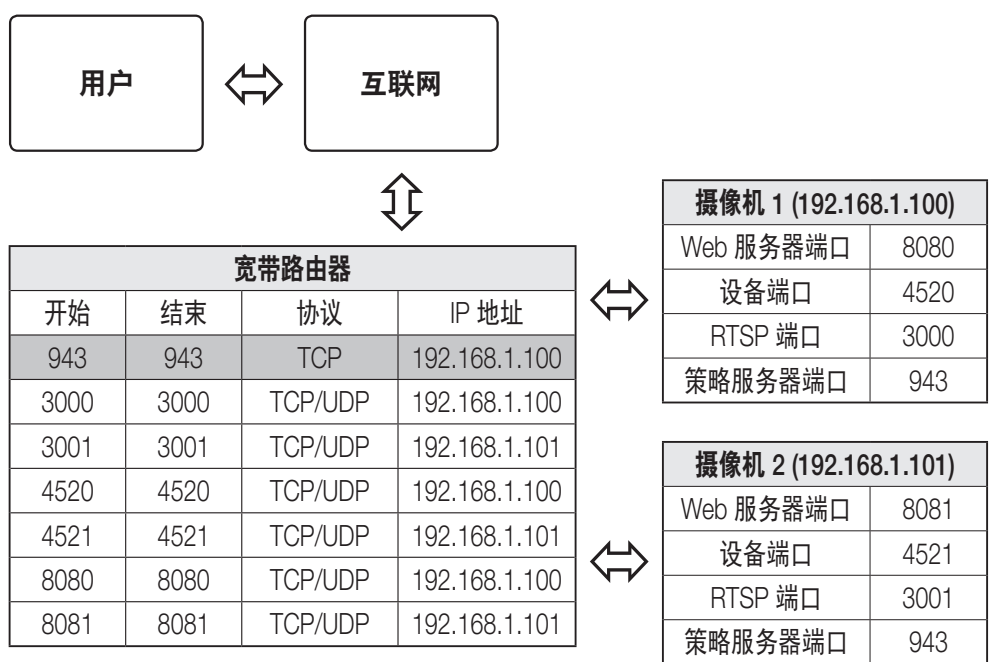


网络连接和设置

从共享的本地 PC 连接到摄像机

1. 运行 IP Installer。
它将扫描连接的摄像机，并显示摄像机列表。
2. 双击要访问的摄像机。
互联网浏览器将启动，并连接到摄像机。



■ 您也可以在互联网浏览器的地址栏中键入所发现摄像机的 IP 地址的方式访问摄像机。

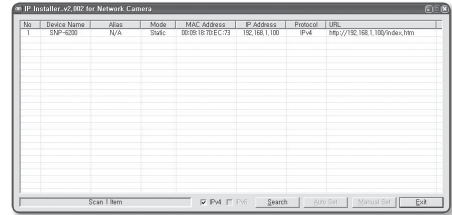

从远程 PC 通过互联网连接到摄像机

由于不允许在不属于宽带路由器网络群集的远程计算机上使用 IP Installer，所以用户需通过摄像机的 DDNS URL 在宽带路由器网络内访问摄像机。

1. 您应该设置宽带路由器端口范围前移，然后才能访问宽带路由器网络中的摄像机。
2. 从远程 PC 启动互联网浏览器，并在地址栏中键入摄像机的 DDNS URL 地址，或宽带路由器的 IP 地址。
例) [http://www.samsungipolis.com/\[产品 ID\]](http://www.samsungipolis.com/[产品 ID])




■ 有关注册 DDNS 设置，请参阅“注册 DDNS”。(第 83 页)

web 查看器

连接到摄像机

通常，您应该

1. 启动互联网浏览器。
2. 在地址栏中键入摄像机的 IP 地址。
例) • IP 地址 (IPv4) : 192.168.1.100
→ http://192.168.1.100 - 将会出现登录对话框。
• IP 地址 (IPv6) : 2001:230:abcd:ffff:0000:0000:
ffff:1111 → http://[2001:230:abcd:ffff:0000:0000:
ffff:1111] - 将会出现登录对话框。

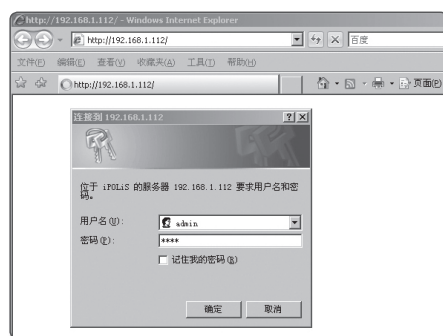

如果 HTTP 端口为除 80 以外的值

1. 启动互联网浏览器。
2. 在地址栏中键入摄像机的 IP 地址和 HTTP 端口号。
例) IP 地址 : 192.168.1.100:HTTP 端口号(8080) → http://192.168.1.100:8080
- 将会出现登录对话框。

使用 URL

1. 启动互联网浏览器。
2. 在地址栏中键入摄像机的 DDNS URL。
例) URL 地址 : http://www.samsungipolis.com/[产品 ID]
- 将会出现登录对话框。

检查 DDNS 地址

如果摄像机直接连接到 DHCP 有线电视网调制解调器、xDSL 调制解调器或 PPPoE 调制解调器，每当您尝试连接到 ISP（互联网服务提供商）服务器时，您的网络 IP 地址都会更改。在这种情况下，将不会通知您 IP 地址已被 DDNS 更改。

一旦您向 DDNS 服务器注册了基于动态 IP 的设备，当尝试访问该设备时，就可以轻松检查更改的 IP。要向 <DDNS> 服务器注册您的设备，请访问 www.samsungipolis.com 并先注册您的设备，然后将 Web Viewer 的 <网络> - <DDNS> 设置为 <Samsung DDNS>，同时提供用于 DDNS 注册的 <产品 ID>。

web 查看器

登录

每当访问摄像机时，登录窗口都会出现。
输入用户 ID 和密码以访问摄像机。


1. 在 <用户名(U)> 输入框中输入“admin”。
管理员 ID，即“admin”是固定的，无法更改。
2. 在 <密码(P)> 输入框中输入“4321”。
如果更改了密码，请输入更改的密码。
3. 单击 [确定]。
如果已成功登录，您将会看到 Live Viewer 屏幕。



- 默认的用户 ID 为“admin”，默认的密码为“4321”。
- 为安全起见，请确保在 <系统> - <用户> 中更改了密码。
- 默认密码可能会向黑客线程公开，因此建议您在安装产品之后更改密码。
请注意，不更改密码导致的安全和其他相关问题，用户自己承担责任。
- 如果您在完成输入之后选中“记住我的密码(R)”选项，则从下次起将自动登录，而不会提示输入登录信息。





- 如果屏幕大小是 100%，则您可以体验最佳视频质量。降低该比率可能会切掉边框上的图像。

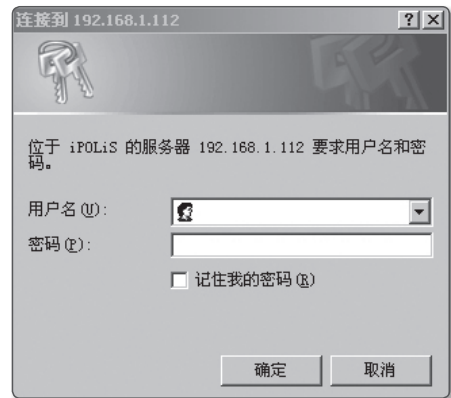

安装 ActiveX

如果首次连接到摄像机，您将会看到安装消息。然后，安装所需的 ActiveX 以访问摄像机并在摄像机内实时控制视频。


1. 访问监视页面的开始屏幕时，请单击该页面顶部的黄色警告消息。
2. 单击 <Install This Add-on for All users on This Computer...>。
3. 安全性警告弹出窗口将会出现，单击 [Install]。
4. 访问摄像机后如果已正确安装了所需的 ActiveX，应该会出现现场屏幕。

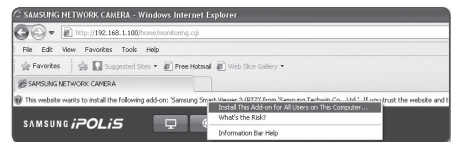

安装 Silverlight Runtime

如果您的计算机未安装 Silverlight Runtime 或只安装了 Runtime 旧版本，当访问 Web 查看器时，会自动将打开 Silverlight Runtime 安装页面。

1. 单击 <Click Here>。

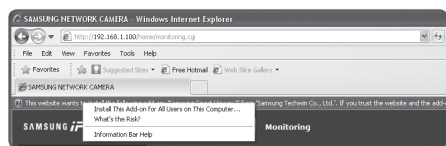

2. 当文件下载对话框弹出时，请单击 <Run>。



3. 完成下载后，请单击 <Run>。




web 查看器

4. 将显示 Silverlight Runtime 安装页面。
单击 <Install now> 以进行安装。



5. 完成后, 请单击 <Close>。

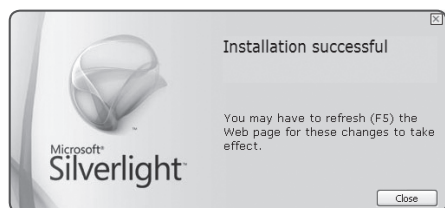

6. 关闭并重新启动 Web 浏览器, 然后尝试访问 Web 查看器。
正确安装 Silverlight Runtime 后, 将看到现场屏幕。



- 为了使安装正常进行, 请按以下方式设置拦截弹出窗口设置:

例) Internet Explorer → 工具 → 拦截弹出窗口 → 关闭弹出阻止程序 (B)

- 但是, 未连接至互联网的 MAC OS X 用户, 可以使用提供的安装 CD 来安装 Silverlight Runtime (运行 CD 中的可执行文件 “Silverlight_xxx.dmg”。将会指导您完成软件的安装过程)。



使用现场屏幕



项目	说明
1 正在监视	移至监视屏幕。
2 播放	切换至播放 SD 内存卡中录制的数据的监视屏幕。
3 设置	移至设置屏幕。
4 查看器屏幕	显示屏幕上的现场视频。
5 自动聚焦	自动调整焦点。
6 辅助	打开或关闭 辅助 设备。
7 继电器	激活警报输出端口。
8 音频/麦克风控制	激活音频和麦克风，控制音频音量。

web 查看器

项目	说明
9 隐藏警报指示器	隐藏查看器屏幕边沿附近的警报指示器。 ■ 在下列情况下，警报消息将弹出在查看器边框上。 - 如果事件（警报、移动探测、视频分析）发生 - 如果关闭摄像机 - 如果网络断开连接
10 PTZ	控制摄像机的平移/倾斜/变焦操作。
11 数字 PTZ	使用鼠标滚轮来控制数字变焦。
12 屏幕优化.全屏	将屏幕调整为最佳大小，并在现场屏幕上显示全屏图标。
13 捕捉	当前图像另存为 .jpg 或 .bmp 图像文件。
14 视频格式	可以在 <音频 & 视频> 设置菜单下的 <视频配置文件> 中选择配置文件类型。  如果显示“编解码器无效”消息，请再次从配置文件列表中选择配置文件类型。



- 如果温度低于操作范围，则可能不会产生视频信号。此种情况下，请等待视频。
- 只有管理员能够访问与播放和设置菜单相关的网页。对于其他用户帐户，会取消激活这些按钮。

启用缩放区域模式

从查看器屏幕右键单击以显示下面的上下文菜单：
菜单项和说明

- AreaZoom：缩放用鼠标选定的区域。
- Goto 1X：将当前缩放因数更改为 x1。
- Prev：返回上一区域和设置。
- Next：如使用 Prev 导航，它将切换到导航前的区域和设置。
- Exit Areazoom：退出区域缩放模式。
- Goto Preset：移至预设位置。




捕捉快照

1. 在场景上单击 [] 进行捕捉。
捕捉对话框将会出现。
2. 确认保存路径，单击[保存(S)]按钮。
屏幕截图会保存在指定的路径中。



- 如果您在 Windows 7 计算机上使用 IE8 时发生视频中断，请从“工具 - Internet 选项 - 安全”中取消选择“启用保护模式”。

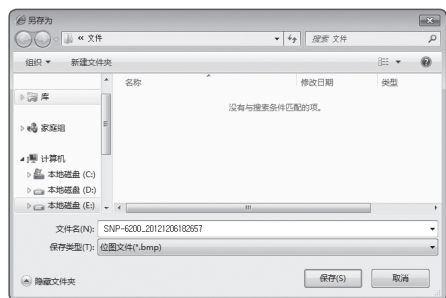

切换音频声音

1. 单击 [音频 ()] 按钮。
查看器中将显示相应的按钮。
2. 单击该按钮以根据需要听取声音/静音。
此按钮工作方式切换按钮。



切换麦克风声音

1. 单击 [麦克风 ()] 按钮。
查看器中将显示相应的按钮。
2. 单击该按钮以开始/停止交谈。
此按钮工作方式切换按钮。
单击麦克风按钮时，Silverlight 权限对话框将会出现。



- 若没有麦克风，“找不到任何可用的音频捕捉设备!” 消息将会出现。



- 因为音频和麦克风按钮 ( , ) 仅用于在查看器屏幕上显示或隐藏切换按钮，所以您无法控制那些按钮的实际操作。因此，如果您要调整麦克风或音频设置，请使用查看器屏幕上的切换按钮。

适合全屏

1. 单击 [全屏 ()] 按钮。
查看器中将显示相应的按钮。
2. 单击该按钮。
这将使查看器适合全屏。
3. 要退出全屏模式，请按键盘上的 [Esc]。



- 对于 ActiveX 查看器，只需单击页面上相应的按钮就可以执行该操作，因为音频 I/O 按钮和全屏按钮未显示在屏幕的顶部。

web 查看器

控制 PTZ

1. 按下 [PTZ ()] 按钮。
2. 当屏幕上出现 PTZ 按钮条时，请使用方向按钮根据您的喜好调整摄像机角度、变焦系数或聚焦。


 有关 PTZ 使用的详细信息，请访问“PTZ 设置”。
(第 68 页)



播放录制的视频

 在可以播放视频之前，必须配置录制设置。有关录制设置的详细信息，请参阅“SD 录制”。(第 89 页)

在按事件搜索后播放内容

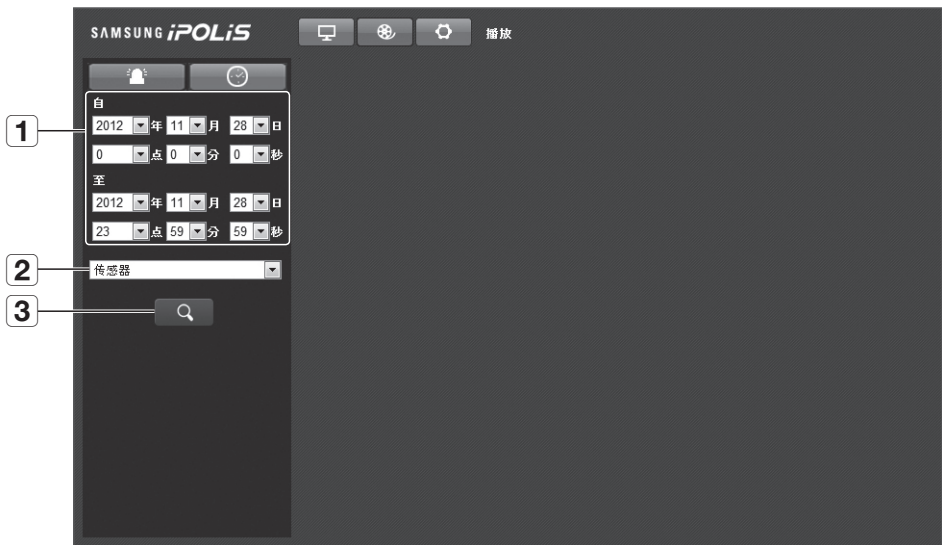


项目	说明
1 搜索范围设置	根据 SD 内存卡中保存的数据设置搜索日期和时间。
2 搜索事件设置	将事件类型设置为在搜索时间段内搜索。
3 事件搜索	运行事件搜索。

1. 单击 [播放 (▶)] 按钮。
2. 指定搜索的开始和结束时间。
3. 选择指定时间段内搜索的事件类型。
4. 单击 [搜索 (🔍)] 按钮。
搜索结果将显示在列表中。



- 如果在搜索时间段内录制了超过 800 个事件，则搜索将限制为录制第 800 个事件的日期。
例如，如果搜索时间段在一个月的第 10 天和第 15 天之间，并且在第 10 天到第 11 天录制了超过 800 个事件，则搜索将限制为最多第 11 天（共 800 个事件），将找不到之后（从第 12 天开始）的事件。

5. 在搜索列表中选择要播放的数据项目。
6. 单击 [播放 (▶)] 按钮。
7. 要停止播放视频，请单击 [停止 (■)]。
要返回到搜索屏幕，请单击 [退出 (🏠)]。

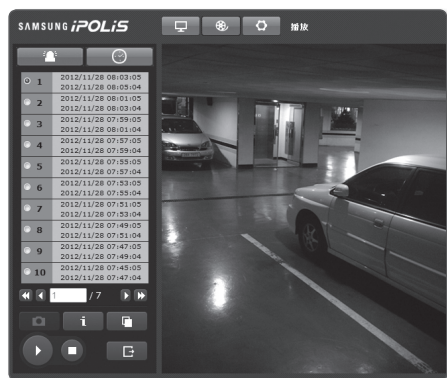

web 查看器

在按时间搜索后播放



项目	说明
1 时间条	通过移动时间条播放特定时间段的部分。
2 搜索日期设置	使用日历设置搜索日期。 在日历的框中显示 SD 内存卡中有视频的日期。
3 全屏	转换当前图像，使它覆盖显示器的最大尺寸。
4 屏幕优化	转换摄像机图像，使它适合 Web 浏览器窗口。
5 捕捉	当前图像另存为 .jpg 或 .bmp 图像文件。
6 音频开/关	它用于设置已录制视频的音频使用选项。 启用此按钮时，将激活视频的音频。
7 视频信息	屏幕上将显示回放视频的时间数据。
8 备份	时区设置为备份 SD 内存卡中保存的视频。 最多可设置为 5 分钟。


! ■ Internet Explorer 以外的 Web 浏览器不提供时间搜索。

1. 单击 [按时间搜索 ()].
2. 在日历中单击所需日期。
将会播放指定日期上的视频。
3. 停止视频时, 请选择一个时间并单击 [播放 ()].
将播放选定时间的视频。
4. 播放视频时, 将会显示当前视频的录制时间。
5. 向前或向后搜索视频, 并控制播放速度。
 - 控制播放速度
如果选择 , 按钮将切换为 x1, x2, x4, x8, 并且播放速度相应提高。
如果选择 , 播放速度降至 -x1, -x2, -x4, -x8, 并且播放速度逐渐放慢。随后, 快速播放速度恢复为正常速度, 反向播放速度增加。
 - 控制播放方向
如果您看到显示  按钮和播放速度, 将会向前播放视频; 而如果您看到显示  按钮和播放速度, 将会向后播放视频。
6. 先将 [时间滑块 ()] 移至视频的所需时间点再播放。
包含标准录制文件的时间将以蓝色突出显示; 包含事件录制内容的时间将以红色突出显示。



备份搜索到的视频

1. 在场景上单击 [] 进行备份。
另存为窗口出现。
2. 确认保存路径, 单击 [保存(S)] 按钮。
选择的数据将以 .avi 格式备份到指定的路径。

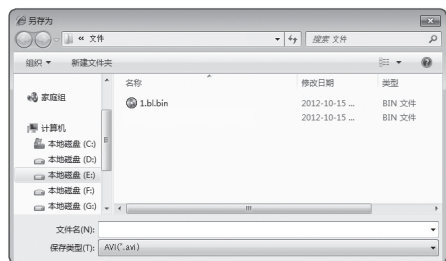

播放备份视频

可以使用 Windows Media Player 或 VLC Media Player 播放已存储 (已备份) 的视频。

设置屏幕

设置


可以配置网络中的摄像机的音频与视频、网络、事件和系统设置。

1. 在现场屏幕中，单击 [设置 ()]。
2. 设置屏幕将会出现。

音频与视频设置

视频配置文件

1. 从设置菜单，选择 <音频 & 视频 ()> 选项卡。
2. 单击 <视频配置文件>。
3. 选择 <视频配置文件> 编号。
4. 单击每个项目的输入框，并输入/选择所需的值。
 - 上下文菜单可能因所选的编解码器类型而异。
 - 默认配置文件：如使用 Web Viewer 时未选择任何配置文件，则使用默认视频配置文件。
 - 电子邮件/FTP 配置文件：将传送至指定的电子邮件或 FTP 站点的视频配置文件。
 - 只能将 MJPEG 编解码器设置为电子邮件/FTP 配置文件。
 - 如果选择电子邮件/FTP 配置文件，帧速率将固定为 5 以下。
 - 录制配置文件：这是应用于视频录制的配置文件。
5. 完成后，请单击 [应用 ()]。

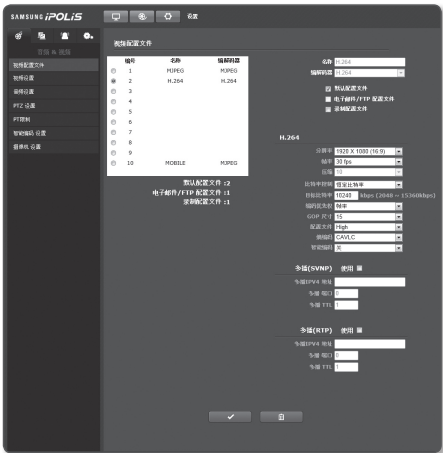

- <录制配置文件> 的设置对于 MJPEG，如果分辨率高于 800x600，或者对于 H.264，如果目标比特率大于 4800kbps，<SD 录制> 的 <普通> 和 <事件> 设置会自动更改为图像帧。在此情况下，所应用的设置会保留下来，即使更改分辨率或目标比特率也是如此。
- 配置文件 1 和 2 通过出厂默认值提供，无法删除或重命名；此外，编解码器也不能以任何方式更改。

添加视频配置文件

可以根据需要添加许多编解码器，以便可以根据录制条件应用各种配置文件。

1. 选择配置文件编号。
2. 提供名称并选择编解码器。
3. 指定将应用编解码器的条件。
4. 指定所选编解码器的详细信息，包括分辨率和帧率。
 - 分辨率：设置 H.264 和 MJPEG 文件的视频大小。
 - 帧率：指定帧率。
 - 压缩：指定视频的压缩率。
 - 比特率控制：您可从恒定比特率和可变比特率中选择一种方式进行压缩。
CBR（恒定比特率）可改变视频质量并且固定网络传输比特率，而可变比特率则通过改变网络传输比特率来强调质量。
 - 最大比特率：指定视频的最大比特率。



- 由于比特率可以根据清晰度、帧频和屏幕复杂性进行有限的调整，所以实际比特率可能比最大比特率要大。所以在设定值时必须考虑使用环境。
- 对于存在多个连接，稳定接收视频/音频信号的最大/目标总比特率时 20Mbps。例如，如连接了 10 个用户，最大/目标比特率必须设置为 2Mbps (2048kbps) 或更低。

- 目标比特率：指定传输视频将用的比特率。
- 编码优先权：可以将视频传输方法设置为帧率或质量。
- 视频组长度：您可以决定视频组长度。(1~150)
- 配置文件：可以选择 H.264 靠模方法。
- 熵编码：减少可能因编码引起的压缩损失。
- 智能编码：指定使用智能编解码器。



- 仅当编解码器为 H.264 并且压缩系统是 CBR 时，“智能编码”才会活动。

- 多播(SVNP)：指定使用 SVNP 协议。
 - 多播 IPv4 地址：输入可用于连接至 IPv4 网络的 IPv4 地址。
 - 多播 端口：指定视频通信端口。
 - 多播 TTL：为 SVNP 数据包设置 TTL。
- 多播(RTP)：指定 RTP 协议的使用。
 - 多播 IPv4 地址：输入可用于连接至 IPv4 网络的 IPv4 地址。
 - 多播 端口：指定视频通信端口。
 - 多播 TTL：可为 RTP 数据包设置 TTL。

设置屏幕

什么是视频组长度？


视频组（视频对象平面组）是用于 H.264 压缩的视频帧，表示从初始图像帧（关键帧）到下一个图像帧的帧集合。视频组由 2 类帧组成：I 帧和 P 帧。

I 帧是压缩的基本帧，也称为关键帧，包含一幅完整图像的数据。P 帧仅包含与先前的 I 帧相比发生了变化数据。

对于 H.264 编解码器，您可以决定视频组长度。(1~150)

视频设置

1. 从设置菜单，选择 <音频 & 视频 ()> 选项卡。
2. 单击 <视频设置>。
3. 选择 <视频源> 模式。
 - 翻转/镜像 模式：颠倒或反向显示摄像机中的视频。
4. 选择 <视频类型>。
5. 指定隐私区域。
6. 完成后，请单击 [应用 ()]。

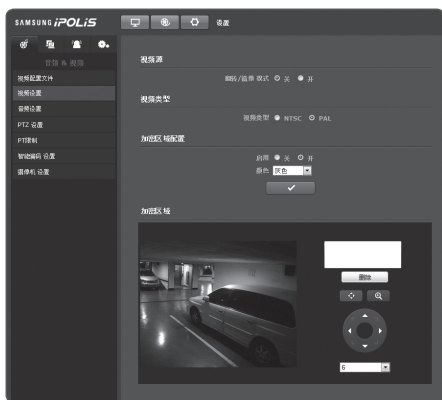

设置加密区域

可以指定为了您的隐私将保护摄像机视频的某些区域。

1. 将其设置为 <启用>。
2. 完成后，请单击 [应用 ()]。
3. 将光标放在视频的一个点上，然后将它拖到所需的任何部分。
4. 提供名称，然后按 [确定]。
5. 如果您要删除列表中的某个区域，请选择区域，然后单击 [删除 ()]。




- 如加密区域小于最小大小，没有被标记的区域。

音频设置

可以配置摄像机的音频源的 I/O 设置。

1. 从设置菜单，选择 <音频 & 视频 ()> 选项卡。
2. 单击 <音频设置>。
3. 设置音频输入值。
 - 启用：它用于设置音频输入的使用选项。
 - 编解码器：选择要使用的编解码器。
 - G.711：一种音频编解码器标准，它使用 64 Kbps PCM（脉冲编码调制）编码。ITU 标准音频编解码器，对于在 PSTN 网络或通过 PBX 进行的数字语音传输而言已经足够。
 - G.726：ITU 标准音频编解码器，将可变比特率 40/32/24/16 Kbps 的 ADPCM（自适应差分脉冲编码调制）应用于 64 Kbps PCM 编码。
 - 比特率：如果使用 G.726 编解码器，则设置比特率以区分压缩比。
 - 增益：设置输入音频增益。
4. 设置音频输出级别。
 - 启用：设置是否使用音频输出。
 - 增益：设置输出音频增益。
5. 完成后，请单击 [应用 ()]。

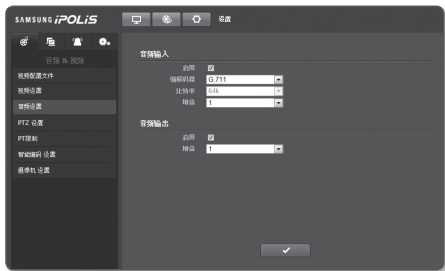

设置屏幕


PTZ 设置

可以更改镜头的方向并激活变焦。

1. 从设置菜单，选择 <音频 & 视频 ()> 选项卡。
2. 单击 <PTZ 设置>。
3. 单击 [方向调整 ()]。
 - [将方向更改为 () / () / () / ()]：更改摄像机镜头的方向。
 - [移动速度控制 ()]：数字越大，移动速度越快。



4. 设置缩放和对焦。
 - [放大 ()]：放大屏幕。
 - [缩小 ()]：缩小屏幕。
 - [调焦 ( / )]：调整屏幕中的焦点。
 - [变焦速度控制 ()]：数字越大，变焦速度越快。
5. 设置预设。
6. 在屏幕上设置起始位置（返回位置）。

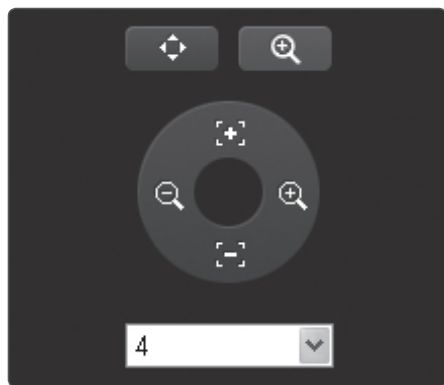

添加预设

1. 选择要添加的预设编号。
2. 设置预设的名称。
3. 按下 [] 按钮。

删除预设

1. 选择要删除的预设编号。
2. 按下 [] 按钮。

移至所需预设位

1. 选择想要移动的预置编号。
2. 按下 [] 按钮。

配置预设位的详细设置

1. 选择想要配置的预设位的编号。
2. 按 [] 进入预设位编辑模式。
 - No. XX：显示所选预设位的编号。
 - 预设编辑：可以根据选择的预设位编辑摄像机设置。
有关预设位编辑的更多信息，请参阅“**摄像机设置**”。（第 74 页）
 - 特殊中的<动作>决定了是否自动运行预设位。
 - 视频分析：分析所选预设位的视频。
有关视频分析的详细信息，请参阅“**VA / MD**”。（第 91 页）
3. 完成后，请单击 [应用 ()]。
4. 按[] 回到 PTZ 设置屏幕。



 ■ 保存预设位之后，请确保通过单击 [] 按钮或浏览器的“返回”按钮关闭预设位编辑方式。如果您在窗口仍然打开时更改其他摄像机的设置，则这可能会导致错误。

设置返回位置

设置屏幕

1. 移至所需起始屏幕点并按 []。
该点将设置为返回位置。
2. 单击返回位置中的 [] 您将移至预先确定的返回位置。

配置摆动设置

摆动是在两个预置点之间移动并让您跟踪移动的监控功能。

1. 将 <顺序设置> 中的 <模式> 设置为 <摆动>。
菜单屏幕将切换到摆动设置屏幕。
2. 选择摆动设置模式。
 - 平移摆动：可使用平移功能设置摆动监视。
 - 倾斜摆动：可使用倾斜功能设置摆动监视。
 - 平移和倾斜摆动：可设置同时使用水平和上下功能的摆动监控。
3. 设置 <首次预设> 和 <第二次预设> 以指定摆动范围。
4. 设置移动速度和停留时间。
5. 按下 [] 按钮。
首次预设、第二次预设、速度和停留时间将保存在设置模式中。
6. 按下 [] 按钮。
它执行摆动操作。
7. 按下 [] 按钮。
正在运行的摆动将停止。



配置组设置

组功能让您可以为各种预置分组，然后可以按顺序调用它们。
每组最多可以包含 128 个预置。

1. 将 <顺序设置> 中的 <模式> 设置为 <组>。
菜单屏幕将切换到组设置屏幕。
2. 选择组设置模式。
 - 组编号：选择组编号。
 - 预置编号：选择预置编号。
 - 速度：指定移动的速度。
 - 停顿时间：指定操作在预置位置保持的持续时间。
3. 按下 [+] 按钮。
您的设置将输入右边的列表中。
4. 按下 [列表] 按钮。
将保存右边列表上的设置数据。
5. 按下 [→] 按钮。
它执行分组操作。
6. 按下 [停止] 按钮。
正在运行的分组将停止。
7. 按下 [删除] 按钮。
将删除所选的组数据。



配置浏览设置

浏览功能让您可以按顺序调用预置的组。

1. 将 <顺序设置> 中的 <模式> 设置为 <浏览>。
菜单屏幕将切换到浏览设置屏幕。
2. 详细配置浏览设置。
 - 组编号：选择组编号。
 - 停顿时间：指定调用新组之前的等待时间。
3. 按下 [+] 按钮。
您的设置将输入右边的列表中。
4. 按下 [列表] 按钮。
将保存右边列表上的设置数据。
5. 按下 [→] 按钮。
它执行浏览操作。
6. 按下 [停止] 按钮。
正在运行的浏览将停止。
7. 按下 [删除] 按钮。
将删除所选的浏览数据。



设置屏幕

设置跟踪功能

跟踪会记住使用方向按钮指示的移动踪迹并重现它供您参考。

1. 将 <顺序设置> 中的 <模式> 设置为 <跟踪和自动运行>。
屏幕菜单将切换到 PTZ 跟踪和自动操作菜单屏幕。
2. 选择跟踪编号。
将会保存该操作，并显示存储卡使用情况。
保存时间会因 PTZ 操作的级别而异。
如内存已达到 100% 或录制结束配置从保存开始的 2 分钟内未完成，它将自动终止。
3. 按下 [] 按钮。
将保存所选跟踪编号。
4. 使用平移/倾斜/缩放移动保存的导航路径。
5. 按下 [] 按钮。
保存已终止。
6. 按下 [] 按钮。
将按设置激活所选跟踪编号。



设置自动运行

如果用户在特定时间内未在产品上执行任何操作，此功能将激活预先定义的顺序功能。

1. 将 <顺序设置> 中的 <模式> 设置为 <跟踪和自动运行>。
屏幕菜单将切换到 PTZ 跟踪和自动执行菜单屏幕。
2. 选择自动运行模式。
 - 始位：它移到始位。
 - 预设：它移到选定预设位编号。
 - 可在预设位编辑的“附加菜单-动作”中设置自动运行预设位。（第 69 页）
 - 摆动：自动在摆动模式下执行操作。
 - 组：自动在组模式下执行操作。
 - 浏览：自动在浏览模式下执行操作。
 - 跟踪：自动在跟踪模式下执行操作。
 - 自动平移：自动沿水平方向执行 360° 旋转。



PT 限制

可以对水平或上下功能指定限制。


1. 从设置菜单，选择 <音频 & 视频 ()> 选项卡。
2. 单击 <PT 限制>。
3. 指定是否要限制 PT 操作。如果要限制，请指定详细信息。
 - 模式：选择要设置在平移限制和倾斜限制之间的模式。
 - 使用：指定是否使用平移/倾斜功能。
 - 动作：设置 PT 限制操作。
 - []：开始限制设置。
 - []：提供开始和结束点。
 - []：如果要更改点设置，请单击此项以返回到输入对话框。



智能编码 设置

设置来自摄像机的所需视频进入区域作为 ROI 区域，并指定该区域的探测灵敏度。

1. 从设置菜单，选择 <音频 & 视频 ()> 选项卡。
2. 单击 <智能编码 设置>。
3. 选择 ROI 区域。
 - 面部探测：如果在监视屏幕上识别到面部，则此项处于活动状态。
 -  仅当满足下列条件时，面部探测功能才可用：
 - 面部定位在从顶部偏左或右 ± 45 度的位置。
 - 面部旋转的有效范围是垂直 ± 30 度，水平 ± 60 度。
 - 面部的最小尺寸是分辨率为 320x240 时 20x20。
 - 手动：指定要手动监视的 ROI 区域。
4. 选择 ROI 区域的质量和探测灵敏度。
5. 如果手动指定 ROI 区域，请用鼠标指针选择所需区域，然后根据需要拖动它。
 - 最多可以指定 5 个独立的区域。
6. 要取消选择，只需单击 []。
7. 完成后，请单击 []。

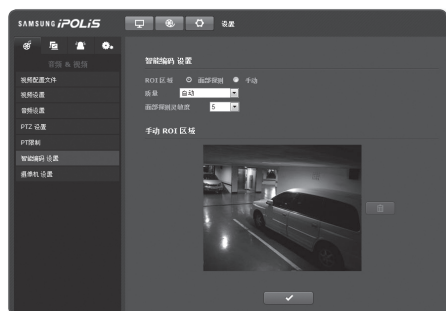

❗ 如果在 <视频配置文件> 中将智能编解码器设置为 <关>，则它不活动。（第 64 页）

设置屏幕

摄像机设置

可以根据摄像机所在的环境更改摄像机设置。

1. 从设置菜单，选择 <音频 & 视频 ()> 选项卡。
2. 单击 <摄像机设置>。
3. 根据需要配置以下各项的设置：SSDR、白平衡、背光补偿、曝光、附加菜单、焦点、OSD 和时间信息。
4. 完成后，请单击 [应用 ()]。
 - 如果在更改设置之后经过一定的时间未按 [应用 ()] 按钮（超时：240 秒），则不会应用您的更改。



SSDR (Samsung Super Dynamic Range) 设置

在明暗差异非常大的场景中，您可以单独增加黑暗区域的亮度以调整总亮度。

1. 选择 <SSDR>。
2. 将 <模式> 设置为 <开>。
3. 根据需要配置 <SSDR 级别> 设置。
 - SSDR 级别：调整动态范围的级别。



白平衡设置

在任何照明条件下，可以基于白色校正图像颜色。

1. 选择 <白平衡>。

2. 选择 <白平衡模式>。

- 自动追踪白平衡：自动校正摄像机视频的颜色。
- 手动：可以手动调整摄像机视频的红色和蓝色增益。
- 自动白平衡：根据当前照明条件和屏幕模式进行优化，校正摄像机视频的颜色。要获得当前照明的最佳条件，请将摄像机的焦点对准白纸，然后按 [自动白平衡 设置] 按钮。如果更改照明环境，应该相应地调整这些设置。
- 室外：根据室外环境进行优化，自动校正摄像机的视频颜色。
- 室内：根据室内环境进行优化，自动校正摄像机的视频颜色。



- 在自动白平衡模式中，如果要保留当前图像的白平衡级别，请单击 [自动白平衡 设置] 按钮。




- 在下列情况下，白平衡可能无法正常工作。在这种情况下，请切换到“自动白平衡”模式。
 - 如果物体的周围环境条件超出测试校正范围
示例) 清澈的蓝天，日落
 - 如果物体的周围环境黑暗
 - 如果摄像机的焦点直接面对荧光灯照明，或者如果将摄像机安装在照明变化的位置，白平衡操作可能会不稳定。

设置屏幕

背光补偿设置

可以手动在视频上指定想要的区域和设置要更清晰显示的区域。

1. 选择〈背光补偿〉。
2. 将〈模式〉设置为〈背光补偿〉。
3. 选择各项并进行正确设置。
 - 背光补偿级别：可以更改级别以调整监视区域的亮度。
 - 背光补偿框 显示：指定背光补偿框的模式。
 - 背光补偿框 调整：使用箭头按钮调节背光补偿框的大小和位置。
 - 背光补偿框 步数：指定移动的像素单位。您可以使用〈背光补偿框 调整〉以增加或减少像素。

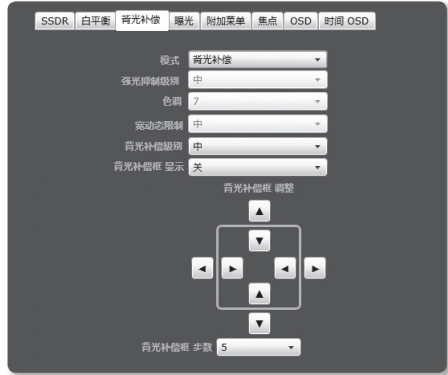


强光抑制设置

如路灯或车辆头灯等强光照向摄像机，可将区域设置为切除以避免显示器上出现饱和区域。

1. 选择〈背光补偿〉。
2. 将〈模式〉设置为〈强光抑制〉。
3. 选择各项并进行正确设置。
 - 强光抑制级别：这里可调整亮度级别以切除高亮区域。
 - 色调：这里可调整切除区域的亮度。
 - 随着数值增加，可将颜色设置为由暗变亮。



- 在晚上操作时，仅当在低照度环境中进入高光越过区域时，才会激活此功能。
- 在晚上工作时，强光抑制将不会在太亮或太暗场景中工作。

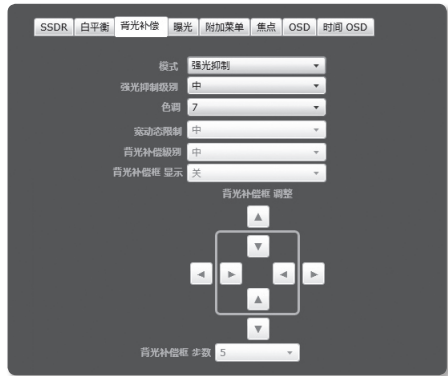

宽动态设置

您可以设置为在明亮和黑暗区域都存在的场景中，显示物体的清晰图像。

1. 选择 <背光补偿>。
2. 将 <模式> 设置为 <宽动态>。
3. 选择各项并进行正确设置。
 - 宽动态限制：指定宽动态灵敏度级别。



- 通过网络进行的数据传输最高速度可达 15 fps。
- 如果宽动态模式处于活动状态，则移动的物体可能会导致屏幕上有重影。



- 如果选择宽动态，则可能会遇到下列问题。因此，请将它设置为不使用。
 - 颜色的不自然变化，导致屏幕上的图像不自然
 - 图像明亮区域的噪点
- 因为宽动态功能的性能可能会因图像明亮区域的大小而异，建议优化安装角度以取得最佳性能。
- 在夜间操作时，在低对比度环境中，仅当进入光线超过特定区域时，才会激活此功能。
- 增大最大值可能会导致图像比例不自然。
- 为了达到最佳宽动态性能，建议将光圈模式设置为 <自动>。
- 如使用了用户背光补偿，由于可根据照明条件反复执行自动对焦操作，建议使用 <一次性自动聚焦> 或 <手动> 对焦模式。
- 宽动态模式中无法使用 SSDR 和快门。



设置屏幕

曝光设置

可以调整摄像机的曝光级别。

1. 选择 <曝光>。

2. 选择各项并进行正确设置。

- 亮度：调整屏幕亮度。
- 快门 模式：调整摄像机的电子快门。
 - 自动（电子快门控制）：根据环境亮度自动调整快门速度。
 - 手动：手动调整摄像机的快门速度。
 - 防闪烁：如果您遇到由于频率与环境照明不匹配导致屏幕闪烁的情况，请选择此功能。
 - 仅当快门类型为 <自动> 时，可使用感光度，当快门类型为 <手动> 或 <防闪烁> 时无法使用。但使用宽动态模式时，无论快门类型如何，都可使用感光度。（受自动增益影响除外）
 - 如背光补偿设置为宽动态模式，则无法使用快门。
- 快门 速度：手动控制快门速度。
- SSNR3：指定使用降噪。
 - 如自动增益模式设置为 <关> 或 <手动>，则无法使用 SSNR3 模式。
- 感光度 模式：自动感应夜间或低对比度场景的黑暗程度，相应地延长累积时间，以获得明亮清晰的图像。
 - 仅当快门类型为 <自动> 时，可使用感光度。
 - 如自动增益模式设置为 <关> 或 <手动>，则无法使用感光度模式。
 - 视频累积因子越大，屏幕亮度越高，但移动物体的残像相应增加，并且自动对焦模式可能无法正确操作。
 - 如果未使用增益，将会禁用感光度。
- 感光度 倍率：在低对比度场景中将工作条件设置为自动模式。
- 光圈：您可以根据偏好设置为自动或手动。
 - 自动：自动设置光圈自适应环境照明和快门速度。
 - 手动：光圈 F-No 需手动设置。
- 光圈值：如果将光圈模式设置为“手动”，请指定光圈的 F 数值。
 - 随着 F-No 增加，光圈缩小，因此屏幕会变暗；随着 F-No 减小，屏幕会变亮。
- 自动增益 模式：选择自动增益控制模式。

调整视频的增益值（即，具体地说，在低对比度场景中录制且亮度级别低于正常）以控制视频亮度。

 - 如自动增益模式设置为 <关>，则无法使用 SSNR、感光度和日/夜模式设置中的 <自动> 模式。
 - 如自动增益模式被设置为 <手动>，则无法使用感光度和日/夜模式设置中的 <自动> 模式。
- 自动增益值：如果将自动增益模式设置为手动，请指定 0dB 与 36dB 之间的值。



附加菜单设置

1. 选择 <附加菜单>

2. 选择各项并进行正确设置。

- 数字稳定：自动补偿屏幕上发生的闪烁。
 - 如使用 VA/MD，则无法使用 DIS。
 - 如使用数字稳定，则无法使用数字变焦。
- 日夜：可以切换该模式以调整黑白层次及颜色。
 - 彩色：始终以彩色显示视频。
 - 黑白：始终以黑白显示视频。
 - 自动：在正常的白天时间以彩色模式显示，并在夜晚低对比度场景中切换为黑白模式。
 - 如<曝光>菜单中的自动增益模式设置为 <关> 或 <手动>，则无法选择自动日/夜模式设置。
- 等待时间：这是为了能够在白天模式和夜晚模式之间切换，每个适用照明条件要保持的时间。
- 转换条件：指定触发顺序操作的照明时间间隔。
- 锐利度 模式：调整图像的总清晰度。
如果选择了 <开>，您可以调整图像的清晰度。
- 锐利度 级别：级别越高，图像轮廓变得越清晰和越清楚。
- 色调 级别：调整图像的颜色等级。



聚焦设置

1. 选择 <焦点>。

2. 选择各项并进行正确设置。

- 模式
 - 手动：将根据变焦系数手动调整焦点。
 - 自动：将根据变焦系数自动调整焦点。
 - 一次自动聚焦：将在执行变焦操作之后执行自动聚焦一次。
- 数字变焦：指定使用数字变焦。
 - 如使用数字变焦，则无法使用数字变焦。
- 限制数字变焦：指定数字变焦的限制。
- 缩放跟踪：使用平移/倾斜/缩放操作，指定对焦同步模式。
 - 关：仅变焦镜头将起作用。
 - 自动跟踪：它将控制（探测并校正）缩放操作以保持适合焦点。
 - 跟踪：缩放操作将由焦点跟踪指导。
- 变焦速度：调整变焦跟踪速度。
- 镜头初始化：重设镜头以防止在变焦模式中失去同步。
- 转换条件：指定重设镜头的频率。
 - 您可以指定重设镜头的日期，重设将在自动聚焦模式中执行。指定 1 到 7 天之间的时间，重设将从指定的日期开始，以 24 小时的间隔执行。



设置屏幕

OSD 设置

1. 选择 <OSD>。

2. 选择各项并进行正确设置。

- 摄像机名称：指定是否在屏幕上显示摄像机标题。
 - 最多可输入 15 个字符作为标题。
- 摄像机名称 位置 X, Y：指定摄像机标题在屏幕上显示的坐标。
- PTZ 显示位置：指定是否在屏幕上显示 PTZ OSD 菜单。
- 摄像机 ID：指定是否在屏幕上编辑摄像机 ID 编号。
- 预设名称：指定是否在屏幕上显示预设名称。



时间信息设置

1. 选择 <时间信息>。

2. 选择各项并进行正确设置。

- 时间显示：指定在屏幕上使用时间显示。
- 位置 X, Y：指定在屏幕上显示时间的位置。
- 日期模式：指定将在视频屏幕上显示的日期格式。
- 显示工作日：指定在屏幕上显示日期。




网络设置

接口

1. 从设置菜单，选择 <网络 ()> 选项卡。
2. 单击 <接口>。
3. 根据需要设置 <接口> 和 <IPv6 设置>。
 - IP 类型：选择 IP 连接类型。
 - 手动：指定 IP 地址、子网掩码、网关、DNS1 和 DNS2。
 - DHCP：指定 DNS1 和 DNS2。
 - PPPoE：指定 DNS1、DNS2、ID 和密码。
 - 如果将其设置为 <手动>，则应手动指定 IP、子网掩码、网关和 DNS 1 和 2。
 - MAC 地址：显示 MAC 地址。
 - IP 地址：显示当前 IP 地址。
 - 子网掩码：显示所设 IP 的 <子网掩码>。
 - 网关：显示所设 IP 的 <网关>。
 - DNS1/DNS2：显示 DNS（域名服务）服务器地址。
4. 配置 <IPv6 设置>。
 - IPv6 使用：指定使用 IPv6。
 - 默认 IPv6 地址：获取访问 IPv6 网络的 IPv6 地址。
 - 仅使用默认地址：仅使用默认 IPv6 地址。
 - 通过 DHCP 获得 IP 地址：显示并使用从 DHCP 服务器获取的 IPv6 地址。
 - 使用下面的 IP 地址：手动输入 IP 地址并使用它。
5. 完成后，请单击 [应用 ()]。



- IP 寻址系统将默认为 DHCP。
如果未找到 DHCP 服务器，将自动恢复之前的设置。
- 完成编辑之后，单击 [应用 ()] 以应用更改，并且浏览器将会退出。
一小会之后，使用更改后的 IP 再次连接。

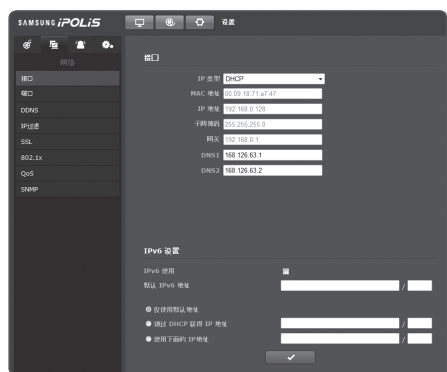

设置屏幕

端口

1. 从设置菜单，选择 <网络 ()> 选项卡。

2. 单击 <端口>。

3. 在端口菜单的每个项目中键入所需信息。

- 0 至 1023 之间的端口范围和端口 3702 都不可用。

- HTTP 端口：用于通过 Web 浏览器访问摄像机的 HTTP 端口。

默认值是 80(TCP)。

- 安全策略不允许将 Safari 和 Google Chrome 浏览器的 HTTP 端口设置为 65535。

- 设备端口：设置用于根据 Samsung 协议传输视频信号的端口。

- RTSP 端口：用于以 RTSP 模式传输视频，默认值为 554。

- 网络流端口：用于将视频传输到 Web 查看器，默认值为 4520。

- Silverlight 政策端口：Silverlight 用于允许获得网络连接；默认为 943。



- 如果更改了 HTTP 端口，则浏览器会退出。

此后，地址应该在 IP 后面包含新分配的 HTTP 端口。


例) IP 地址：192.168.1.100，HTTP 端口：分配了 8080 → http://192.168.1.100:8080

(如果将 HTTP 端口设置为 80，则不需要指定端口号)

- 网络流的端口范围是介于 4502 和 4534 之间。如果设备端口在此有效范围内，则指定的网络流端口应该与设备端口相同。

- 无法更改摄像机的网络流/Silverlight 策略服务器端口。

4. 完成后，请单击 [应用 ()]。

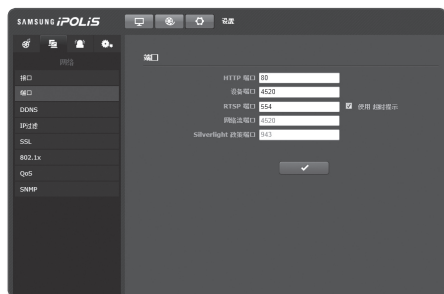

DDNS

DDNS 是动态域名服务的缩写，该服务将摄像机的 IP 地址转换成一般主机名，以便用户可以轻松记住它。

1. 从设置菜单，选择 <网络 ()> 选项卡。


2. 单击 <DDNS>。

3. 选择 <DDNS> 连接类型。

4. 根据所选类型键入 DDNS 项目。

- Samsung DDNS：如果使用 Samsung Techwin 提供的 DDNS 服务器，请选择此项。

- 产品ID：输入向 Samsung DDNS 服务注册的产品ID。

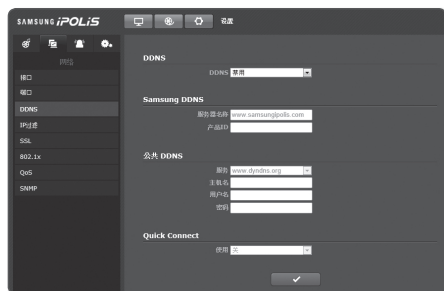

- 公共 DDNS：使用公共 DDNS 服务器时，可从所提供的公共 DDNS 服务器中选择一个。
 - 主机名：输入向 DDNS 服务器注册的主机的名称。
 - 用户名：输入 DDNS 服务的用户名。
 - 密码：输入 DDNS 服务的密码。
- Quick Connect：当与支持 UPnP（通用即插即用）的路由器配合使用时，它会自动设置端口转发。

5. 完成后，请单击 [应用 ()]。




- 选择选择了 <Quick Connect>，请确保选择 Samsung DDNS 服务。

注册 DDNS

向 Samsung DDNS 注册您的产品


1. 访问 iPOLiS 网站 (www.samsungipolis.com) 并用已注册的帐户登录。

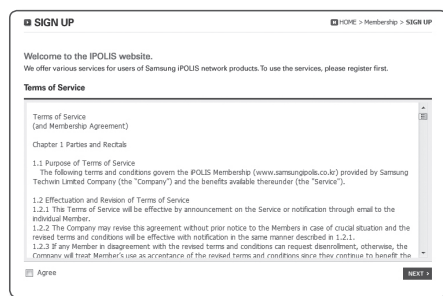

2. 从顶部的菜单栏，选择 <DDNS SERVICE> - <MY DDNS>。



3. 单击 [PRODUCT REGISTRATION]。

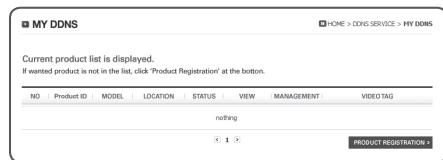


4. 输入产品 ID。

- 必须重复检查您输入的 ID。

5. 选择 <CLASSIFICATION> 并指定 <MODEL NUMBER>。

6. 指定产品位置及说明（如有必要）。


7. 单击 [REGISTRATION]。
产品将添加至产品列表，您可以对其进行检查。

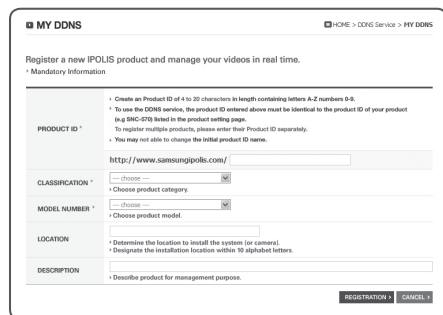

设置屏幕

在摄像机设置中连接至 Samsung DDNS

1. 从 DDNS 设置页面，将 <DDNS> 设置为 <Samsung DDNS>。
2. 提供向 DDNS 网站注册产品 ID 时指定的 <产品ID>。
3. 单击 [应用 ()]。
成功进行连接后，屏幕上将显示消息 <(成功)>。

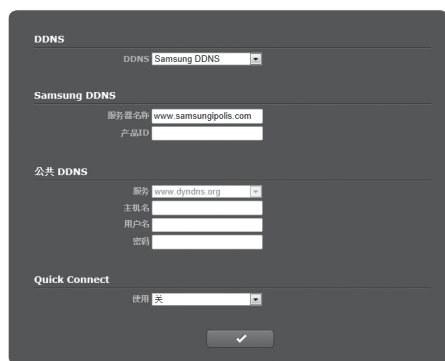

在摄像机设置中配置公共 DDNS

1. 打开 DDNS 设置页面并为 <DDNS> 选择 <公共 DDNS>。
2. 输入相应站点的主机名、用户名和密码。
3. 单击 [应用 ()] 按钮。
如果正确建立连接，<(成功)> 将会出现。
4. 完成后，请单击 [应用 ()]。




- 要正确使用 DDNS 服务，需要 DDNS 设置和路由器的端口转发设置。
对于端口转发设置，请参阅“[路由器端口设置](#)”。(第 50 页)

IP 过滤

可以创建想要授予或拒绝访问权限的 IP 列表。

1. 从设置菜单，选择 <网络 ()> 选项卡。
2. 单击 <IP过滤>。
3. 选择 <过滤类型>。
 - 拒绝：如果选择此项，将限制从添加至过滤列表的那些 IP 进行的访问。
 - 允许：如果选择此项，将只接受从添加至过滤列表的那些 IP 进行的访问。
4. 提供想要授予或拒绝访问权限的 IP。
输入 IP 地址和前缀时，可用的 IP 地址列表将出现在右侧过滤范围列中。

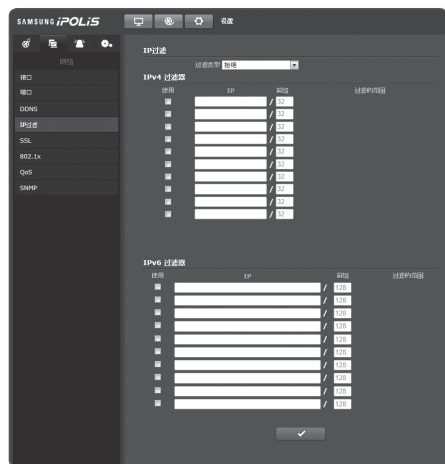




- 如果为 IP 过滤 选择了 <允许> 并且 <接口> 的 <IPv6 设置> 设为 <使用>，则应该分配当前计算机配置的 IPv4 和 IPv6 地址。
- 不能将用于当前设置的计算机的 IP 地址添加至 <拒绝>，应该将它添加至 <允许>。
- 只有设置为 <使用> 的 IP 地址才会显示在过滤器列表中。

5. 完成后，请单击 [应用 ()]。

SSL

可以选择安全连接系统或安装公共证书用于此目的。

1. 从设置菜单，选择 <网络 ()> 选项卡。
2. 单击 <SSL>。
3. 选择安全连接系统。
 - 若要将使用 HTTPS 模式访问摄像机，您必须输入 https://<Camera_IP> 形式键入摄像机的 IP 地址。如果未在 Internet Explorer 中以 HTTPS 模式配置 Web Viewer 设置，请按如下所示编辑 Internet 选项：
<菜单 → 工具 → Internet 选项 → 高级 → 安全 → 取消选择 TLS 1.0 并选择 TLS 1.1、TLS 1.2>

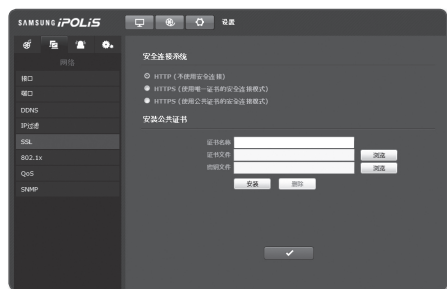

4. 搜索要安装在摄像机上的公共证书。
要将证书安装在摄像机上，需要提供证书名称（可由用户随意分配）、认证机构颁发的证书文件以及密钥文件。
 - 仅当安装了公共证书，<HTTPS (使用公共证书的安全连接模式)> 项目才会活动。
5. 完成后，请单击 [应用 ()]。

安装证书

1. 输入证书名称。
2. 单击 [浏览 ()] 按钮，选择要安装的公共证书文件和密钥文件，然后单击 [安装 ()] 按钮。

删除证书


1. 单击 [删除 ()] 按钮。
2. 要删除公共证书，应该在 <HTTP (不使用安全连接)> 或 <HTTPS(使用唯一证书的安全连接模式)> 模式下访问网络视频解码器。

设置屏幕

802.1x

连接网络时，您可以选择是否使用 802.1x 协议，然后安装证书。

1. 从设置菜单，选择 <网络 ()> 选项卡。
2. 单击 <802.1x>。
3. 设置 <IEEE 802.1x 设置 (使用 EAP-TLS 的 EAPOL)>。
 - 启用 IEEE 802.1x：指定使用 802.1x 协议。
 - EAPOL 版本：选择版本 1 或 2。
 - ID：输入客户机证书 ID。
 - 密码：输入客户机专用密钥密码。如果密钥文件未加密，则不需要输入密码。

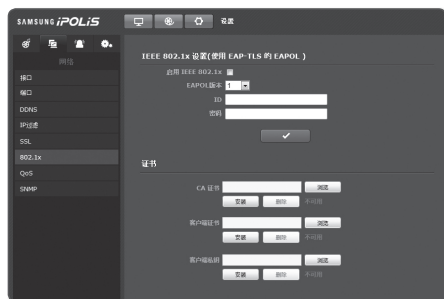

 如果连接的网络设备不支持 802.1x 协议，那么即使您设置了该协议，它也不会正常执行。

4. 安装/移除证书。
 - CA 证书：选择包含公共密钥的公共证书。
 - 客户端证书：选择包含客户端证书密钥的公共证书。
 - 客户端私钥：选择包含客户端私钥的公共证书。
5. 完成后，请单击 [应用 ()]。

安装/删除与 802.1x 相关的证书

1. 按每个项目的 [浏览 ()] 按钮并选择要安装的证书。
2. 如果未安装任何证书，则会看到“不可用”出现在所选项目旁边。
3. 按 [安装 ()] 按钮以开始安装，并在项目旁边显示消息“已安装”。
4. 按 [删除 ()] 按钮以删除证书。

设置屏幕

事件设置


FTP / 电子邮件

可以配置 FTP/电子邮件服务器设置，以便在事件发生时可以将使用摄像机拍摄的图像传输到您的计算机。

1. 从设置菜单，选择 <事件 (📷)> 选项卡。
2. 单击 <FTP / 电子邮件>。
3. 选择 <FTP 配置> 或 <电子邮件配置> 并输入/选择所需的值。

• FTP 配置

- 服务器地址：输入您将警报或事件图像传输到的 FTP 服务器的 IP 地址。
- ID：输入用于登录 FTP 服务器的用户 ID。
- 密码：输入用于登录 FTP 服务器的用户帐户密码。
- 上传目录：指定警报或事件图像将传输到的 FTP 路径。
- 端口：FTP 服务器的默认端口为 21；但是，可以根据 FTP 服务器设置使用不同的端口号。
- 被动方式：如果由于防火墙或 FTP 服务器设置需要以被动模式连接，请选择 <开>。

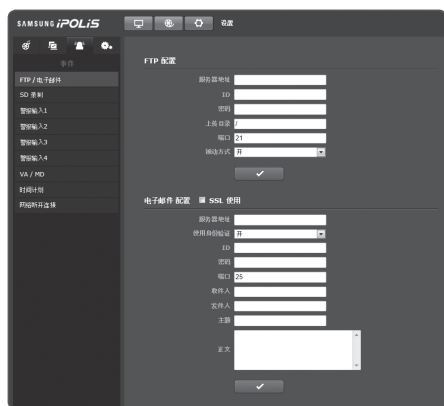

• 电子邮件 配置

- SSL 使用：指定使用 SSL。
- 服务器地址：输入进行电子邮件传输到的电子邮件服务器的 IP 地址。
- 使用身份验证：选择是否使用身份验证。
- ID：输入用于登录电子邮件服务器的用户 ID。
- 密码：输入用于登录电子邮件服务器的用户帐户密码。
- 端口：电子邮件服务器的默认端口为 25；但是，可以根据电子邮件服务器设置使用不同的端口号。
- 收件人：输入电子邮件收件人的地址。
- 发件人：输入电子邮件发件人的地址。如果发件人地址不正确，来自发件人的电子邮件可能会被电子邮件服务器分类为垃圾邮件，这样可能不发送。
- 主题：输入电子邮件的主题。
- 正文：为邮件提供文本。将警报或事件图像附加至准备的电子邮件。

4. 完成后，请单击 [应用 (✔)]。


SD 录制

可以为 SD 内存卡设置录制条件或录制的使用、检查存储的数据的大小或格式化 SD 内存卡本身。

1. 从设置菜单，选择 <事件 ()> 选项卡。
2. 单击 <SD 录制>。

在 SD 内存卡上进行录制

1. 检查 <总大小> 和 <可用大小>。
2. 如果 SD 内存卡具有足够的可用空间，请将 <录制> 设置为 <开>。
否则，检查存储的数据，如果发现它们不重要，请单击 <格式化> 以格式化 SD 内存卡。
 - 如果您的 SD 内存卡写入缓慢，则每秒将只存储一帧。
 - 对于大容量的 SD 内存卡，格式化将相应变慢。
 - 将分辨率、比特率和帧率设置为较高的选项可增加产生的数据量。
随着数据变大，即使将录制质量设置为全帧，传输的视频也只能以 1fps 的速度存储。
 - 由于 SD 内存卡的一些空间保留供系统使用，所有只有占总容量约 90% 的空间可用。
3. 指定录制条件。
 - 录制配置文件：显示要录制的配置文件数。
 - 覆盖：如果 SD 存储卡已满，则删除旧数据并存储新数据代替。
 - 预先录制时间：设置警报前的图像传输时间。
最多可以指定警报发出之前 5 秒。
 - 延迟录制时间：设置警报后的图像传输时间。
最多可以指定警报发出之后 120 秒。
 - 普通：这里可将选项设置为无论发生什么事件，始终录制内容。
 - I-Frame：每秒录制一个图像。
 - 全双工：按录制配置文件中设置的帧率录制。
 - 事件：设置发生的特定事件的录制类型。
 - <事件> 录制未存为 <普通>。
 - 当 <普通> 和 <事件> 录制分辨率为 800x600 或更低时，可设置 <全双工>。
4. 指定 <激活时间>。
 - 始终：始终录制到 SD 内存卡。
 - 如果设置为始终，则激活时间无法更改。
 - 仅预约时间：仅在指定工作日的指定时间内录制。
 - []：指定时间已释放。
5. 完成后，请单击 [应用 ()]。

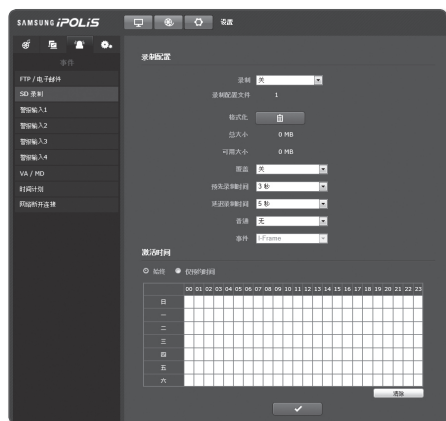

设置屏幕

警报输入1 ~ 4

可以设置警报输入类型、激活时间和工作模式。

1. 从设置菜单，选择 <事件 ()> 选项卡。

2. 单击 <警报输入>。

3. 指定警报输入设置。

- 类型

- 常开：它通常是打开的，但是如果关闭，将触发警报。
- 常闭：它通常是关闭的，但是如果打开，将触发警报。

4. 指定 <激活时间>。

- 始终：当警报发出时，请始终检查。当警报发出时，它将在运行的模式下激活。

- 如设置为 <始终>，则无法更改激活时间。

- 仅预约时间：警报发出时，在一周指定的一天检查指定的时间长度。当警报发出时，它将在运行的模式下激活。

- []：所有设置已释放。

5. 指定警报发出时将执行的操作。

- 警报输出1/警报输出2：选择如果警报进入是否设置警报输出，并指定警报输出时间。

- 电子邮件 发送：在警报输入设置中指定电子邮件传输的使用。

- 有关更多详情，请参阅“FTP/电子邮件”。(第 88 页)

- FTP 发送：在警报输入设置中指定使用 FTP 传输。


- 有关更多详情，请参阅“FTP/电子邮件”。(第 88 页)

- 录制：这里可将选项设置为输入警报时，将内容录制在 SD 内存卡中。

- 将 <SD 录制> 中的 <录制> 设置为 <开>。(第 89 页)

- 转至预设位：在设置警报输入时，移动至指定的预设位置。

6. 完成后，请单击 [应用 ()]。

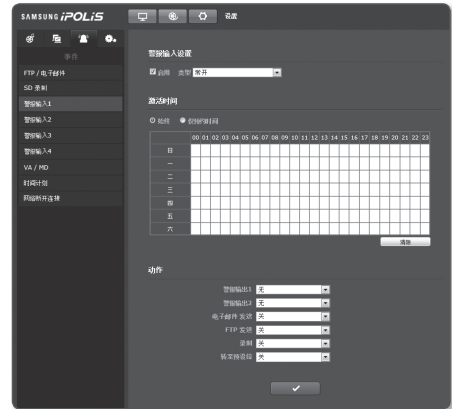

VA / MD

这里可设置为探测到移动或智能视频分析事件时，产生事件信号。


1. 从设置菜单，选择 <事件 (🔔)> 选项卡。
2. 单击 <VA / MD>。



■ 如使用 VA/MD，则无法使用数字稳定。

■ 使用移动探测 (MD)

1. 选择移动探测模式。
2. 将 <移动探测功能> 设置为 <启用>。
3. 选择移动探测的灵敏度级别。
灵敏度越高，探测的动作越细微。
4. 使用拖放方法指定视频探测区域。
5. 指定激活时间和激活条件。
 - 有关 <激活时间> 和 <动作> 的详细信息，请参阅 “警报输入”。（第 90 页）
6. 完成后，请单击 [应用 (✔)]。

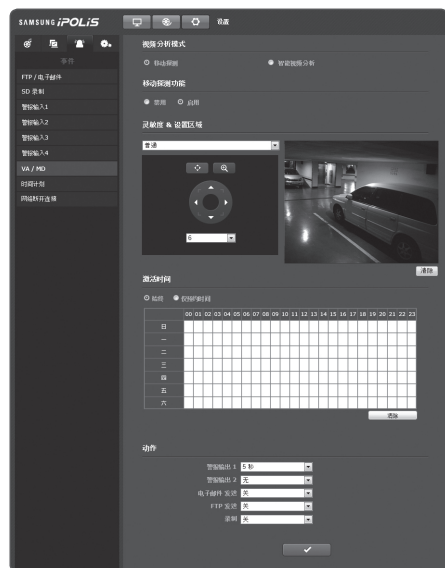

设置屏幕

■ 使用智能视频分析 (VA)

1. 选择智能视频分析模式。

2. 将 <智能视频分析功能> 设置为 <启用>。

3. 选择类型。

- 线/区域/场景更改：如果物体通过您指定的线、区域或整个屏幕，或者如果发生进入/退出或场景变化，则会触发事件。
- 出现/消失：如果物体在您指定的线、区域或全屏幕上出现或消失，则会触发事件。

4. 指定事件规则。

- 最小物体大小：设置用于视频识别的物体最小大小。
- 最大物体大小：设置用于视频识别的物体最大大小。
- 基于虚拟线的规则：根据虚拟线分析视频。
- 基于已定义区域的规则：根据定义的区域分析视频。
- 基于整个区域的规则：根据整个区域分析视频。

5. 选择移动物体的探测灵敏度。

- 在可以清楚区分物体与背景的环境中，设置为较低灵敏度。否则设置为较高灵敏度，例如在黑暗的位置。

6. 设置是否使用重叠。

- 如果将其设置为 <启用>，屏幕上将显示事件规则。


7. 选择在探测到移动时是否标记相应的区域。

- 选择 <开> 以在屏幕上在探测到的移动物体上标记一个框。
这些物体以颜色标记，例如绿色表示非事件物体，红色表示线/区域事件物体，蓝色表示出现/消失事件物体。

8. 指定激活时间和激活条件。

- 有关 <激活时间> 和 <动作> 的详细信息，请参阅“警报输入”。（第 90 页）

9. 完成后，请单击 [应用 ()]。

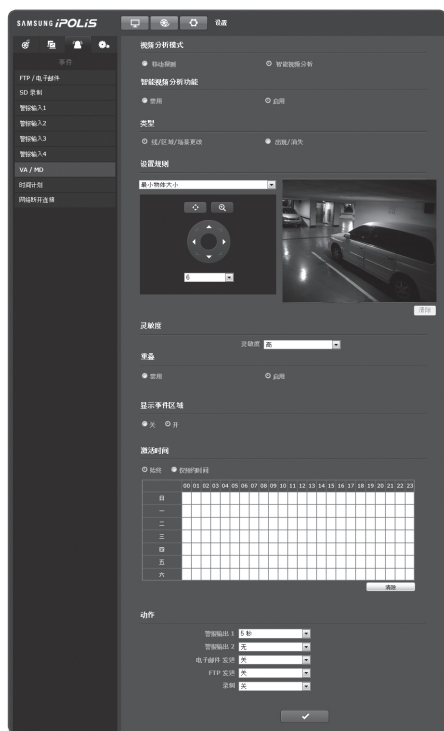




- 不能同时使用移动探测和视频智能分析。
- 线/区域/场景变化的事件物体类型不能与出现/消失同时应用。
- 设置适合要探测物体的最大和最小探测大小。
- 物体的探测到大小与实际大小可能会有差异，视其形状而定。
- 从屏幕顶部开始，最多可以显示 16 个物体。
- 如果摄像机拍摄到较近的对象，视频分析功能可能会变弱。
- 在以下情况下，移动探测和智能视频分析功能可能会下降或导致不正确的探测结果。
 - 拍摄对象的颜色或亮度与背景类似。
 - 摄像机视野边界区域周围的小活动。
 - 由于场景变化、照明快速变化或其他原因，多次移动随机连续发生。
 - 固定的对象在一个位置连续不断地移动。
 - 位置变化不大的移动，例如逐渐靠近摄像机或从摄像机中慢慢消失。
 - 移动的对象离摄像机太近
 - 对象隐藏在其他对象后面。
 - 2 个或更多对象重叠，或者 1 个对象被分成多个对象。
 - 对象速度太快（若要探测，一个对象应该在邻近的帧之间重叠）。
 - 由于太阳直射、照明或头灯等强光而出现反射 / 视线模糊 / 阴影。
 - 在大雪、大雨、大风或黎明 / 黄昏环境中。
- 如果在 CGI 类型中建立连接，则将只会传输移动探测事件，不包括智能视频分析事件。

设置屏幕

■ 线/区域/场景更改


设置最小物体大小

1. 将〈智能视频分析功能〉设置为〈启用〉。
2. 将类型设置为〈线/区域/场景更改〉。
3. 将事件规则设置为〈最小物体大小〉。
4. 拖放到所需视频点。
会将最小物体大小应用于蓝色区域（拖放的区域）。
 - 小于指定最小值的物体将无法探测。
5. 完成后，请单击 [应用 ()]。

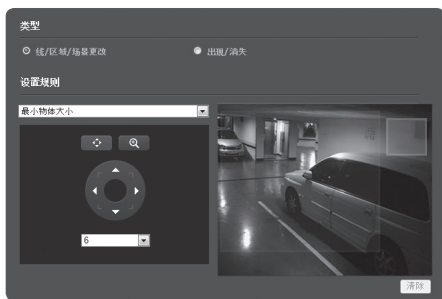

设置最大物体大小

1. 将〈智能视频分析功能〉设置为〈启用〉。
2. 将类型设置为〈线/区域/场景更改〉。
3. 将事件规则设置为〈最大物体大小〉。
4. 拖放到所需视频点。
会将最大物体大小应用于红色区域（拖放的区域）。
 - 大于指定最大值的物体将无法探测。
5. 完成后，请单击 [应用 ()]。

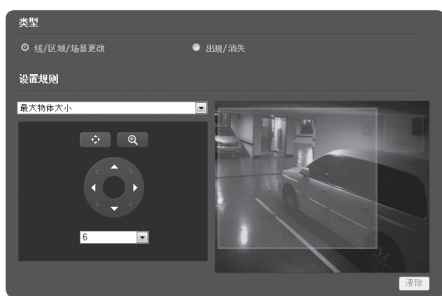

设置基于虚拟线的规则

1. 将〈智能视频分析功能〉设置为〈启用〉。
2. 将类型设置为〈线/区域/场景更改〉。
 - 仅当将智能视频分析类型设置为〈线/区域/场景更改〉时，才能指定基于虚拟线的规则。
3. 将事件规则设置为〈基于虚拟线的规则〉。
4. 在屏幕上单击线的开始点和结束点以显示弹出对话框。
5. 选择所需的〈基于虚拟线的规则〉。
 - 右：将探测虚拟线中从左至右的移动。
 - 左：将探测虚拟线中从右至左的移动。
 - 两端：将探测虚拟线中任何方向的移动。
6. 单击 [确认]。
要取消指定的线，请将鼠标悬浮在该线上，然后右键单击以显示上下文菜单。
选择 [删除] 或 [清除 ()]。
7. 完成后，请单击 [应用 ()]。



设置基于已定义区域的规则

1. 将〈智能视频分析功能〉设置为〈启用〉。
2. 类型设置为〈线/区域/场景更改〉。
3. 将事件规则设置为〈基于已定义区域的规则〉
4. 在视频中单击所需区域的拐角点以显示弹出窗口。
5. 选择所需的〈基于已定义区域的规则〉。
 - 进入：此事件规则探测物体的中心从外部通过区域的边界进入已定义区域的事件。
 - 出去：此事件规则探测物体的中心从已定义区域内部通过区域的边界离开已定义区域的事件。
6. 单击 [确认]。
要取消指定的区域，请将鼠标悬浮在该区域上，然后右键单击以显示上下文菜单。
选择 [删除] 或 [清除(清除)]。
7. 完成后、请单击 [应用 (应用)]。



设置基于整个区域的规则

1. 将〈智能视频分析功能〉设置为〈启用〉。
2. 将类型设置为〈线/区域/场景更改〉。
3. 如果你将事件规则设置为〈基于整个区域的规则〉，那么将显示弹出窗口。
4. 选择所需的〈基于整个区域的规则〉。
 - 场景更改：将探测场景更改超过某个时间间隔的事件。
 - 探测场景变化与实际发生变化可能会延迟一小会。
 - 为了提高稳定性，当场景变化事件发生时，操作会暂停一小会，并且在此期间没有事件的其他探测实例（包括场景变化）起作用。
 - 在单调背景、夜晚或低照度环境下，探测性能可能会下降。
5. 单击 [确认]。
要取消现有区域，请右键单击区域以显示弹出对话框，然后在上下文菜单中选择 [删除]。
6. 完成后、请单击 [应用 (应用)]。




设置屏幕

■ 出现/消失


设置最小物体大小

1. 将〈智能视频分析功能〉设置为〈启用〉。
2. 将类型设置为〈出现/消失〉。
3. 将事件规则设置为〈最小物体大小〉。
4. 拖放到所需视频点。
会将最小物体大小应用于蓝色区域（拖放的区域）。
 - 小于指定最小值的物体将无法探测。
5. 完成后，请单击 [应用 ()]。

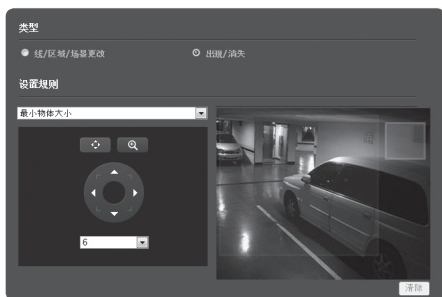

设置最大物体大小

1. 将〈智能视频分析功能〉设置为〈启用〉。
2. 将类型设置为〈出现/消失〉。
3. 将事件规则设置为〈最大物体大小〉。
4. 拖放到所需视频点。
会将最大物体大小应用于红色区域（拖放的区域）。
 - 大于指定最大值的物体将无法探测。
5. 完成后，请单击 [应用 ()]。

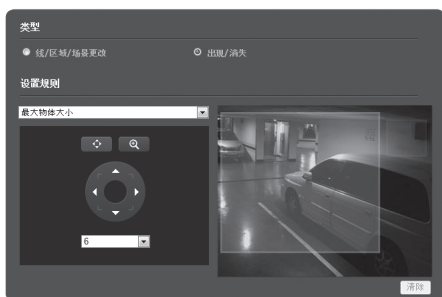

设置基于已定义区域的规则


1. 将〈智能视频分析功能〉设置为〈启用〉。
2. 类型设置为〈出现/消失〉。
3. 将事件规则设置为〈基于已定义区域的规则〉
4. 拖放到所需视频点。
通过拖放方法选择的区域会根据指定设置。
5. 要取消选择，只需单击 [清除 ()]。
6. 完成后，请单击 [应用 ()]。



时间计划

可以设置为根据计划以特定间隔保存视频数据，而不考虑事件的实际情况。


1. 从设置菜单，选择 **<事件 (📌)>** 选项卡。
2. 单击 **<时间计划>**。
3. 将 **<定时器事件设置>** 设置为 **<启用>**。
4. 指定 **<激活时间>**。
 - 始终：始终执行设置操作。
 - 仅预约时间：仅在指定工作日的指定时间定期执行设置操作。
5. 指定 **<传输时间间隔>**。
6. 指定激活条件。
 - FTP 发送：这里可设置输入警报时使用 FTP 的传输选项。
 - 有关更多详情，请参阅“FTP/电子邮件”。(第 88 页)
 - 录制：这里可设置输入警报时将内容录制在 SD 内存卡中的选项。
 - 将 **<SD 录制>** 中的 **<录制>** 设置为 **<开>**。(第 89 页)
7. 完成后，请单击 **[应用 (✔)]**。

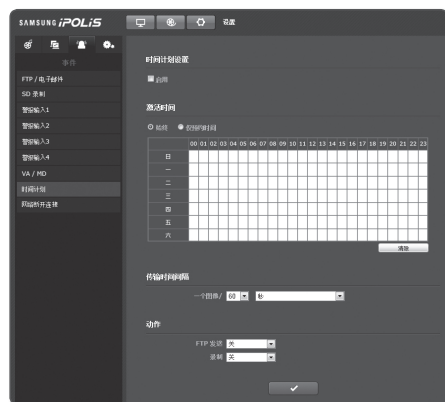

网络断开连接

这里可设置物理网络连接切断时产生事件信号。

1. 从设置菜单，选择 **<事件 (📌)>** 选项卡。
2. 单击 **<网络断开连接>**。
3. 指定使用“网络断开连接”。
4. 指定激活时间和激活条件。
 - 有关 **<激活时间>** 和 **<动作>** 的详细信息，请参阅“警报输入”。(第 90 页)
5. 完成后，请单击 **[应用 (✔)]**。

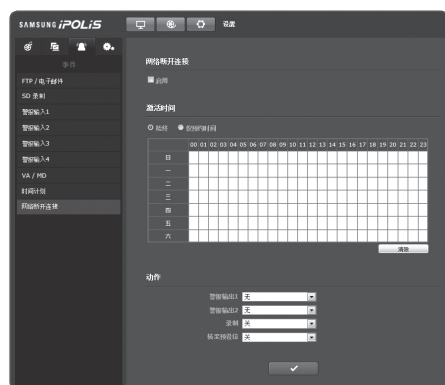

设置屏幕

系统设置

产品信息

1. 从设置菜单，选择 <系统 ()> 选项卡。
2. 单击 <产品信息>。
3. 检查摄像机信息，或根据网络环境提供详细信息。
 - 型号：产品的型号名称。
 - 序列号：产品序列号。
 - 设备名称：提供将在现场屏幕上显示的设备名称。
 - 位置：指定安装摄像机的位置。
 - 描述：提供有关摄像机位置的详细信息。
 - 备忘录：提供有关摄像机的说明以便更好理解。
 - 语言：选择 Web 查看器 OSD 的首选语言。




默认语言设置为 <English>。

4. 完成后，请单击 [应用 ()]。



日期和时间

1. 从设置菜单，选择 <系统 ()> 选项卡。
2. 单击 <日期和时间>。
3. 指定将应用于摄像机的时间和日期。
 - 当前系统时间：显示系统的当前时间设置。
 - 时区：指定本地基于 GMT 的时区。
 - 使用夏令时：如果选中、将在指定的时间段内将时间设置成比当地时区早一小时。仅在应用夏令时的地区显示此选项。
 - 系统时间设置：指定将应用于您的系统的时间和日期。
 - 手动：手动指定时间。
 - 与 NTP 服务器：与指定的服务器地址的时间同步。
 - 与 PC 查看器同步：与连接的计算机的时间同步。

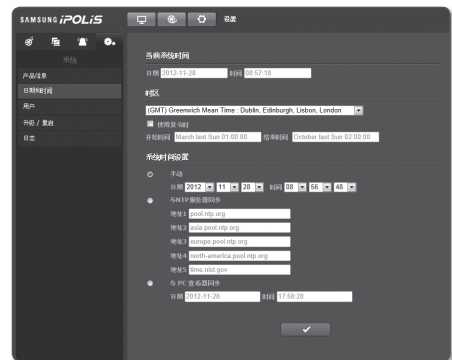

4. 完成后，请单击 [应用 ()]。



如果您选择 <与 PC 查看器同步>，则应该将标准时区设置为与计算机中的当前时区相同。

用户

1. 从设置菜单，选择 <系统 ()> 选项卡。

2. 单击 <用户>。

3. 提供必要的用户信息。

- 管理员密码更改：更改管理员的密码。



- 默认密码可能会向黑客线程公开，因此建议您在安装产品之后更改密码。
请注意，不更改密码导致的安全和其他相关问题，用户自己承担责任。
- 如存在来自 PC 的多个活动连接时更改密码，浏览器可能发生故障。此时，请重新连接服务器。



- 访客设置：如果允许 <访客访问>，持有能访问 Web 查看器的来宾帐户的用户只能查看 Live viewer 屏幕。

- Guest 帐户的 ID/密码是 <guest/guest>，它无法更改。

- 启用不需要认证的 RTSP 连接：如选择 <启用>，您无需登录即可访问 RTSP 并查看视频。

- 当前用户：可以为设置为 <启用> 的用户更改用户信息和调整权限级别。

- 视频：可以在 Live Viewer 屏幕中选择视频配置文件。
- 音频输入：在 Live Viewer 屏幕中，将激活音频输入选项。
- 控制：您可控制 PTZ 控制、MIC 和警报按钮。

4. 完成后，请单击 [应用 ()]。

设置屏幕

升级 / 重启

1. 从设置菜单，选择 <系统 ()> 选项卡。

2. 单击 <升级 / 重启>。

3. 选择所需的项目并进行适当设置。

- 升级：执行系统升级。
- 出厂默认设置：将系统重置为出厂默认值。
 - 网络参数之外：重置网络设置以外的其他设置。
 - 全部：重置包括摄像机设置在内的所有设置。(但是，将不重置日志信息)
 - 如果重置摄像机，IP 寻址系统将默认为 DHCP。如果未找到 DHCP 服务器，将自动恢复之前的设置。
- 配置备份与恢复：在执行恢复流程之前，备份当前的系统设置。备份或恢复之后，系统会自动重新启动。
- 重新启动：重新启动系统。



执行升级

1. 单击 [升级]。

2. 单击 [浏览] 并指定要升级的文件。



3. 单击 [发送]。

4. “升级”对话框出现，其底部将显示进度。

5. 完成升级之后，浏览器将会退出，并且摄像机会重新启动。




- 升级过程大约需要 20 分钟。
如果强行终止升级流程，升级将无法正确完成。
- 在重新启动系统期间，不能使用 Web Viewer 进行访问。
- 可以从 Samsung 网站 (www.samsungcctv.com) 下载最新版本。

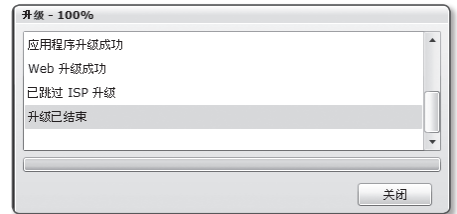

备份当前设置

1. 单击 **[备份]**。
另存为对话框将出现。
2. 指定备份路径及正确的文件名，然后单击 **[保存(S)]**。
备份文件将以“.bin”格式保存到指定的路径。

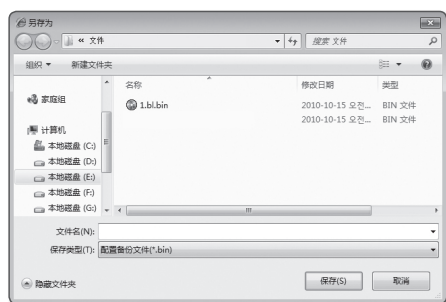


恢复备份设置

1. 要恢复备份设置，请单击 **[恢复]**。
2. 选择备份文件，然后单击 **[打开(O)]**。




- 如果执行备份或恢复，Web 浏览器将关闭，且摄像机将重新启动。

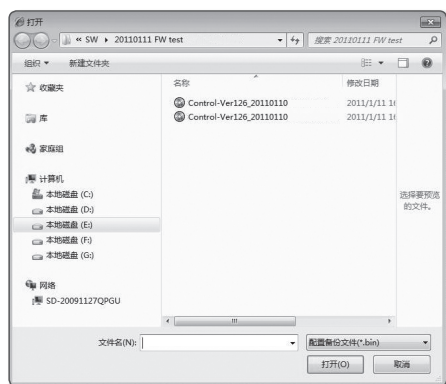

日志

可以检查系统日志或事件日志。

1. 从设置菜单，选择 **<系统 ()>** 选项卡。
2. 单击 **<日志>**。
3. 选择日志类型。
 - Syslog：您可以检查系统日志，其中记录了所有系统更改，包括时间信息。
 - Evtlog：可以检查事件日志，包括时间信息。
4. 从右边的日志列表，选择要搜索的项目。
 - 如果在左上角的下拉列表中选择了 **<All>**，将显示适用日志类型的所有日志。
5. 如果一页无法显示所有可用的日志，请使用底部按钮以移至前一个、下一个或最后项目。

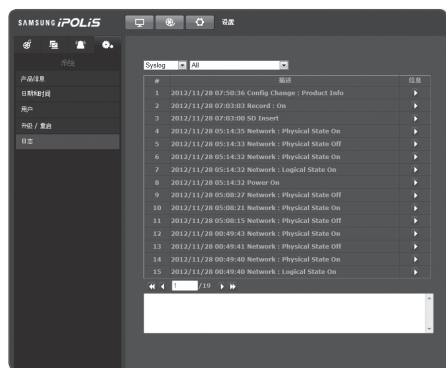

- 如果要查看日志的详细信息，请单击日志右列中的 **[信息 ()]**；日志信息将显示在底部窗格中。
- 每页显示 15 个日志，最新的日志显示在顶部。
- 事件/系统日志列表最多可包含 1000 个日志；之后，每当创建新日志时，将删除最旧的现有日志。

附录

规格

项目		说明	
		SNP-6200N/P	SNP-6200HN/HP
视频	成像设备	1/3 英寸逐行扫描 CMOS	
	总像素数	2,010（水平）x 1,108（垂直），2.2M 像素	
	有效像素数	1,944（水平）x 1,092（垂直），2.1M 像素	
	扫描系统	逐行扫描	
	最低照度	彩色：1.5 勒克司 F1.6（50IRE）、黑白：0.1 勒克司 F1.6（50IRE）	
	S/N 比率	50dB	
	视频输出	CVBS：1.0 Vp-p / 75Ω 复合，704x480(N)，704x576(P) 供安装使用	
镜头	焦距（变焦比率）	4.45 ~ 89 毫米（20X）	
	最大孔径比	F1.6（广角）/ F2.9（望远）	
	视野角度	水平：63°（广角）~ 3.49°（望远）、垂直：37°（广角）~ 1.99°（望远）	
	最短物距	1 米	
	聚焦控制	自动 / 手动 / 一次	
	镜头类型	直流自动光圈	
	安装类型	内置板类型	
平移/倾斜/旋转	平移范围	360°循环	
	平移速度	预设：500°/秒，手动：0.024°/秒 ~ 120°/秒	
	倾斜范围	190°（-5° ~ 185°）	
	倾斜速度	预设：500°/秒，手动：0.024°/秒 ~ 120°/秒	
	旋转范围	-	
	预设	255 个	
	预设准确度	±0.1°	
	自动跟踪	-	

项目	说明	
	SNP-6200N/P	SNP-6200HN/HP
操作	摄像机标题	关/开（最多显示 15 个字符）
	日夜	自动/彩色/黑白
	背光补偿	关/背光补偿/强光抑制
	宽动态	关/开
	对比度增强	SSDR（Samsung 超级动态范围）（关/开）
	数字降噪	SSNRIII（2D+3D 噪音过滤）（关/低/中/高）
	数字图像稳定器	关/开
	移动探测	关/开（1 个可编程区域）
	隐私遮挡	关/开（8 个可编程区域）
	感光度（帧合成）	关/自动（2X ~ 60X）
	增益控制	关/低/中/高/手动
	白平衡	自动追踪白平衡/自动控制白平衡/手动/室内/室外
	电子快门速度	自动/防闪烁/手动（1/30 ~ 1/33,000 秒）
	数字变焦	关/开（1X~8X）
	翻转/镜像	关/开
	智能视频分析	虚拟线、进入/退出、出现/消失
	警报 I/O	4 个输入/2 个输出（中继）
	控制器接口	RS-485/422
	RS-485 协议	SAMSUNG-T/E、PELCO-P/D、Panasonic、Bosch、Honeywell、Vicon、AD、GE

附录

项目		说明	
		SNP-6200N/P	SNP-6200HN/HP
网络	以太网	RJ-45（10/100BASE-T）	
	视频压缩格式	H.264、MJPEG	
	分辨率	1920x1080P(全高清)、1280x1024、1280x960、1280x720P(高清)、1024x768、800x600、800x450、640x480、640x360、320x240、320x180	
	最大帧速率	所有分辨率都是最高 30fps * 宽动态为开时，最高帧速率是 15fps。	
	智能编码	是（基于所有区域的方法，面部探测方法）	
	视频质量调整	H.264：压缩级别、目标比特率级别控制 MJPEG：质量级别控制	
	比特率控制方法	H.264：CBR 或 VBR MJPEG：VBR	
	流能力	多流（最多 6 个配置文件）	
	音频 I/O	麦克风/线性输入、线性输出（不支持单声道插头。）	
	音频压缩格式	G.711 μ -law、G.726	
	音频通信	双向	
	IP	IPv4、IPv6	
	协议	TCP/IP、UDP/IP、RTP(UDP)、RTP(TCP)、RTSP、NTP、HTTP、HTTPS、SSL、DHCP、PPPoE、FTP、SMTP、ICMP、IGMP、SNMPv1/v2c/v3(MIB-2)、ARP、DNS、DDNS、ONVIF、QoS	
	安全	HTTPS（SSL）登录验证 分类登录验证 IP 地址过滤 用户访问日志 802.1X 身份验证方法	
	流方法	单播/多播	
	最大用户访问量	单播模式下 10 个用户	
	内存插槽	SD/SDHC 内存插槽	



项目		说明	
		SNP-6200N/P	SNP-6200HN/HP
网络	ONVIF 一致	是	
	网页语言	英语、法语、德语、西班牙语、意大利语、中文、韩文、俄语、日语、瑞典语、丹麦语、葡萄牙语、捷克语、波兰语、土耳其语、罗马尼亚语、塞尔维亚语、荷兰语、克罗地亚语、匈牙利语、希腊语	
	Web 查看器	支持的操作系统：Microsoft Windows 7/VISTA/XP SP3、Apple MAC OS 支持的浏览器：Firefox、Google Chrome、*Apple Safari、Windows Internet Explorer 9.0 (32 位) /8.0 (32 位) /7.0 (32 位) * 对于 Mac OSX，仅支持 Safari 浏览器。	
	中央管理软件	NET-i viewer	
环境	工作温度/湿度	-10°C ~ +55°C (+14°F ~ +131°F) / 相对湿度 ~ 90%	-50°C ~ +55°C (-58°F ~ +131°F) / 相对湿度 ~ 90% (AC 24V 打开)
	贮藏温度/湿度	-30°C ~ +60°C /相对湿度 ~ 90%	
	进入保护	-	IP 66 级（防水）、IK10
电气	输入电压/电流	24V AC, PoE+ (IEEE802.3at)	
	功耗	最大 21W	最大 25W（加热器关）、 最大 60W（加热器开）、 * 加热器只能通过交流电源输入供电。
机械	颜色/材料	象牙色/塑料	象牙色/铝 塑料遮阳装置
	尺寸（直径 x 高）	直径 155.0 x 高 243.4 毫米	直径 248.0 x 高 316.5 毫米
	重量	2.2 公斤	4.6 公斤

附录

产品视图



■ SNP-6200

单位：毫米（英寸）

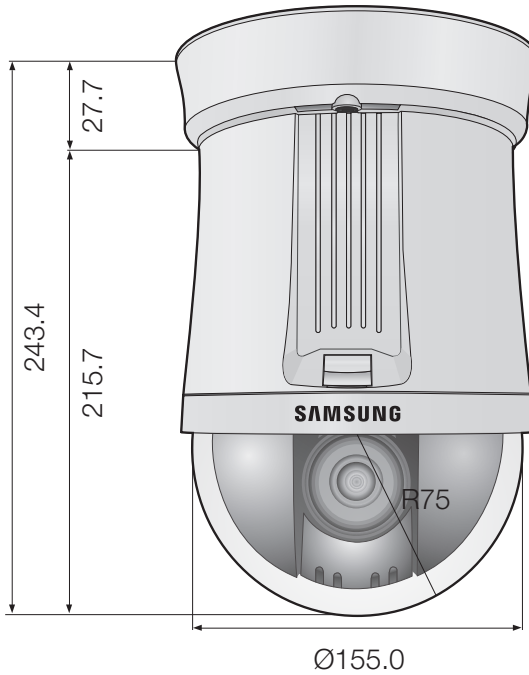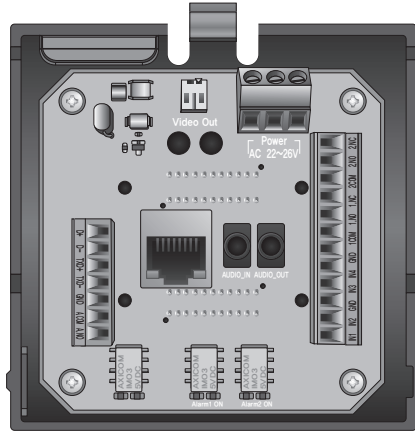

■ SNP-6200H

单位：毫米（英寸）

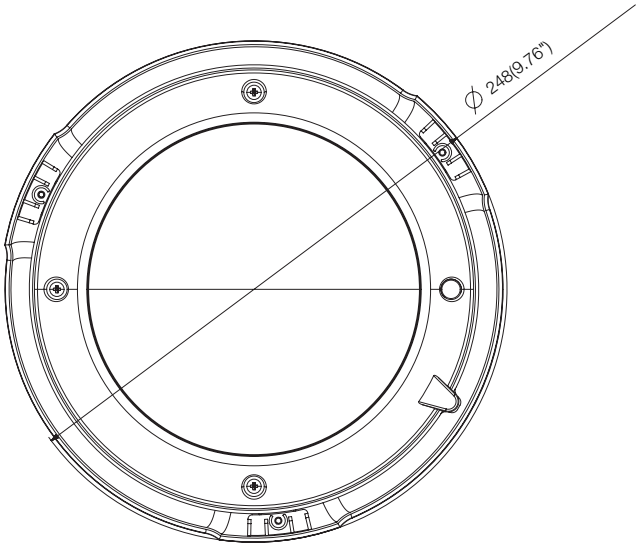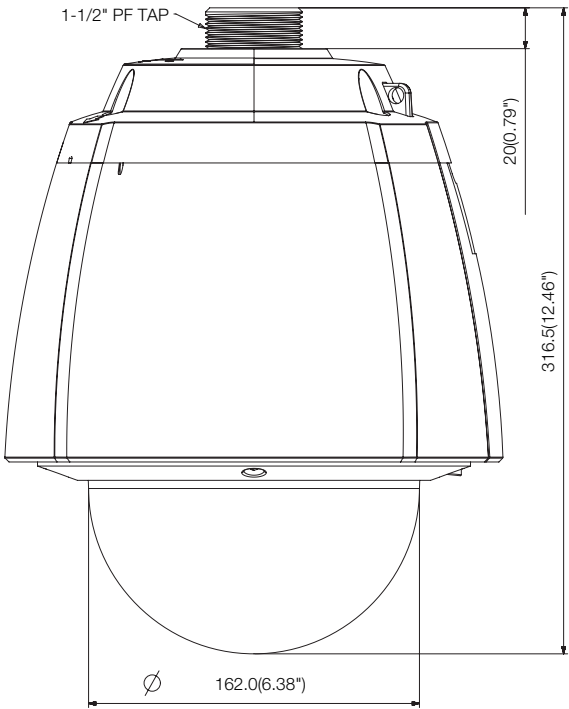

附录

故障排除

故障	解决方法
无法使用网络浏览器访问摄像头。	• 检查摄像头的网络设置 是否正确。 • 检查网络缆线是否正确 连接。 • 若使用 DHCP 连接、检查摄像头是否能够 无故障地获得动态 IP 地址。 • 若摄像头与宽带路由器连接、确认是否 正确设置了端口转发。
查看器在监视期间断开。	• 已连接的查看器在摄像头或网络配置发生更改时会断开。 • 检查所有的网络连接。 • 若摄像头通过 PPPoE 网络进行连接，查看器在网络状况不佳的情况下可能会断开。
无法使用 IE 7.0 的选项卡浏览器连接系统。	• 由于共享了 cookie 数据，所以与新窗口或选项卡连接时可能出错。不要使用新窗口或选项卡，选择“文件 → 新建会话”
IP 安装程序未检测到连接至网络的摄像头。	• 关闭 PC 上的防火墙设置、再次搜索摄像头。
图像重叠。	• 检查是否将多个摄像头应当设置的不同地址设为了同一多播地址。多个摄像头共享同一地址可能会导致图像的重叠。
无图像出现。	• 如果传输方法设置为多播，请检查摄像头所连接的 LAN 中是否有路由器支持多播。

故障	解决方法
即使将 <智能视频分析功能> 设置为 <启用>, 如果发生摄像机的智能视频分析事件, 也不会通过电子邮件传输文件。	- 按以下顺序验证设置 : A. 检查 <日期和时间> 设置。 B. <智能视频分析功能> 应设置为 <启用>。 C. 警报视频传输必须已启用。
即使 <智能视频分析功能> 已设置为 <禁用>, 是否可以配置 <设置规则>?	是, 可以。无论智能视频分析设置如何, 您均可设置事件规则。
即使在产生智能视频分析事件时, 在报警输出端口也找不到信号。	检查警报输出端口设置。
无法录制到 SD 内存卡。	- 检查内存卡是否有缺陷。 - 检查内存卡的写保护标签是否设置为 “LOCK” 。
插入了 SD 内存卡, 但摄像机操作不正常。	- 检查是否以正确的方向插入内存卡。不能保证本摄像机装置能正常使用由其他设备格式化的内存卡 - 在 <设置> → <事件> → <SD 录制> 菜单中, 再次格式化内存卡。
无法格式化 SD 内存卡。	检查内存卡的写保护标签是否设置为 “LOCK” 。

OPEN SOURCE LICENSE NOTIFICATION ON THE PRODUCT

The software included in this product contains copyrighted software that is licensed under the GPL/LGPL. You may obtain the complete Corresponding Source code from us for a period of three years after our last shipment of this product by sending email to help.cctv@samsung.com

If you want to obtain the complete Corresponding Source code in the physical medium such as CD-ROM, the cost of physically performing source distribution might be charged.

- GPL Software : linux kernel, uboot, Sysvinit, busybox-1.15.3 (<http://www.busybox.net/>), Net-snmp 5.4 (<http://www.net-snmp.org/>), dvzdk 2.10.01.18
 - LGPL Software : glibc-2.0 (<http://www.gnu.org/software/libc/>),
 - BSD1.0 : math-linux (<http://sourceforge.net/projects/math-linux/>)
 - BSD2.0 : lighttpd-1.4.26 (<http://www.lighttpd.net/>), MiniUPnP Project Client (<http://miniupnp.tuxfamily.org/>)
 - MIT License : Prototype JavaScript Framework-1.7 (<http://prototypejs.org/>)
 - libxml2 License : libxml2 (<http://xmlsoft.org/>)
 - OpenSSL License : openssl-0.9.8 (<http://www.openssl.org/>)
 - PHP 3.01 License : php-5.3.2 (<http://www.php.net/>)
-

GNU GENERAL PUBLIC LICENSE

Version 2, June 1991

Copyright (C)1989, 1991 Free Software Foundation, Inc. 51 Franklin Street, Fifth Floor, Boston, MA 02110-1301, USA

Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.

Preamble

The licenses for most software are designed to take away your freedom to share and change it. By contrast, the GNU General Public License is intended to guarantee your freedom to share and change free software-- to make sure the software is free for all its users. This General Public License applies to most of the Free Software Foundation's software and to any other program whose authors commit to using it. (Some other Free Software Foundation software is covered by the GNU Lesser General Public License instead.) You can apply it to your programs, too. When we speak of free software, we are referring to freedom, not price. Our General Public Licenses are designed to make sure that you have the freedom to distribute copies of free software (and charge for this service if you wish), that you receive source code or can get it if you want it, that you can change the software or use pieces of it in new free programs ; and that you know you can do these things.

To protect your rights, we need to make restrictions that forbid anyone to deny you these rights or to ask you to surrender the rights. These restrictions translate to certain responsibilities for you if you distribute copies of the software, or if you modify it.

For example, if you distribute copies of such a program, whether gratis or for a fee, you must give the recipients all the rights that you have.

You must make sure that they, too, receive or can get the source code. And you must show them these terms so they know their rights. We protect your rights with two steps :

(1)copyright the software, and (2)offer you this license which gives you legal permission to copy, distribute and/or modify the software. Also, for each author's protection and ours, we want to make certain that everyone understands that there is no warranty for this free software. If the software is modified by someone else and passed on, we want its recipients to know that what they have is not the original, so that any problems introduced by others will not reflect on the original authors' reputations.

Finally, any free program is threatened constantly by software patents. We wish to avoid the danger that redistributors of a free program will individually obtain patent licenses, in effect making the program proprietary. To prevent this, we have made it clear

that any patent must be licensed for everyone's free use or not licensed at all. The precise terms and conditions for copying, distribution and modification follow.

TERMS AND CONDITIONS FOR COPYING, DISTRIBUTION AND MODIFICATION

Version 2, June 1991 Copyright (C) 1989, 1991 Free Software Foundation, Inc. 51 Franklin S

0. This License applies to any program or other work which contains a notice placed by the copyright holder saying it may be distributed under the terms of this General Public License.

The "Program", below, refers to any such program or work, and a "work based on the Program" means either the Program or any derivative work under copyright law : that is to say, a work containing the Program or a portion of it, either verbatim or with modifications and/or translated into another language. (Hereinafter, translation is included without limitation in the term "modification".) Each licensee is addressed as "you".

Activities other than copying, distribution and modification are not covered by this License ; they are outside its scope. The act of running the Program is not restricted, and the output from the Program is covered only if its contents constitute a work based on the Program (independent of having been made by running the Program). Whether that is true depends on what the Program does.

1. You may copy and distribute verbatim copies of the Program's source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice and disclaimer of warranty; keep intact all the notices that refer to this License and to the absence of any warranty ; and give any other recipients of the Program a copy of this License along with the Program. You may charge a fee for the physical act of transferring a copy, and you may at your option offer warranty protection in exchange for a fee.
2. You may modify your copy or copies of the Program or any portion of it, thus forming a work based on the Program, and copy and distribute such modifications or work under the terms of Section 1 above, provided that you also meet all of these conditions :
 - a) You must cause the modified files to carry prominent notices stating that you changed the files and the date of any change.
 - b) You must cause any work that you distribute or publish, that in whole or in part contains or is derived from the Program

or any part thereof, to be licensed as a whole at no charge to all third parties under the terms of this License.

- c) If the modified program normally reads commands interactively when run, you must cause it, when started running for such interactive use in the most ordinary way, to print or display an announcement including an appropriate copyright notice and a notice that there is no warranty (or else, saying that you provide a warranty) and that users may redistribute the program under these conditions, and telling the user how to view a copy of this License. (Exception: if the Program itself is interactive but does not normally print such an announcement, your work based on the Program is not required to print an announcement.)

These requirements apply to the modified work as a whole. If identifiable sections of that work are not derived from the Program, and can be reasonably considered independent and separate works in themselves, then this License, and its terms, do not apply to those sections when you distribute them as separate works. But when you distribute the same sections as part of a whole which is a work based on the Program, the distribution of the whole must be on the terms of this License, whose permissions for other licensees extend to the entire whole, and thus to each and every part regardless of who wrote it.

Thus, it is not the intent of this section to claim rights or contest your rights to work written entirely by you; rather, the intent is to exercise the right to control the distribution of derivative or collective works based on the Program. In addition, mere aggregation of another work not based on the Program with the Program (or with a work based on the Program) on a volume of a storage or distribution medium does not bring the other work under the scope of this License.

- 3.** You may copy and distribute the Program (or a work based on it, under Section 2) in object code or executable form under the terms of Sections 1 and 2 above provided that you also do one of the following:

- Accompany it with the complete corresponding machine-readable source code, which must be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,
- Accompany it with a written offer, valid for at least three years, to give any third party, for a charge no more than your cost of physically performing source distribution, a complete machine-readable copy of the corresponding source code, to be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,
- Accompany it with the information you received as to the offer to distribute corresponding source code. (This alternative is allowed only for noncommercial distribution and only if you received the program in object code or executable form with such an offer, in accord with Subsection b above.) The source code for a work means the preferred form of the work for making modifications to it. For an executable work, complete source code means all the source code for all modules it contains, plus any associated interface definition files, plus the scripts used to control compilation and installation of the executable. However, as a special exception, the source code distributed need not include anything that is normally distributed (in either source or binary form) with the major components (compiler, kernel, and so on) of the operating system on which the executable runs, unless that component itself accompanies the executable. If distribution of executable or object code is made by offering access to copy from a designated place, then offering equivalent access to copy the source code from the same place counts as distribution of the source code, even though third parties are not compelled to copy the source along with the object code.

- 4.** You may not copy, modify, sublicense, or distribute the Program except as expressly provided under this License. Any attempt otherwise to copy, modify, sublicense or distribute the Program is void, and will automatically terminate your rights under this License.

However, parties who have received copies, or rights, from you under this License will not have their licenses terminated so long as such parties remain in full compliance.

- 5.** You are not required to accept this License, since you have not signed it. However, nothing else grants you permission to modify or distribute the Program or its derivative works.

These actions are prohibited by law if you do not accept this License. Therefore, by modifying or distributing the Program (or any work based on the Program), you indicate your acceptance of this License to do so, and all its terms and conditions for copying, distributing or modifying the Program or works based on it.

- 6.** Each time you redistribute the Program (or any work based on the Program), the recipient automatically receives a license from the original licensor to copy, distribute or modify the Program subject to these terms and conditions. You may not impose any further restrictions on the recipients' exercise of the rights granted herein. You are not responsible for enforcing compliance by third parties to this License.

- 7.** If, as a consequence of a court judgment or allegation of patent infringement or for any other reason (not limited to patent issues), conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If you cannot distribute so as to satisfy simultaneously your obligations under this License and any other pertinent obligations, then as a consequence you may not distribute the Program at all.

For example, if a patent license would not permit royalty-free redistribution of the Program by all those who receive copies directly or indirectly through you, then the only way you could satisfy both it and this License would be to refrain entirely from distribution of the Program.

If any portion of this section is held invalid or unenforceable under any particular circumstance, the balance of the section is intended to apply and the section as a whole is intended to apply in other circumstances. It is not the purpose of this section to induce you to infringe any patents or other property right claims or to contest validity of any such claims; this section has the sole purpose of protecting the integrity of the free software distribution system, which is implemented by public license practices. Many people have made generous contributions to the wide range of software distributed through that system in reliance on consistent application of that system; it is up to the author/donor to decide if he or she is willing to distribute software through any other system and a licensee cannot impose that choice. This section is intended to make thoroughly clear what is believed to be a consequence of the rest of this License.

- 8.** If the distribution and/or use of the Program is restricted in certain countries either by patents or by copyrighted interfaces, the original copyright holder who places the Program under this License may add an explicit geographical distribution limitation excluding those countries, so that distribution is permitted only in or among countries not thus excluded. In such case, this License incorporates the limitation as if written in the body of this License.

- 9.** The Free Software Foundation may publish revised and/or new versions of the General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns. Each version is given a distinguishing version number. If the Program specifies a version number of this License which applies to it and "any later version", you have the option of following the terms and conditions either of that version or of any later version published by the Free Software

Foundation. If the Program does not specify a version number of this License, you may choose any version ever published by the Free Software Foundation.

10. If you wish to incorporate parts of the Program into other free programs whose distribution conditions are different, write to the author to ask for permission. For software which is copyrighted by the Free Software Foundation, write to the Free Software Foundation; we sometimes make exceptions for this. Our decision will be guided by the two goals of preserving the free status of all derivatives of our free software and of promoting the sharing and reuse of software generally.

NO WARRANTY

11. BECAUSE THE PROGRAM IS LICENSED FREE OF CHARGE, THERE IS NO WARRANTY FOR THE PROGRAM, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE PROGRAM "ASIS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE PROGRAM IS WITH YOU. SHOULD THE PROGRAM PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION. 12. IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MAY MODIFY AND/OR REDISTRIBUTE DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PROGRAM (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE PROGRAM TO OPERATE WITH ANY OTHER PROGRAMS), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

END OF TERMS AND CONDITIONS

How to Apply These Terms to Your New Programs

If you develop a new program, and you want it to be of the greatest possible use to the public, the best way to achieve this is to make it free software which everyone can redistribute and change under these terms.

To do so, attach the following notices to the program. It is safest to attach them to the start of each source file to most effectively convey the exclusion of warranty; and each file should have at least the "copyright" line and a pointer to where the full notice is found. one line to give the program's name and an idea of what it does.

Copyright (C)yyyy name of author

This program is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.

This program is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with this program; if not, write to the Free Software Foundation, Inc., 51 Franklin Street, Fifth Floor, Boston, MA 02110-1301, USA.

Also add information on how to contact you by electronic and paper mail. If the program is interactive, make it output a short notice like this when it starts in an interactive mode:

Gnomovision version 69, Copyright (C) year name of author

Gnomovision comes with ABSOLUTELY NO WARRANTY; for details type 'show w'. This is free software, and you are welcome to redistribute it under certain conditions; type 'show c' for details.

The hypothetical commands 'show w' and 'show c' should show the appropriate parts of the General Public License. Of course, the commands you use may be called something other than 'show w' and 'show c'; they could even be mouse-clicks or menu items-- whatever suits your program.

You should also get your employer (if you work as a programmer) or your school, if any, to sign a "copyright disclaimer" for the program, if necessary. Here is a sample; alter the names:

Yoyodyne, Inc., hereby disclaims all copyright interest in the program 'Gnomovision' (which makes passes at compilers) written by James Hacker. signature of Ty Coon, 1 April 1989 Ty Coon, President of Vice This General Public License does not permit incorporating

your program into proprietary programs. If your program is a subroutine library, you may consider it more useful to permit linking proprietary applications with the library. If this is

Lwihcaetn ysoeu want to do, use the GNU Lesser General Public instead of this License.

GNU GENERAL PUBLIC LICENSE

Version 3, 29 June 2007

Copyright (C) 2007 Free Software Foundation, Inc. <<http://fsf.org/>>

Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.

Preamble

The GNU General Public License is a free, copyleft license for software and other kinds of works. The licenses for most software and other practical works are designed to take away your freedom to share and change the works. By contrast, the GNU General Public License is intended to guarantee your freedom to share and change all versions of a program--to make sure it remains free software for all its users.

We, the Free Software Foundation, use the GNU General Public License for most of our software; it applies also to any other work released this way by its authors.

You can apply it to your programs, too. When we speak of free software, we are referring to freedom, not price. Our General Public Licenses are designed to make sure that you have the freedom to distribute copies of free software (and charge for them if you wish), that you receive source code or can get it if you want it, that you can change the software or use pieces of it in new free programs, and that you know you can do these things.

To protect your rights, we need to prevent others from denying you these rights or asking you to surrender the rights. Therefore, you have certain responsibilities if you distribute copies of the software, or if you modify it: responsibilities to respect the freedom of others.

For example, if you distribute copies of such a program, whether gratis or for a fee, you must pass on to the recipients the same freedoms that you received. You must make sure that they, too, receive or can get the source code. And you must show them these terms so they know their rights. Developers that use the GNU GPL protect your rights with two steps: (1) assert copyright on the software, and (2) offer you this License giving you legal permission to copy, distribute and/or modify it. For the developers' and authors' protection, the GPL clearly explains that there is no warranty for this free software. For both users' and authors' sake, the GPL requires that modified versions be marked as changed, so that their problems will not be attributed erroneously to authors of previous versions. Some devices are designed to deny users access to install or run modified versions of the software inside them, although the manufacturer can do so. This is fundamentally incompatible with the aim of protecting users' freedom to change the software. The systematic pattern of such abuse occurs in the area of products for individuals to use, which is precisely where it is most unacceptable. Therefore, we have designed this version of the GPL to prohibit the practice for those products. If such problems arise substantially in other

domains, we stand ready to extend this provision to those domains in future versions of the GPL, as needed to protect the freedom of users.

Finally, every program is threatened constantly by software patents. States should not allow patents to restrict development and use of software on general-purpose computers, but in those that do, we wish to avoid the special anger that patents applied to a free program could make it effectively proprietary. To prevent this, the GPL assures that patents cannot be used to render the program non-free. The precise terms and conditions for copying, distribution and modification follow.

TERMS AND CONDITIONS

0. Definitions.

"This License" refers to version 3 of the GNU General Public License.

"Copyright" also means copyright-like laws that apply to other kinds of works, such as semiconductor masks.

"The Program" refers to any copyrightable work licensed under this License. Each licensee is addressed as "you". "Licensees" and "recipients" may be individuals or organizations.

To "modify" a work means to copy from or adapt all or part of the work in a fashion requiring copyright permission, other than the making of an exact copy. The resulting work is called a "modified version" of the earlier work or a work "based on" the earlier work. A "covered work" means either the unmodified Program or a work based on the Program.

To "propagate" a work means to do anything with it that, without permission, would make you directly or secondarily liable for infringement under applicable copyright law, except executing it on a computer or modifying a private copy. Propagation includes copying, distribution (with or without modification), making available to the public, and in some countries other activities as well.

To "convey" a work means any kind of propagation that enables other parties to make or receive copies. Mere interaction with a user through a computer network, with no transfer of a copy, is not conveying. An interactive user interface displays "Appropriate Legal Notices" to the extent that it includes a convenient and prominently visible feature that (1) displays an appropriate copyright notice, and (2) tells the user that there is no warranty for the work (except to the extent that warranties are provided), that licensees may convey the work under this License, and how to view a copy of this License. If the interface presents a list of user commands or options, such as a menu, a prominent item in the list meets this criterion.

1. Source Code.

The "source code" for a work means the preferred form of the work for making modifications to it. "Object code" means any non-source form of a work.

A "Standard Interface" means an interface that either is an official standard defined by a recognized standards body, or, in the case of interfaces specified for a particular programming language, one that is widely used among developers working in that language.

The "System Libraries" of an executable work include anything, other than the work as a whole, that (a) is included in the normal form of packaging a Major Component, but which is not part of that Major Component, and (b) serves only to enable use of the work with that Major Component, or to implement a Standard Interface for which an implementation is available to the public in source code form. A "Major Component", in this context, means a major essential component (kernel, window system, and so on) of the specific operating system (if any) on which the executable work runs, or a compiler used to produce the work, or an object code interpreter used to run it.

The "Corresponding Source" for a work in object code form means all the source code needed to generate, install, and (for an executable work) run the object code and to modify the work, including scripts to control those activities. However, it does not include the work's System Libraries, or generalpurpose tools or

generally available free programs which are used unmodified in performing those activities but which are not part of the work. For example, Corresponding Source includes interface definition files associated with source files for the work, and the source code for shared libraries and dynamically linked subprograms that the work is specifically designed to require, such as by intimate data communication or control flow between those subprograms and other parts of the work.

The Corresponding Source need not include anything that users can regenerate automatically from other parts of the Corresponding Source. The Corresponding Source for a work in source code form is that same work.

2. Basic Permissions.

All rights granted under this License are granted for the term of copyright on the Program, and are irrevocable provided the stated conditions are met. This License explicitly affirms your unlimited permission to run the unmodified Program. The output from running a covered work is covered by this License only if the output, given its content, constitutes a covered work. This License acknowledges your rights of fair use or other equivalent, as provided by copyright law.

You may make, run and propagate covered works that you do not convey, without conditions so long as your license otherwise remains in force. You may convey covered works to others for the sole purpose of having them make modifications exclusively for you, or provide you with facilities for running those works, provided that you comply with the terms of this License in conveying all material for which you do not control copyright. Those thus making or running the covered works for you must do so exclusively on your behalf, under your direction and control, on terms that prohibit them from making any copies of your copyrighted material outside their relationship with you. Conveying under any other circumstances is permitted solely under the conditions stated below. Sublicensing is not allowed; section 10 makes it unnecessary.

3. Protecting Users' Legal Rights From anti-Circumvention Law.

No covered work shall be deemed part of an effective technological measure under any applicable law fulfilling obligations under article 11 of the WIPO copyright treaty adopted on 20 December 1996, or similar laws prohibiting or restricting circumvention of such measures.

When you convey a covered work, you waive any legal power to forbid circumvention of technological measures to the extent such circumvention is effected by exercising rights under this License with respect to the covered work, and you disclaim any intention to limit operation or modification of the work as a means of enforcing, against the work's users, your or third parties' legal rights to forbid circumvention of technological measures.

4. Conveying Verbatim Copies.

You may convey verbatim copies of the Program's source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice; keep intact all notices stating that this License and any non-permissive terms added in accord with section 7 apply to the code; keep intact all notices of the absence of any warranty; and give all recipients a copy of this License along with the Program. You may charge any price or no price for each copy that you convey, and you may offer support or warranty protection for a fee.

5. Conveying Modified Source Versions.

You may convey a work based on the Program, or the modifications to produce it from the Program, in the form of source code under the terms of section 4, provided that you also meet all of these conditions:

- a) The work must carry prominent notices stating that you modified it, and giving a relevant date.
- b) The work must carry prominent notices stating that it is released under this License and any conditions added under

section 7. This requirement modifies the requirement in section 4 to “keep intact all notices”.

- c) You must license the entire work, as a whole, under this License to anyone who comes into possession of a copy. This License will therefore apply, along with any applicable section 7 additional terms, to the whole of the work, and all its parts, regardless of how they are packaged. This License gives no permission to license the work in any other way, but it does not invalidate such permission if you have separately received it.
- d) If the work has interactive user interfaces, each must display Appropriate Legal Notices; however, if the Program has interactive interfaces that do not display Appropriate Legal Notices, your work need not make them do so. A compilation of a covered work with other separate and independent works, which are not by their nature extensions of the covered work, and which are not combined with it such as to form a larger program, in or on a volume of a storage or distribution medium, is called an “aggregate” if the compilation and its resulting copyright are not used to limit the access or legal rights of the compilation’s users beyond what the individual works permit. Inclusion of a covered work in an aggregate does not cause this License to apply to the other parts of the aggregate.

6. Conveying Non-Source Forms.

You may convey a covered work in object code form under the terms of sections 4 and 5, provided that you also convey the machine-readable Corresponding Source under the terms of this License, in one of these ways:

- a) Convey the object code in, or embodied in, a physical product (including a physical distribution medium), accompanied by the Corresponding Source fixed on a durable physical medium customarily used for software interchange.
- b) Convey the object code in, or embodied in, a physical product (including a physical distribution medium), accompanied by a written offer, valid for at least three years and valid for as long as you offer spare parts or customer support for that product model, to give anyone who possesses the object code either (1) a copy of the Corresponding Source for all the software in the product that is covered by this License, on a durable physical medium customarily used for software interchange, for a price no more than your reasonable cost of physically performing this conveying of source, or (2) access to copy the Corresponding Source from a network server at no charge.
- c) Convey individual copies of the object code with a copy of the written offer to provide the corresponding Source. This alternative is allowed only occasionally and noncommercially, and only if you received the object code with such an offer, in accord with subsection 6b.
- d) Convey the object code by offering access from a designated place (gratis or for a charge), and offer equivalent access to the Corresponding Source in the same way through the same place at no further charge. You need not require recipients to copy the Corresponding Source along with the object code. If the place to copy the object code is a network server, the Corresponding Source may be on a different server (operated by you or a third party) that supports equivalent copying facilities, provided you maintain clear directions next to the object code saying where to find the Corresponding Source. Regardless of what server hosts the Corresponding Source, you remain obligated to ensure that it is available for as long as needed to satisfy these requirements.
- e) Convey the object code using peer-to-peer transmission, provided you inform other peers where the object code and Corresponding Source of the work are being offered to the general public at no charge under subsection 6d. A

separable portion of the object code, whose source code is excluded from the Corresponding Source as a System Library, need not be included in conveying the object code work. A “User Product” is either (1) a “consumer product”, which means any tangible personal property which is normally used for personal, family, or household purposes, or (2) anything designed or sold for incorporation into a dwelling. In determining whether a product is a consumer product, doubtful cases shall be resolved in favor of coverage. For a particular product received by a particular user, “normally used” refers to a typical or common use of that class of product, regardless of the status of the particular user or of the way in which the particular user actually uses, or expects or is expected to use, the product. A product is a consumer product regardless of whether the product has substantial commercial, industrial or non-consumer uses, unless such uses represent the only significant mode of use of the product.

“Installation Information” for a User Product means any methods, procedures, authorization keys, or other information required to install and execute modified versions of a covered work in that User Product from a modified version of its Corresponding Source. The information must suffice to ensure that the continued functioning of the modified object code is in no case prevented or interfered with solely because modification has been made. If you convey an object code work under this section in, or with, or specifically for use in, a User Product, and the conveying occurs as part of a transaction in which the right of possession and use of the User Product is transferred to the recipient in perpetuity or for a fixed term (regardless of how the transaction is characterized), the Corresponding Source conveyed under this section must be accompanied by the Installation Information. But this requirement does not apply if neither you nor any third party retains the ability to install modified object code on the User Product (for example, the work has been installed in ROM).

The requirement to provide Installation Information does not include a requirement to continue to provide support service, warranty, or updates for a work that has been modified or installed by the recipient, or for the User Product in which it has been modified or installed. Access to a network may be denied when the modification itself materially and adversely affects the operation of the network or violates the rules and protocols for communication across the network. Corresponding Source conveyed, and Installation Information provided, in accord with this section must be in a format that is publicly documented (and with an implementation available to the public in source code form), and must require no special password or key for unpacking, reading or copying.

7. Additional Terms.

“Additional permissions” are terms that supplement the terms of this License by making exceptions from one or more of its conditions. Additional permissions that are applicable to the entire Program shall be treated as though they were included in this License, to the extent that they are valid under applicable law. If additional permissions apply only to part of the Program, that part may be used separately under those permissions, but the entire Program remains governed by this License without regard to the additional permissions. When you convey a copy of a covered work, you may at your option remove any additional permissions from that copy, or from any part of it. (Additional permissions may be written to require their own removal in certain cases when you modify the work.) You may place additional permissions on material, added by you to a covered work, for which you have or can give appropriate copyright permission. Notwithstanding any other provision of this License, for material you add to a covered work, you may (if authorized by the copyright holders of that material) supplement the terms of this License with terms:

- a) Disclaiming warranty or limiting liability differently from the terms of sections 15 and 16 of this License; or

- b) Requiring preservation of specified reasonable legal notices or author attributions in that material or in the Appropriate Legal Notices displayed by works containing it; or
- c) Prohibiting misrepresentation of the origin of that material, or requiring that modified versions of such material be marked in reasonable ways as different from the original version; or
- d) Limiting the use for publicity purposes of names of licensors or authors of the material; or
- e) Declining to grant rights under trademark law for use of some trade names, trademarks, or service marks; or
- f) Requiring indemnification of licensors and authors of that material by anyone who conveys the material (or modified versions of it) with contractual assumptions of liability to the recipient, for any liability that these contractual assumptions directly impose on those licensors and authors. All other non-permissive additional terms are considered "further restrictions" within the meaning of section 10. If the Program as you received it, or any part of it, contains a notice stating that it is governed by this License along with a term that is a further restriction, you may remove that term. If a license document contains a further restriction but permits relicensing or conveying under this License, you may add to a covered work material governed by the terms of that license document, provided that the further restriction does not survive such relicensing or conveying. If you add terms to a covered work in accord with this section, you must place, in the relevant source files, a statement of the additional terms that apply to those files, or a notice indicating where to find the applicable terms. Additional terms, permissive or non-permissive, may be stated in the form of a separately written license, or stated as exceptions; the above requirements apply either way.

8. Termination.

You may not propagate or modify a covered work except as expressly provided under this License. Any attempt otherwise to propagate or modify it is void, and will automatically terminate your rights under this License (including any patent licenses granted under the third paragraph of section 11). However, if you cease all violation of this License, then your license from a particular copyright holder is reinstated (a) provisionally, unless and until the copyright holder explicitly and finally terminates your license, and (b) permanently, if the copyright holder fails to notify you of the violation by some reasonable means prior to 60 days after the cessation. Moreover, your license from a particular copyright holder is reinstated permanently if the copyright holder notifies you of the violation by some reasonable means, this is the first time you have received notice of violation of this License (for any work) from that copyright holder, and you cure the violation prior to 30 days after your receipt of the notice. Termination of your rights under this section does not terminate the licenses of parties who have received copies or rights from you under this License. If your rights have been terminated and not permanently reinstated, you do not qualify to receive new licenses for the same material under section 10.

9. Acceptance Not Required for Having Copies.

You are not required to accept this License in order to receive or run a copy of the Program. Ancillary propagation of a covered work occurring solely as a consequence of using peer-to-peer transmission to receive a copy likewise does not require acceptance. However, nothing other than this License grants you permission to propagate or modify any covered work. These actions infringe copyright if you do not accept this License. Therefore, by modifying or propagating a covered work, you indicate your acceptance of this License to do so.

10. Automatic Licensing of Downstream Recipients.

Each time you convey a covered work, the recipient automatically receives a license from the original licensors, to run, modify and propagate that work, subject to this License. You are not responsible for enforcing compliance by third parties with this License. An "entity transaction" is a transaction transferring

control of an organization, or substantially all assets of one, or subdividing an organization, or merging organizations. If propagation of a covered work results from an entity transaction, each party to that transaction who receives a copy of the work also receives whatever licenses to the work the party's predecessor in interest had or could give under the previous paragraph, plus a right to possession of the Corresponding Source of the work from the predecessor in interest, if the predecessor has it or can get it with reasonable efforts. You may not impose any further restrictions on the exercise of the rights granted or affirmed under this License. For example, you may not impose a license fee, royalty, or other charge for exercise of rights granted under this License, and you may not initiate litigation (including a cross-claim or counterclaim in a lawsuit) alleging that any patent claim is infringed by making, using, selling, offering for sale, or importing the Program or any portion of it.

11. Patents.

A "contributor" is a copyright holder who authorizes use under this License of the Program or a work on which the Program is based. The work thus licensed is called the contributor's "contributor version". A contributor's "essential patent claims" are all patent claims owned or controlled by the contributor, whether already acquired or hereafter acquired, that would be infringed by some manner, permitted by this License, of making, using, or selling its contributor version, but do not include claims that would be infringed only as a consequence of further modification of the contributor version. For purposes of this definition, "control" includes the right to grant patent sublicenses in a manner consistent with the requirements of this License. Each contributor grants you a non-exclusive, worldwide, royalty-free patent license under the contributor's essential patent claims, to make, use, sell, offer for sale, import and otherwise run, modify and propagate the contents of its contributor version.

In the following three paragraphs, a "patent license" is any express agreement or commitment, however denominated, not to enforce a patent (such as an express permission to practice a patent or covenant not to sue for patent infringement). To "grant" such a patent license to a party means to make such an agreement or commitment not to enforce a patent against the party. If you convey a covered work, knowingly relying on a patent license, and the Corresponding Source of the work is not available for anyone to copy, free of charge and under the terms of this License, through a publicly available network server or other readily accessible means, then you must either (1) cause the Corresponding Source to be so available, or (2) arrange to deprive yourself of the benefit of the patent license for this particular work, or (3) arrange, in a manner consistent with the requirements of this License, to extend the patent license to downstream recipients. "Knowingly relying" means you have actual knowledge that, but for the patent license, your conveying the covered work in a country, or your recipient's use of the covered work in a country, would infringe one or more identifiable patents in that country that you have reason to believe are valid. If, pursuant to or in connection with a single transaction or arrangement, you convey, or propagate by procuring conveyance of, a covered work, and grant a patent license to some of the parties receiving the covered work authorizing them to use, propagate, modify or convey a specific copy of the covered work, then the patent license you grant is automatically extended to all recipients of the covered work and works based on it. A patent license is "discriminatory" if it does not include within the scope of its coverage, prohibits the exercise of, or is conditioned on the non-exercise of one or more of the rights that are specifically granted under this License. You may not convey a covered work if you are a party to an arrangement with a third party that is in the business of distributing software, under which you make payment to the third party based on the extent of your activity of conveying the work, and under which the third party grants, to any of the parties who would receive the covered work from you, a discriminatory patent license

- (a) in connection with copies of the covered work conveyed by you (or copies made from those copies), or
- (b) primarily for and in connection with specific products or compilations that contain the covered work, unless you entered into that arrangement, or that patent license was granted, prior to 28 March 2007. Nothing in this License shall be construed as excluding or limiting any implied license or other defenses to infringement that may otherwise be available to you under applicable patent law.

12. No Surrender of Others' Freedom.

If conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If you cannot convey a covered work so as to satisfy simultaneously your obligations under this License and any other pertinent obligations, then as a consequence you may not convey it at all. For example, if you agree to terms that obligate you to collect a royalty for further conveying from those to whom you convey the Program, the only way you could satisfy both those terms and this License would be to refrain entirely from conveying the Program.

13. Use with the GNU Affero General Public License.

Notwithstanding any other provision of this License, you have permission to link or combine any covered work with a work licensed under version 3 of the GNU Affero General Public License into a single combined work, and to convey the resulting work. The terms of this License will continue to apply to the part which is the covered work, but the special requirements of the GNU Affero General Public License, section 13, concerning interaction through a network will apply to the combination as such.

14. Revised Versions of this License.

The Free Software Foundation may publish revised and/or new versions of the GNU General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns.

Each version is given a distinguishing version number. If the Program specifies that a certain numbered version of the GNU General Public License "or any later version" applies to it, you have the option of following the terms and conditions either of that numbered version or of any later version published by the Free Software Foundation. If the Program does not specify a version number of the GNU General Public License, you may choose any version ever published by the Free Software Foundation. If the Program specifies that a proxy can decide which future versions of the GNU General Public License can be used, that proxy's public statement of acceptance of a version permanently authorizes you to choose that version for the Program. Later license versions may give you additional or different permissions. However, no additional obligations are imposed on any author or copyright holder as a result of your choosing to follow a later version.

15. Disclaimer of Warranty.

THERE IS NO WARRANTY FOR THE PROGRAM, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE PROGRAM "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE PROGRAM IS WITH YOU. SHOULD THE PROGRAM PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.

16. Limitation of Liability.

IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MODIFIES AND/OR CONVEYS THE

PROGRAM AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PROGRAM (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE PROGRAM TO OPERATE WITH ANY OTHER PROGRAMS), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

17. Interpretation of Sections 15 and 16.

If the disclaimer of warranty and limitation of liability provided above cannot be given local legal effect according to their terms, reviewing courts shall apply local law that most closely approximates an absolute waiver of all civil liability in connection with the Program, unless a warranty or assumption of liability accompanies a copy of the Program in return for a fee.

END OF TERMS AND CONDITIONS

GNU LESSER GENERAL PUBLIC LICENSE

Version 2.1, February 1999

Copyright (C) 1991, 1999 Free Software Foundation, Inc.
51 Franklin Street, Fifth Floor, Boston, MA 02110-1301

USA Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed. [This is the first released version of the Lesser GPL. It also counts as the successor of the GNU Library Public License, version 2, hence the version number 2.1.]

Preamble

The licenses for most software are designed to take away your freedom to share and change it. By contrast, the GNU General Public Licenses are intended to guarantee your freedom to share and change free software to make sure the software is free for all its users.

This license, the Lesser General Public License, applies to some specially designated software packages—typically libraries—of the Free Software Foundation and other authors who decide to use it. You can use it too, but we suggest you first think carefully about whether this license or the ordinary General Public License is the better strategy to use in any particular case, based on the explanations below. When we speak of free software, we are referring to freedom of use, not price. Our General Public Licenses are designed to make sure that you have the freedom to distribute copies of free software (and charge for this service if you wish); that you receive source code or can get it if you want it; that you can change the software and use pieces of it in new free programs; and that you are informed that you can do these things.

To protect your rights, we need to make restrictions that forbid distributors to deny you these rights or to ask you to surrender these rights. These restrictions translate to certain responsibilities for you if you distribute copies of the library or if you modify it.

For example, if you distribute copies of the library, whether gratis or for a fee, you must give the recipients all the rights that we gave you. You must make sure that they, too, receive or can get the source code. If you link other code with the library, you must provide complete object files to the recipients, so that they can relink them with the library after making changes to the library and recompiling it. And you must show them these terms so they know their rights. We protect your rights with a two-step method: (1) we copyright the library, and (2) we offer you this license, which gives you legal permission to copy, distribute and/or modify the library. To protect each distributor, we want to make it very clear that there is no warranty for the free library. Also, if the library is modified by someone else and passed on, the recipients should know that what they have is not the original version, so that the original author's reputation will not be affected by problems that might be introduced by others.

Finally, software patents pose a constant threat to the existence of any free program. We wish to make sure that a company cannot effectively restrict the users of a free program by obtaining a restrictive license from a patent holder. Therefore, we insist that any patent license obtained for a version of the library must be consistent with the full freedom of use specified in this license. Most GNU software, including some libraries, is covered by the ordinary GNU General Public License. This license, the GNU Lesser General Public License, applies to certain designated libraries, and is quite different from the ordinary General Public License. We use this license for certain libraries in order to permit linking those libraries into non-free programs.

When a program is linked with a library, whether statically or using a shared library, the combination of the two is legally speaking a combined work, a derivative of the original library.

The ordinary General Public License therefore permits such linking only if the entire combination fits its criteria of freedom.

The Lesser General Public License permits more lax criteria for linking other code with the library. We call this license the “Lesser” General Public License because it does Less to protect the user’s freedom than the ordinary General Public License. It also provides other free software developers Less of an advantage over competing non-free programs. These disadvantages are the reason we use the ordinary General Public License for many libraries.

However, the Lesser license provides advantages in certain special circumstances.

For example, on rare occasions, there may be a special need to encourage the widest possible use of a certain library, so that it becomes a de-facto standard. To achieve this, nonfree programs must be allowed to use the library. A more frequent case is that a free library does the same job as widely used non-free libraries. In this case, there is little to

gain by limiting the free library to free software only, so we use the Lesser General Public License.

In other cases, permission to use a particular library in nonfree programs enables a greater number of people to use a large body of free software. For example, permission to use the GNU C Library in non-free programs enables many more people to use the whole GNU operating system, as well as its variant, the GNU/Linux operating system.

Although the Lesser General Public License is Less protective of the users’ freedom, it does ensure that the user of a program that is linked with the Library has the freedom and

the wherewithal to run that program using a modified version of the Library. The precise terms and conditions for copying, distribution and modification follow. Pay close attention to the difference between a “work based on the library” and a “work that uses the library”. The former contains code derived from the library, whereas the latter must be combined with the library in order to run.

TERMS AND CONDITIONS FOR COPYING, DISTRIBUTION AND MODIFICATION

0. This License Agreement applies to any software library or other program which contains a notice placed by the copyright holder or other authorized party saying it may be distributed under the terms of this Lesser General Public License (also called “this License”). Each licensee is addressed as “you”.

A “library” means a collection of software functions and/ or data prepared so as to be conveniently linked with application programs (which use some of those functions and data) to form executables.

The “Library”, below, refers to any such software library or work which has been distributed under these terms. A “work based on the Library” means either the Library or any derivative work under copyright law: that is to say, a work containing the Library or a portion of it, either verbatim or with modifications and/or translated straightforwardly into another language.

(Hereinafter, translation is included without limitation in the term “modification”). “Source code” for a work means the preferred form of the work for making modifications to it. For a library, complete source code means all the source code for all modules it contains, plus any associated interface definition files, plus the scripts used to control compilation and installation of the library.

Activities other than copying, distribution and modification are not covered by this License; they are outside its scope. The act of running a program using the Library is not restricted, and output from such a program is covered only if its contents constitute a work based on the Library (independent of the use of the Library in a tool for writing it). Whether that is true depends on what the Library does and what the program that uses the Library does.

1. You may copy and distribute verbatim copies of the Library’s complete source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice and disclaimer of warranty; keep intact all the notices that refer to this License and to the absence of any warranty; and distribute a copy of this License along with the Library. You may charge a fee for the physical act of transferring a copy, and you may at your option offer warranty protection in exchange for a fee.

2. You may modify your copy or copies of the Library or any portion of it, thus forming a work based on the Library, and copy and distribute such modifications or work under the terms of Section 1 above, provided that you also meet all of these conditions:

a) The modified work must itself be a software library.

b) You must cause the files modified to carry prominent notices stating that you changed the files and the date of any change. c) You must cause the whole of the work to be licensed at no charge to all third parties under the terms of this License. d) If a facility in the modified Library refers to a function or a table of data to be supplied by an application program that uses the facility, other than as an argument passed when the facility is invoked, then you must make a good faith effort to ensure that, in the event an application does not supply such function or table, the facility still operates, and performs whatever part of its purpose remains meaningful. (For example, a function in a library to compute square roots has a purpose that is entirely well-defined independent of the application. Therefore, Subsection 2d requires that any application-supplied function or table used by this function must be optional: if the application does not supply it, the square root function must still compute square roots.) These requirements apply to the modified work as a whole. If identifiable sections of that work are not derived from the Library, and can be reasonably considered independent and separate works in themselves, then this License, and its terms, do not apply to those sections when you distribute them as separate works. But when you distribute the same sections as part of a whole which is a work based on the Library, the distribution of the whole must be on the terms of this License, whose permissions for other licensees extend to the entire whole, and thus to each and every part regardless of who wrote it.

Thus, it is not the intent of this section to claim rights or contest your rights to work written entirely by you; rather, the intent is to exercise the right to control the distribution of derivative or collective works based on the Library.

In addition, mere aggregation of another work not based on the Library with the Library (or with a work based on the Library) on a volume of a storage or distribution medium does not bring the other work under the scope of this License.

3. You may opt to apply the terms of the ordinary GNU General Public License instead of this License to a given copy of the Library. To do this, you must alter all the notices that refer to this License, so that they refer to the ordinary GNU General Public License, version 2, instead of to this License. (If a newer version than version 2 of the ordinary GNU General Public License has appeared, then you can specify that version instead if you wish.) Do not make any other change in these notices. Once

this change is made in a given copy, it is irreversible for that copy, so the ordinary GNU General Public License applies to all subsequent copies and derivative works made from that copy. This option is useful when you wish to copy part of the code of the Library into a program that is not a library.

4. You may copy and distribute the Library (or a portion or derivative of it, under Section 2) in object code or executable form under the terms of Sections 1 and 2 above provided that you accompany it with the complete corresponding machine-readable source code, which must be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange.

If distribution of object code is made by offering access to copy from a designated place, then offering equivalent access to copy the source code from the same place satisfies the requirement to distribute the source code, even though third parties are not compelled to copy the source along with the object code.

5. A program that contains no derivative of any portion of the Library, but is designed to work with the Library by being compiled or linked with it, is called a “work that uses the Library”. Such a work, in isolation, is not a derivative work of the Library, and therefore falls outside the scope of this License.

However, linking a “work that uses the Library” with the Library creates an executable that is a derivative of the Library (because it contains portions of the Library), rather than a “work that uses the library”. The executable is therefore covered by this License. Section 6 states terms for distribution of such executables.

When a “work that uses the Library” uses material from a header file that is part of the Library, the object code for the work may be a derivative work of the Library even though the source code is not. Whether this is true is especially significant if the work can be linked without the Library, or if the work is itself a library. The threshold for this to be true is not precisely defined by law.

If such an object file uses only numerical parameters, data structure layouts and accessors, and small macros and small inline functions (ten lines or less in length), then the use of the object file is unrestricted, regardless of whether it is legally a derivative work. (Executables containing this object code plus portions of the Library will still fall under Section 6.) Otherwise, if the work is a derivative of the Library, you may distribute the object code for the work under the terms of Section 6. Any executables containing that work also fall under Section 6, whether or not they are linked directly with the Library itself.

6. As an exception to the Sections above, you may also combine or link a “work that uses the Library” with the Library to produce a work containing portions of the Library, and distribute that work under terms of your choice, provided that the terms permit modification of the work for the customer's own use and reverse engineering for debugging such modifications. You must give prominent notice with each copy of the work that the Library is used in it and that the Library and its use are covered by this License. You must supply a copy of this License. If the work during execution displays copyright notices, you must include the copyright notice for the Library among them, as well as a reference directing the user to the copy of this License. Also, you must do one of these things:

- a) Accompany the work with the complete corresponding machine-readable source code for the Library including whatever changes were used in the work (which must be distributed under Sections 1 and 2 above); and, if the work is an executable linked with the Library, with the complete machine readable “work that uses the Library”, as object code and/or source code, so that the user can modify the Library and then relink to produce a modified executable containing the modified Library. (It is understood that the user who changes the contents of definitions files in the Library will not necessarily be able to recompile the application to use the modified definitions.)

- b) Use a suitable shared library mechanism for linking with the Library. A suitable mechanism is one that (1) uses at run time a copy of the library already present on the user's computer system, rather than copying library functions into the executable, and (2) will operate properly with a modified version of the library, if the user installs one, as long as the modified version is interface-compatible with the version that the work was made with.

- c) Accompany the work with a written offer, valid for at least three years, to give the same user the materials specified in Subsection 6a, above, for a charge no more than the cost of performing this distribution.

- d) If distribution of the work is made by offering access to copy from a designated place, offer equivalent access to copy the above specified materials from the same place.

- e) Verify that the user has already received a copy of these materials or that you have already sent this user a copy. For an executable, the required form of the “work that uses the Library” must include any data and utility programs needed for reproducing the executable from it. However, as a special exception, the materials to be distributed need not include anything that is normally distributed (in either source or binary form) with the major components (compiler, kernel, and so on) of the operating system on which the executable runs, unless that component itself accompanies the executable. It may happen that this requirement contradicts the license restrictions of other proprietary libraries that do not normally accompany the operating system. Such a contradiction means you cannot use both them and the Library together in an executable that you distribute.

7. You may place library facilities that are a work based on the Library side-by-side in a single library together with other library facilities not covered by this License, and distribute such a combined library, provided that the separate distribution of the work based on the Library and of the other library facilities is otherwise permitted, and provided that you do these two things:

- a) Accompany the combined library with a copy of the same work based on the Library, uncombined with any other library facilities. This must be distributed under the terms of the Sections above.

- b) Give prominent notice with the combined library of the fact that part of it is a work based on the Library, and explaining where to find the accompanying uncombined form of the same work.

8. You may not copy, modify, sublicense, link with, or distribute the Library except as expressly provided under this License. Any attempt otherwise to copy, modify, sublicense, link with, or distribute the Library is void, and will automatically terminate your rights under this License. However, parties who have received copies, or rights, from you under this License will not have their licenses terminated so long as such parties remain in full compliance.

9. You are not required to accept this License, since you have not signed it. However, nothing else grants you permission to modify or distribute the Library or its derivative works. These actions are prohibited by law if you do not accept this License. Therefore, by modifying or distributing the Library (or any work based on the Library), you indicate your acceptance of this License to do so, and all its terms and conditions for copying, distributing or modifying the Library or works based on it.

10. Each time you redistribute the Library (or any work based on the Library), the recipient automatically receives a license from the original licensor to copy, distribute, link with or modify the Library subject to these terms and conditions. You may not impose any further restrictions on the recipients' exercise of the rights granted herein. You are not responsible for enforcing compliance by third parties with this License.

11. If, as a consequence of a court judgment or allegation of patent infringement or for any other reason (not limited to patent issues), conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this

License, they do not excuse you from the conditions of this License. If you cannot distribute so as to satisfy simultaneously your obligations under this License and any other pertinent obligations, then as a consequence you may not distribute the Library at all. For example, if a patent license would not permit royalty free redistribution of the Library by all those who receive copies directly or indirectly through you, then the only way you could satisfy both it and this License would be to refrain entirely from distribution of the Library.

If any portion of this section is held invalid or unenforceable under any particular circumstance, the balance of the section is intended to apply, and the section as a whole is intended to apply in other circumstances.

It is not the purpose of this section to induce you to infringe any patents or other property right claims or to contest validity of any such claims; this section has the sole purpose of protecting the integrity of the free software distribution system which is implemented by public license practices. Many people have made generous contributions to the wide range of software distributed through that system in reliance on consistent application of that system; it is up to the author/donor to decide if he or she is willing to distribute software through any other system and a licensee cannot impose that choice. This section is intended to make thoroughly clear what is believed to be a consequence of the rest of this License.

12. If the distribution and/or use of the Library is restricted in certain countries either by patents or by copyrighted interfaces, the original copyright holder who places the Library under this License may add an explicit geographical distribution limitation excluding those countries, so that distribution is permitted only in or among countries not thus excluded. In such case, this License incorporates the limitation as if written in the body of this License.
13. The Free Software Foundation may publish revised and/or new versions of the Lesser General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns. Each version is given a distinguishing version number. If the Library specifies a version number of this License which applies to it and "any later version", you have the option of following the terms and conditions either of that version or of any later version published by the Free Software Foundation. If the Library does not specify a license version number, you may choose any version ever published by the Free Software Foundation.
14. If you wish to incorporate parts of the Library into other free programs whose distribution conditions are incompatible with these, write to the author to ask for permission. For software which is copyrighted by the Free Software Foundation, write to the Free Software Foundation; we sometimes make exceptions for this. Our decision will be guided by the two goals of preserving the free status of all derivatives of our free software and of promoting the sharing and reuse of software generally.

NO WARRANTY

15. BECAUSE THE LIBRARY IS LICENSED FREE OF CHARGE, THERE IS NO WARRANTY FOR THE LIBRARY, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE LIBRARY "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE LIBRARY IS WITH YOU. SHOULD THE LIBRARY PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.

16. IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MAY MODIFY AND/OR REDISTRIBUTE THE LIBRARY AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE LIBRARY (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE LIBRARY TO OPERATE WITH ANY OTHER SOFTWARE), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

END OF TERMS AND CONDITIONS

How to Apply These Terms to Your New Libraries

If you develop a new library, and you want it to be of the greatest possible use to the public, we recommend making it free software that everyone can redistribute and change. You can do so by permitting redistribution under these terms (or, alternatively, under the terms of the ordinary General Public License).

To apply these terms, attach the following notices to the library. It is safest to attach them to the start of each source file to most effectively convey the exclusion of warranty; and each file should have at least the "copyright" line and a pointer to where the full notice is found. one line to give the library's name and an idea of what it does.

Copyright (C) year name of author

This library is free software; you can redistribute it and/or modify it under the terms of the GNU Lesser General Public License as published by the Free Software Foundation; either version 2.1 of the License, or (at your option) any later version.

This library is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU Lesser General Public License for more details.

You should have received a copy of the GNU Lesser General Public License along with this library; if not, write to the Free Software Foundation, Inc., 51 Franklin Street, Fifth Floor, Boston, MA 02110-1301 USA Also add information on how to contact you by electronic and paper mail. You should also get your employer (if you work as a programmer) or your school, if any, to sign a "copyright disclaimer" for the library, if necessary. Here is a sample; alter the names: Yoyodyne, Inc., hereby disclaims all copyright interest in the library 'Frob' (a library for tweaking knobs) written by James Random Hacker. signature of Ty Coon, 1 April 1990 Ty Coon, President of Vice.

Copyright (c) 1998-2000 University College London

All rights reserved.

Redistribution and use in source and binary forms, with or without modification, is permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. All advertising materials mentioning features or use of this software must display the following acknowledgement: This product includes software developed by the Computer Science Department at University College London

4. Neither the name of the University nor of the Department may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE AUTHORS AND CONTRIBUTORS "AS IS" AND ANY EXPRESSED OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHORS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Copyright (c) 2004, Jan Kneschke, incremental

All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.

- Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

- Neither the name of the 'incremental' nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT OWNER OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Copyright (c) 2004, Kneschke, incremental

All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met :

- Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.

- Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

- Neither the name of the 'incremental' nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT OWNER OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Copyright (c) 2005-2010, Thomas BERNARD

All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- * Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.

- * Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

- * The name of the author may not be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT OWNER OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

The MIT License

Copyright (c) 1996 by Internet Software Consortium

Copyright (c) 2005-2010 Sam Stephenson

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

libxml2 License

Except where otherwise noted in the source code (e.g. the files hash.c, list.c and the trio files, which are covered by a similar licence but with different Copyright notices) all the files are:

Copyright (C) 1998-2003 Daniel Veillard. All Rights Reserved.

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE DANIEL VEILLARD BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

Except as contained in this notice, the name of Daniel Veillard shall not be used in advertising or otherwise to promote the sale, use or other dealings in this Software without prior written authorization from him.

OpenSSL LICENSE

Copyright (c) 1998-2006 The OpenSSL Project. All rights reserved. Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. All advertising materials mentioning features or use of this software must display the following acknowledgment: "This product includes software developed by the OpenSSL Project for use in the OpenSSL Toolkit. (<http://www.openssl.org/>)"
4. The names "OpenSSL Toolkit" and "OpenSSL Project" must not be used to endorse or promote products derived from this software without prior written permission. For written permission, please contact openssl-core@openssl.org.
5. Products derived from this software may not be called "OpenSSL" nor may "OpenSSL" appear in their names without prior written permission of the OpenSSL Project.
6. Redistributions of any form whatsoever must retain the following acknowledgment: "This product includes software developed by the OpenSSL Project for use in the OpenSSL Toolkit (<http://www.openssl.org/>)"

THIS SOFTWARE IS PROVIDED BY THE OpenSSL PROJECT "AS IS" AND ANY EXPRESSED OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE OpenSSL PROJECT OR ITS CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS;

OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE. This product includes cryptographic software written by Eric Young (ey@cryptsoft.com). This product includes software written by Tim Hudson (tjh@cryptsoft.com).

Original SSLEAY License

Copyright (C) 1995-1998 Eric Young (ey@cryptsoft.com)

All rights reserved. This package is an SSL implementation written by Eric Young (ey@cryptsoft.com). The implementation was written so as to conform with Netscapes SSL. This library is free for commercial and non-commercial use as long as the following conditions are adhered to. The following conditions apply to all code found in this distribution, be it the RC4, RSA, lhash, DES, etc., code; not just the SSL code. The SSL documentation included with this distribution is covered by the same copyright terms except that the holder is Tim Hudson (tjh@cryptsoft.com). Copyright remains Eric Young's, and as such any Copyright notices in the code are not to be removed. If this package is used in a product, Eric Young should be given attribution as the author of the parts of the library used. This can be in the form of a textual message at program startup or in documentation (online or textual) provided with the package. Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. All advertising materials mentioning features or use of this software must display the following acknowledgement:
"This product includes cryptographic software written by Eric Young (ey@cryptsoft.com)" The word 'cryptographic' can be left out if the routines from the library being used are not cryptographic related :-).

4. If you include any Windows specific code (or a derivative thereof) from the apps directory (application code) you must include an acknowledgement: "This product includes software written by Tim Hudson (tjh@cryptsoft.com)"

THIS SOFTWARE IS PROVIDED BY ERIC YOUNG "AS IS AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

The licence and distribution terms for any publically available version or derivative of this code cannot be changed. i.e. this code cannot simply be copied and put under another distribution licence [including the GNU Public Licence.]

PHP License

The PHP License, version 3.01

Copyright (c) 1999 - 2012 The PHP Group. All rights reserved.

Redistribution and use in source and binary forms, with or without modification, is permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. The name "PHP" must not be used to endorse or promote products derived from this software without prior written permission. For written permission, please contact group@php.net.
4. Products derived from this software may not be called "PHP", nor may "PHP" appear in their name, without prior written permission from group@php.net. You may indicate that your software works in conjunction with PHP by saying "Foo for PHP" instead of calling it "PHP Foo" or "phpfoo".
5. The PHP Group may publish revised and/or new versions of the license from time to time. Each version will be given a distinguishing version number.
Once covered code has been published under a particular version of the license, you may always continue to use it under the terms of that version. You may also choose to use such covered code under the terms of any subsequent version of the license published by the PHP Group. No one other than the PHP Group has the right to modify the terms applicable to covered code created under this License.
6. Redistributions of any form whatsoever must retain the following acknowledgment:
"This product includes PHP software, freely available from <http://www.php.net/software/>".
THIS SOFTWARE IS PROVIDED BY THE PHP DEVELOPMENT TEAM "AS IS" AND ANY EXPRESSED OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE PHP DEVELOPMENT TEAM OR ITS CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

This software consists of voluntary contributions made by many individuals on behalf of the PHP Group.
The PHP Group can be contacted via Email at group@php.net.
For more information on the PHP Group and the PHP project, please see <http://www.php.net/>.
PHP includes the Zend Engine, freely available at <http://www.zend.com/>.



Samsung Techwin 在产品制造的各个环节都十分关注环境，并且采取措施以保证向客户提供更加环保的产品。

Eco 标志表明 Samsung Techwin 致力于生产环保型产品，同时也表示该产品符合欧盟 RoHS 标准。



制造商

SAMSUNG TECHWIN CO., LTD.

Samsungtechwin R&D Center, 701, Sampyeong-dong, Bundang-gu, Seongnam-si, Gyeonggi-do, Korea, 463-400
TEL : +82-70-7147-8740~60 FAX : +82-31-8018-3745

天津三星泰科光电子有限公司 广州分公司 (营业总部)
广州市天河区天河路230号万菱国际中心21楼02-04室, 510620
Room 02-04, 21/F, OneLink Center, NO.230 Tianhe Road, Tianhe
District, Guangzhou, 510620, China
联系电话 : 020 38080038

天津三星泰科光电子有限公司
中国天津市西青区津港公路微电子工业区微六路
11号, 300385
No.11 wei 6 Road Micro-Electronics Industrial Park Xiqing
District, Tianjin, 300385, China
联系电话 (免费客服热线) : 800 818 1212

